

What you'll get in the package

You will receive: two joysticks, one USB cable, one wireless receiver, one HDMI extension adapter and a game console

NOTE :

(The TF card has already been installed in the game console)



Connect the game stick to the TV

First, you need to install the game stick **wireless receiver** in the game console.

Second, you need to use the USB cable to connect the game console to the **power supply**.

Third, you need to use the HDMI extension adapter to connect the game console to your TV.




The picture shows the connection between HDMI extension adapter and TV

Switch the signal source


You need to turn on your TV and switch the **signal source** to **HDMI1** or **HDMI2** in your TV, and the game page will appear in your TV, if not please reconnect the game console from the power supply and try it again.

(Enter the settings page - select inputs - select HDMI1/HDMI2)

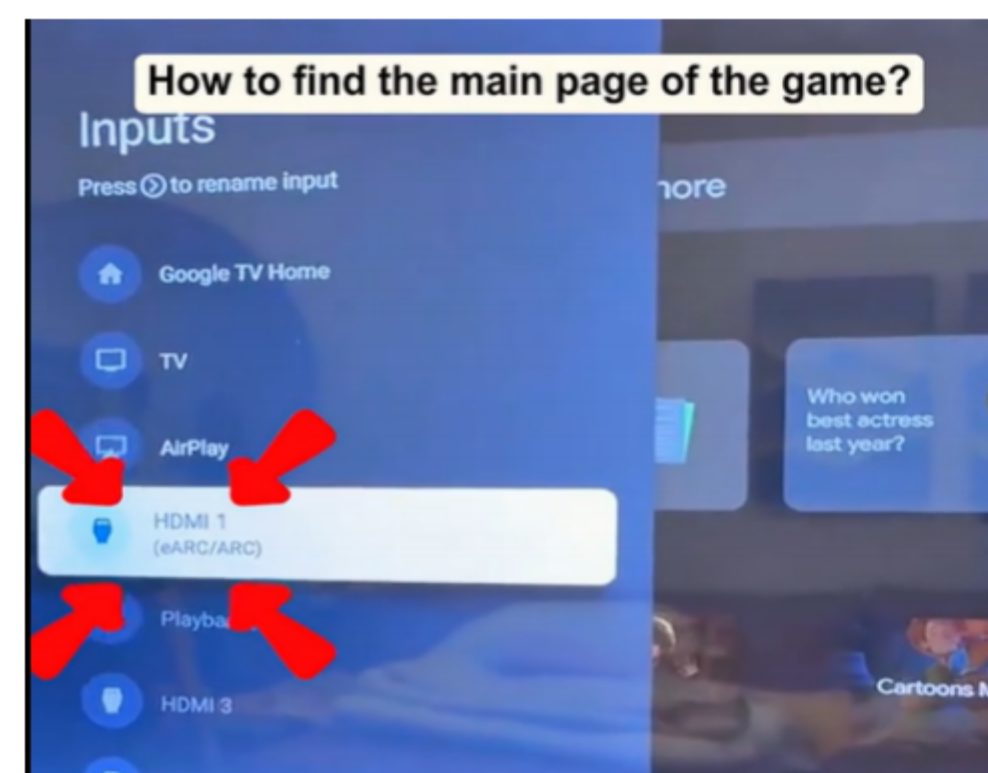

Turn on the joysticks

You need to press button **MODE** on the joysticks after you turn on the game page on your TV. (If the joysticks keep flashing red light and green light, please ensure that the part of the game console with the **receiver** is not covered up. It might be because the receiver was blocked, causing the game joystick to fail to connect.) The one with the red light is main joystick, used for game selection, game setting, as well as one-player games. The one with green light is the secondary joystick, only used for two-player games.

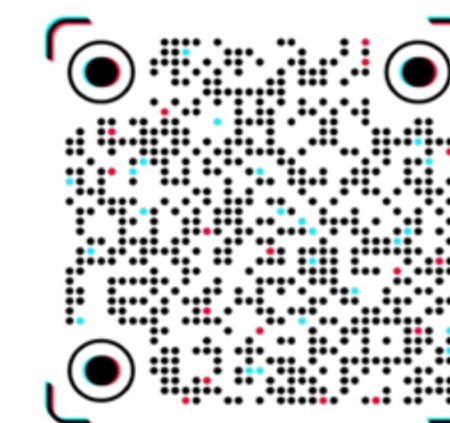

TikTok

Frequently asked questions

Q:How do I save my game?

A:You need to **press SELECT button and START button at the same time** (In PSP emulator games, you need to **simultaneously press two joysticks to enter the menu page and select SAVE STATE to save game progress**), then a page will appear, select SAVE STATE, the game will be saved, but please note that when you want to continue the last game (ATTENTION!), you need to select LOAD STATE in the game you want to continue.

Q: How can i quit the game?

A: You need to **press SELECT button and START button at the same time** (In PSP emulator games, you need to **simultaneously press two joysticks to enter the menu page and select Exit to exit the game**), and then a new page will appear, you can choose the option "QUIT GAME".

Q: I'm not sure how to set the game up my TV. Everything is plugged up but it's not coming on.

A:There may be more than one port on the back of the TV to connect to our products, when trying one does not show the game, please try **another port**. If it still won't work, unplug the game console from power supply and try again.

Q:How do i favorite a game?

A: Our game has a collection function. Before you start playing, you need to select the game you want to collect, then **press the X button**. After that, a star will appear on the game screen near the game you chose, indicating that you have successfully collected it. You can view the collected games in the collection section.

Q: Too much lag to play games?

A: If there is a delay in the Game, it might be because there are blocking items in front of the Game Stick. Please **remove the items** in front and try again.

Q: Some games won't load? Need to insert coin?

A: If you can not load the game by

pressing button A, please try button START, or button SELECT. Remember, our games are **all free and do not require actual coin insertion**. This is to simulate real coin insertion situations.



ToryTale Official

WhatsApp contact



E-mail:
torytaleofficial@gmail.com

If you encounter any problems during the use of the product, please contact us via WhatsApp. We are available to assist you at all times and will provide you with the best after-sales service.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.