

# OPERATION, MAINTENANCE AND SAFETY INSTRUCTIONS

FOR OMEGA ALTISE

MODELS INCLUDE:

OACHM15B

OACHM15W



TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS ..... 1-2

APPLIANCE DETAILS .....3

OPERATION .....4

MAINTENANCE AND CLEANING .....4

## IMPORTANT SAFETY INSTRUCTIONS


### IMPORTANT

Read the safety precautions of this booklet carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage. If you are unsure about anything regarding your fan or these instructions, please contact Omega Altise on 1300 795 572 in Australia or (09) 415 6000 in New Zealand before operating your appliance.

1. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons. Do not modify this appliance.
2. Remove the package and ensure that the appliance is undamaged (keep packing box for later storage). In case of doubt do not use the appliance and contact Omega Altise Service. Do not let children play with any parts of the packaging.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Extreme caution is necessary when the heater is used by or near children or individuals with decreased mental and physical capacity and whenever the heater is left operating unattended.
4. Before you use the appliance, check if the voltage marked on the rating label corresponds to the mains in your home. The appliance must be connected to a grounded power supply.
5. Avoid using extension cords as the extension cord may overheat and cause a risk of fire. If the use of an extension cord cannot be avoided, always use one with a minimum rating of 13Amps. Do not use this appliance with a programmer, timer or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
6. Do not pull the power cord to disconnect with the power source. Always grasp the plug to pull it out.
7. Do not run power cords under rugs or other combustible materials. Do not place power cords in areas where they can be a tripping hazard. Do not operate directly below a power outlet.
8. Do not insert any objects into the heater as it may cause an electric shock or fire or damage to the heater. Do not block or tamper with the heater in any manner while it is in operation. To prevent a possible fire, do not cover the appliance in any manner. Do not place on soft surfaces, like a bed, where openings may become blocked.
9. Do not leave the heater unattended. Always unplug the heater when not in use.



Do not cover

**WARNING:**  The control buttons and power switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.

10. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Always use the handle when moving the heater (where available) or hold on the sides if not available (make sure the unit is turned off). Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 1m from the heater to the sides, front, rear & top.
11. The heater has hot and arcing or sparking parts inside. It must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden, corrosive, salty or wet atmospheres. This heater is intended for general indoor domestic use ONLY.
12. This heater is not intended for use in wet or damp locations. Never locate a heater where it may fall into a bathtub or other water container.
13. Do not use the heater outdoors.
14. This heater includes a tilt switch that turns the heater off if it falls over. Once righted, the heater will completely reset and can be used as normal.
15. Always move or hold the heater from the top & bottom of the appliance, where less heat is generated.
16. NOTE that over time, the front grill section may darken due to the extreme heat being generated by the heater elements. This is a normal occurrence & is not a fault in the heater.
17. Do not use this heater if it has been dropped
18. Do not use if there are visible signs of damage to the heater
19. Use this heater on a horizontal and stable surface.

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:**



To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by an Omega Altise service centre in order to avoid a hazard. In order to avoid overheating, do not cover the heater. The heater must NOT be located immediately below a socket outlet. Do not use the heater in the immediate surrounding of a bath, shower or swimming pool.

**WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

**WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.

**CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

## APPLIANCE DETAILS

### Electrical Details

Voltage Input: 220 – 240 Vac ~50 Hz  
Maximum Power: 1500W

 
### Technical Details

Dimensions: 194W x 241H x 134.5D mm  
Net Weight: 2.75 kg  
Wind Speed:  $\geq 1.5$  m/s  
Noise Level:  $\leq 50$ dB (1m Distance)

### Features

- PTC ceramic heating element
- Changes the power automatically according to the variation of the ambient temperature.
- Fan function
- Double over-heating protection
- Tip-over safety protection
- Automatic sweep, wind, soft and even
- Cooling fan powered by a shaded pole motor to dissipate heat quickly
- Compact design with an easy-carry handle which allows you to take it wherever you go in your home or office



### Description

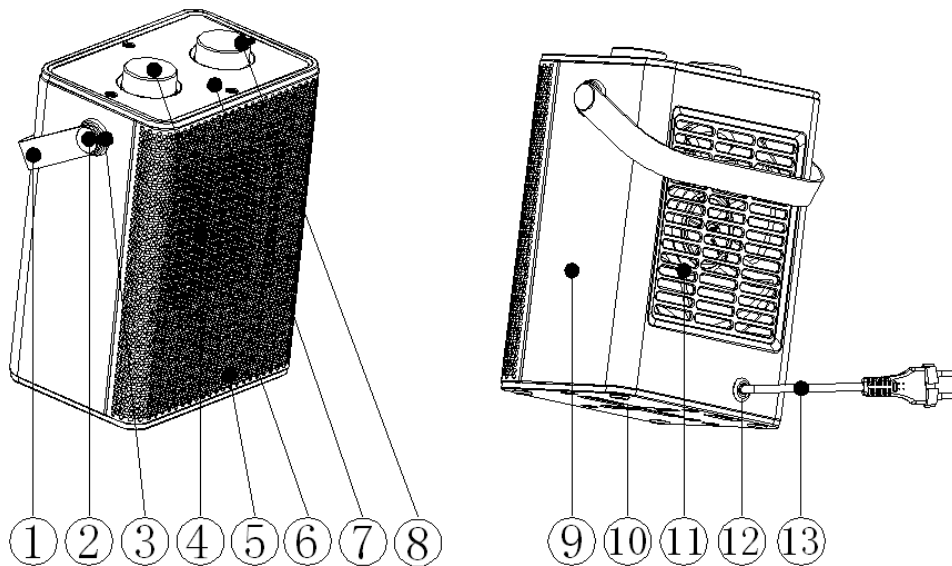


- 1 Handle
- 2 Handle Dowel
- 3 Base of Handle
- 4 Air Outlet
- 5 Wind Outlet Grill
- 6 Temperature Adjusting Knob
- 7 Head Cover

- 8 Power Setting Knob
- 9 Back Cover
- 10 Bottom Cover
- 11 Air Inlet
- 12 Power Cord Jacket
- 13 Power Cord


## OPERATION

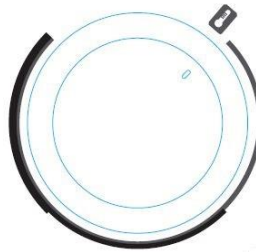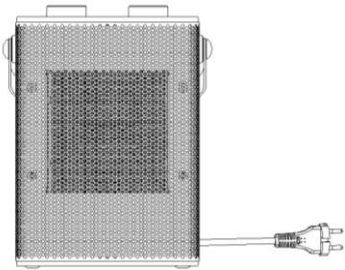  


Temperature Knob

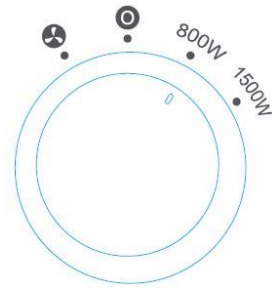 

Power Knob

Ensure that the device is connected to the power supply before trying to operate it. Before plugging it in, ensure that the power knob is set to the off position "  ".

### Fan Only Function

Turning the power knob counter-clockwise to the  position causes the device to operate as a fan. The heating element does not turn on.

### Heater

- Turn the power knob clockwise to the '800W' setting. This causes the device to operate in low power (800W) mode. Use the temperature knob to set the desired ambient temperature.
- Turn the power knob clockwise to the '1500W' setting. This causes the device to operate in high power (1500W) mode. Use the temperature knob to set the desired ambient temperature.

The device will automatically keep the ambient temperature at the set temperature. When the set temperature is reached, the device will turn off, when room temperature is lower than set temperature, the device will automatically turn on.

## MAINTENANCE AND CLEANING

**CAUTION:** Ensure that the device is switched off and disconnected from the power supply before cleaning or performing maintenance.

Wipe the surface of the device with a clean, damp cloth. Ensure that water does not enter the device. Do not use chemicals on the device. Do not submerge in water.

### WEEE and ROHS



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference. Due to continual product development, Omega Altise reserves the right to alter specifications or appearances without notice.

Dispose of packaging responsibly – recycle where facilities are available.

A division of Shriro Australia Pty Ltd  
104 Vanessa St Kingsgrove NSW 2208

In Australia: 1300 795 572

In New Zealand: (09) 415 6000

[www.omegaltise.com](http://www.omegaltise.com)

IM Ref: OACHM15B-W v3 07/03/2019