

ERROR CODE TROUBLESHOOTING GUIDE:

Error Code	Possible Cause	Recommended Solution	Clearing Error Codes
E1 (Fan Blade Not Spinning) Overheat Safety Cut-Out (Resettable)	Insufficient Clearance Around Heater Obstructed Vent Fan Not Operational (Fan Blade Not Spinning)	Ensure Heater is installed with Sufficient Clearance All-Around. See Figure 1. 1/8 inch minimum from rear of heater 1/3 inches minimum from side of heater Remove any objects on heater or adjacent to heater vents. Do not block intake or exhaust by columns, machinery, etc. Ensure 24 inches minimum distance from heater exhaust (Rear) to any object. Disconnect power! Inspect Fan Blade (Rear of Heater) for foreign or dislodged objects preventing rotation. Remove Rear Grille and clear interference. Re-install Rear Grille. Disconnect power! Open Hinged Bottom Cover by removing screws. Inspect Circuit Card Assembly (subject to Supply Connection Terminal Block) for loose or detached "tag-in" electrical connector. Re-attach securely, close Bottom Cover and re-install screws.	To Clear E1 Code: 1. Power Off Heater 2. Switch Off Breaker (or Remove Fuse) 3. Allow Heater to Cool (~15 minutes) 4. Switch on Breaker and wait 1 minute 5. Power On Unit and follow Instruction Manual for Normal Operation If E1 code persists please contact manufacturer to arrange product return.
	Inadequate Copper Wire Gauge for Supply Connections (Fan Operates at Reduced Speed Due to Insufficient Power Input) Excessive Distance from Power Source (Fan Operates at Reduced Speed Due to Current Loss) Inadequate Current (Amps) Rating on Breaker Improper Heater Shut Down	Consult a licensed electrician. Ensure adequate wire gauge for supply connections. Consult a licensed electrician. Ensure adequate Current Breaker or Fuse per National & Local Electrical Codes. Do not power off heater using circuit breaker. Fan motor is designed to operate for a short period of time after heating element shuts off to prevent an overheat condition.	
E2 Room Temp Sensor Open Circuit	Detached or Loose Connection at Room Temperature Sensor	Disconnect power! Detach Fan Grille by removing screws. Locate Temp Sensor Thermocouple on Housing (Below Fan Motor Bracket). Ensure wire path & thermocouple "tip" are free of damage. Re-attach Grille by re-installing screws. Open Bottom Cover by removing screws. Allow unit to fully dry. Re-attach securely, close Bottom Cover and re-install screws.	To Clear E2 & E3 Codes: 1. Power Off Heater 2. Switch Off Breaker (or Remove Fuse) 3. Switch on Breaker and wait 1 minute 4. Power On Unit and follow Instruction Manual for Normal Operation If E2 or E3 code persists please contact manufacturer to arrange product return.
E3 Room Temp Sensor Short Circuit	Moisture Entrapment in Heater Room Temperature Sensor Electrical Short to Ground at Room Temperature Sensor	Not intended for outdoor use. Not intended for use in bathrooms, shower rooms, laundry facilities or other similar moist locations. Disconnect power! Open Bottom Cover by removing screws. Allow unit to fully dry. Re-attach securely, close Bottom Cover and re-install screws(s). Disconnect power! Detach Fan Grille by removing screws. Locate Temp Sensor Thermocouple on Housing (Below Fan Motor Bracket). Ensure wire insulation is not damaged and internal conductor is not exposed. Re-attach Grille by re-installing screws.	Re-Start Unit: Follow Instruction Manual for Normal Operation.
No Power or Low Power to Heater	Supply Connections Improperly Wired Insufficient Service Loop on Supply Connections Electrical Short to Ground	Consult a licensed electrician. Ensure Supply Connections L1, L2, L3 & Ground are secure. Torque per NEC (3.5 provided on certain models). Consult a licensed electrician. Ensure sufficient service loop in supply wires to maintain secure electrical connections to heater heater on bracket (particularly when using light or semi-rigid conduit). Consult a licensed electrician. Ensure Supply Connections L1, L2 & L3 are not contacting Housing (Ground) (3.5 only provided on certain models).	

12

ROVSUN

1

ROVSUN

DIGITAL CEILING MOUNTED HEATER

Model No.: CZ230W



MADE IN CHINA

ROVSUN

TABLE OF CONTENTS

Safety Information.....	3
Operating Instructions	5
Assembly Instructions	8
Care and Maintenance.....	11
Limited Warranty	11
Troubleshooting.....	12

2

ROVSUN

SAFETY INSTRUCTIONS:

- To start the heater, turn on the circuit breaker. The Power Indicator light will light up to indicate there is power available. Press the POWER button to turn the heater on. The heater will be in HIGH setting by default. The heater indicator will illuminate, and the LED display will show the default setting temperature 80°F.
- The heater is HOT when in use. Do not let bare skin touch any hot surfaces.
 - Keep combustible materials (furniture, pillows, bedding, papers, clothes, curtains, and similar items) at least 3 feet (0.9m) from all sides and surfaces of the heater.
 - Do not use outdoors or in wet areas like bathrooms, laundry areas or where it could fall into a swimming pool or other container of water.
 - This heater is a 240V AC rated direct wired appliance. Never use extension cords or relocatable power taps.
- CARE AND MAINTENANCE:**
- Do not disassemble the heater to clean it.
 - The heater should be powered OFF and disconnected from the power at the circuit breaker before attempting to clean any portion of the heater.
 - The exterior can be cleaned with a cloth, brush and/or vacuum.
 - The louvers, fan blade and heating element are delicate and should not encounter hard items. They can be cleaned by brush, vacuum and mild compressed air.
 - This Industrial Heater contains no user serviceable parts.

LIMITED WARRANTY

You should first read all instructions before attempting to use this product. This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect, contact the customers service for technical support, or return it to the place of purchase for repair or replacement. This warranty does not cover damage caused by misuse, abuse alteration. Repairs made by anyone other than manufacturer are not covered in this warranty. Stores will not be held liable for any losses due to neglectful operation. Please retain your proof of purchase as well as the BOX to validate the guarantee. You will need to provide the unit's model number, serial number (located on the heater), date of purchase, a daytime phone number or email, and a copy of your receipt.

ROVSUN

11

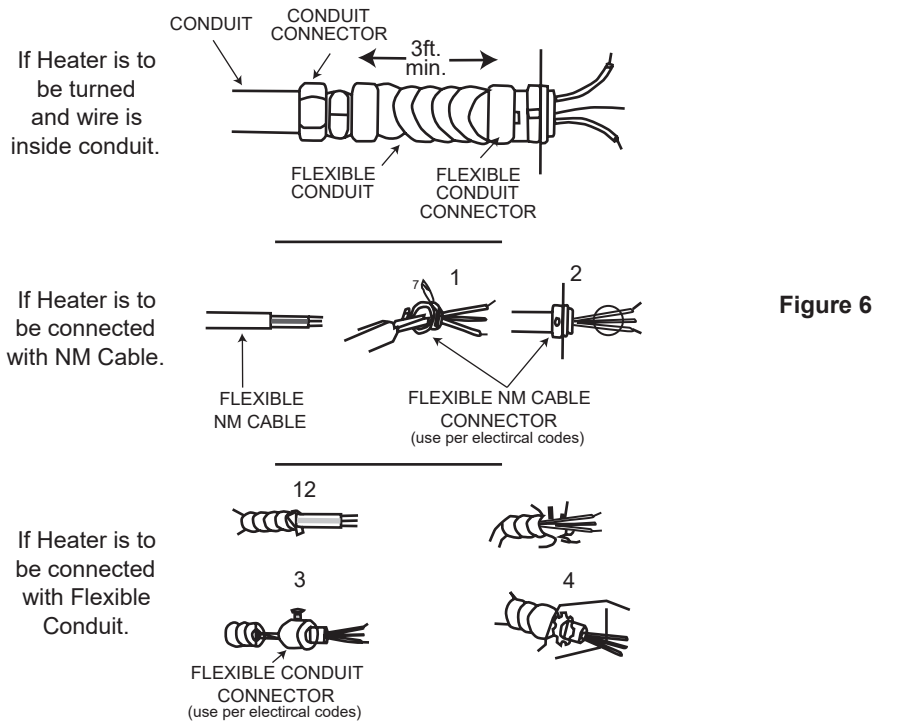


Figure 6

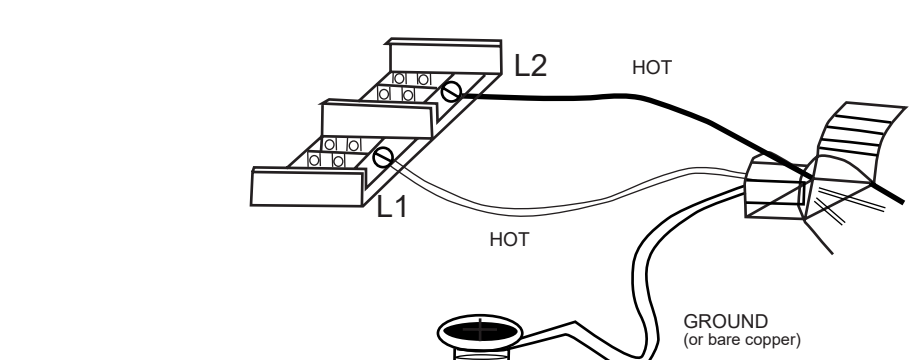


Figure 7

10

ROVSUN

INTENDED USE

Electric Utility heaters are designed to meet a variety of heating requirements. This product is intended for indoor use only. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances.

If you have any questions whether your wiring is adequate, consult a qualified electrician. Risk of fire, overheating, malfunction, property damage, injury or even death may result if not adhered to.

Use your heater-fan only with a working smoke detector located in the vicinity of your heater-fan.

While using your heater-fan, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word "WARNING" to indicate the level of hazard: WARNING indicates a hazard which, if not avoided, could result in injury or death.

GENERAL SAFETY INFORMATION:

WARNING- Read and understand installation and operation instructions and observe all safety instructions.

SAVE THESE INSTRUCTIONS:

- Use copper wire only for supply connections use 8 AWG or larger wires suitable for at least 167°F(75°C).
- Heater air flow must be directed parallel to, or away from adjacent wall.
- Observe wall, floor, and ceiling clearance requirements. See Figure 1.
- All wiring must conform to national and local electrical codes in the United States and the heater must be grounded as a precaution against possible electrical shock. Heater circuit must be protected with proper fuses or circuit breakers.
- The mounting structure and the anchoring hardware must be capable of reliably supporting the weight of the heater and, if used, the mounting bracket.
- All electrical power must be disconnected, and the main service box must be locked before inspection, cleaning or servicing the heater. This is a precaution to prevent serious shock.
- This heater is not suitable for use in hazardous locations as defined by the National Fire Protection Association (NFPA) in the United States. This heater has hot and arcing (sparking) parts inside. Do not use in areas where gasoline, paint, or flammable liquids are used or stored.
- This heater is not suitable for use in corrosive atmosphere such as marine, greenhouses or chemical storage areas.
- Do not install closer than 8 inches to a vertical surface. Do not install less than 6 feet from the floor.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- To disconnect heater, turn controls to off, and turn off power to heater circuit at main disconnect panel (or operate internal disconnect switch if provided).

WARNING- Improper installation or failure to follow the procedures outlined in this instruction manual can result in serious electrical shock.

READ & SAVE THESE INSTRUCTIONS

WARNING: SHOCK HAZARD

Use your heater only in dry environments. This heater is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water container. Do not use heater outdoors. Do not use in damp environments such as flooded basements.

WARNING: HOT SURFACES

Do not touch body of heater when in use. This heater is hot when in use, to avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater.

ROVSUN

3

INSTALLING THE HEATER:

LOCATING THE HEATER:

Install the heater out of traffic areas, maintaining the clearances stated in Figure 1 above. The air flow from the heater must not be restricted or obstructed by any items in the room. When more than one heater is used in an area, the heaters should be arranged so that the air discharge of each heater supports the air flow of the others to provide best circulation of warm air, as indicated below in Figure 3.

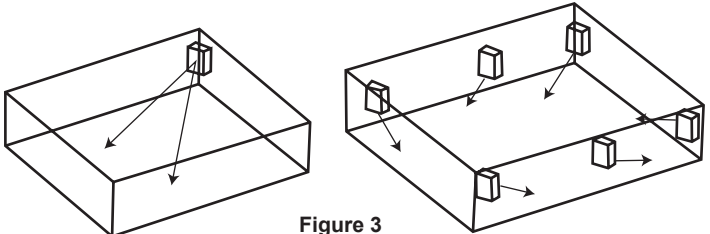


Figure 3

BRACKET INSTALLATION:

Refer to Figures 4a and 4b.

- Locate a ceiling joist or other firm structural element or support to mount the heater and point at desired direction of air flow.
- Drill a 1/4" pilot hole in the ceiling joist for the screw(s).
- Place the screw(s) and washers as shown in the Figures 4a or 4b. Figure 4a: For Single-Screw Mounting (center bracket hole only). (If you want to swivel the heater, a longer Lag bolt may be required to properly secure the heater, not included.) Figure 4b: For Double-Screw Mounting (both off-center holes are used).

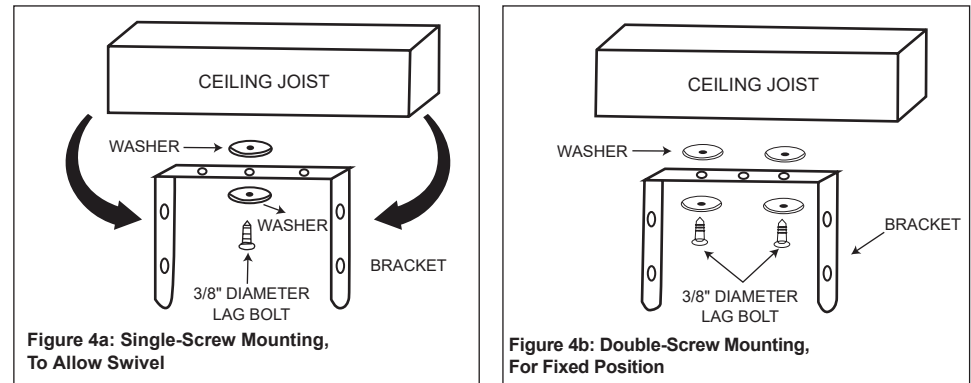


Figure 4a: Single-Screw Mounting, To Allow Swivel

Figure 4b: Double-Screw Mounting, For Fixed Position

HANGING THE HEATER IN THE BRACKET


- Lift the heater into the mounting bracket and align the lower bracket holes with the threaded holes nearest the heater's center.
- Thread a large knob-screw through the hole on each side of the bracket.
- Aim the heater horizontally or tilted by aligning the upper bracket holes with the top threaded holes on the heater and secure with the small knob-screws and tighten all. See Figure 5.

8

ROVSUN

CONTROL PANEL

Figure 2

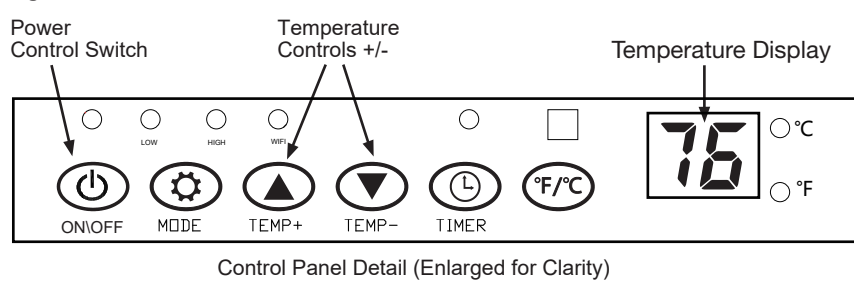

Control Panel Detail (Enlarged for Clarity)



5

ROVSUN

OPERATION AND TEMPERATURE SETTING:

- This heater is designed to maintain a comfortable room temperature. Always operate the heater in the upright position following all instructions and recommendations listed in this manual. When the heater is turned on by pressing the POWER button, it will operate on HIGH setting (7,500W) continuously. The LED display panel will show the ambient temperature. Press the MODE button on either the unit or remote to change the heat setting to LOW (6,250W) .

The sequence is HIGH-LOW-FAN-ONLY. To operate the unit on FAN ONLY setting, press the MODE button again. In FAN ONLY mode, the LED display panel will show FA to indicate the heater is in FAN ONLY mode. From FAN ONLY mode, pressing the MODE button will make the heater operate in HIGH setting again, and the ambient temperature will appear on the LED display.

- The temperature setting can be adjusted between 45°F (7°C) to 95°F (35°C). To change the temperature, press the TEMP+ or TEMP- buttons on either the unit or the remote. (See Figure 2)

- The temperature display will blink while it is being adjusted. When the desired temperature is reached, it will take about 5 seconds to accept the setting. Once the display stops flashing, the room temperature will reappear on the LED screen to indicate the desired temperature is set.

- In any temperature mode, the unit will stay in that mode, cycling on and off to maintain the set temperature. The heater will reach the set temperature faster in HIGH setting.

- The heater can be turned OFF by pressing the POWER button. Once the unit is turned off, the fan will continue to run to cooldown the unit and there will be a 60 seconds countdown on the digital display.

TIMER FUNCTION:

The Timer function allows you to set the length of operation from 1 to 12 hours. Each time the TIMER button is pressed the length of operation will increase 1 hour. The duration the timer is set for will be displayed on the LED screen in hour increments.

TO TURN THE TIMER FUNCTION OFF: Press the TIMER Button continuously until the LED screen displays "0".

NOTE: The timer function is not an excuse to leave the heater unattended.

NOTE: Heater will cycle on and off to maintain room temperature. The first time you operate the unit, it may smoke slightly. This is due to residual cleaning agents used to clean the element when the heater is manufactured. This is normal and does not indicate a problem with the unit. This condition will stop after the heater has been in operation for a few minutes.

FAHRENHEIT OR CELSIUS DISPLAY:

To switch the display between Fahrenheit and Celsius, press the °F/°C on either the unit or the remote.

6

ROVSUN

WIFI FUNCTION:

- To download Smart Life App, scan the QR code or search for "Smart Life" in the Apple App Store (iOS) or Google Play Store (Android).
- Choose "Allow" to the permissions requested such as Bluetooth and WLAN when opening Smart Life App for the first time. These permissions allow the app's features to function normally and are not used to record personal, private information.
- Press and hold the TEMP+ or TEMP- buttons for 5 seconds until a buzzer rings and the Wifi indicator that above the TEMP + button flashes to activate the pairing function.
- Make sure the heater and phone are on the same WLAN. Open the APP and click "add device" to find "7500W Industrial Heater CZ230W". Click "Add" when you find the device and then enter the Wifi password. After waiting for a while to connect successfully, you can control the heater through your mobile phone.

Note: To disconnect a device that is already connected to Wifi, press and hold the TEMP+ and TEMP- buttons for 5 seconds. The Wifi will disconnect and the Wifi indicator starts flashing and will look for devices to pair with.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Smart Life App

9

ROVSUN