


USE AND CARE GUIDE

20 IN LED INDOOR CEILING FAN

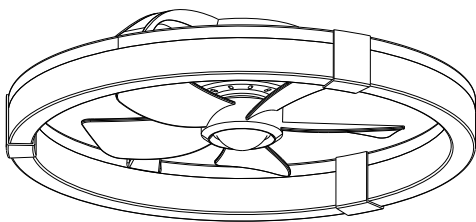

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

WWW.HOMEDEPOT.CA

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this ceiling fan. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents.....	2
Safety Information.....	2
Warranty.....	3
Pre-Installation.....	3
Specifications.....	3
Tools Required.....	3

Hardware Included.....	4
Package Contents.....	5
Installation.....	6
Operation.....	9
Care & Cleaning.....	11
Troubleshooting.....	11

Safety Information

READ AND SAVE THESE INSTRUCTIONS.

- ☐ All wiring must be in accordance with the CEC and local electrical codes. Electrical installation should be performed by a **qualified licensed electrician**.
- ☐ To avoid personal injury or damage to the fan and other items, use caution when working around or cleaning the fan.
 - After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and ungrounded conductor on the other side of the outlet box.
- ☐ All set screws must be checked and retightened where necessary before installation.
- ☐ This device complies with Industry Canada licence-exempt RSS standards. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- ☐ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ☐ Children should be supervised to ensure that they do not play with the appliance.
- ☐ The fixing means for attachment to the ceiling shall be fixed with a sufficient strength to withstand 4 times the weight of the ceiling fan.
- ☐ The mounting of the suspension system shall be performed by the manufacturer, its service agent or suitably qualified persons.
- ☐ The replacement of parts of the safety suspension system device shall be performed by the manufacturer, a service agent, or suitably qualified persons.
- ☐ Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.



WARNING:To reduce the risk of personal injury, do not bend the blade brackets when installing the brackets, balancing the blades, or cleaning the fan. Do not insert foreign objects in between rotating fan blades.



WARNING:To reduce the risk of fire, electric shock, or personal injury, mount to an outlet box marked "acceptable for fan support of 15.9 kg (35lbs) or less" and use screws provided with the outlet box.



WARNING: To avoid possible electrical shock, turn the electricity off at the main fuse box before wiring. If you feel you do not have enough electrical wiring knowledge or experience, contact a licensed electrician.



WARNING:To reduce the risk of fire or electric shock, do not use this fan with any soft-start speed control device.



WARNING: If unusual oscillating movement is observed, immediately stop using the ceiling fan and contact the manufacturer, a service agent, or suitably qualified persons.



CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



CAUTION:The fan must be mounted with a minimum of 7 ft. (2.1 m) of clearance from the trailing edge of the blades to the floor.



WARNING:To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).

Warranty

The supplier warrants the fan motor to be free from defects in workmanship and material present at time of shipment from the factory for a lifetime after the date of purchase by the original purchaser. The supplier warrants that the light kit, excluding any glass, to be free from defects in **workmanship and material at the time of shipment from the factory for a period of five years after the date of purchase by the original purchaser.** The supplier also warrants that other fan parts, excluding any glass or acrylic blades, to be free from defects in workmanship and material at the time of shipment from the factory for a period of two years after the date of purchase by the original purchaser. We agree to correct such defects without charge or at our option replace with a comparable or superior model if the product is returned. To obtain warranty service, you must present a copy of the receipt as proof of purchase. All costs of removing and reinstalling the product are your responsibility. Damage to any part, such as by accident, misuse, improper installation, or by affixing any accessories, is not covered by this warranty. Because of varying climatic conditions this warranty does not cover any changes in brass finish, including rusting, pitting, corroding, tarnishing, or peeling. Brass finishes of this type give their longest useful life when protected from varying weather conditions. A certain amount of "wobble" is normal and should not be considered a defect. Servicing performed by unauthorized persons shall render the warranty invalid. There is no other express warranty. Home Decorators Collection hereby disclaims any and all warranties, including but not limited to those of merchantability and fitness for a particular purpose to the extent permitted by law. The duration of any implied warranty, which cannot be disclaimed, is limited to the time period as specified in the express warranty. Some states do not allow a limitation on how long an implied warranty lasts, so the above limitation may not apply to you. The retailer shall not be liable for incidental, consequential, or special damages arising out of or in connection with product use or performance except as may otherwise be accorded by law. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion or limitation may not apply to you. **This warranty gives specific legal rights, and you may also have other rights that vary from state to state. This warranty supersedes all prior warranties.** Shipping costs for any return of product as part of a claim on the warranty must be paid by the customer.

Contact the Customer Service Team at 1-800-986-3460 or visit www.HOMEDEPOT.CA.

Pre-Installation

SPECIFICATIONS

Fan size	Speed	Volt s	Amp s	Watt s	RPM	CFM	Net Wt	Gross Wt	Cubic Ft
20in.	LOW	120	0.053	2.1	524	345	4.4lbs (2kgs)	8.2lbs (3.72kgs)	1.79 '
	MED		0.071	3.3	657	420			
	HIGH		0.088	4.4	756	510			

 **NOTE:** These are approximate measures. They do not include the amps and wattage used by the light kit.

TOOLS REQUIRED



⊕
Phillips
screwdriver



Step
ladder



Wire
stripper



Electrical
Tape

Pre-Installation (continued)

HARDWARE INCLUDED

 
 **NOTE:**Hardware not shown to actual size.




AA



BB




CC

 

DD



 EE




FF




GG



HH

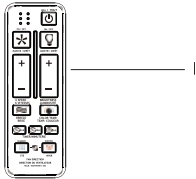

II

 

JJ



 
KK



LL



MM




NN



OO

Part	Description	Quantity
AA	Mounting screw	2
BB	Wire nut	3
CC	Wood screw	1
DD	Hanging board (preassembled)	1
EE	Hanging board screw (preassembled)	4
FF	Instructions	1
GG	Ground screw (preassembled on hanging board)	1
HH	AAA Battery 1.5V	2
II	Remote control	1
JJ	Remote control holder	1
KK	Long remote control holder screw (screw ST3.0*18)	2
LL	Plastic anchor	2
MM	Short remote control holder screw (screw ST3.0*13)	2
NN	L Bracket	1
OO	Machine screw	2

PACKAGE CONTENTS

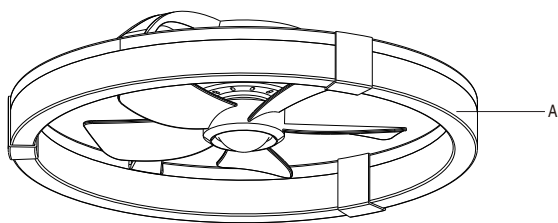

Part	Description	Quantity
A	Fixture body	1



Installation - Standard Ceiling Mount

MOUNTING OPTIONS



WARNING: To reduce the risk of fire, electric shock, or personal injury, mount to an outlet box marked "acceptable for fan support of 15.9 kg (35lbs) or less". An outlet box commonly used for the support of lighting fixtures may not be acceptable for fan support and may need to be replaced. If in doubt, consult a qualified electrician.


If your ceiling fan does not have an existing UL-listed mounting box, then install one using the following instructions:

- ❑ Disconnect the power by removing the fuses or turning off the circuit breakers.
- ❑ Secure the outlet box (not included) directly to the building structure. Use appropriate fasteners and materials (not included). The outlet box and its bracing must be able to fully support the weight of the moving fan at least 15.9 kgs (35 lbs). Do not use a plastic outlet box.




NOTE: The illustrations on the right show two different ways to mount the outlet box (not included).

Option 1

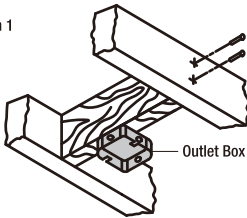

Option 2

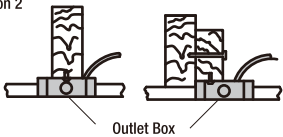


Installation - Standard Ceiling Mount (continued)

1 Routing the wires




WARNING: Make sure power is off before attempting installation.

- ☐ Unlock the hanging board screws (EE) from the hanging board (DD).
- ☐ Remove the hanging board (DD) from the fixture body (A).

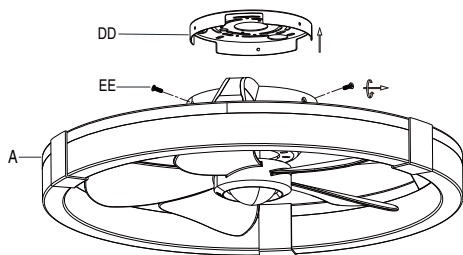

2 Installing the hanging board

- ☐ Place the L bracket (NN) onto the mounting screws (AA) supplied with your current output box.
- ☐ Secure the hanging board (DD) to the outlet box (not included) with the two mounting screws (AA) provided with your outlet box.

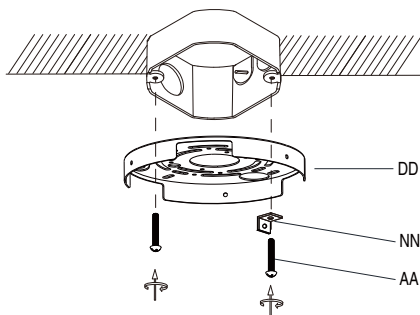


Installation - Standard Ceiling Mount (continued)

Making the electrical connections and installing the ceiling fan assembly




NOTE: Always use wire nuts (BB) to connect wires and push all excess wires and connections back into the outlet box.

- Attach the suspension loop of the luminaire body (A) to the suspension panel (DD).
- Route the safety wire through the suspension panel (DD), then securely fasten the safety wire to the ceiling using the wood screw (CC).
- Connect the green wire of the receiver, the green wire of the suspension panel (DD) and the green wire of the motor to the house grounding wires using a wire nut (BB). Secure the wire nuts with UL/CSA listed insulating tape.
- Connect the fixture wires as follows:

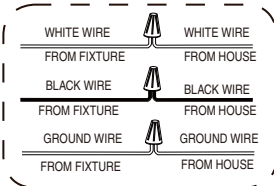

- Attach the fixture body (A) to the hanging board (DD), and secure it with the hanging board screws (EE).

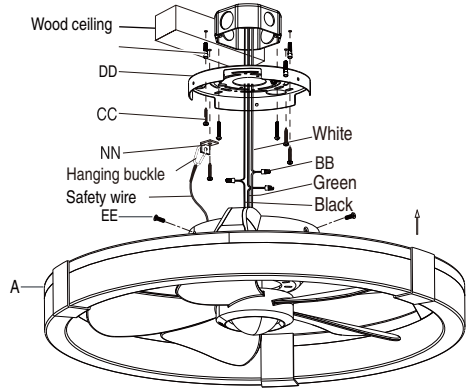

Operation


REMOTE CONTROL OPERATING INSTRUCTIONS



NOTE: On start up, your ceiling fan will oscillate back and forth. This is **NORMAL OPERATION** for a DC ceiling fan as it goes through its calibration cycle. The fan is **NOT DEFECTIVE**.

Part	Symbol	Part	Symbol
A		G	
B		H	
C		I	
D		J	
E		K	
F		L	

- All ON/ OFF: Press and release the button (A) to turn the fan and light ON or OFF.
- Fan ON/ OFF: Press and release the button (B), the fan will turn ON and OFF accordingly.
- Light ON/ OFF: Press and release the button (C), the light will turn ON and OFF accordingly.
- Speed functions:
 - Button (D): Increases the fan speed.
Press and release the button (D) one time to increase the speed of the fan.
 - Button (E): Decreases fan speed.
Press and release the button (E) one time to decrease the speed of the fan.
- Dimmer functions:
 - Button (J): Increases the brightness of the light.
Press and release the button (J) one time to increase the brightness of the light.
 - Button (K): Decreases the brightness of the light.
Press and release the button (K) one time to decrease the brightness of the light.
- Press and release the button (F) to activate the comfort breeze mode.
 - Press the button (F) to change the comfort breeze mode through speeds 1-5.
 - Press and hold the button (F) for 3 seconds to cancel the comfort breeze mode.
- Press and release the button (L) to cycle through the three color temperature options: 3000K (Warm White), 4000K (Cool White), and 5000K (Daylight).
- Timer function
 - The timer function is only available for the fan, not for the light kit
 - The timer function can only be activated when the fan is ON
 - Press the (2H/4H/8H) button (G) to set the timer
 - Hold and press the (2H/4H/8H) button (G) for 3 seconds to cancel the timer
 - When the timer is active, press the (2H/4H/8H) button (G) again to reset the timer

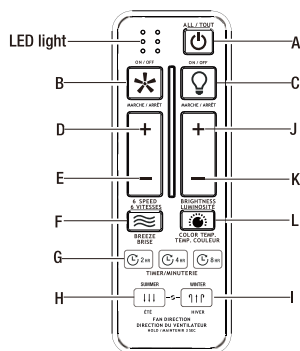

REVERSE SWITCH OPERATING INSTRUCTIONS

- Press and hold the button (H) for 3 seconds to activate the summer mode, the fan will rotate clockwise.
- Press and hold the button (I) for 3 seconds to activate the winter mode, the fan will rotate counterclockwise.
- Warm weather
(Clockwise direction) A downward air flow creates a cooling effect. This allows you to set your air conditioner on a warmer setting without affecting your comfort.
- Cool weather
(Counterclockwise direction) An upward air flow moves warm air off of the ceiling. This allows you to set your heating unit on a cooler setting without affecting your comfort.



NOTE: On start up, your ceiling fan will oscillate back and forth. This is **NORMAL OPERATION** for a DC ceiling fan as it goes through its calibration cycle. The fan is **NOT DEFECTIVE**.

Operation (continued)

INSTALLING THE BATTERY

- Remove the remote control (II) battery back cover.
- Install two AAA batteries (HH) into the remote control (II), then put the back cover back on.


To prevent damage to the remote control, remove the battery if it is not used for long periods of time.



WARNING: Do not short-circuit, disassemble, heat up, improperly connect, or dispose of used batteries in fire. Do not recharge or mix batteries with used or other battery types. Immediately remove used batteries and dispose of them properly.



WARNING: Keep used batteries away from children. Used batteries may cause injury.

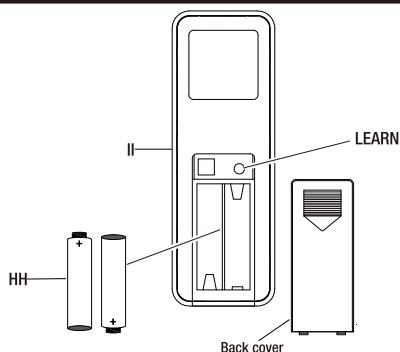


PAIRING AND UNPAIRING REMOTES

To pair another remote to your fan:

- Turn the main power source off.
- Return the power to the unit.
- Within 5 seconds of turning the fan's AC power ON, quickly press the "LEARN" button for three times. After the "Indicator light" lights up once, the pairing is successful.

To unpair a remote from your fan:

- Turn the main power source off.
- Return the power to the unit.
- Within 5 seconds of turning the fan's AC power ON, hold and press the "LEARN" button for 3 seconds. After the "Indicator light" lights up once, the pairing is released successful.

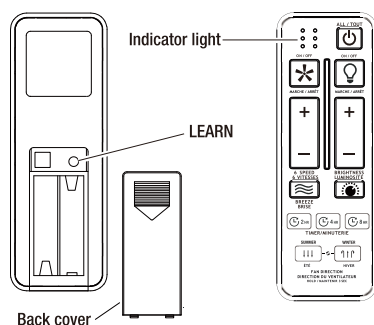


INSTALLING THE REMOTE CONTROL HOLDER



NOTE: The remote control holder is designed to allow you to access an existing switch. The remote control holder can be mounted on the wall or the face plate of a standard toggle switch or a paddle switch. Follow the instructions below for the option that best suits your need.


1a. Attaching over a standard toggle switch

- Remove the two screws from the toggle switch face plate.
- Place the toggle switch spacer over the toggle switch face plate and align the two large holes of the toggle switch spacer with the holes in the face plate. Secure the toggle switch spacer to the face plate by using the two included machine screws (00).
- Attach the remote control holder (JJ) to the toggle switch spacer by using the included two short remote control holder screws (MM).

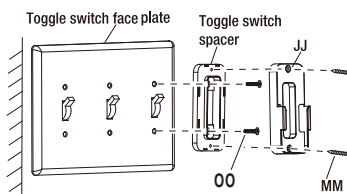

1b. Attaching over a paddle switch


- Remove the two screws from the paddle switch face plate.
- Align the holes of the remote control holder (JJ) with the holes in the face plate and secure the remote control holder to the face plate with the two included machine screws (00).

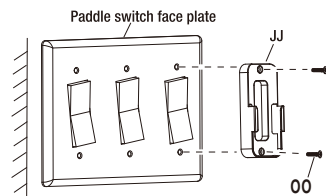

Operation (continued)

1c. Attaching to the wall

- Install the plastic anchors (LL) onto the wall.
- Use the long remote control holder screws (KK) to install the remote control holder (JJ) onto the wall.

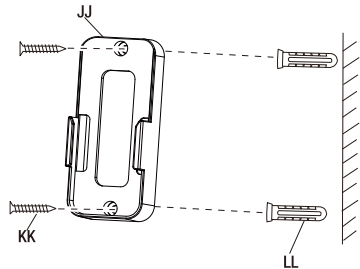

Care and Cleaning



WARNING: power is off before cleaning your fan.

- Because of the fan's natural movement, some connections may become loose. Check the support connections and blade attachments twice a year. Make sure they are secure. It is not necessary to remove the fan from the ceiling.
- Clean your fan periodically to help maintain its new appearance over the years. Do not use water when cleaning, as this could damage the motor, or possibly cause an electrical shock. Use only a soft brush or lint-free cloth to avoid scratching the finish.
- You do not need to oil your fan. The motor has permanently-lubricated sealed ball bearings.
- Always unplug the fan before cleaning, disassembly, or servicing.

Troubleshooting

Problem	Solution
The fan will not start.	□ Check the main and branch circuit fuses or breakers. □ Check to make sure the wall switch is in the on position, if applicable. □ Check the battery in the remote control. □ Ensure you are in the normal range of 10-20 feet. □ Ensure the remote control and receiver are paired.
The fan is noisy.	□ Ensure all motor housing screws are snug. □ Ensure the wire nut connections are not rattling against each other. □ Allow a 24-hour "breaking in" period. Most noises associated with a new fan disappear during this time. □ Ensure the canopy is a short distance from the ceiling. It should not touch the ceiling. □ Ensure your outlet box is secure and rubber isolator pads were used between the mounting plate and outlet box.
The fan wobbles.	□ This fan has a one-piece blade design, fan blade balancing kit is not applicable to this product. □ If the fan wobbles, disconnect the power by removing the fuses or turning off the circuit breakers from the main power source, then check the fan blade nut and make sure the nut is tightened. □ If the problem persists, please contact our customer service.
The fan moves backwards and forwards when turned on.	This is normal start-up procedure for DC motor fans. The partial movement during start-up is the result of the DC motor aligning the internal magnetic poles for proper motor operation. This design saves electricity and allows the fan to operate more quietly than standard AC motor fans.

HOME DECORATORS COLLECTION®

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

WWW.HOMEDEPOT.CA

Retain this manual for future use.