



PBMSPG198

Street Blaster Wireless BT Streaming
Boom Box Speaker system

Wireless & Portable Stereo Speaker
with Built-in LED Lights (600 Watt)

Troubleshooting

Fault	Possible Cause	Solution
No sound	1. No input sound source 2. Volume is too low	1. Use a better music signal 2. Adjust volume
Distortion of sound	1. Volume too high 2. Speaker may be damaged	1. Turn down the volume 2. Repair or replace it
Karaoke does not work	1. Microphone plug is not fully inserted. 2. Microphone switch is not on 3. Microphone volume knob is at the lowest position 4. Wireless microphone has low battery	1. Plug microphone properly into the socket 2. Turn on microphone switch 3. Adjust microphone volume properly 4. Replace battery
MP3 does not play	1. The song format in the U disc is incorrect 2. Improper operation has caused a process disorder 3. USB disc is disconnected	1. Transform song format into Mp3 format 2. Reboot the machine

Main Technical Specification

Peak Power 600W
 Input Sensitivity 200mV
 Frequency Response 45-1 60KHz
 Power Supply AC100V- AC240V, 60Hz/50Hz

 
* Above specifications are the specifications of the sampling machine and are for reference purpose only.

* Due to continuous product development ,specifications may be subject to change without prior notification.

PACKAGE CONTAINS

- 1x Remote Control
- 1x Power Adapter
- 1xWarranty Card
- 1x Carrying Belt
- 1x User Manual
- 1xWired Microphone
- 1x FM Antenna

FRONT PANEL FUNCTIONS

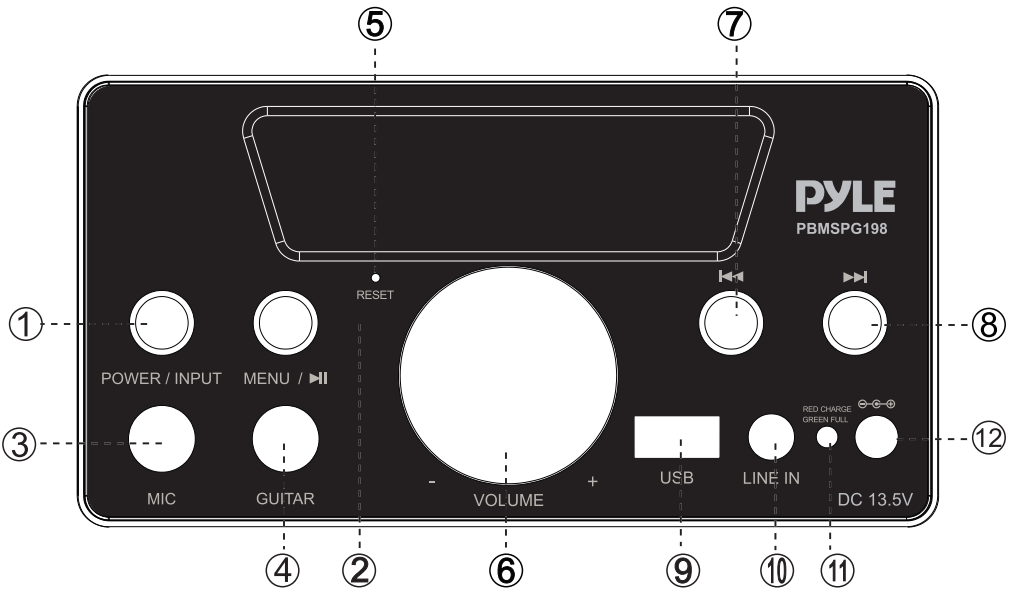


1. Short press to power **ON** the unit, short press for input selection (Line / FM / Bluetooth / USB); Long press to power off the unit.
2. **Treble / Bass / Mic volume / Mic echo volume / Guitar volume / LED mode / Music volume selection**
When in USB / Bluetooth mode, long press to play / pause the music;
When in FM mode, long press to scan FM channel automatically.
3. Wired Mic Slot.
4. Guitar Slot
5. Reset
6. Adjust Music volume, Mic volume, Mic echo volume, LED mode.
7. Short press to select previous song on USB mode. On FM mode, short press to adjust FM-0.1. Press and hold for 5 seconds to select next channel.
8. Short press to select next song on USB mode. On FM mode, short press to adjust FM+0.1, press and hold for 5 seconds to select next channel.
9. USB Slot
10. **Line IN**- Connect with personal computer, mobile phone, DVD, VCD, CD, LD, Mp3, radio, electronic piano and any device that has audio output in AUX mode. On FM mode, connect the audio cable to improve radio signal.
11. Battery Indicator. Red light-charging; Green light-full.
12. DC 13.5V charging interface.

BUILT-IN 4.0 BT FUNCTION

- Press "POWER / INPUT" button to choose the input signal source as BT channel when starting the machine.
- Please ensure the BT devices you want to connect is open. Then scan and connect the speaker with the device. When the connection is successful, "tick" tone will prompt. If the speaker can't be connected, please restart the speaker or the device and try again.
- After the mobile phone and the BT are successfully connected, you can play music. To ensure continuous stability of the music signal, try to keep the BT and the mobile phone facing one another.
- This unit supports iPad, iPhone, Samsung, HTC, MOTOROLA, Nokia and other BT mobile devices wirelessly transmitting audio.
- The BT of the unit can be used up to 10 meters if there are no barriers.

FM FUNCTION

- Press "POWER / INPUT" button to switch to FM radio.
- Press and hold "MENU / ||" for 5 seconds for automatic searching and saving.
- Short press "▶▶" and "◀◀" to select FM station manually.
- Press and hold "▶▶" and "◀◀" for 5 seconds to select the last or next channel directly.

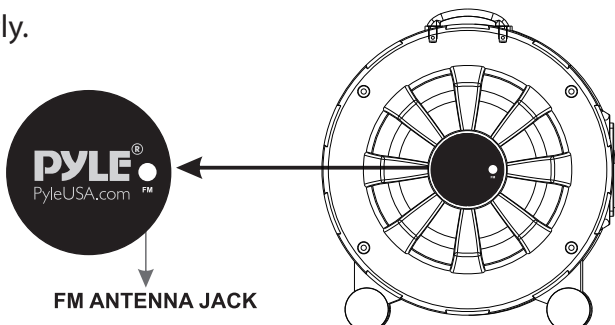 

"On FM mode, connect the FM antenna to improve radio signal"

CHARGING THE SPEAKER

When charging, connect a matched power adapter to AC100V- AC240V. Charging time is approximately 6 to 10 hours. Once fully charged unplug the power supply as leaving a full battery on charge for a long time may cause damage to the battery.

 
Battery Charge Indicator:

LED panel has battery status indicator. In the middle of the shape of the battery have three horizontal lines, each horizontal line represents 33% of electricity remaining. When no horizontal line in the shape of the battery or the shape flashes, please power off and promptly charge to avoid damage to the battery. There is a battery charging indicator light on the front panel. When charging, the red light will be on. When it's fully charged, the indicator light will turn into green.

Warning:

If the battery is under voltage, please fully charge it within 48 hours. If the speaker has to be left unused for a long time, please let the battery fully charged, otherwise it will cause damage to the battery. In the process of playing, keep unit away from high temperature environments, high magnetic fields and high frequencies.


CONNECTIONS

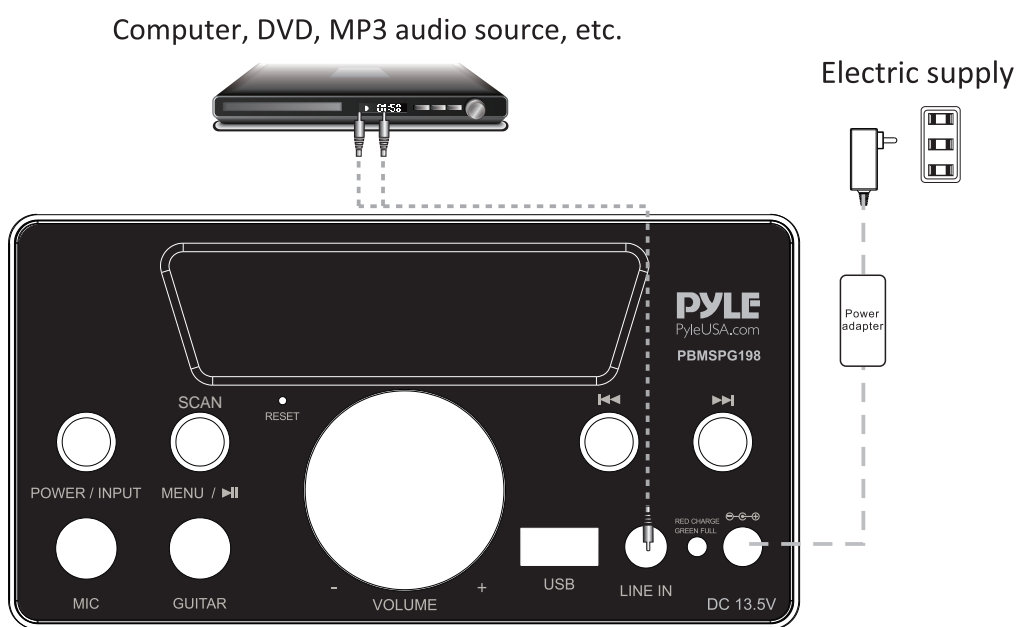

***This image is for reference purposes only!

REMOTE CONTROL

 1. POWER OFF ONLY
2. CHOOSE SIGNAL INPUT
3. INCREASE MUSIC VOLUME
4. MENU
5. PREVIOUS LED MODE
6. DECREASE MUSIC VOLUME
7. NEXT LED MODE
8. MUTE
9. REPEAT
10. PLAY / PAUSE KEY
11. PREVIOUS SONG / CHANNEL
12. NEXT SONG / CHANNEL

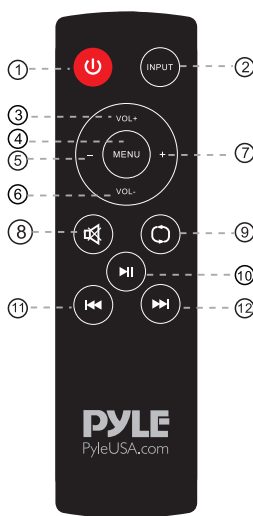


1. Under normal circumstances, the remote control should be aimed directly at the receiving window of the remote control within about 4 meters and within a 30° angle.

2. When operating the remote control, aim the remote control at the receiving window. Ensure that there are no obstacles between the remote control and the unit.

3. If the remote receiver is in a position to directly receive glare, it may fail. In this case, move the speaker away to avoid direct sunlight.

4. Avoid mixing old and new batteries.

 Replace the remote control batteries regularly.

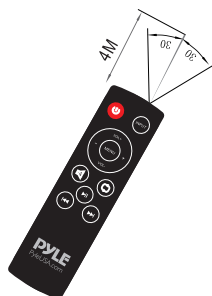

PYLE

PyleUSA.com

WARNING:



1. **DO NOT** place objects on top of the device, as objects may scratch the device.



2. **DO NOT** expose the device to dirty or dusty environments.



3. **DO NOT** insert any foreign objects into the device



4. **DO NOT** expose the device to strong magnetic or electrical field



5. **DO NOT** use the device in the rain.



6. Please check with your Local Authority or retailer for proper disposal of electronic products.



7. **DO NOT** disassemble the device. Only a certified service technician should perform repair.



8. The device has apertures to disperse heat. **DO NOT** block the device ventilation, the device may become hot and malfunction as a result.

- **Illegal operation may cause personal injury, which could be fatal.**
- **Illegal operation may cause damage to property.**

FEATURES

This system includes one microphone and can be used with personal computers, mobile phone, DVD, VCD, CD, LD, TV, MP3, radio, electronic piano and any devices which have audio output. Amplifier circuit are using high-performance, high-fidelity design, coupled with high-quality professional speaker, in order to make the sound field to get positioned so clear, distinct levels effect.

The sound system is outstanding, with deep and powerful bass and the treble effect is strong, with clear and bright pitch.

The professional electronic frequency division circuit enhances the machine's crossover point effect.

Using professional design and manufacture of high-capacity batteries, and dedicated audio power capacitors, to make the speaker's power reserve margin larger, more stable, better dynamics, higher signal to noise ratio.



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE