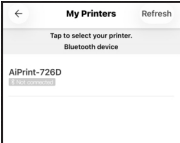


AI PRINTER Operating Manual  Warm Prompt: Specifications and parameters may be changed depending on the configuration of the model. Please refer to the actual product.	Brief Introduction Thank you for using the intelligent digital products produced by our company. We have randomly equipped with detailed instructions, from which you can obtain instructions on the use of the products. Please read the instructions carefully before you start using this machine,so as to facilitate you to use this product accurately. When the contents involved are changed, no notice willbe given. This product is a uniquely designed, exquisitely crafted, and portable mini AI printer for children. Its fun AI-powered large model generates entertaining images that can be printed for doodling, pasting, and cherishing, accompanying your little one's healthy and joyful growth! Maintenance and maintenance This product should not be placed in wet environment for a long time,please wipe the surface stains with dry cloth.Wires,plug shells and other components must be regularly checked for damage,and damage should be stopped immediately until repaired.in order to reduce battery aging and swelling: If it is not used for a long time,it needs to be charged once every three months or so	Button Instructions  Power Switch: Press and hold for 3 seconds to turn on/off Voice button: Press and hold for 3 seconds to activate voice interaction; press briefly to confirm. Mode Switching: Press and hold for 3 seconds to access the app download page. Press briefly to switch to raw image mode. Six modes available: (Cartoon) (Sketch) (Ink Painting) (Line Art) (Simple Drawing) (Anime) Reset Button: When the product fails to shut down or the power button becomes unresponsive, use this button to reset the device. (The reset button is located next to the Type-C port.)	Product specification <table><tr><td>Battery capacity:1300mAh</td><td>Sharpness: 203dpi</td></tr><tr><td>Printing method: inkless printing</td><td>Paper size:57*26MM</td></tr><tr><td>Display method:Black and white</td><td>Bluetooth: 2.1/5.4</td></tr><tr><td>Product Size:88*68.3*87.5mm</td><td>Lnput power:DC5V 800mAh</td></tr><tr><td>Operating Temperature:-10-45°C</td><td></td></tr><tr><td>Language:English and over 20 languages</td><td></td></tr></table> Use the wizard  1. Press and hold the power button to turn on the device. After booting up, the QR code interface will appear. Scan the code to download the app or search for iprint in the app store to complete the network setup before normal use.  2. Apple store or Google search: iprint insalled APP to use.	Battery capacity:1300mAh	Sharpness: 203dpi	Printing method: inkless printing	Paper size:57*26MM	Display method:Black and white	Bluetooth: 2.1/5.4	Product Size:88*68.3*87.5mm	Lnput power:DC5V 800mAh	Operating Temperature:-10-45°C		Language:English and over 20 languages	
Battery capacity:1300mAh	Sharpness: 203dpi														
Printing method: inkless printing	Paper size:57*26MM														
Display method:Black and white	Bluetooth: 2.1/5.4														
Product Size:88*68.3*87.5mm	Lnput power:DC5V 800mAh														
Operating Temperature:-10-45°C															
Language:English and over 20 languages															
 3. After bluetooth is enabled,use the app downloaded from the mobile phone to connect to the Bluetooth printer in the TAB bar of "My device", After successful connection, the note can be printed. Paper replacement course 1.  press both sides inward according to the direction indicated by arrow 1 , while opening the paper bin cover lid upward as shown in arrow2.	2.  Take out the old paper roll and put the new paper roll in the direction shown. The paper should be put straight and not crooked .(Note : The new thermosensitive paper needs to be exposed to 2 cm of paper bin length so that the machine can absorb paper automatically when the paper bin is shaped) 3.  Cover the paper bin,the machine can automatically absorb paper after normal use	4.  After the above steps are correct , the machine can print normally. Battery Warning Note 1. Please use 5V charger to charge according to the specification to avoid damage to the machine 2. Disassembly , impact , extrusion or fire are prohibited ; 3. If severe bulging occurs , do not continue to use , 4. Do not put in high temperature environment , battery after immersion is prohibited to use; 5. Replacement with the wrong type of battery can be explosive , be sure to follow the instructions to dispose of used batteries .	Matters needing 1 . when charging . please gently insert or pull out the charging line to prevent excessive force damage to the port; 2 . After charging , please unplug the charging line in time 3 . In order to avoid danger , do not use or charge in high temperature ,high humidity , excessive smoke and dust environment . such as: bathroom , steam room , open fire , etc ; 4 . Improper charging may lead to print head damage ; 5 . Do not touch the print head to prevent overheating and scalding ; 6 . Tear paper blade sharp , be careful not to touch; 7.Contains small parts, not suitable for children under three years of age to use 8.The Guardian should be in custody while the child is playing. Firmware update Automatically detects upon startup; OAT online upgrade												

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.