



Business Networking Solution

# Installation Guide

Unmanaged/Easy Smart Rackmountable Switches



# About this Installation Guide

This Installation Guide describes the hardware characteristics, installation methods and the points that should be attended to during installation. This Installation Guide is structured as follows:

## Chapter 1 Introduction

This chapter describes the external components of the switch.

## Chapter 2 Installation

This chapter illustrates how to install the switch.

## Chapter 3 Connection

This chapter illustrates how to do the physical connection of the switch.

## Appendix A Troubleshooting

## Appendix B Hardware Specifications

# Audience



This Installation Guide is for:

Network Engineer

Network Administrator

# Conventions

- When using this guide, notice that features available in JetStream series products may vary by model and software version. Availability of JetStream series products may also vary by region or ISP. All images, steps, and descriptions in this guide are only examples and may not reflect your actual experience. Some models featured in this guide may be unavailable in your country or region. For local sales information, visit <https://www.tp-link.com>.
- The speed of the ports in Extend Mode will downgrade to 10 Mbps. The actual transmission distance may vary due to power consumption of PoE-powered devices or the cable quality and type.
- PoE budget calculations are based on laboratory testing. Actual PoE power budget is not guaranteed and will vary as a result of client limitations and environmental factors.
- This guide uses the specific formats to highlight special messages. The following table lists the notice icons that are used throughout this guide.

	Remind to be careful. A caution indicates a potential which may result in device damage.
	Remind to take notice. The note contains the helpful information for a better use of the product.

# Related Document

This Installation Guide is also available in PDF on our website. To obtain the latest documentation and product information, visit the official website: <https://www.tp-link.com>.

# Contents

---

Chapter 1	Introduction	1
1.1	Product Overview	1
1.2	Appearance	1
Chapter 2	Installation	9
2.1	Package Contents	9
2.2	Safety Precautions	9
2.3	Installation Tools	11
2.4	Product Installation	11
Chapter 3	Connection	13
3.1	Ethernet Port	13
3.2	SFP Slot	13
3.3	Verify Installation	13
3.4	Power On	14
3.5	Initialization	14
3.6	Accessing the Switch	14
Appendix A	Troubleshooting	16
Appendix B	Specifications	17

# Chapter 1 Introduction

## 1.1 Product Overview

The Unmanaged/Easy Smart Switch provides you with a low-cost, easy-to-use, high-performance, seamless, and standard upgrade to improve your network to 100 Mbps or 1000 Mbps.

TL-SG1008MP/TL-SG1016PE/TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE is also a Power Sourcing Equipment (PSE\*). The RJ45 port 1–8 on TL-SG1008MP and TL-SG1016PE, 10/100/1000 Mbps RJ45 port 1–16 on TL-SG1218MP and TL-SG1218MPE, and 10/100/1000 Mbps RJ45 port 1–24 on TL-SG1428PE support the Power over Ethernet (PoE\*) function, which can automatically detect and supply power to those powered devices (PDs\*) complying with IEEE 802.3af and IEEE 802.3at.



### Note:


- \*PSE is a device (switch or hub for instance) that will provide power in a PoE setup.
- \*PoE is a technology that describes a system to transmit electrical power, along with data, to remote devices over standard twisted-pair cable in an Ethernet network.
- \*PD is a device powered by a PSE and thus consumes energy. Examples include powering IP telephones, wireless LAN access points, network cameras, network hubs, embedded computers, and so on.

## 1.2 Appearance

### ▪ Front Panel

The front panel of TL-SG1008 is shown as the following figure.

Figure 1-1 Front Panel of TL-SG1008

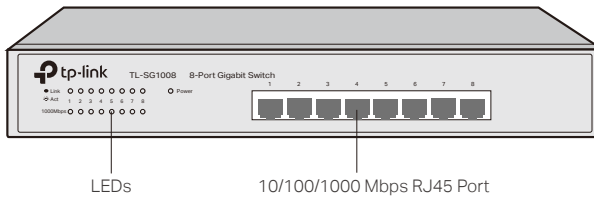


LEDs

10/100/1000 Mbps RJ45 Port

The front panel of TL-SG1008MP is shown as the following figure.

Figure 1-2 Front Panel of TL-SG1008MP

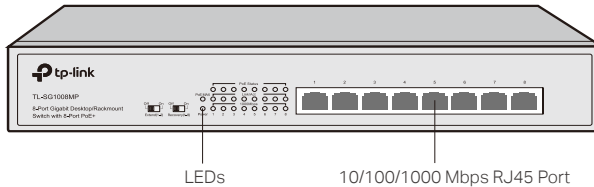


LEDs

10/100/1000 Mbps RJ45 Port

## Unmanaged/Easy Smart Rackmountable Switches


The front panel of TL-SF1016 is shown as the following figure.

Figure 1-3 Front Panel of TL-SF1016

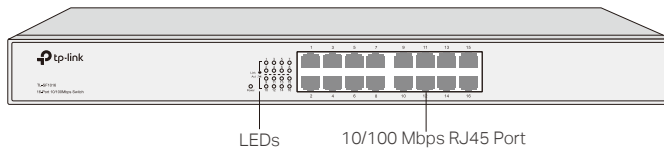


The front panel of TL-SF1016DS is shown as the following figure.

Figure 1-4 Front Panel of TL-SF1016DS

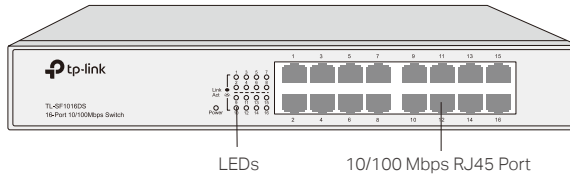


The front panel of TL-SG1016 is shown as the following figure.

Figure 1-5 Front Panel of TL-SG1016

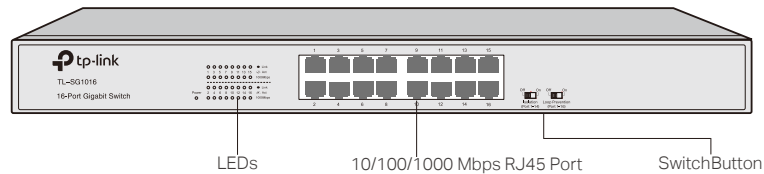


The front panel of TL-SG1016D is shown as the following figure.

Figure 1-6 Front Panel of TL-SG1016D

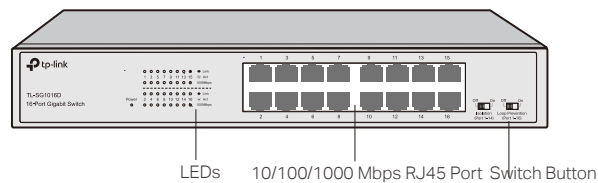


The front panel of TL-SG1016S is shown as the following figure.

Figure 1-7 Front Panel of TL-SG1016S

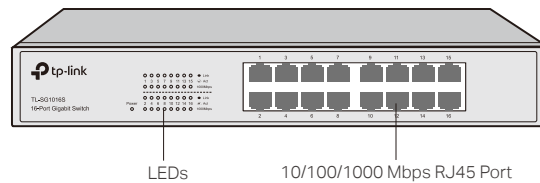


The front panel of TL-SG1016DE is shown as the following figure.

Figure 1-8 Front Panel of TL-SG1016DE

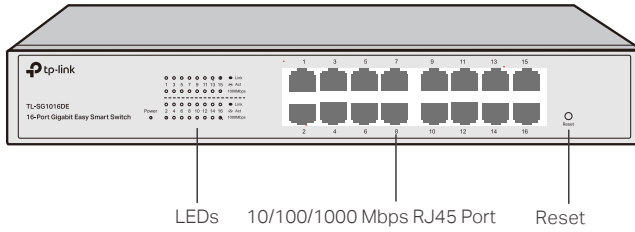


The front panel of TL-SG1016PE is shown as the following figure.

Figure 1-9 Front Panel of TL-SG1016PE

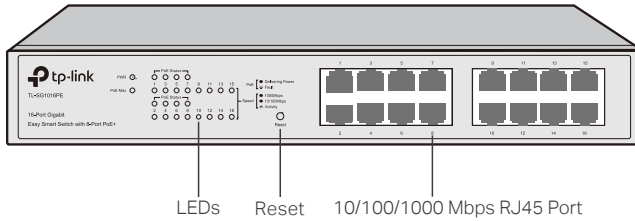


The front panel of TL-SF1024 is shown as the following figure.

Figure 1-10 Front Panel of TL-SF1024

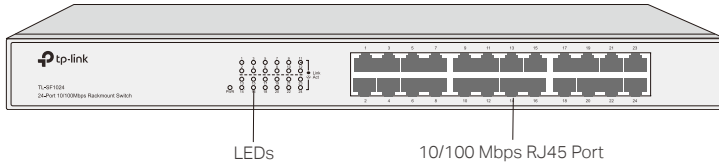


The front panel of TL-SF1024D is shown as the following figure.

Figure 1-11 Front Panel of TL-SF1024D

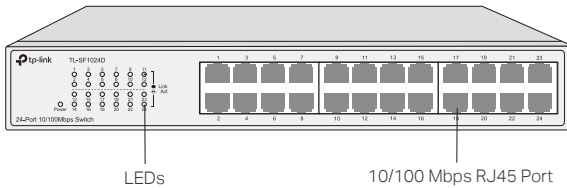

The front panel of TL-SG1024 is shown as the following figure.


Figure 1-12 Front Panel of TL-SG1024

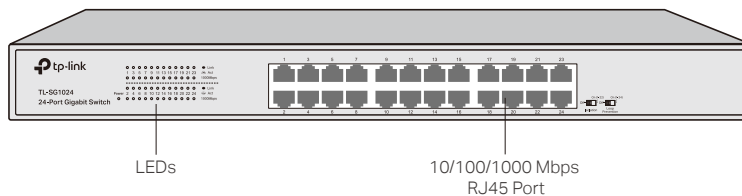

## Unmanaged/Easy Smart Rackmountable Switches


The front panel of TL-SG1024D is shown as the following figure.

Figure 1-13 Front Panel of TL-SG1024D

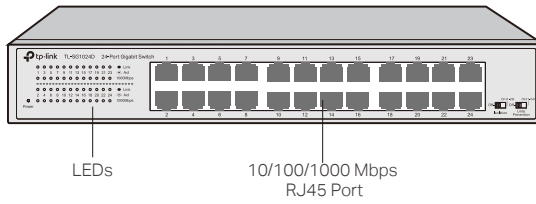


The front panel of TL-SG1024S is shown as the following figure.

Figure 1-14 Front Panel of TL-SG1024S

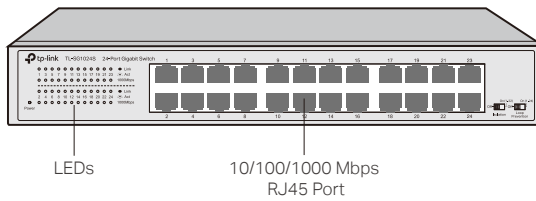


The front panel of TL-SG1024DE is shown as the following figure.

Figure 1-15 Front Panel of TL-SG1024DE

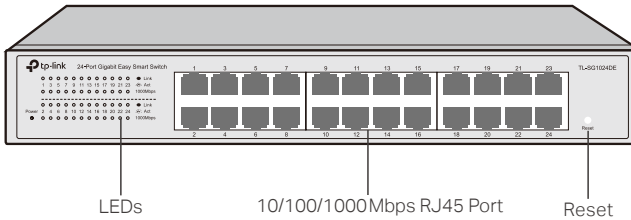


The front panel of TL-SF1048 is shown as the following figure.

Figure 1-16 Front Panel of TL-SF1048

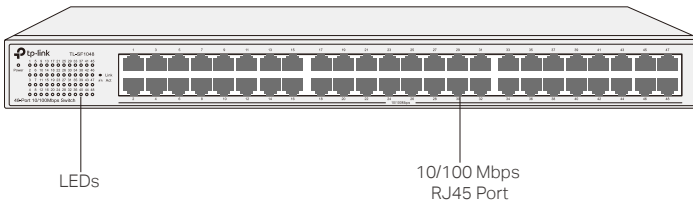


The front panel of TL-SG1048 is shown as the following figure.

Figure 1-17 Front Panel of TL-SG1048

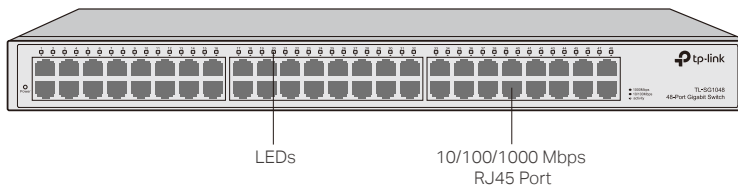


The front panel of TL-SG1218MP is shown as the following figure.

Figure 1-18 Front Panel of TL-SG1218MP

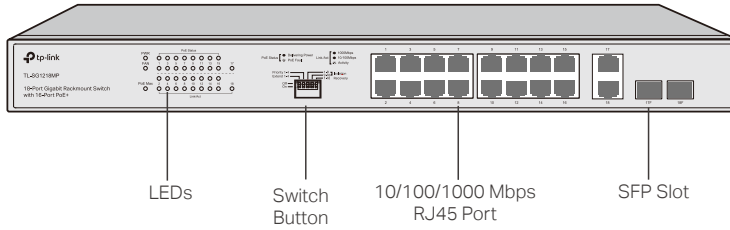


The front panel of TL-SG1218MPE is shown as the following figure.

Figure 1-19 Front Panel of TL-SG1218MPE

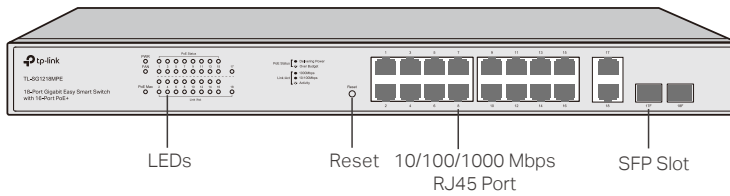

The front panel of TL-SG1428PE is shown as the following figure.

Figure 1-20 Front Panel of TL-SG1428PE

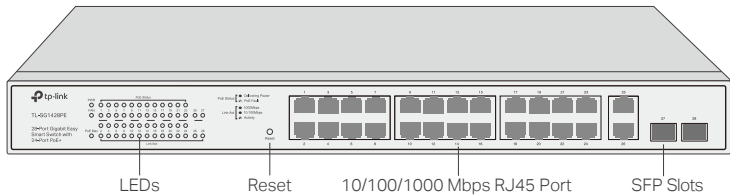

LED	Indication
Power PWR	<p><b>On:</b> The switch is powered on.</p> <p><b>Off:</b> The switch is powered off or power supply is abnormal.</p> <p><b>Flashing:</b> Power supply is abnormal/Loop Prevention function is enabled.</p> <p>Note: PWR for TL-SG1016PE/TL-SF1024/TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE; Power for other switches.</p>
1000Mbps	<p><b>On:</b> Running at 1000 Mbps.</p> <p><b>Off:</b> Running at 10/100 Mbps or no device is linked to the corresponding port.</p> <p>Note: For TL-SG1008/TL-SG1008MP/TL-SG1016/TL-SG1016D/TL-SG1016S/TL-SG1016DE/TL-SG1024/TL-SG1024D/TL-SG1024S/TL-SG1024DE.</p>
Speed	<p><b>Green On:</b> Running at 1000 Mbps but no activity.</p> <p><b>Green Flashing:</b> Running at 1000 Mbps and is transmitting or receiving data.</p> <p><b>Yellow on:</b> Running at 100/10 Mbps but no activity.</p> <p><b>Yellow Flashing:</b> Running at 100/10 Mbps and is transmitting or receiving data.</p> <p><b>Off:</b> No device is linked to the corresponding port.</p> <p>Note: Only for TL-SG1016PE.</p>



LED	Indication
Link/Act	<p><b>On:</b> A device is linked to the corresponding port and running properly.</p> <p><b>Flashing:</b> Transmitting or receiving data.</p> <p><b>Off:</b> No device is linked to the corresponding port.</p> <p>Note: For TL-SG1008/TL-SG1008MP/TL-SF1016/TL-SG1016/TL-SG1016D/TL-SG1016S/TL-SF1016DS/TL-SG1016DE/TL-SF1024/TL-SF1024D/TL-SG1024/TL-SG1024D/TL-SG1024S/TL-SG1024DE/TL-SF1048.</p> <p><b>Green On:</b> Running at 1000 Mbps but no activity.</p> <p><b>Green Flashing:</b> Running at 1000 Mbps and is transmitting or receiving data.</p> <p><b>Yellow on:</b> Running at 100/10 Mbps but no activity.</p> <p><b>Yellow Flashing:</b> Running at 100/10 Mbps and is transmitting or receiving data.</p> <p><b>Off:</b> No device is linked to the corresponding port.</p> <p>Note: For TL-SG1048, port 1–18 of TL-SG1218MP/TL-SG1218MPE, and port 1–26 of TL-SG1428PE.</p> <p>Port 17F–18F of TL-SG1218MP/TL-SG1218MPE, and port 27–28 of TL-SG1428PE only support 1000M SFP module connection, and they just have <b>Green On/Green Flashing/Off</b> LED indications</p>
PoE Status	<p><b>On:</b> The port is connecting and supplying power to a PD.</p> <p><b>Flashing:</b> The PoE power circuit may be in short or the power current may be overloaded or non-standard PD is connected or the amount of power of the port has exceeded the power limit.</p> <p><b>Off:</b> No PD is connected to the corresponding port or no power is supplied according to the power limits of the port.</p> <p>Note: For TL-SG1008MP/TL-SG1016PE/TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE</p>
FAN	<p><b>Green:</b> The fan works properly.</p> <p><b>Yellow:</b> The fan doesn't work properly.</p> <p>Note: For TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE</p>
PoE Max	<p><b>On:</b> Total power supply is between 146 W and 153 W. No power may be supplied if additional PDs are connected.</p> <p><b>Flashing:</b> Total power supply is equal to or greater than 153 W.</p> <p><b>Off:</b> Total power supply is less than 146 W.</p> <p>Note: Only for TL-SG1008MP.</p> <p><b>On:</b> Total power supply is between 143 W and 150 W. No power may be supplied if additional PDs are connected.</p> <p><b>Flashing:</b> Total power supply is equal to or greater than 150 W.</p> <p><b>Off:</b> Total power supply is less than 143 W.</p> <p>Note: Only for TL-SG1016PE.</p> <p><b>On:</b> Total power supply is equal to or greater than 243 W.</p> <p><b>Flashing:</b> Total power supply is equal to or greater than 243 W and lasts for more than 2 minutes.</p> <p><b>Off:</b> Total power supply is less than 243 W.</p> <p>Note: For TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE</p>

**Note:**

For models that support the LED On/Off feature, the LEDs function as shown above only when the LED status is on.

## Switch Explanation

Switch	Indication
Priority (For TL-SG1218MP)	<b>Off:</b> All the ports transmit data with the same priority. <b>On:</b> The specific ports transmit data with a higher priority than other ports.
Isolation (For TL-SG1218MP/TL-SG1016/TL-SG1016D/TL-SG1024/TL-SG1024D/TL-SG1024S)	<b>Off:</b> Ports can transmit data with each other. <b>On:</b> Specific ports cannot transmit data with other downlink ports. They can transmit data only with the uplink ports.
Extend (For TL-SG1008MP/TL-SG1218MP)	<b>Off:</b> Ports run at 10/100/1000 Mbps and support PoE power supply up to 100 m away. <b>On:</b> Ports run at 10 Mbps and support PoE power supply up to 250 m away.
Recovery (For TL-SG1008MP/TL-SG1218MP)	<b>Off:</b> The PoE Auto Recovery function is disabled. <b>On:</b> The switch will constantly detect the working status of a PoE powered device (PD). When the switch finds that the PD works abnormally, the switch will reboot it.
Loop Prevention (For TL-SG1016/TL-SG1016D/TL-SG1024/TL-SG1024D/TL-SG1024S)	<b>Off:</b> (default) The switch will not try to monitor or address loop-related issues. <b>On:</b> The switch will monitor and address loop-related issues within the network structure to prevent disruptions caused by redundant pathing.



**Note:** The numbers in brackets indicate the ports where the feature takes effect. For example, when Extend(1-4) is toggled to On, the Extend mode will be enabled for ports 1-4.

## Reset

Press this button for five seconds or above to reset the switch back to factory default settings.



**Note:** Only TL-SG1016DE/TL-SG1016PE/TL-SG1024DE/TL-SG1218MPE/TL-SG1428PE has a Reset button.

## 10/100/1000Mbps RJ45 Port

Designed to connect to the device with a bandwidth of 10 Mbps, 100 Mbps or 1000 Mbps. For TL-SG1008MP and TL-SG1016PE, port 1–8 can provide power for PDs. For TL-SG1218MP and TL-SG1218MPE, port 1–16 can provide power for PDs. For TL-SG1428PE, port 1–24 can provide power for PDs.

## 10/100Mbps RJ45 Port

Designed to connect to the device with a bandwidth of 10 Mbps or 100 Mbps.


## SFP Slot

Designed to install the SFP module. TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE has 2 SFP slots which support 1000 Mbps SFP module connection. For TL-SG1218MP and TL-SG1218MPE, an SFP Slot (port 17F/port 18F) and the associated 10/100/1000 Mbps RJ45 Port (port 17/port 18) are called a “Combo” port, which means they cannot be used simultaneously.

## ▪ Rear Panel

The rear panel is shown as the following figure. Here we take TL-SG1016PE as an example.

Figure 1-21 Rear Panel

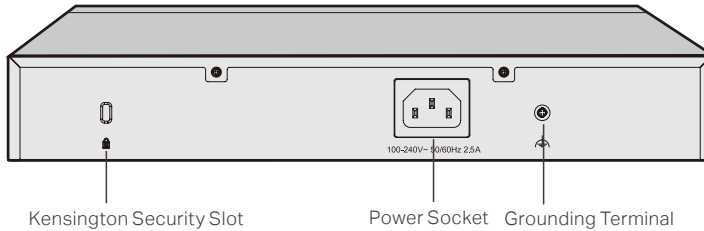

### Kensington Security Slot

Secure the lock (not provided) into the security slot to prevent the device from being stolen.



#### Note:

Only TL-SG1016PE/TL-SG1218MP/TL-SG1218MPE/TL-SG1024/TL-SG1428PE has a kensington security slot.

### Grounding Terminal

The switch already comes with lightning protection mechanism. You can also ground the switch through the PE (Protecting Earth) cable of AC cord or with Ground Cable. For detailed information, refer to the Lightning Protection Guide from the Related Documents of our website:

[https://www.tp-link.com/us/configuration-guides/lightning\\_protection\\_guide](https://www.tp-link.com/us/configuration-guides/lightning_protection_guide).

### Power Socket

Plug the female connector of the power cord directly into the power socket and plug the male connector into an AC outlet. Make sure that the voltage of the power supply meets the requirement of the input voltage (100–240 V ~ 50/60 Hz).



#### Caution:

You should use the provided power cord.


## Chapter 2 Installation

---

### 2.1 Package Contents

---

Make sure that the package contains the following items. If any of the listed items is damaged or missing, contact your distributor. The figures are for demonstration only. The actual items may differ in appearance and quantity from the depicted.

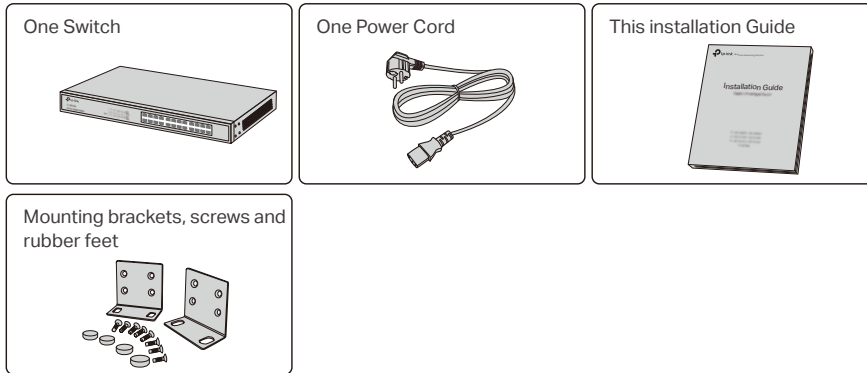

### 2.2 Safety Precautions

---

To avoid any device damage and bodily injury caused by improper use, you should observe the following rules.

#### ■ Safety Precautions

- Keep the power off during the installation.
- Wear an ESD-preventive wrist strap, and make sure that the wrist strap has a good skin contact and is well grounded.
- Use only the power cord provided with the switch.
- Make sure that the supply voltage matches the specifications indicated on the rear panel of the switch.
- Ensure that the switch is installed in a well-ventilated environment and its ventilation hole is not blocked.
- Do not open or remove the cover of the switch.
- Before cleaning the device, cut off the power supply. Do not clean it by the waterish cloth, and never use any other liquid cleaning method.
- Place the device with its bottom surface downward.

## ■ Site Requirements

### Temperature/Humidity



Keep the equipment room at an appropriate level of temperature and humidity. Too much or too little humidity may lead to bad insulation, leakage of electricity, mechanical property changes, and corrosion. High temperatures may accelerate aging of the insulation materials, significantly shortening the service life of the device. To find out the best temperature and humidity conditions for the device, check Appendix B.

### Cleanness



The dust accumulated on the switch can be absorbed by static electricity and result in poor contact of metal contact points. Some measures have been taken for the device to prevent static electricity, but too strong static electricity can cause deadly damage to the electronic elements on the internal circuit board. To avoid the effect of static electricity on the operation of the switch, attach much importance to the following items:

- Dust the device regularly, and keep the indoor air clean.
- Keep the device well grounded and ensure that the static electricity has been transferred.

### Electromagnetic Interference



Electronic elements including capacitance and inductance on the device can be affected by external interferences, such as conducted emission by capacitance coupling, inductance coupling, and impedance coupling. To decrease the interferences, make sure to take the following measures:

- Use the power supply that can effectively filter interference from the power grid.
- Keep the device far from high-frequency and strong-current devices such as radio transmitting station.
- Use electromagnetic shielding when necessary.

### Lightning Protection



Extremely high voltage currents can be produced instantly when lightning occurs and the air in the electric discharge path can be instantly heated up to 20,000 °C. As this instant current is strong enough to damage electronic devices, more effective lightning protection measures should be taken.


- Ensure that the rack and the device are well earthed.

- Make sure the power socket has a good contact with the ground.
- Keep a reasonable cabling system and avoid induced lightning.
- Use the signal SPD (Surge Protective Device) when wiring outdoor.

**Note:**

For detailed lightning protection measures, refer to the Lightning Protection Guide from the Related Documents of our website:  
[https://www.tp-link.com/us/configuration-guides/lightning\\_protection\\_guide](https://www.tp-link.com/us/configuration-guides/lightning_protection_guide).

## Installation Site

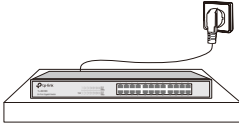

When installing the device on a rack or a flat workbench, attach much importance to the following items:

- The rack or workbench is flat, stable, and sturdy enough to support the weight of 5.5 kg at least.
- The rack or workbench has a good ventilation system. The equipment room is well ventilated.
- The rack is well grounded. Keep the device less than 1.5 meters away from the power socket.

## 2.3 Installation Tools

- Phillips screwdriver
- ESD-preventive wrist wrap
- Cables

**Note:**

These tools are not included with our product. If needed, you can purchase them separately.


## 2.4 Product Installation

### ▪ Desktop Installation

To install the device on the desktop, follow the steps:

1. Set the device on a flat surface which is strong enough to support the entire weight of the device with all fittings.
2. Remove the adhesive backing papers from the rubber feet.
3. Turnover the device and attach the supplied rubber feet to the recessed areas on the bottom at each corner of the device.

Figure 2-1 Desktop Installation

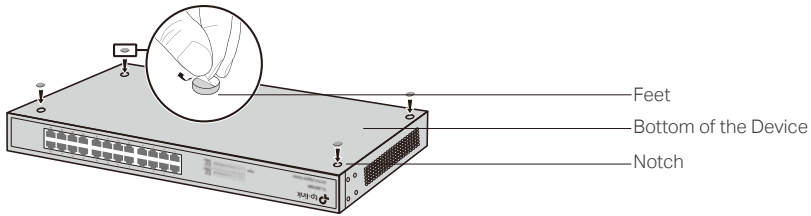


## ▪ Rack Installation

To install the device in an EIA standard-sized, 19-inch rack, follow the instructions described below:


1. Check the efficiency of the grounding system and the stability of the rack.
2. Secure the supplied rack-mounting brackets to each side of the device with supplied screws, as illustrated in the following figure.

Figure 2-2 Bracket Installation

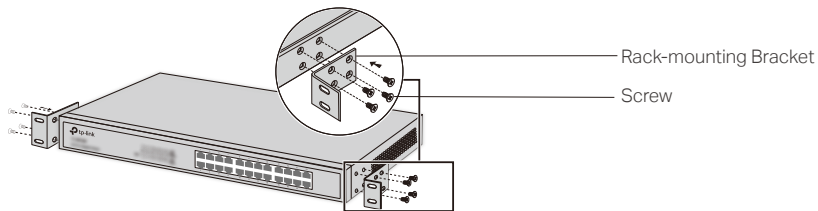

3. After the brackets are attached to the device, use suitable screws (not provided) to secure the brackets to the rack, as illustrated in the following figure.

Figure 2-3 Rack Installation

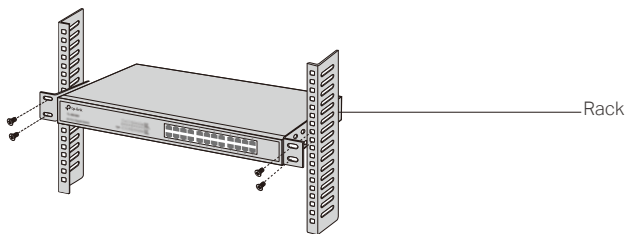

### Caution:

- Leave 5 to 10 cm gaps around the devices for air circulation.
- Avoid placing heavy things on the device.
- Mount devices in sequence from the bottom to top of the rack and ensure a certain clearance between devices for the purpose of heat dissipation.

## Chapter 3 Connection


---

### 3.1 Ethernet Port

---

Connect an Ethernet port of the switch to the computer by RJ45 cable as the following figure shows.

Figure 3-1 Connecting the RJ45 Port

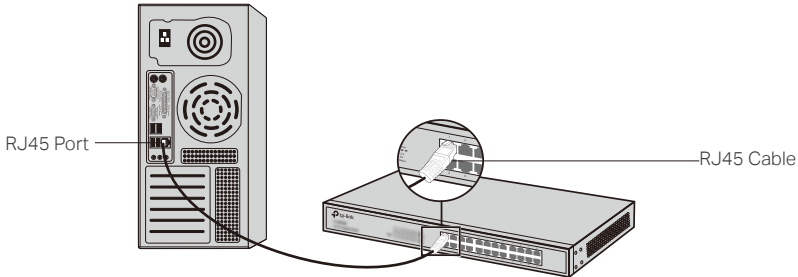


### 3.2 SFP Slot

---

The following figure demonstrates the connection of SFP slot to an SFP module.

Figure 3-2 Inserting the SFP Module

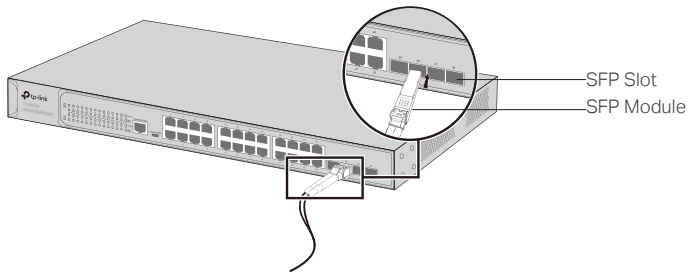

**Note:**

TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE has 2 SFP slots which support 1000 Mbps SFP module connection.

### 3.3 Verify Installation

---

After completing the installation, verify the following items:

- There should be 5 to 10 cm of clearance around the device for ventilation and make sure the air flow is adequate.
- The voltage of the power supply meets the requirement of the input voltage of the device.


- The power socket, device and rack are well grounded.
- The device is correctly connected to other network devices.

### 3.4 Power On

---

Plug the negative connector of the provided power cord into the power socket of the device and plug the positive connector into a power outlet as the following figure shows.

Figure 3-3 Connecting to Power Supply

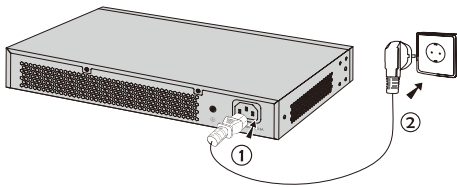

**Note:**

The figure is to illustrate the application and principle. The provided plug and the socket in your region may differ from the figures above.

---

### 3.5 Initialization

---

After the device is powered on, it begins the Power-On Self-Test. A series of tests run automatically to ensure the device functions properly. During this time, the LED indicators will respond as follows:

1. The PWR/Power LED indicator will light up.
2. The LED indicators of all the ports will flash momentarily and then turn off again after the initialization.

### 3.6 Accessing the Switch

---



**Note:**

Only for TL-SG1016DE/TL-SG1016PE/TL-SG1024DE/TL-SG1218MPE/TL-SG1428PE, you can access and manage the switch.

---

After the initialization finished, you can access and manage the switch using the Web-based GUI (Graphical User Interface) or using the Configuration Utility.

#### Using the Web-Based GUI

To access and manage the switch using the Web-Based GUI, take the following steps:

1. Find the IP address of the switch.
  - By default, the switch receives an IP address from a DHCP server (or a router that functions as a DHCP server) in your network. You can find out this IP address on the DHCP server.
  - If the switch cannot receive an IP address from a DHCP server, it uses the static IP address of **192.168.0.1**, with a subnet mask of **255.255.255.0**.

2. Configure IP address on your PC to make sure the switch and PC are in the same subnet.
  - If the switch uses an IP address assigned by a DHCP server, set your PC to obtain an IP address automatically from the DHCP server.
  - If the switch uses **192.168.0.1** as the IP address, set your PC's IP address as **192.168.0.x** ("x" ranges from 2 to 254), and subnet mask as **255.255.255.0**.
3. Launch a web browser on your PC, enter the IP address of the switch in the address bar and press **Enter**. Before proceeding with further configuration, you need to set up username and password by following the prompts on the page (if prompted to log in before setting username and password, use **admin** for both the username and password).

**Note:**

For certain devices, you may need to change the password the first time you log in, which will better protect your network and devices.

---

Now you can configure the switch using the Web-based GUI. For further information, refer to the User Guide. Go to <https://www.tp-link.com/support>, search the model number of your switch, and you can find this guide on the product **Support** web page.

### Using the Configuration Utility

To find the configuration utility from the official website, go to <https://www.tp-link.com/support> and search the model number of your switch. Download the **Easy Smart Configuration Utility** from the product **Support** web page on your PC.

For further information, refer to the Easy Smart Configuration Utility User Guide. Go to <https://www.tp-link.com/support>, search the model number of your switch, and you can find this guide on the product Support web page.

## Appendix A Troubleshooting

---

### Q1. What could I do if I forgot the username and password of the Switch?

With the switch powered on, press the Reset button for at least 5 seconds to reset the system. The system will be reset to the factory default settings. Set up username and password by following the prompts on the page (if prompted to log in before setting username and password, use **admin** for both the username and password).

### Q2. What should I do if I cannot access the web management page?

Please try the following:

1. Check every port LED on the switch and make sure the Ethernet cable is connected properly.
2. Try another port on the switch and make sure the Ethernet cable is suitable and works normally.
3. Power off the switch and, after a while, power it on again.
4. Make sure the IP address of your PC is set within the subnet of the switch.
5. If you still cannot access the configuration page, please reset the switch to its factory defaults. Then the IP address of your PC should be set as 192.168.0.x ("x" is any number from 2 to 254) and subnet mask as 255.255.255.0.

### Q3. Why is the Power/PWR LED not lit?

By default, the Power/PWR LED should be lit when the power system is working normally. If the Power/PWR LED is not lit, please try the following:

1. Make sure that the power cable is connected properly, and the power contact is normal.
2. Make sure the voltage of the power supply meets the requirement of the input voltage of the switch.
3. Make sure the power source is ON.
4. (For models that support the LED On/Off feature) On the LED On/Off configuration page, check whether the LED status is on. By default, the LED status is on.

### Q4. Why is the Link/Act LED not lit while a device is connected to the corresponding port?

Please try the following:

1. Make sure that the cable connectors are firmly plugged into the switch and the device.
2. Make sure the connected device is turned on and working normally.
3. The cable length should be less than 100 meters (328 feet). For TL-SG1008MP/TL-SG1016PE/TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE, if Extend Mode is enabled, it should be less than 250 meters (820 feet).
4. (For models that support the LED On/Off feature) On the LED On/Off configuration page, check whether the LED status is on. By default, the LED status is on.

### Q5. What should I notice before using the PoE Auto Recovery feature?

1. Before upgrading a connected PoE powered device (PD), disable PoE Auto Recovery to avoid the PD's damage.
2. When a PD does not send data packets to the switch for a long period in certain scenarios (e.g. an IPC in sleep mode), disable PoE Auto Recovery to avoid the PD repeatedly rebooting.

## Appendix B Specifications

Item	Content
Standards	IEEE 802.3i, IEEE 802.3u, IEEE 802.3x
	IEEE 802.3ab (except TL-SF1016/TL-SF1016DS/TL-SF1024/TL-SF1024D/TL-SF1048)
	IEEE 802.1p (for TL-SG1008/TL-SG1008MP/TL-SG1016/TL-SG1016D/TL-SG1016DE/TL-SG1016PE/TL-SG1016S/TL-SG1024/TL-SG1024D/TL-SG1024DE/TL-SG1024S/TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE)
	IEEE 802.1q (for TL-SG1016DE/TL-SG1016PE/TL-SG1024DE/TL-SG1218MPE/TL-SG1428PE)
	IEEE 802.3af (for TL-SG1008MP/TL-SG1016PE/TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE)
	IEEE 802.3at (for TL-SG1008MP/TL-SG1016PE/TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE)
Transmission Medium	IEEE 802.3z (for TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE)
	10Base-T: 2-pair UTP/STP of Cat. 3 or above (maximum 100 m)
	100Base-TX: 2-pair UTP/STP of Cat. 5 or above (maximum 100 m)
	1000Base-T: 4-pair UTP/STP of Cat. 5e or above (maximum 100 m) (except TL-SF1016/TL-SF1016DS/TL-SF1024/TL-SF1024D/TL-SF1048)
	1000BASE-SX: 62.5 $\mu$ m MMF (Minimum range: 2 m to 275 m) or 50 $\mu$ m MMF (Minimum range: 2 m to 550 m) (for TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE)
	1000BASE-LX: 62.5 $\mu$ m/50 $\mu$ m MMF (Minimum range: 2 m to 550 m) or 10 $\mu$ m SMF (Minimum range: 2 m to 5000 m) (for TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE)
	1000BASE-LX10: Type B1.1, B1.3 SMF (2 fiber) (Minimum range: 0.5 m to 10000 m) (for TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE)
1000BASE-BX10: Type B1.1, B1.3 SMF (1 fiber) (Minimum range: 0.5 m to 10000 m) (for TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE)	
Frame Forward Rate	10Base-T: 14881 pps/Port
	100Base-X: 148810 pps/Port
	1000Base-T: 1488095 pps/Port (except TL-SF1016/TL-SF1016DS/TL-SF1024/TL-SF1024D/TL-SF1048)
	1000BASE-X: 1488095 pps/Port (for TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE)

## Unmanaged/Easy Smart Rackmountable Switches

LEDs	Power, Link/Act (for TL-SF1016/TL-SF1016DS/TL-SF1024/TL-SF1024D/TL-SF1048/TL-SG1048)
	Power, 1000 Mbps, Link/Act, PoE Status, PoE MAX (for TL-SG1008MP)
	PWR, Speed, PoE Status, PoE MAX (for TL-SG1016PE)
	PWR, Link/Act, PoE Status, PoE MAX, FAN (for TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE)
	Power, 1000 Mbps, Link/Act (for other switches)
Operating Temperature (運作溫度)	0°C to 50°C (32°F to 122°F) (for TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE)
	-5°C to 50°C (23°F to 122°F) (for TL-SG1016D)
	-5°C to 45°C (23°F to 113°F) (for TL-SG1008MP/TL-SG1016PE)
	0°C to 40°C (32°F to 104°F) (for other switches)
Storage Temperature (存放溫度)	-40°C to 70°C (-40°F to 158°F)
Operating Humidity (運作濕度)	10% to 90%RH Non-condensing (10% to 90%RH 無凝結)
Storage Humidity (存放濕度)	5% to 90%RH Non-condensing (5% to 90%RH 無凝結)

## CE Mark Warning



This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

## EU Declaration of Conformity

TP-Link hereby declares that the switch is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2011/65/EU and (EU)2015/863.

The original EU Declaration of Conformity may be found at <https://www.tp-link.com/en/support/ce/>

## UK Declaration of Conformity

TP-Link hereby declares that the switch is in compliance with the essential requirements and other relevant provisions of the Electromagnetic Compatibility Regulations 2016 and Electrical Equipment (Safety) Regulations 2016.

The original UK Declaration of Conformity may be found at <https://www.tp-link.com/support/ukca>



## Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Place the device with its bottom surface downward.
- The plug on the power supply cord is used as the disconnect device, the socket-outlet shall be easily accessible.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Plug the product into the wall outlets with earthing connection through the power supply cord.
- The PoE ports shall not be used to charge lithium batteries or devices supplied by lithium batteries.

This equipment is not suitable for use in locations where children are likely to be present.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

In Denmark: Apparatets stikprop skal tilsluttes en stikkontakt med jord som giver forbindelse til stikproppens jord.

In Finland: Laite on liitettävä suojakoskettimilla varustettuun pistorasiaan.

In Norway: Apparatet må tilkoples jordet stikkontakt.

In Sweden: Apparaten skall anslutas till jordat uttag.

# FCC Compliance Information Statement



Product Name: Switch

Product Model: TL-SF1016/TL-SF1016DS/TL-SF1024/TL-SF1024D/TL-SF1048/TL-SG1008/TL-SG1008MP/TL-SG1016/TL-SG1016D/TL-SG1016DE/TL-SG1016PE/TL-SG1024/TL-SG1024D/TL-SG1024DE/TL-SG1024S/TL-SG1048/TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE

Responsible party:

TP-Link Systems Inc.

10 Mauchly, Irvine, CA 92618

Website: <https://www.tp-link.com/us/>

Tel: +1 626 333 0234

Fax: +1 909 527 6804

E-mail: [sales.usa@tp-link.com](mailto:sales.usa@tp-link.com)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

We, TP-Link Systems Inc., has determined that the equipment shown as above has been shown to comply with the applicable technical standards, FCC part 15. There is no unauthorized change is made in the equipment and the equipment is properly maintained and operated.

Issue Date: 2026/02/05

Industry Canada Statement

CAN ICES-003 (A)/NMB-003(A)

For switches with non-removable battery or without battery:

この装置は、クラスA 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI-A

BSMI Notice

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 不要私自拆開機殼或自行維修，如產品有故障請與原廠或代理商聯繫。
- 為避免電磁干擾，本產品不應安裝或使用於住宅環境。

限用物質含有情況標示聲明書

設備名稱: Switch Equipment name		型號 (型式) : TL-SF1016/TL-SF1016DS/TL-SF1024/TL-SF1024D/TL-SF1048/TL-SG1008/TL-SG1008MP/TL-SG1016/TL-SG1016D/TL-SG1016DE/TL-SG1016PE/TL-SG1024/TL-SG1024D/TL-SG1024DE/TL-SG1024S/TL-SG1048/TL-SG1218MP/TL-SG1218MPE/TL-SG1428PE Type designation (Type)				
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr <sup>+6</sup> )	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
PCB	○	○	○	○	○	○
外殼	○	○	○	○	○	○
電源供應板	—	○	○	○	○	○

其他與配件	—	○	○	○	○	○
-------	---	---	---	---	---	---

備考 1. “超出 0.1 wt %” 及 “超出 0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值  
Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考 2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。  
Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考 3. “—” 係指該項限用物質為排除項目。  
Note 3: The “—” indicates that the restricted substance corresponds to the exemption.



Продукт сертифіковано згідно з правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.





Points de collecte sur [www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)  
Privilégiez la réparation ou le don de votre appareil !




 




## 產品標籤上符號的解釋

Note: The product label can be found at the bottom of the product and its I.T.E. power supply. Symbols may vary from products.


注意：產品標籤可以在產品底部和其I.T.E.電源供應器上找到。產品標籤可在產品底部找到。符號可能因產品而異。

Symbol 符號	Explanation 說明
	Class II equipment 二級設備
	Class II equipment with functional earthing 具有接地功能的二級設備

	Alternating current 交流電
	Direct current DC 電壓
	Polarity of d.c. power connector 輸出端點的極性
	For indoor use only 僅供室內使用
	Dangerous voltage 危險電壓
	Caution, risk of electric shock 請注意, 有觸電的危險
	Energy efficiency Marking 能源效率標誌
	Protective earth 保護接地
	Earth 接地
	Frame or chassis 框架或外殼
	Functional earthing 功能接地
	Caution, hot surface 請注意, 表面過熱
	Caution 警告

	<p>Operator's manual 操作手冊</p>
	<p>Stand-by 待機</p>
	<p>"ON"/"OFF" (push-push) “開啟”/“關閉” (按壓式)</p>
	<p>Fuse 保險絲</p>
	<p>Fuse is used in neutral N 保險絲用於中性線 N</p>
	<p><b>RECYCLING</b> 回收</p> <p>This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.</p> <p>User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.</p> <p>這個產品帶有歐盟指令 2012/19/EU 中關於廢棄電氣電子設備 (WEEE) 的選擇性分類標誌。這意味著, 該產品必須按照該指令處理, 以便進行回收或拆解, 從而最大限度地減少對環境的影響。</p> <p>用戶可以選擇將產品交給有資格的回收機構, 或在購買新的電器或電子設備時將其交給零售商進行回收。</p>
	<p>Caution, avoid listening at high volume levels for long periods 請小心, 避免長時間以高音量收聽。</p>
	<p>Disconnection, all power plugs 斷線, 所有電源插頭</p>
<p><b>m</b></p>	<p>Switch of mini-gap construction 迷你間隙結構開關</p>

<p><b>μ</b></p>	<p>Switch of micro-gap construction (for US version)</p> <p>Switch of micro-gap / micro-disconnection construction (for other versions except US)</p> <p>小間隙結構開關 (US 版本)</p> <p>小間隙 / 小斷開結構的開關 (非 US 版)</p>
<p><b>ε</b></p>	<p>Switch without contact gap (Semiconductor switching device)</p> <p>無接觸間隙的開關 (半導體開關設備)</p>

 For technical support, the user guide and other information, please visit <https://www.tp-link.com/support/?type=smb>, or simply scan the QR code.

