

NEBULA

by Anker



User Manual

Nebula Mars 3

Important Safety Instructions

Read all instructions before you use this product. Do not make any changes or create settings that are not described in this manual. If physical injury, loss of data, or damage is caused by failure to follow instructions, the warranty does not apply.

Setup

- Do not use the product in any way other than described herein in order to avoid personal injury or property damage.
- Do not place this product on soft surfaces such as tablecloths or carpets, otherwise, the product could be a fire hazard.
- Do not place this product in areas susceptible to excessive dust and dirt or near any appliance generating a strong magnetic field.
- To prevent overheating, do not block or clog the ventilation openings.
- Never place this product in a confined space. Always leave enough space around this product for ventilation.
- Do not use the product in an environment where the temperature is too high or too low. Never expose the product to strong sunshine or wet environments.
- When this product is running for a long period of time, the surface may become hot. If this occurs, shut it down immediately and unplug the charger. Resume operation after the product has cooled down.
- Always handle this product with care. Avoid touching the lens.
- Do not allow children to handle the product without supervision.
- Do not place heavy or sharp objects on this product.
- To avoid electric shock, do not disassemble the product.
- Avoid extreme vibrations as they may damage the internal components.
- Please ensure you use only the adapter offered by the manufacturer. Using an unauthorized adapter may be dangerous and violate the Terms of Use and product warranty.

- Users should comply with the laws and regulations of the corresponding countries and regions where the equipment is located (used), abide by professional ethics, pay attention to safety obligations, and strictly prohibit the use of our products or equipment for any illegal purposes. Our company will not be responsible for any violators' legal liability under any circumstances.

Hearing Safety

- To prevent hearing damage, do not listen for extended periods at high volume. Set the volume to a safe level.

Charging

- The adapter is for indoor use only.
- For pluggable equipment, the socket outlet shall be easily accessible.
- Due to the enclosure material, the product must only be connected to a USB 2.0 or higher.
- It is recommended to charge the product in an environment with a temperature that ranges from 5°C~25°C / 41°F~77°F.
- When supplying power, place the device in an environment with a normal room temperature and good ventilation.

Battery

- The remote control contains batteries, which are a choking hazard. Keep the remote control out of the reach of children.
- Remove the batteries when the remote control has not been used for a long period of time.
- Replace the remote control batteries only with the same or an equivalent type.
- Batteries contain chemical substances and they should be disposed of properly.
- Charge this device regularly. Do not store this device with a completely discharged battery.

Warning

- Replacing a battery with an incorrect type may defeat safeguards and create danger;
- Disposal of the battery/device in a fire or a hot oven or other source of significant heat, or mechanically crushing, or cutting of the battery/device, may result in an explosion;
- Leaving the battery/device in an extremely hot environment may result in an explosion or leakage of flammable liquids or gases;
- The battery/device subjected to extremely low air pressure may result in an explosion or leakage of flammable liquids or gases.


Cleaning

- Use a soft, lint-free cloth. Never use liquid, gaseous, or easily flammable cleansers to clean.
- Do not use any liquid cleaning agents to clean the lens to avoid damaging the film coating on the lens.
- Wipe surfaces gently. Be careful that you do not scratch the surface.
- Use lens cleaning paper to clean the lens.

Repairs

- Do not make any repairs to this product yourself.
- Improper maintenance can result in injuries or product damage.
- Refer all servicing to qualified service personnel.

What's Included

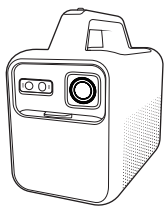


1




2



 
3



4

 

5

 

6


- 1 Nebula Mars 3
- 2 Remote Control
- 3 AAA Battery × 2
- 4 Power Adapter
- 5 Power Cord
- 6 Quick Start Guide

Note: The plug type varies by region.

At a Glance


1. Projector

Front View

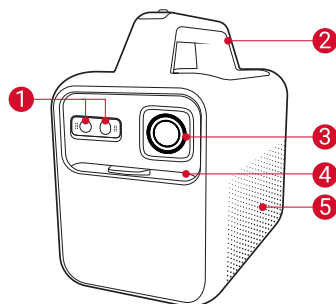


- 1 Sensors (for autofocus and auto keystone correction)
- 2 Handle
- 3 Lens
- 4 Lens cover
 - Slide down to turn on and automatically adjust focus
 - Slide up to turn off
- 5 Loudspeaker

Rear View

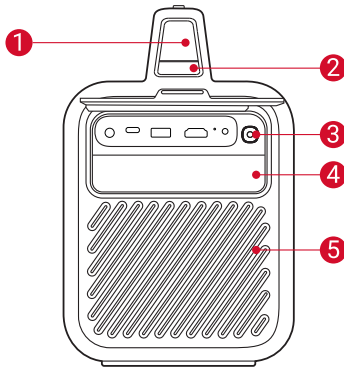


- 1** LED screen
 - Indicates current battery level and power mode
- 2** Power mode button
 - Press to switch power modes when the projector is on
 - Press once to check the battery level when the projector is off
 - Press and hold for 2 seconds to enable charge-out when the projector is off
- 3** Ambient light button
 - Press to turn the ambient light on / off
 - Increase brightness
- 4** Ambient light
- 5** Air ventilation (outlet)

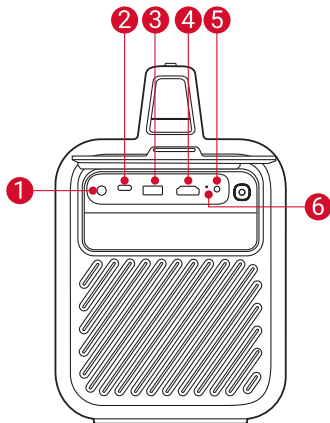


- 1** DC IN port
 - Connect to power supply
- 2** USB-C port
 - Connect to a USB drive
 - Charge an external device as a power bank
- 3** USB-A port
 - Connect to a USB drive
 - Charge an external device as a power bank
- 4** HDMI port
 - Connect to a playback device via HDMI output
- 5** AUX-OUT port
 - Connect to an external sound output device
- 6** Reset button
 - Press to reset your projector

Top View

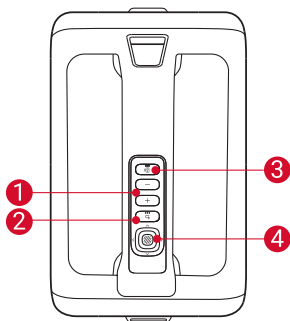

- 1 Volume up / down buttons
- 2 Return button
- 3 Bluetooth speaker button
 - Press to enter or exit Bluetooth speaker mode
- 4 Navigation / confirmation buttons


Bottom View

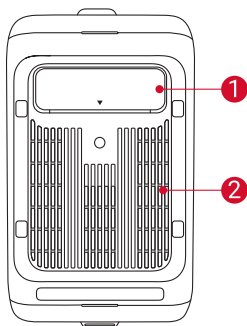


- 1 Adjustable stand
- 2 Air ventilation (inlet)

Dimensions

250 (L) × 160 (W) × 260 (H) mm / 9.8 (L) × 6.3 (W) × 10.2 (H) in

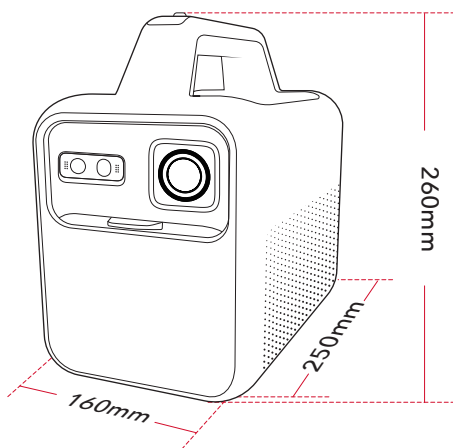

2. Remote Control

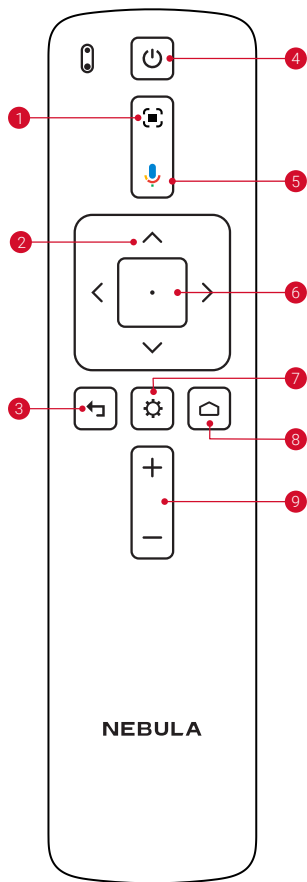

- 1 Adjust focus
- 2 Navigation
- 3 Return to the previous menu
- 4 Power on / off or switch to standby mode
- 5 Activate the Google Assistant
- 6 Confirm a selection / Pause / Resume
- 7 Access more options
- 8 Access the home menu
- 9 Volume up / down


Nebula RC
Model: D0413X

Charging

1. Charge Your Projector

Before using it for the first time, fully charge the built-in battery using the provided adapter and power cord.



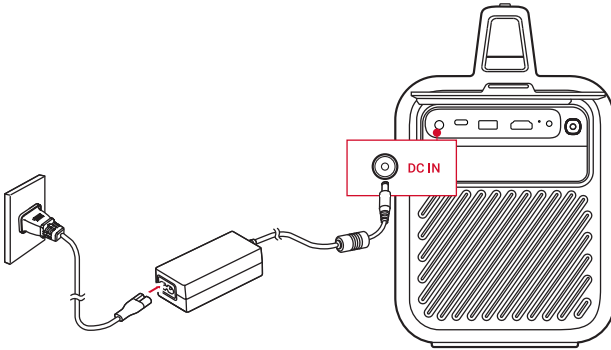


The LED screen will light up when the battery is being charged.



2. Check Battery Level




The projector's LED ring indicates the current battery level.

To check the battery level when powered off, press the power mode button.

LED Ring					
Battery Level	<20%	20% - 40%	40% - 60%	60% - 80%	80% - 100%


3. Power Mode

Press the power mode button to switch power modes when the projector is powered on.

	AI Mode: Adjusts the display brightness based on ambient brightness.
	Eco Mode: Lowers the display brightness to 300 lumens to extend playtime.
	Standard Mode: Sets the display brightness to the highest level.

4. Charge External Devices

Charge an external device through the USB port when the projector is powered on.

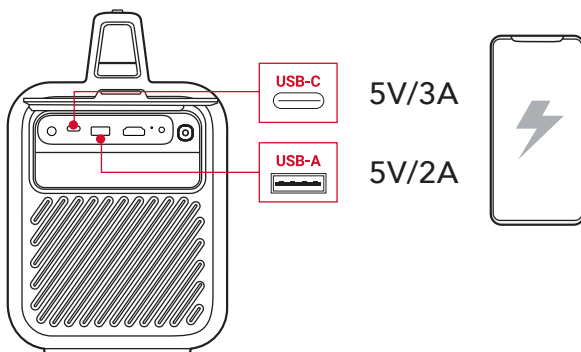


To enable or disable charge-out when the projector is powered off, press and hold the power mode button for two seconds.


Getting Started

1. Prepare the Remote

- ① Slide to open the battery compartment.
- ② Insert new batteries matching the polarity (+/-) and close the battery compartment.

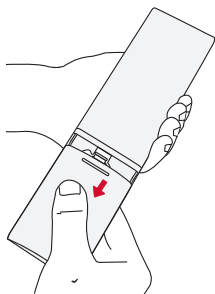

①

 

②


- ③ For first-time use, follow the on-screen instructions to pair the remote with your projector.



The distance between the remote and the projector should not exceed 10 m / 33 ft.

2. Position Your Projector

Place the projector on a stable, flat surface in front of the projection surface. For the best results, the projection surface should be white and flat.

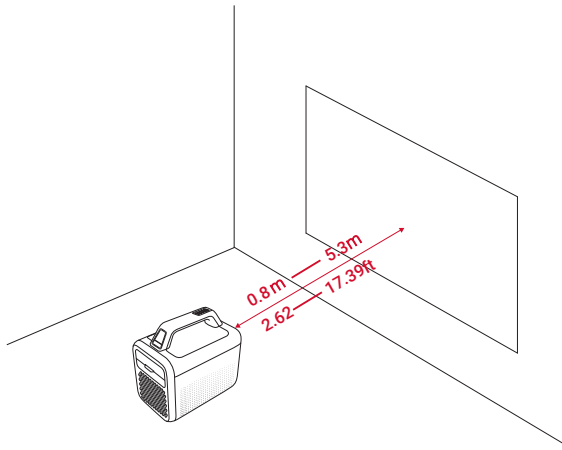


- It is unnecessary to tilt the projector towards the projection surface. You can correct the projection image with the built-in autofocus and auto-keystone correction.
- The distance between the projector and the projection surface determines the projection image size. For the best result, position the projector 0.8-5.3 m / 2.62-17.39 ft away from the projection surface to get a screen size of 30-200 inches.

Screen Size	Distance Between Projector Lens and Screen
30 inches	0.8 m / 2.62 ft
50 inches	1.33 m / 4.36 ft
80 inches	2.1 m / 6.89 ft
100 inches	2.65 m / 8.69 ft
120 inches	3.20 m / 10.50 ft
150 inches	4.00 m / 13.12 ft
200 inches	5.30 m / 17.39 ft


3. Power On / Off

Slide the lens cover down to turn on the projector, and slide up to turn it off.

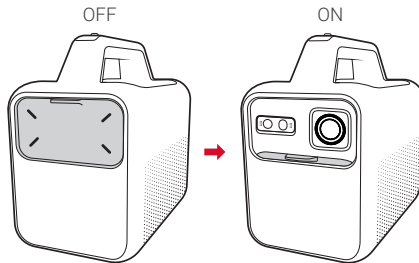


- You can also press and hold the power button on the remote for 3 seconds to power off.
- When powered on, press the power button on the remote to switch to standby mode.
- In HDMI Source Mode, the projector will switch to standby mode after 10 minutes of button inactivity or when no signal is detected.
- When standby mode lasts for 30 minutes, the projector will automatically power off.


4. Auto Image Correction

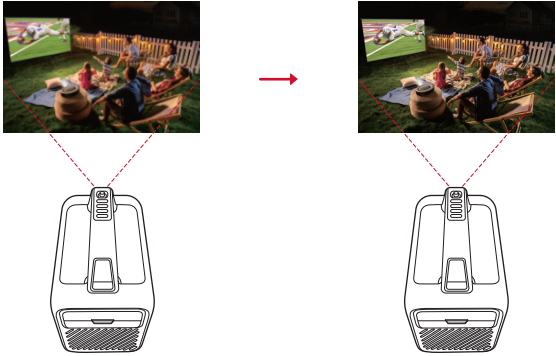


Autofocus

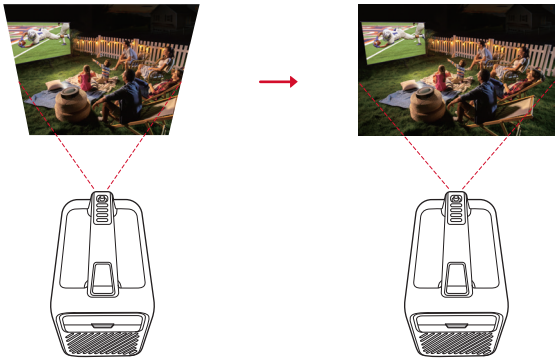

Auto Keystone Correction

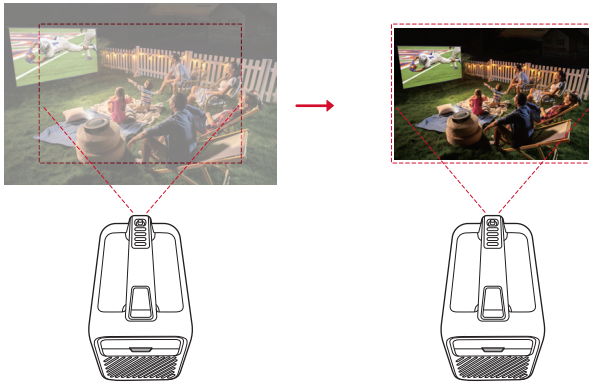

Auto Screen Fit

Auto image correction includes autofocus, auto keystone correction, and auto screen fit. These features can be enabled in three ways: by powering on the projector, by pressing  on the remote, or by slightly moving the projector.

To set your auto image correction preferences, go to  > **[Projector Settings]** > **[Image Correction]**.

5. Setup

When using the projector for the first time, follow the on-screen display (OSD) instructions to complete the basic setup.

- Pair the remote with your projector
- Select your language
- Set up your TV with your Android phone (optional)
- Connect to Wi-Fi
- Sign in with your Google account

Nebula Connect App

To easily control the projector, we recommend you download the Nebula Connect app.



- ① Download the **Nebula Connect** app from the App Store (iOS devices) or Google Play (Android devices).
- ② Enable Bluetooth on your smartphone.
- ③ Open the Nebula Connect app and select **[Mars 3 XXXXXX]** as the device to be connected.
- ④ Follow the on-screen instructions to complete the connection setup.

Settings

Go through the setup process when you power on the projector for the first time.

1. Network

This projector can be connected to the Internet via a wireless (Wi-Fi) connection.

1. Press the Settings button (the cogwheel icon) on the remote control, and navigate to **Settings > Network & Internet**.
2. Use the navigation button on the projector to access **Settings > Network & Internet**.
3. Open Nebula Connect app on your device, and select your projector's model, then proceed to **Settings > Network & Internet**.

2. Projector

On the home screen, select  > **[Projector Settings]** and press  .



Brightness	<p>AI Brightness: Automatically adjusts the display brightness based on the ambient brightness.</p> <p>Eco: Lowers the display brightness to 300 lumens to extend playtime.</p> <p>Standard: Sets the display brightness to the highest level by default. You can also adjust the brightness manually.</p> <p>Auto: Switches to standard mode when being charged, and to eco mode when disconnected from the power supply.</p>
Picture	<p>Picture Mode: The projector comes with several predefined picture modes so that you can choose one to suit your environment and input source.</p> <ul style="list-style-type: none">• Standard: Keeps natural-looking colors with a balance of warm and cool tones.• Movie: Provides the best colors for watching movies.• Bright: Increases the brightness and response time level for gaming.• Custom: Manually set the contrast, saturation, sharpness, color temperature, wall color, and gamma, or reset the values. <p>Expert Settings: Customize advanced settings to enhance image quality.</p> <ul style="list-style-type: none">• DNR: Reduces digital noise on-screen.• MPEG NR: Eliminates image noise when playing an MPEG-compressed video.• DI Film Mode: Creates high-definition images encoded at 24 frames per second.• MEMC: Inserts additional frame between original frames for smoother motions.

<p>Image Correction</p>	<p>Auto Keystone Correction Settings: Trigger auto keystone correction by remote, at startup, or after movement.</p> <p>Manual Keystone Correction: Manually perform keystone correction by adjusting each corner.</p>
	<p>Auto Screen Fit Settings: Trigger auto screen fit by remote, at startup, or after movement.</p> <p>One-Click Screen Fit: Automatically adjust the image size to your surface.</p>
	<p>Zoom: Zoom in or out of the projection image from 50% to 100%.</p>
<p>Focus Settings</p>	<p>Auto Focus at Startup: Automatically adjust the focus when the projector powers on.</p> <p>Auto Focus After Movement: Automatically adjust the focus when you move the projector.</p> <p>Manual Focus Correction: Enable manual focus correction.</p>
<p>Sound</p>	<p>Sound Mode: The projector comes with several predefined sound modes so that you can choose one to suit your environment and input source.</p> <ul style="list-style-type: none"> • Music: Enhances the treble for listening to music. • Movie: Creates a surround-sound listening experience for watching movies. • Outdoors: Increases volume for playing audio / video outdoors. • Custom: Manually set audio settings such as balance, bass, and treble.
	<p>System Sound: Turn on / off system sound notifications.</p>

	<p>Speaker Delay: To synchronize the sound with the image, adjust the sound delay by 10 milliseconds for each operation.</p>
	<p>Expert Settings: Customize advanced settings to enhance audio quality.</p> <ul style="list-style-type: none"> • Digital Output: Select an output audio format. • eARC: Allows TV to send audio backward to its source device via a single HDMI cable. • Auto Volume Control: Controls volume automatically.
<p>Bluetooth Speaker Mode</p>	<p>Enable Bluetooth speaker mode.</p>
<p>Advanced Settings</p>	<p>Projector Mode: Select projector placement.</p> <ul style="list-style-type: none"> • Auto: Automatically detects whether the projector is inverted and automatically switches to an appropriate projector mode. • Front: The device is located in front of the projection surface. • Front Ceiling: The device is hanging from the ceiling in an upside-down position. The image is rotated by 180 degrees. • Rear: The device is located behind the projection surface. • Rear Ceiling: The device is hanging from the ceiling in an upside-down position behind the projection surface. The image is rotated by 180 degrees and horizontally mirrored. <hr/> <p>Motion Settings: Set a sensitivity level to trigger autofocus and auto keystone correction.</p> <hr/> <p>Keystone Calibration: Recalibrate the projector if keystone correction doesn't work properly.</p>

	<p>Smart Solutions: Turn on / off auto-alerts when the projector detects an issue.</p> <ul style="list-style-type: none"> • Projection Angle Alert: Shows an alert when the maximum projection angle is reached. • Fine Tuning Popup: Shows a prompt to access fine-tuning after auto keystone correction.
Updates	Check for firmware updates.
Ambient Light	Turn the ambient light off or set the brightness level.

3. Apps

- ① On the home screen, select  > **[Apps]**, and press .
- ② Select an app and check the current version, open or force stop the app, check the storage used, clear data or cache, uninstall the app, or enable or disable notifications and permissions.

4. Device Preferences

On the home screen, select  > **[Device Preferences]** and press .

About	Check device information, update the system, reset the device, or rename the device.
Date & Time	Enable or disable automatic date and time, manually set date and time, select time zone, or set time format.
Timer	Change settings for auto power-off.
Language	Select an on-screen display language.
Keyboard	Check and manage keyboards.

Input	Select HDMI as the input source, or change Consumer Electronic Control (CEC) settings. CEC allows your HDMI device and Android TV to control each other.
Power	Change the auto-sleep settings, turn off the current display, or set auto power-off time when no signal is available.
Storage	Check the device storage.
Home Screen	Set the channels and apps on the home screen or check open-source licenses.
Google Assistant	Change settings for the Google Assistant.
Chromecast	Choose to show notifications on all Android devices connected to your Wi-Fi and let them control media casting to this device.
Screen Saver	Change the screen saver settings.
Location	Use Wi-Fi or permit apps to estimate locations.
Usage & Diagnostics	Automatically send diagnostic information to Google, like crash reports and usage data from your device, apps, and Chromecast built-in.
Accessibility	Change the caption settings or enable accessibility service.
Restart	Restart the system or cancel.

5. Others


On the home screen, select  to find more setting options.

Accounts & Sign-In	Sign in to make the most of Android TV.
Remotes & Accessories	Search for accessories for pairing.

Using Your Projector

1. Select an App

Once connected to a wireless network, you can access online services, enjoy movies, music, pictures, and browse online. You can download more apps from Google Play.

- ① Press  to access the home screen.
- ② Select **[Apps]** > **[Get More Apps]**.

2. Voice Assistant

After setup, press the Google Assistant button on the remote, you can speak to the Google Assistant and request your commands.

3. Wireless Casting


You can wirelessly cast movies, games, music, and the entire screen from your iOS, macOS, Android, or Windows device to Nebula Mars 3.




Make sure Nebula Mars 3 and your device are connected to the same wireless network. The network can be a Wi-Fi network or your phone's hotspot.

3.1 Cast In-App Content

You can cast content from apps that support Chromecast, such as YouTube and Prime Video.

- ① Connect your device and projector to the same wireless network.
- ② Open the streaming app on your device.
- ③ Play a video clip and tap the cast icon  on the video screen.
- ④ Select **D2333** to connect. The projector will mirror the video screen on your device.

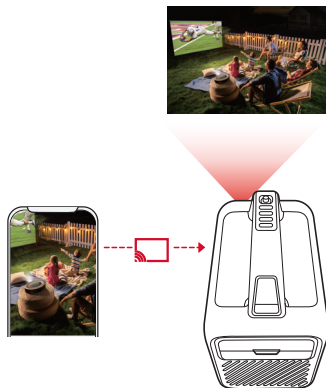

Certain content cannot be cast on Nebula Mars 3 due to copyright restrictions. You can stream the content via the same app installed on your projector.

3.2 Cast Device Screen

You can cast the entire screen from your device to the projector.


- ① Connect your device and projector to the same wireless network.
- ② Install the **Nebula Cast** app on your projector.
- ③ Open **Nebula Cast** and follow the on-screen instructions to complete the process.

4. Play from HDMI Playback Devices

The projector can be connected to various HDMI playback devices such as a TV box, TV stick, DVD player, set-top box (STB), gaming console, or other devices.

- ① Connect the projector to an HDMI playback device with an HDMI cable (not provided).

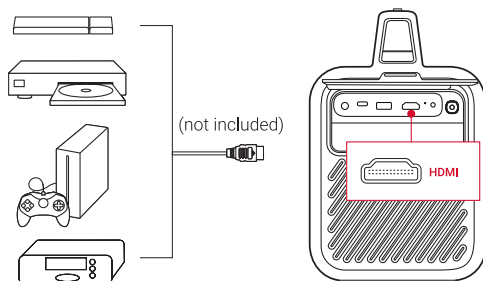

- ② Press  to access the settings menu, then select **[Device Preferences] > [Input] > [HDMI]**.




The projector will automatically start HDMI playback once connected to an HDMI playback device for the first time.

5. Play from a USB Drive

With this projector, you can enjoy music, video, and pictures, or install apps that are stored on a USB 2.0 drive.


- ① Download the **File Explorer** app from Google Play.
- ② Insert a USB-A or USB-C drive into the USB port.
- ③ Select music, videos, or photos from the USB drive that you want to play and press .
- ④ Press  to stop playback.

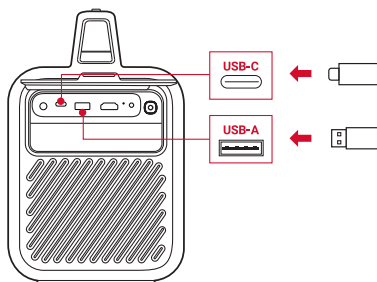

6. Play Through External Sound Devices

This projector can also be connected to external sound output devices, including headphones and speakers; when connected to external speakers, the built-in speaker system is disabled.

- ① Use a 3.5 mm audio cable or an adapter (not provided) to connect your headphones or external speakers.
- ② Connect the other end of the cable to the AUX port on this projector.
 - You will hear audio from your headphones or external speakers.

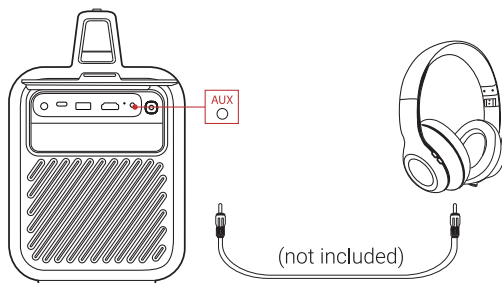

Before connecting headphones and putting them on, turn down the volume to avoid hurting your ears.

7. Bluetooth Speaker Mode


You can use this projector as a standalone Bluetooth speaker.



① To switch to Bluetooth speaker mode, you have two options:

A: Press  on the projector.



B: On the home screen, select  > [Projector Settings] > [Bluetooth Speaker Mode] and press  .

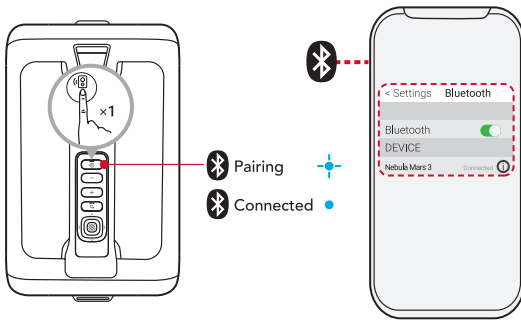② Enable Bluetooth on your smartphone and select **Nebula Mars 3** to connect.



	Flashing blue	Ready to pair / Bluetooth pairing
	Steady blue	Bluetooth connected

 

To exit Bluetooth speaker mode, press  on the projector or press and hold  on the remote for two seconds.

Firmware Update

To fully enhance your experience with this projector with the latest features, you are recommended to update the firmware from time to time.

To update the firmware, go to **[Projector Settings] > [Updates] > [Firmware Update]**.

Specifications

Specifications are subject to change without notice.

Input	19V \approx 9.47A
Power Consumption	150W
Standby Power Consumption	< 1W
Resolution	1920 × 1080p
Compatible Resolutions	480p (60 Hz), 576p (50 Hz), 720p (30 Hz), 720p (50 Hz), 720p (60 Hz), 1080p (24 Hz), 1080p (30 Hz), 1080p (50 Hz), 1080p (60 Hz), 4K2K (23.976 Hz), 4K2K (25 Hz), 4K2K (30 Hz), 4K2K (50 Hz), 4K2K (60 Hz), 4096 (23.976 Hz), 4096 (25 Hz), 4096 (30 Hz), 4096 (50 Hz), 4096 (60 Hz)
USB-A Output Power (Charging)	10W
USB-C Output Power (Charging)	15W
Contrast Ratio	400:1
Aspect Ratio	16:9
Screen Size	30" to 200"
Throw Ratio	1.2:1
Throw Distance	0.8-5.3 m / 2.62-17.39 ft

Light Source	LED
Focus	Auto
Keystone Correction	Auto
Speaker Output Power	40W max
Noise	28 dB at 25°C
Wi-Fi	Wi-Fi 2.4 GHz/5.0 GHz 802.11 a/b/g/n/ac
Bluetooth Version	5.1
Bluetooth Range	25 m / 82 ft
USB Format	FAT, FAT32, NTFS
Operating Temperature	0°C~35°C / 32°F~95°F
Remote Control Batteries	AAA × 2

Troubleshooting

① Fails to Power On

- The projector may be out of power. Charge the projector for 15-30 minutes and see if the LED screen lights up.




② Cannot Charge

- Use the included adapter and power cord to charge the projector.
- Try a different adapter (at least 180W) and power cord.

③ Cannot Connect to a Wi-Fi Network

- Place your projector within 16 ft / 5 m of the router and reconnect.
- Set your router to 2.4 GHz or 5 GHz and retry.
- Restart your projector and router and retry.
- Try a different Wi-Fi network or your phone's hotspot.

④ Blurry Image

- Slightly move the projector or press  on the remote to start autofocus.
- To manually adjust the focus, go to **[Settings] > [Projector Settings] > [Focus Settings] > [Manual Focus Correction]**, and use  and  on the remote.
- Adjust the projection angle and direction as well as the height of the projector if necessary.

⑤ Distorted Image

- Update the firmware to the latest version via **[Projector Settings] > [Updates] > [Firmware Update]**.
- Go to **[Settings] > [Projector Settings] > [Image Correction] > [Perform Manual Keystone Correction]**.
- Move the projector left or right, or alter the tilt if necessary.

⑥ No HDMI Signal

- Use a different HDMI cable.
- Connect your projector with another HDMI playback device.
- Connect the HDMI playback device to your TV with an HDMI cable to check if the device or cable are working.

- Adjust the HDMI playback device's output resolution / frequency to be the same as the projector's.

⑦ How to Install Netflix

- On your projector, download and install the **Nebula Play** app from Google Play. Open **Nebula Play** and select **[Tips] > [Netflix Installation]**. Then follow the on-screen instructions to install Netflix.

⑧ How to Control Netflix with Mouse Mode

- Install **Nebula Connect** on your phone and connect with **Mars 3**. Select Mouse mode. Use one finger to move and click, or two fingers to scroll.

⑨ How to Play Videos without Wi-Fi

- Download videos to a USB drive in FAT32 format. For the following steps, see **Play from a USB Drive**.

Trademarks



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Anker Innovations Limited is under license. Other trademarks and trade names are those of their respective owners.



HDMI, HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Warranty

30-Day Money-Back Guarantee for Any Reason

You may return your undamaged product and packaging within 30 days of purchase to receive a FULL REFUND for any reason. If the reason for the return isn't quality-related, the customer must pay for the return shipping.

12-Month Warranty for Quality-Related Issues

Nebula's products are warrantied to be free from material and workmanship defects for 12 months from the date of purchase. Within this period, Nebula will provide a replacement and cover any return shipping costs for products that fail in normal use.

Please note: Any provided shipping labels must be used within 20 days from the date they're issued by Nebula Support.

Default Open Ports: Wi-Fi (2.4 GHz / 5 GHz)

Port Description:

1. Upon initial power-on or after a reset, if no Wi-Fi information has been configured, the device will begin scanning for available SSIDs.
2. In normal operating mode, the device will automatically connect to the previously saved router SSID and password.
3. To change the Wi-Fi configuration, you can go to Settings > WiFi, or follow the instructions in the manual to reset and reconfigure the network connection.