 


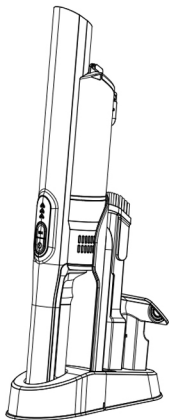

INSTRUCTION MANUAL

Cordless handheld
Vacuum cleaner

HC-1812H



WARNINGS AND SAFETY PRECAUTION

- **Read the instruction manual carefully before use!**
- **Keep this instruction manual for future use.**
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is designed for domestic use only.
- Do not pull on the connection cord, but rather on the plug, to separate the appliance adaptor from the mains.
- Do not use outdoor.
- Do not leave the appliance unattended when it is switched on, as this may be a source of danger.
- Stand the appliance on a table or flat surface.
- If the supply adaptor is damaged, it must be replaced by a qualified person in order to avoid a hazard.
- Following objects are strictly banned, otherwise the vacuum cleaner will be damaged or fire calamity will be caused, which bring accidents such as human body injuries:
 - Don't pick up large or sharp broken pieces such as glasses.
 - Don't pick up inflammable or explosive substance such as gasoline or alcohol.
- Check the device and connections regularly for visible damage.
- The device must not be used if the housing is damaged or other damage is present.
- Never attempt to open the device or the adaptor yourself or to replace the connecting cable.
Always have repairs to the device carried out by a specialist workshop.
- There is considerable danger to the user if repairs are faulty.
- Do not trap the power adaptor cable and when using the adaptor, pay attention to where the cable is to prevent any danger of tripping over it.
- Keep the cable away from heated surfaces (e.g. cooker and other hot surfaces).
- Do not touch the adaptor and cable with wet hands.
- Do not point the vacuum cleaner at persons or animals when in operation.
- Only use the adaptor in a clean and dry environment.
- Only use the device with the accessories supplied.
- Please keep these instructions in a safe place.
- Use only with the provided adaptor.
- This appliance is not intended for use by children or the infirm, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

DESCRIPTION

1. On/Off switch

3. Dust tank and filter

5. Charging base

 
 
 
 
7. Sofa brush

2. Speed control knob

4. Adaptor

6. Charging base cover

8. 2in1 nozzle

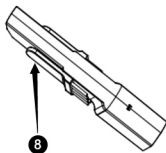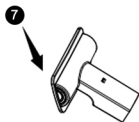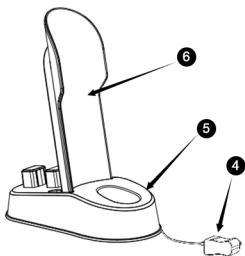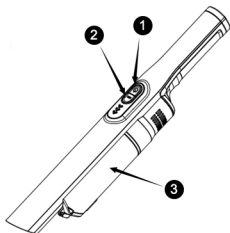

CHARGING

First, place the charging stand on the desktop.

 
Put the vacuum cleaner into charging base, ensure the vacuum cleaner connect the charging port well.

Insert the adaptor into the mains socket always make sure that the vacuum is turned off before connecting to the power adaptor.

The indicator light in white color will come on and keep flashing once the device has made contact with the adaptor.


In order to ensure that it is always ready for use, the device should be left on charge with adaptor when not being used.

The adaptor may become warm during charging-this is normal.

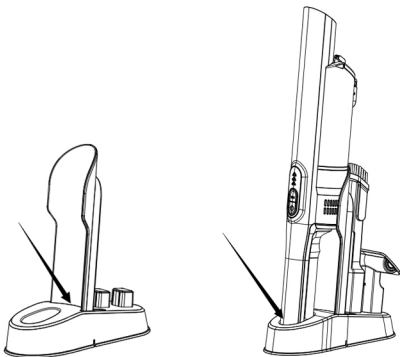

INDICATION LIGHT

 1. When the charging indicator light is white and flickering, it means the battery pack is being charged.
2. When the charging indicator light is steady on, it means the battery pack has been fully charged.
3. When using the appliance, the indicator light will be in white color.
4. When the battery level is low, the last white indicator light will keep flashing.

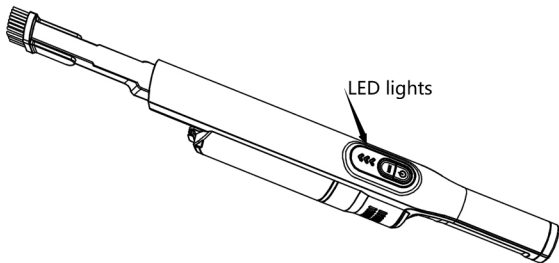


USE AND FUNCTION

Do not connect the adaptor when using the appliance.

You should regularly check that the nozzle is clean as any sharp object may scratching sensitive floors.

 1. Inset the nozzle/sofa brush into main unit when cleaning table, car, corner sofa, carpet etc...
2. Start the device by pushing the on/off button upward.
3. You may also press the speed control to adjust the power.
4. Pushing the on/off switch button downward to turn off the device.

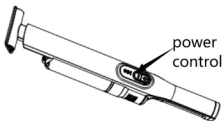


EMPTYING / CLEANING

Careful cleaning of the dust container and filters

- 1 Press the dust release button when cleaning the dust.
- 2 When need clean filters, press the tank button.
- 3 Pull out the filters to clean.

Important: Make sure that the parts are dry before they are re-installed.

 Put the filter into dust container. Assemble the dust bin to the motor unit following up the opposite procedures for detaching the dust bin.

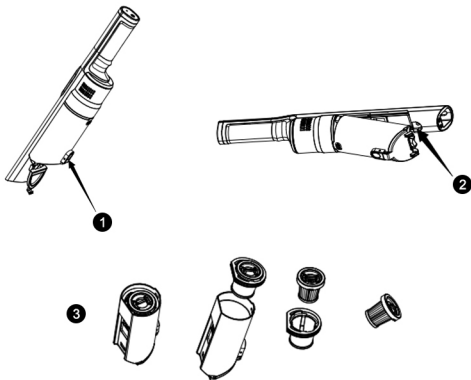

DISPOSAL

If the device is to be disposed, the battery should ideally be removed. Used battery should be never disposed with household wastes; it should always be taken to a local authority recycling centre. If you cannot disassemble the product yourself, the local authority recycling centre will dispose of the product for you in an environment - friendly manner.

SERVICING OR REPAIRS

If the product malfunctions or is damaged, all inspections and repairs must be carried out by a qualified electrician or technician.

Specifications:

Size: 450*70*88mm	Suction: 20kpa
Input: 100-240V 50/60Hz	Output: 18V 500mh
Li-ion battery: 14.8V 2200mAh	Motor power: 200W
Working time: 35mins	Charging time: 4.5h