

# Small drift high speed car instructions

## Packing list



Remote control



Battery



USB charging cable



High-speed tire X4



Instruction manual

## Remote control car and remote control battery installation and charging

 


Connect the battery to the charging cable, then plug in the USB charging cable. On the USB port of the computer or USB charger, then switch on Power. A red light indicates charging. When the red light doesn't go on it means full.



Remote control battery installation method

- (1) Open the battery cover of the remote control.
- (2) Load 1.5V "AA" according to the correct polarity 2 batteries, cover the battery cover and lock the screw.



After charging is complete, turn the battery Put in battery compartment locking screws




4 high-speed tires are included in the package and can be self-propelled Replace the drift tire.

## Operation method

 1. Turn the power switch of the remote control car to the "ON" position. Put the remote control car on a flat surface, turn on the remote control switch. When the remote control light stops blinking, you can flip the joystick. Perform operations.

(Note: The remote control light can not be flipped when flashing)

Power switch




## Product use basic operation diagram

Left / right steering wheel



 Forward / backward control lever



Power indicator  
High and low speed switching  
The power switch

 
The light switch

1. Pull the remote control lever backwards to remotely control the car. Move forward, move forward to move the remote control car backwards. When the control lever When pulled back halfway, the remote control car will slowly move forward; When the joystick is fully pulled backwards, the remote control car will quickly move forward.

2. Rotate the "right turn/right turn steering wheel" clockwise Turn the car right, counterclockwise, "turn left/turn left" Turn left with the steering wheel.

3. High and low speed buttons: Factory default low speed gear Press the switch button to switch to high gear.

4. Light switch: Press once to turn on the body lights, then press again to turn off the body lights



## FCC Statement

**WARNING:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- The device must not be co-located or operating in conjunction with any other antenna or transmitter.