

# SENCOR®

## SHS 9200RS



 
### AUTOROTATION HAIR STYLER

Translation of the original manual



# SENCOR®

## SHS 9200RS



**A**

1

**SENCOR**

2

3

4

5

6

7



 
 
Push



8


9

10

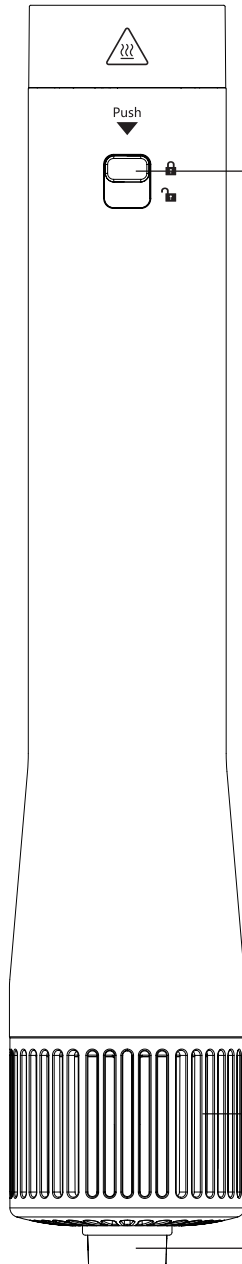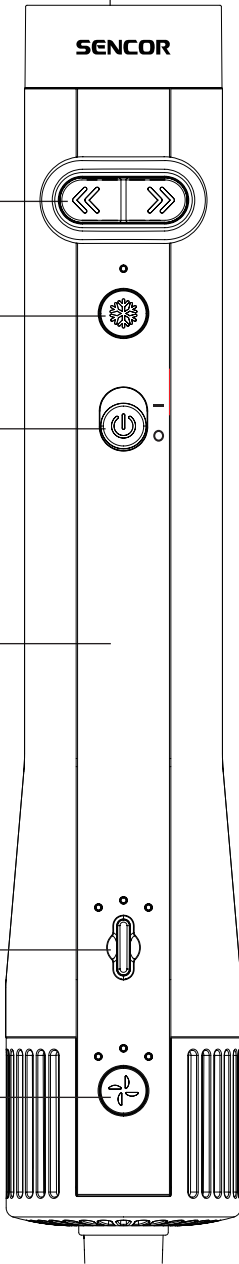


**B**

 
1




2

 


3

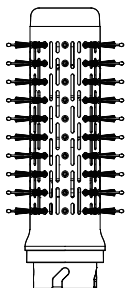 


4

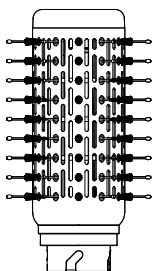 


5

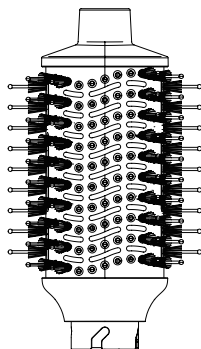 


6

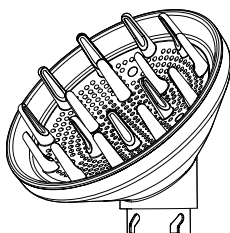 


7

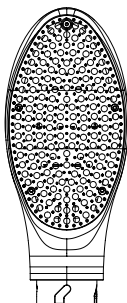 


8




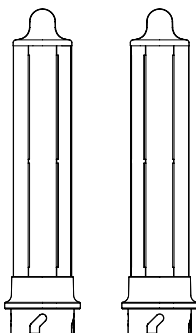 


9

 

10

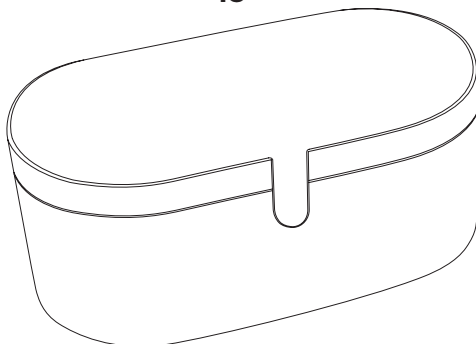 

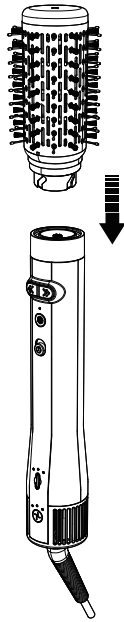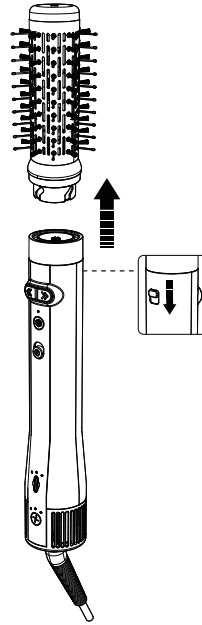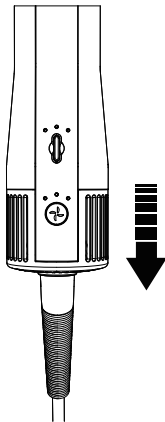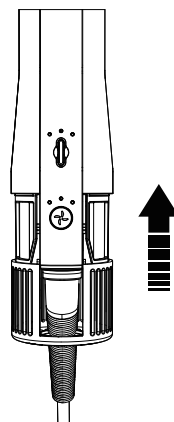    **C****C1****C2****D****D1****D2**

## IMPORTANT SAFETY INSTRUCTIONS

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance must not be performed by children without supervision.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. Never use the appliance if the power cord is damaged.

**Warning:**

Do not use this appliance near water.

**Warning:**

Do not use this appliance in bath, shower or near containers containing water.

**Warning:**

Do not use this appliance near baths, showers, washbasins or other containers containing water.

- If the appliance is used in the bathroom, unplug it from the socket after use by removing the plug from the socket,

as the presence of water poses danger, even when the appliance is turned off.

- To insure additional safety, it is recommended to install a Residual Current Device (RCD) into the electric circuit to the bathroom with a maximum current rating of 30 mA. Ask the electrician for advice.
- The temperature of accessible surfaces may be higher if the appliance is in operation. Such surfaces can become hot during use. Do not touch the hot surface. This could cause skin burns.

---

#### **Additional Important Safety Instructions for Use of the Appliance**

- Carefully unpack the product and take care not to throw away any part of the packaging until all the product parts have been identified.
- Before connecting this appliance to a power socket, make sure the voltage stated on the label of the appliance corresponds to the voltage in your power socket.
- Never use accessories which have not been supplied with this appliance or which are not designed for this appliance.
- Make sure that the power cord and plug cannot come into contact with water or dampness.
- Do not spray the product with water or any other liquid. Do not submerge this appliance and any of its components in water or any other liquids.
- This product is designed for household use. Do not use it in industrial environment or outdoors!
- Do not use sprays in the vicinity of the appliance.
- If you will not be using the appliance, disconnect it from the electrical grid. Before cleaning or moving the appliance, proceed in the same manner.
- Make sure the appliance is fully cold before storing.
- Do not expose sensitive people or animals to hot air.
- Do not place the appliance on or near an electrical or gas stove. Do not place the device within near heat producing devices such as fireplaces etc.
- Do not use attachments other than those supplied or specified by the manufacturer.
- Do not use the appliance if it has a damaged power cord or power plug.
- In no case should you attempt to repair the appliance yourself; do not make any modifications to it – danger of electric shock! Entrust all repairs and adjustments of this device to a specialised company/service. Failure to do so will expose you to the risk of voiding the warranty policy.
- Do not place the power cord of the appliance near hot surfaces or over sharp objects. Do not place heavy objects on the power cord, position the cord so that it is not stepped on or tripped over. Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface.
- Do not disconnect the appliance from the power socket by pulling the power cord – it may damage the power cord / power socket. Disconnect the cable from the power socket by gently pulling the plug of the power cord.
- Do not use the product for any other purposes than those intended.
- Ensure that when turning on the product, that the air inflow or outflow grill is not covered.
- Ensure that no hair or threads remain in any of the openings of the curling iron.
- The manufacturer is not responsible for damages caused by the incorrect use of this product or its accessories (food spoilage, injuries, burns, scalding, fire, etc.).

---

#### **EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION**



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.



Product with protection class II  
Electric shock protection is provided by double or heavy-duty insulation.

# EN **Autorotation Hair Styler**

## User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.

### CURLING IRON DESCRIPTION

<b>A1</b> Attachment connection ending	<b>A6</b> Temperature button
<b>A2</b> Rotation direction buttons	<b>A7</b> Speed button
<b>A3</b> Cold air button	<b>A8</b> Attachment release lock
<b>A4</b> On/off switch	<b>A9</b> Filter protection grid
<b>A5</b> Handle	<b>A10</b> Power cord

### DESCRIPTION OF ATTACHMENTS

<b>B1</b> Drying head	<b>B6</b> Diffuser
<b>B2</b> Air straight head	<b>B7</b> Hair comb
<b>B3</b> Round rotary brush head 38 mm	<b>B8</b> Curling attachments (left and right)
<b>B4</b> Round rotary brush head 50 mm	<b>B9</b> Round brush
<b>B5</b> Oval brush	<b>B10</b> Case for storing attachments

### BEFORE FIRST USE

- Before first use, remove the curling iron and its accessories from the packaging and detach all promotional labels and stickers. Make sure that it is not damaged.
- Make sure to remove all accessories from the package material.

### INTENDED USE


- The Sencor SHS 9200RS Automatic Rotating Curling Iron is designed for drying hair and for styling and curling dry hair.

### ASSEMBLING/REPLACING ATTACHMENTS



#### Caution:

Before assembling or replacing the attachments, always make sure that the curling iron is switched off and the power plug is disconnected from the mains socket.


- Attach the attachment you want to use to the connection ending of the curling iron and insert it into the connection ending until you hear a click – see figure **C1**. The protrusions inside the ending must fit into the grooves in the bottom part of the attachment.
- If you need to remove the attachment, press the release button down towards the  symbol and pull the attachment upwards – see figure **C2**.




#### Caution:

Before removing the attachment, please make sure that it's cool. There is a risk of serious burns.

### USING THE CURLING IRON

- Comb your hair thoroughly and assemble the curling iron with the desired attachment.
- Plug the power cord into the mains socket.
- Move the power switch to position I (on).
- Press the temperature button repeatedly to set the desired temperature: low temperature (50 °C, blue indicator light) – medium temperature (70 °C, yellow indicator light) – high temperature (90 °C, red indicator light).
- Press the speed button repeatedly to set the desired speed: low speed – medium speed – high speed. Each time it is pressed, the respective indicator light will be lit.
- For rotary attachments, select the rotation direction using the  buttons.
- Dry your hair gradually or style it.
- When you have finished using it, move the switch to the O (off) position. Allow appliance to cool down on a heat-resistant mat before cleaning and storing.

### Cold air styling

- Turn the switch to the  position so that you can shape your hair with cold air.
- Press the speed button repeatedly to set the desired speed: low speed – medium speed – high speed. Each time it is pressed, the respective indicator light will be lit.
- When you have finished using it, move the switch to the O (off) position. Allow appliance to cool down on a heat-resistant mat before cleaning and storing.

### ATTACHMENTS AND THEIR USE


#### Drying head

- The drying head is used to dry the hair before shaping and final styling.

#### Air straight head

- The air straight head is used for drying and straightening hair and basic styling.
- Carefully comb your hair and divide it into equally thick strands. Place the air straight head as close to the roots as possible. Be careful not to burn yourself.
- Insert the hair strand in between the arms of the air straight head. Slowly and gently pull the curling iron through the entire length of the hair from roots to ends. Repeat the procedure if needed.
- Repeat with the other strands that you wish to straighten.

#### Round rotary brush heads (38 mm / 50 mm)

- The round rotary brush head is used to quickly and comfortably shape the hair while drying.
- Use the  buttons to select the direction of rotation (clockwise or anticlockwise). Thanks to the rotation of the brush, the hair automatically winds and smooths, making it easier to create volume from the roots, fine waves or a smooth hairstyle without frizz.

- The warm air from the curling iron combined with the airflow helps to fix the hairstyle, while the bristles of the brush gently comb the hair and give it shine.
- This attachment is ideal for everyday styling because it saves time and simplifies working with a curling iron and a hair dryer in one step.

### Oval brush / round brush

- The oval/round brush is designed to manually shape hair as it dries. The hair curls around the brush by hand, and the heat from the curling iron helps it get the shape it wants – from soft waves to a smooth, voluminous hairstyle.
- The firm bristles of the brush smoothen, detangle and shine the hair while the shape of the brush makes it easier to lift the strands away from the roots.


### Diffuser

- The diffuser is suitable for drying and styling curly and wavy hair.

### Brush for combing hair

- The brush for combing the hair is designed to make it easier to comb the hair and prevent tangling.
- The fine but firm bristles separate the individual strands, so the warm air from the curling iron spreads evenly and the styling is faster and gentler.
- This attachment is ideal for smoothing hair before curling or when creating loose waves, as it ensures smooth slippage of the strands and minimizes pulling. At the same time, it helps to preserve the natural shine of the hair and gives the hairstyle a tidy, professional look.

### Curling attachments

- The curling iron is supplied with two curling attachments – right and left for the right and left side of the head. For easy distinction, there is a graphic mark on each attachment that distinguishes the sides.
- Carefully comb your hair and divide it into equally thick strands.
- Put the end of the strand to the curling attachment and start winding it. Slowly pull the curling iron towards the head, but not in close proximity. There is no need to turn the curling iron.
- Hold the curling iron in this position for 10 to 15 seconds, or until the hair is dry.
- Then press the  button to fix the curl shape with cold air for 5 to 10 seconds.
- Turn off the curling iron and carefully release the strand from the crimping attachment. When releasing, you can use your finger to wrap the curl around it, and then apply hair spray to firmly fix the curl.
- To change the direction of rotation of the curls, swap the curling attachments between themselves.

## CLEANING AND MAINTENANCE

- Before cleaning, turn off the curling iron and allow it to cool down completely.



#### Caution:

To avoid the risk of electric shock, do not immerse the curling iron, attachments or power cord in water or any other liquid.



#### Caution:

Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance, as these could damage the surface.

### Cleaning the curling iron and attachments

- Wipe the curling iron and attachments with a clean, dry cloth.

### Cleaning the filter and protective grille

- Regularly remove dust, dirt and hair from the protective grid and filter.

### Automatic cleaning

- When the curling iron is switched off, press and hold the temperature button for 3 seconds.
- The automatic cleaning process will begin. Let it finish the whole process.

### Manual cleaning

- Carefully turn the protective grid clockwise and pull it carefully downwards from the filter – see figure **D1**.
- Remove any dirt. Use a soft and dry cloth or a brush with fine bristles for cleaning.
- After cleaning, put the protective grid back on and turn it anticlockwise – see figure **D2**.



#### Caution:

Do not clean the filter or the protective grille with water. This may lead to a serious appliance damage.

### Storage

Place the attachments in the supplied case. Store the curling iron in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

## TECHNICAL SPECIFICATIONS

Rated voltage.....220–240 V~  
 Rated frequency.....50/60 Hz  
 Rated input power.....1500W

### Values provided according to Commission Regulation EU 2023/826

Off mode	
Power consumption in off mode	0.5 W
Time needed for the equipment to automatically reach off mode	0 min
Standby mode	
Power consumption in Standby mode	-
Time needed for the equipment to automatically reach standby mode	-
Networked standby mode (Wi-Fi)	
Power consumption in networked standby	-
Time needed for the equipment to automatically reach networked standby mode	-

## INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the designated municipal waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

**For business entities in European Union States**

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

**Disposal in other countries outside the European Union**

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

.....

Changes to text and technical parameters are reserved.



FAST ČR, a.s.  
U Sanitasu 1621  
CZ-251 01 Říčany  
[www.sencor.com](http://www.sencor.com)  
[info@sencor.cz](mailto:info@sencor.cz)