




Installation & Operation Instructions

Products:
RMHXG07201DR / RMHXG07201HR

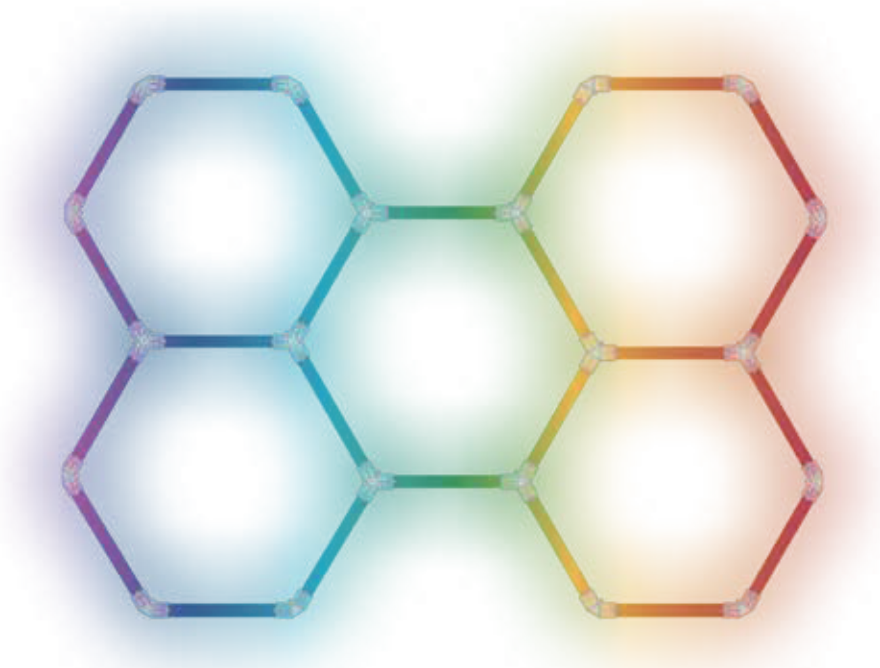

DO NOT RETURN THIS PRODUCT TO THE STORE
If you have questions or need assistance, please call customer service at 1-888-445-8974.

SAFETY INFORMATION

- WARNING: READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE USE**
- This unit is not waterproof. Do not immerse in water.
 - Use only as intended. Do not use this unit for purposes other than its designated use.
 - Indoor use only.
 - Do not place or store the unit where it could fall into a tub, sink, or any other water-filled area.
 - Do not clean the product using a water spray gun or similar high-pressure methods.
 - Supervise closely when this product is used near children.
 - Use only accessories recommended or sold by the manufacturer.
 - Do not operate the unit if it has been dropped, hit sharply, or otherwise damaged in any way.

PREPARATION

- Before operating this product, ensure all parts are present. Compare the included parts with the Package Contents List and Diagram on this page.
- Please contact Customer Service for replacement parts.
- Review these instructions and diagrams thoroughly before starting.

INCLUDED PARTS

			
16.14 inch 25 pcs	120° V Connector 11 pcs	120° Y Connector 11 pcs	RGB Control Power Supply 1 pc
			
Screws 25 pcs	Metal Clip 25 pcs	Nylon Zip Ties 30 pcs	Drywall Anchors 25 pcs


FEATURES & SPECIFICATIONS

Physical & Listing	INPUT: 100-240VAC 50/60Hz
	RGB
	RF Remote Control
	Suspension or Surface Mount
	> 30,000 hours
Power	5 HEX-RGB 150W

TROUBLESHOOTING


PROBLEM	POSSIBLE CAUSE	SOLUTION
Tube emits cool white only, no RGB function	Installed with wrong orientation	Change the orientation
Tube not light up	Poor connection	Tighten the connection between the tube and connector

INSTALLATION INSTRUCTIONS

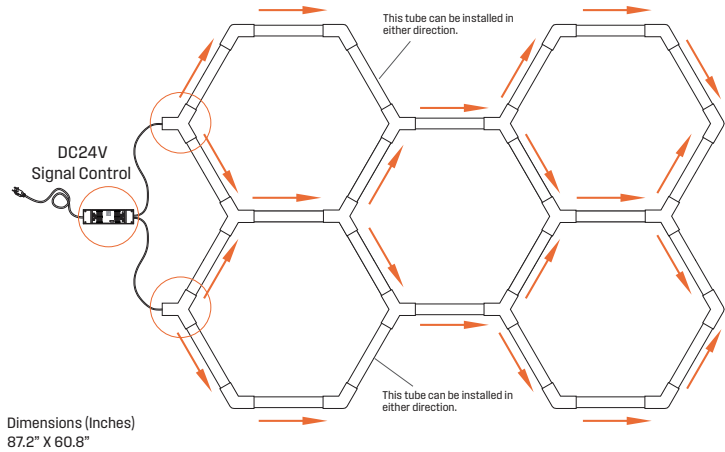


- Installation Direction Notice**
- For proper operation, install the light tube in the correct orientation:
1. Locate the “INPUT” and “OUTPUT” markings on the tube.
 2. Align and install the tube from INPUT to OUTPUT as indicated.
 3. Warning: If installed in the wrong direction, the light tube will not turn on.


- Notes:**
1. DIY layouts are not supported. Install according to the arrow direction shown.
 2. Connect the light tubes in series as shown. Each red circle requires its own power source.
 3. Do not connect the light tubes to AC power. Please connect the light tubes to RGB control power supply.
 4. Installation must be carried out by a qualified electrician only. Do not turn on the power until installation is fully completed.
 5. Test First: Before installation, plan your desired layout and conduct a test to ensure everything is working as expected.
 6. Handle with Care: Ensure a secure connection when attaching the light bars to the connectors. Avoid damaging the copper pins for optimal performance.

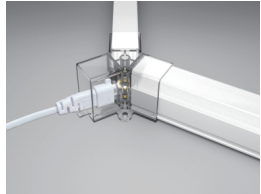

1. Confirm the correct input connector

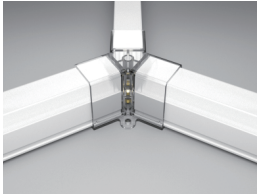




2. Connect the 120° Y connector

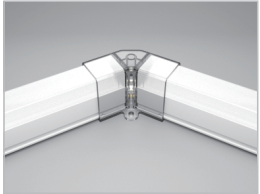

3. Connect the 120° V connector

HOW TO INSTALL IT ON THE CEILING


- 1. Screw Mounting** - Use screws through the holes in the connector to fasten the tube to the ceiling.
- 2. Metal Clip Mounting** - Affix the metal clip to the ceiling with screws, then attach the tube to the metal clip.
- 3. Cable Tie Mounting** - Secure the tube using the cable ties.

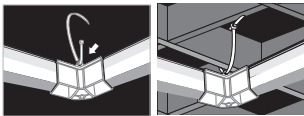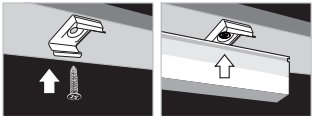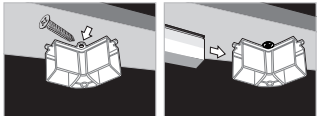

REMOTE CONTROL

WORKS WITH 2.4G REMOTE CONTROL:

- The **2.4G** remote control model (RF3) is compatible with Hexagon:
- **One remote control can control multiple controllers.**
 - **Each controller can be paired with up to 5 remote controls.**

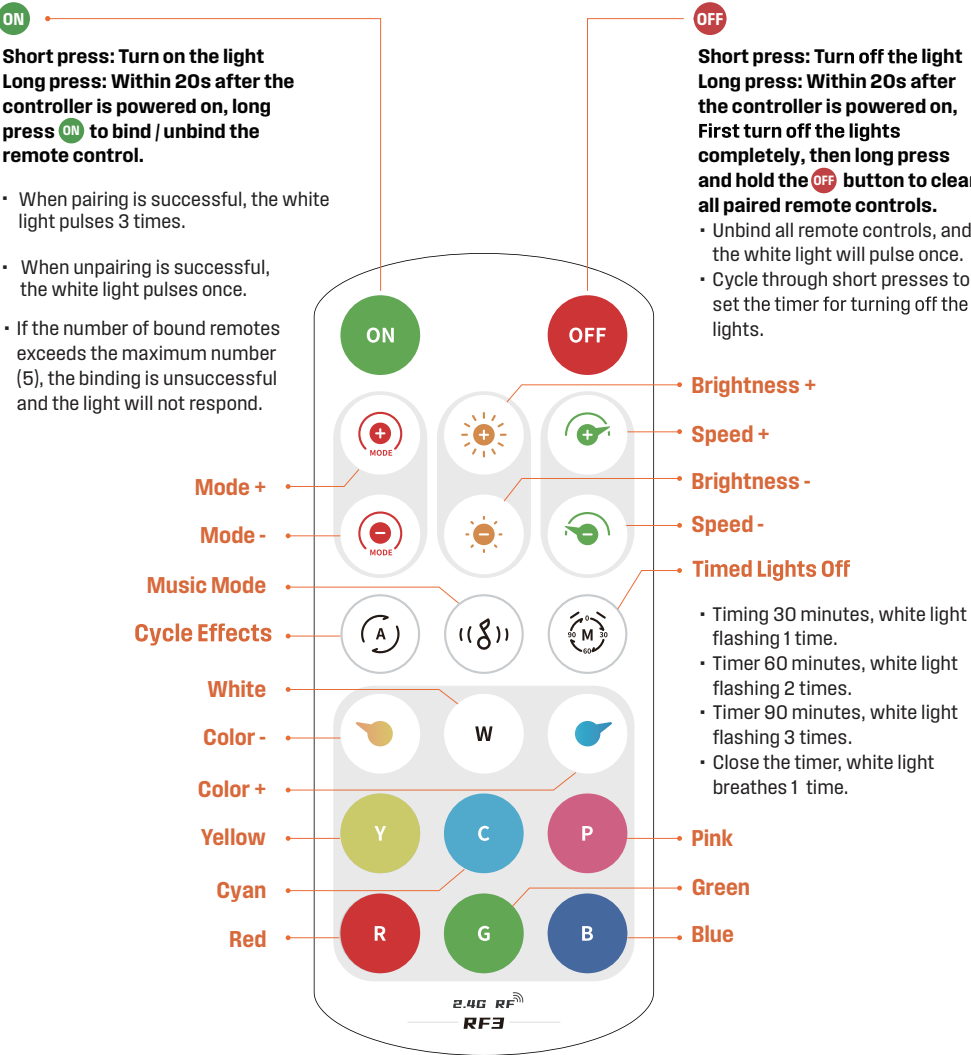

- Warning:**
- **Ensure the batteries are installed correctly according to polarity (+ and -).**
 - **Remove and immediately recycle or dispose of batteries from equipment notused for an extended period of time according to local regulations.**
 - **Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.**



FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

- NOTES:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Company Name: Rayman Lights Inc.
Company Address: 702 Interchange BLVD, Newark, DE 19711, USA
Telephone Number: 1-888-445-8974

LIMITED WARRANTY

- This product is covered by one (1) year warranty against defects in materials or workmanship from the date of purchase. This warranty is non-transferable and applies only to the original purchaser. Proof of purchase is required for any repair or replacement under this warranty. This warranty does not cover normal wear and tear or damage caused by misuse, including but not limited to:
- Using cleaners that contain chemicals, solvents, or harsh abrasives.
 - Operating the product in extreme weather conditions.
 - Opening, tampering with, modifying, or altering the product in any way.

Warranty Notice
To ensure full warranty coverage, this product must be purchased from an authorized retailer. Purchases made through unauthorized third-party sellers will void all warranty protections. This includes eligibility for product replacements, repairs, or customer support. Please retain your proof of purchase from an authorized source.

® and Westinghouse are trademarks of Westinghouse Electric Corporation. Used under license by Rayman Lights, Inc. All Rights Reserved.



WARNING

Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.

Even used batteries may cause severe injury or death.

Call a local poison control center for treatment information.

Please use compatible battery for replacement: CR2025,3V.

Non-rechargeable batteries are not to be recharged.

Do not force discharge, recharge, disassemble, heat above 75°C or incinerate. Do so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Ensure the batteries are installed correctly according to polarity (+ and -).

Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc or rechargeable batteries.

Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries and keep them away from children.

