

INSTRUCTION MANUAL

DIGITAL AIR FRYER OVEN

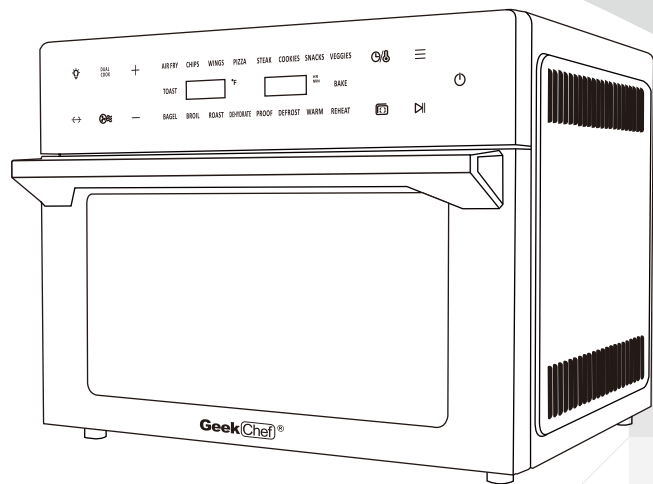 




TABLE OF CONTENTS

■ IMPORTANT SAFETY INSTRUCTIONS	01
■ BEFORE USING YOUR AIR FRYER TOASTER OVEN	02
■ PRODUCT COMPONENTS	03
■ HOW TO USE	07
■ CLEANING AND MAINTENANCE	14
■ TROUBLESHOOTING	16
■ LIMITED WARRANTY	17

01 IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using your Air Fryer Toaster Oven.



 
READ ALL INSTRUCTIONS BEFORE USE

- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning or handling, putting on or taking off parts.
- **Do not** store any materials other than manufacturer's recommended accessories in this appliance when not in use.
- **Do not** immerse cord, plug or any parts of Air Fryer Toaster Oven in water or other liquid to prevent against electrical hazard.
- **Do not** place any of the following materials in this appliance: cardboard, plastic, paper, or anything similar.
- **Do not** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electric shock.
- **Do not** rest cooking utensils or baking dishes on glass door.
- **Do not** operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet.
- Check if the voltage indicated on the appliance corresponds to the local main voltage before connecting the appliance.
- To avoid potential hazards, please do not put the product next to or used by children.
- **Do not** touch hot surfaces without using heat-protective gloves to avoid burns, use extreme caution when removing hot accessories or disposing of hot grease.
- **Do not** let the cord hang over the edge of a surface where the potential of child or pet interaction is present.
- Extreme caution should be exercised when using containers constructed of materials other than metal or glass in the Air Fryer Toaster Oven.
- Over sized foods and utensils must not be inserted in an Air Fryer Toaster Oven as they may involve a risk of fire or electric shock.
- A fire may occur if the appliance is covered or touching flammable materials such as curtains, draperies or walls when in operation.
- **Do not** store any items on top of the appliance when in operation.
- Warning: To avoid possibility of fire, never leave the appliance unattended during use. Use recommended temperature settings for all function.
- **Do not** use outdoors.
- **Do not** use this appliance for other than intended use.
- **Do not** place on or near a hot gas or electric burner.
- **Do not** operate any appliance with a damaged cord or plug. If the appliance is dropped or damaged, please return product to original store or retailer for proper inspection and repair.
- To avoid potential injury, do not use accessories or attachments not recommended for the unit.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**


02 BEFORE USING YOUR AIR FRYER TOASTER OVEN

1

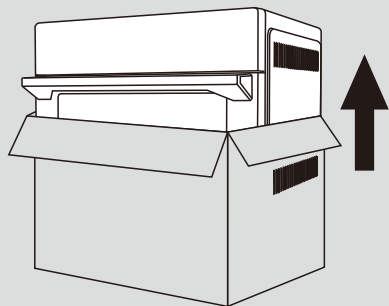


Remove all packaging around and inside the oven.

 2

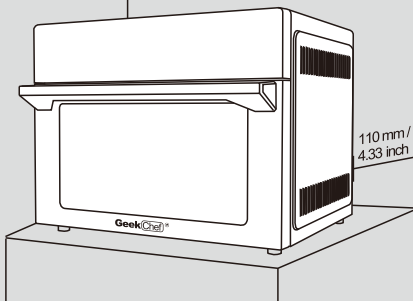


Place on a stable, level, heat-resistant surface, away from anything that can be damaged by heat. Keep at least 110 mm / 4.33 inch distance between the electrical outlet and the wall, furniture etc.

 3

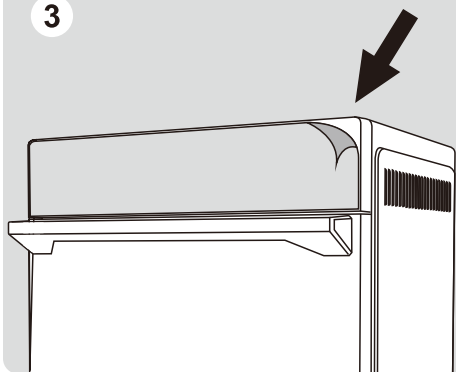

Remove the protective film from the control panel. (This film is to protect the panel, you can tear it off or keep it)

 
4

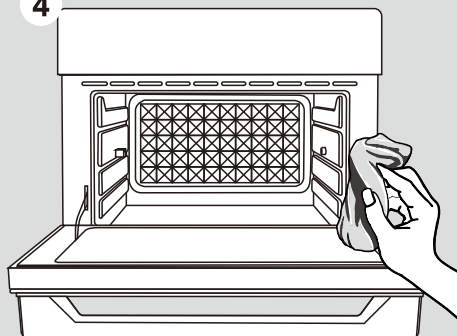

Wash all accessories and clean the interior of the Air Fryer Toaster Oven. Dry and place accessories back in oven.

5

 
Before use, ensure that the power and outlet meet the requirements to operate this product (input power requirements).




6

Upon first use, it is necessary to run the oven for 18 minutes at the highest temperature (450°F) in order to sterilize and remove any manufacturing odor. The Air fryer Toaster Oven may emit an odor or smoke due to the heater's protective film.

 03 PRODUCT COMPONENTS

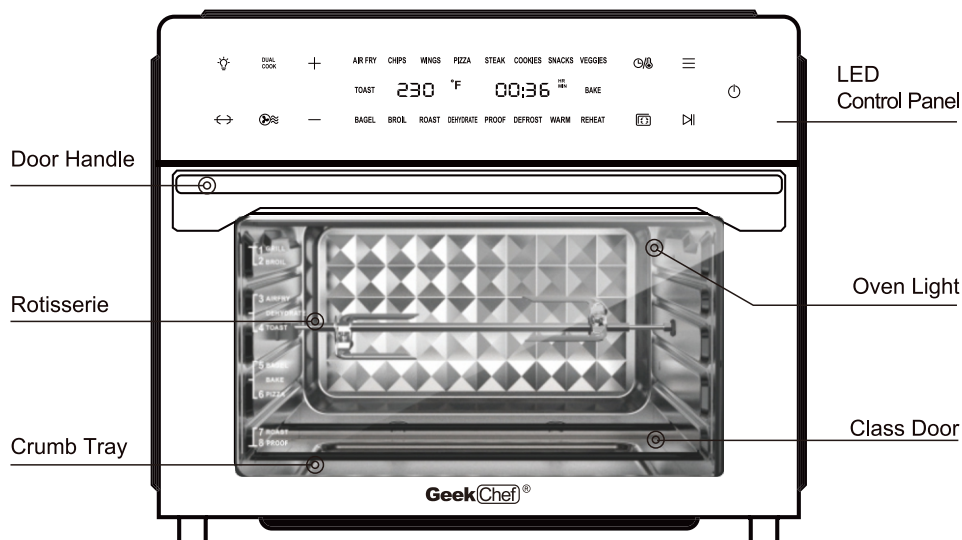

ACCESSORIES

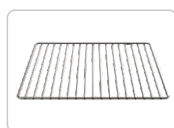 


Wire Rack

Use for meat, bread, pizza etc.



Fetch Rack

 Use to remove the rotisserie shaft from the oven.

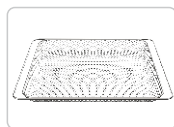

Air Fryer Basket

Use the Air Fryer Basket in conjunction with the Air Fry function to optimize cooking results. Use for fries, chicken wings, onions etc. It also could be used as the dehydration basket.



Baking Pan

Use for cookies, cake, turkey etc. It can also hold the drippings from the food or oil when air frying.



Rotisserie

Use for chicken, turkey, meat.


DOOR SENSOR

If the doors opened during cooking, the cooking will pause and the light will turn on. The panel will show  When the door is closed, the light will turn off and resume cooking. Please make sure to keep the oven door closed during cooking.

TECHNICAL SPECIFICATIONS

Power	Voltage	Frequency	Capacity
1800W	120V	60Hz	31Qt / 30L

 CONTROL PANEL

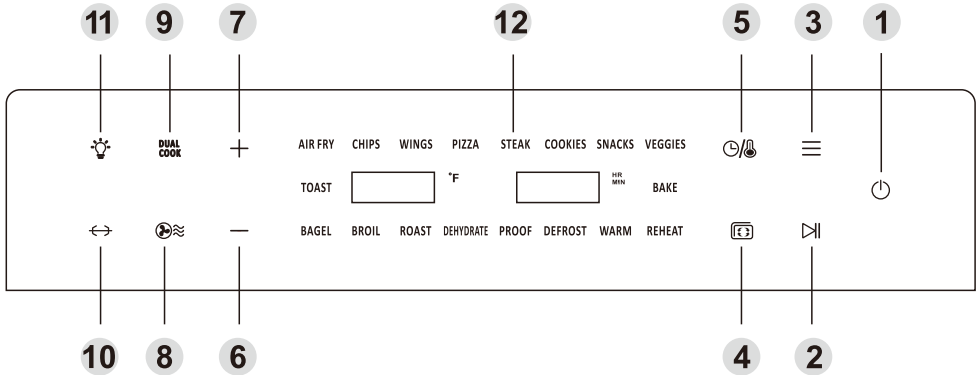

1 POWER ON / OFF

Touch POWER ON / OFF icon to turn the Air Fryer Toaster Oven On / Off.

2 START / PAUSE

Touch "START / PAUSE" icon to start or stop the program.

3 MENU

You can select the menu by continuously touching the menu icon, or you can select the menu by touching the "+" or "-" icon on the left.

4 PREHEAT

After selecting a program and adjusting the temperature, touch "PREHEAT" icon to preheat the Air Fryer Toaster Oven. (No need to touch the START / PAUSE icon to start the preheat program. After preheating, the oven will beep 5 times and " Add food " will be showed on the display.)

5 TIMER / TEMPERATURE SWITCH

6 MINUS

Touch this icon to select the menu or decrease the time or temperature.

7 PLUS

Touch this icon to select the menu or increase the time or temperature.

8 AIR FRY

This icon is for display only. If the program with fan running is adopted, the icon will keep flashing during operation.

9 DUAL COOK

Advanced dual function cooking technology allows you to program your Air Fryer Oven to start cooking with one preset, then automatically transition to a second preset for a perfect cook on any meal. For example, put a breadcrumb-topped casserole in the oven, set it to bake then broil, and it will cook through with a golden crisp topping to finish. Just set it and forget it. Enjoy your favorite fried food without any extra operation.

10 ROTISSERIE

It is used to cook all the foods that need to be rotated. After selecting the desired program and setting the temperature / time, touch the START icon to start cooking and then touch the rotisserie icon.

 
11 OVEN LIGHT

Touch "LIGHT" icon to turn the oven light On / Off. (After manual selection, it will automatically turn off 5 minutes later.)



TEMPERATURE INCREASE:

Touch the "⏸/🌡" icon and the temperature display flash and then touch "+" icon to increase the temperature as needed. Long press "+" icon for rapid increase operation of setting.




TEMPERATURE DECREASE:

Touch the "⏸/🌡" icon and the temperature display flash and then touch "-" icon to decrease the temperature as needed. Long press "-" icon for rapid decrease operation of setting.



TIME INCREASE:

 Touch the "⏸/🌡" icon and the temperature display flash and then touch "+" icon to increase the time as needed. Long press "+" icon for rapid increase operation of setting.



TIME DECREASE:

Double-click the "⏸/🌡" icon until the time display flash and then touch "-" icon to decrease the time as needed. Long press "-" icon for rapid decrease operation of setting.


12

AIR FRYER TOASTER OVEN
FUNCTIONS OVERVIEW

PRESET	DEFAULT TEMPERATURE	DEFAULT TIME	TEMP RANGE	TIME RANGE
AIR FRY (Fried Food)	400°F	10MINS	200-450°F	Up to 2 HOURS
ROAST		30MINS		
SNACKS		18MINS		
CHIPS (Frozen French Fries)	450°F	18MINS		
WINGS		18MINS		
PIZZA		11MINS		
STEAK		7MINS		
VEGGIES		15MINS		
BROIL		10MINS		
BAGEL		13MINS		
COOKIES	360°F	15MINS		
BAKE	350°F	25MINS		
REHEAT	200°F	5MINS		
DEFROST	120°F	20MINS	90-180°F	Up to 8 HOURS
WARM		4HOURS	90-250°F	
PROOF	94°F	45MINS	90-104°F	
DEHYDRATE	140°F	5HOURS	90-180°F	1-12 HOURS
TOAST			1-7	1-7MINS

The above default data are for reference only, the user can adjust the desired temperature and time as required.

 04 HOW TO USE

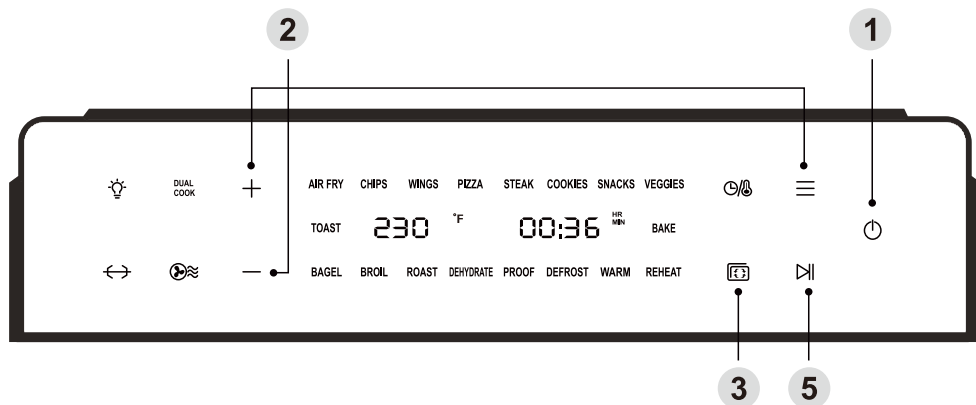


POWER ON > MENU > Preheat > Accessories position > START

1  Plug in, touch the POWER ON / OFF icon to turn on the Air Fryer Toaster Oven, screen will illuminate and "  " icon will blink.

2  **MENU**   Touch the menu icon, and then select the program you want by touching " + " or " - " minus icon (Or continuously touch the menu icon until the desired menu is selected Screen will display the default temperature and default time for this menu, users can also adjust the temperature and time as desired with the "  " icon.

 Note The temperature on the " Toast " function cannot be adjusted. Touch the "  " icon and adjust the time duration for level 1 ~ level 7 of the toast by " + " or " - " icon.

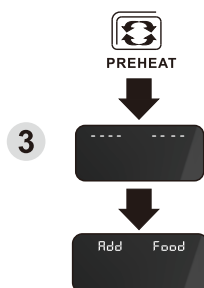

3 Touch the " PREHEAT " icon in order to preheat the Air Fryer Toaster Oven. When the internal temperature reaches 300°F the " Add Food " signal will appear. After preheating, put the food into oven and close the door, the program will start cooking automatically.

Note The Toast, Dehydrate, Proof, Defrost, Reheat and Warm programs do not require preheating.

 
 
 
 
 
 
4

Accessories Position

Insert the accessories with food into the desired position then close the door. There are four groove positions, please refer to the below rack position diagrams to place the accessories.

Note

If you need to use the rotisserie, fork the food and place it in the air fryer oven.

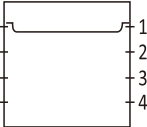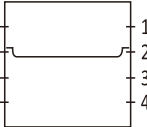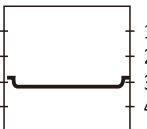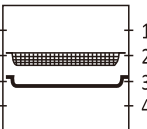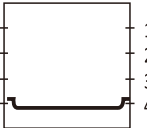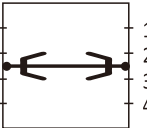Position 1 DEHYDRATE 	Position 2 TOAST DEHYDRATE 
Position 3 TOAST DEHYDRATE BAKE VEGGIES PIZZA 	Position 2 CHIPS WINGS 
Position 4 ROAST 	Position 5 ROTISSERIE 
Accessories    	Oven Rack Air Fryer Basket Baking Pan Rotisserie

Note

When cooking fatty foods (e. g. chicken wings) with the oven rack, air fryer basket or rotisserie, place the baking pan in the slot underneath in order to prevent oil from dripping on to the heating elements.

5



If you skip the preheat function of step 3, please touch the START / PAUSE icon to begin cooking, and the display will show the timer counting down. When cooking is done, the oven will beep 5 times, the display will show "END" and all menu icons will light up.

Note

To use the rotisserie, touch the rotisserie icon after touching START / PAUSE icon.

End

Note

The display will continue to show "END" until the menu icon is pressed. After cooking is complete, the fan will keep running for 4 minutes in order to properly cool the appliance.



POWER ON > Dual Cook > Preheat > Accessories position > START

1  Plug in, touch the POWER ON / OFF to turn on the Air Fryer Toaster Oven, screen will illuminate and "  " icon will blink.

2 **DUAL COOK** Touch the DUAL COOK icon, five lights AIR FRY / BAKE / BROIL / ROAST / WARM will turn on, touch the " + " icon to select the first program AIR FRY, and the selected program AIR FRY light flash (but the other four will still keep on), then touch the "  " icon and adjust the desired time and temperature by touching " + " or " - " icon, finally touch the menu icon to confirm the first program AIR FRY; The remaining four icons will keep on, repeat the above operation to adjust the second program.

Note If you want to cancel the DUAL COOK function, you can touch the START / PAUSE icon, and then touch the DUAL COOK icon to return to the general menu.

Eg :
First step



Second step

 




PREHEAT



3



Touch the " PREHEAT " icon in order to preheat the Air Fryer Toaster Oven. When the internal temperature reaches 300°F, the " Add Food " signal will appear. After preheating, put the food into oven and close the door, the program will start cooking automatically.

4

Accessories Position

Insert the accessories with food into the desired position then close the door. There are four groove positions , please to the above rack position diagrams to place the accessories.

Note

If you need to use the rotisserie , fork the food and place it in the air fryer oven.

5



START/
PAUSE

If you skip the preheat function of step 3, please touch the START / PAUSE icon to start cooking, and the display will show the timer counting down, the selected first program light will be on for a long time, and the selected second program will not be displayed until the first program is completed. When cooking is done, the oven will beep 5 times, the display will show " END ", and all menu icons will light up.

Note

To use the rotisserie, touch the rotisserie icon after touching START / PAUSE icon.

End

Note

The display will continue to show " END " until the menu icon is pressed. After cooking is complete, the fan will continue to run for 4 minutes in order to properly cool the appliance.

COOKING FUNCTIONS QUICK REFERENCE CHART

FUNCTION	PEHEAT	Suggested Amount of Food	Suggested Accessory	Rack Position
AIR FRY	Yes	Base on the food you select	Air Fryer Basket	2
CHIPS		550g / 1.2 lb		
WINGS		1038g / 2.3 lb (28pcs)		
PIZZA		13 inches	Baking Pan or Oven Rack	3
STEAK		190g / 0.4 lb		2
COOKIES		Base on the food you select	Baking Pan	
SNACKS			Baking Pan or Oven Rack	3
VEGGIES		6 pcs	Baking Pan or Air Fryer Basket	
TOAST	No		Oven Rack	2 or 3
BAKE	Yes		Baking Pan or Oven Rack	3
BAGEL			Baking Pan or Air Fryer Basket	2
BROIL			Baking Pan or Oven Rack	
ROAST			Baking Pan or Rotisserie	4 or Rotisserie position
DEHYDRATE	No	Base on the food you select	Air Fryer Basket	1 or 2 or 3
PROOF			Baking Pan	3
DEFROST			Baking Pan	2
REHEAT			Oven Rack	3
WARM			Baking Pan	2

It is a normal occurrence that some moisture may occur on the oven door during cooking process. We would like to recommend you to preheat the Air Fryer Toaster Oven before cooking.

DUAL COOK FUNCTIONS QUICK REFERENCE CHART

FUNCTION 1	FUNCTION 2	PREHEAT	Suggested Amount	Suggested Accessory	Suggested Rack Position
AIR FRY	WARM	Yes	Base on the food you select	Air Fryer Basket	2
BAKE	BROIL			Baking Pan or Oven Rack	3
AIR FRY	WARM			Baking Pan or Rotisserie Fork	4 or Rotisserie fork position
ROAST	AIR FRY				
AIR FRY	BROIL			Air Fryer Basket or Oven Rack	2 or 3

 
It is a normal occurrence that some moisture may occur on the oven door during the cooking process. We would like to recommend you to preheat the Air Fryer Toaster Oven before cooking.

REPLACING THE OVEN BULB




ATTENTION


Be sure to unplug the Air Fryer Toaster Oven and allow it to cool down completely before replacing the oven light.

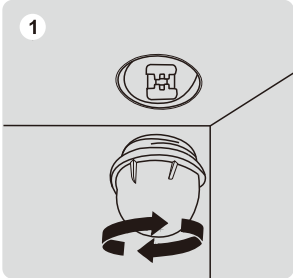

 
Rotate the light cover clockwise to remove it.

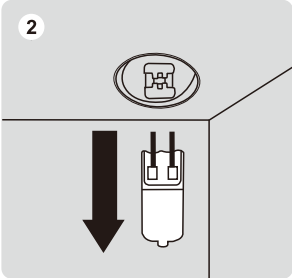

 Remove the used bulb by pulling it directly.

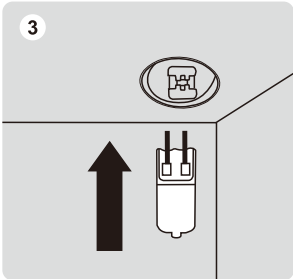

Insert the new bulb.

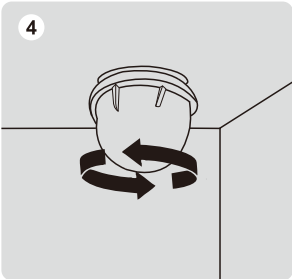 

Rotate the light cover counterclockwise to tighten it.

⌘ **SPECIFICATION : 25W** halogen bulb

DISASSEMBLING THE INNER GLASS DOOR FOR CLEANING

 


ATTENTION


Before cleaning, remove the power plug from the power outlet. Allow the oven and all accessories to cool down completely before disassembling and cleaning.

CAUTION : Outer glass and inner glass of the oven door can be cleaned directly by using a soft, damp sponge or soft plastic scouring pad with glass cleaner or mild detergent. If there is a large amount of food residue or grease accumulated between two glasses, inner door glass can be disassembled and cleaned following below instruction. Please be sure to install it back after cleaning. It is not recommended to disassemble the glass frequently.

- 1 Loosen the screws on the glass door, suck up the glass with a Suction Cup, and then take it out with hand carefully.
ATTENTION: Do not take out the glass with Suction Cup, otherwise the glass will fall off.

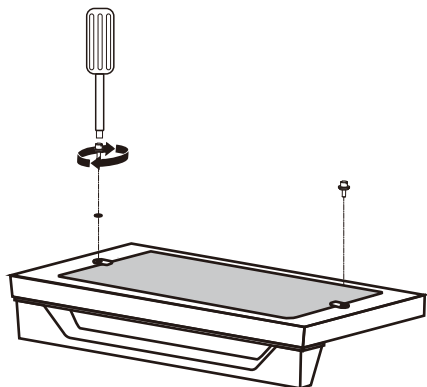

 STEP 1.

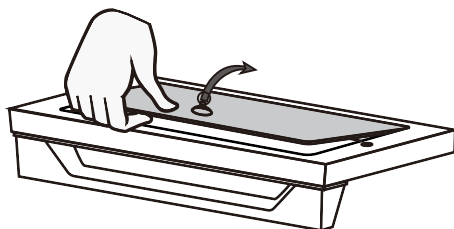

STEP 2.

- 2 To clean the door, use a glass cleaner or mild detergent and a soft damp sponge or soft plastic scouring pad. Do not use an abrasive cleaner or metal scouring pad as these will scratch the glass.
- 3 After cleaning and drying the glass, put the glass back and tighten the screws.

05 CLEANING AND MAINTENANCE

Before cleaning, unplug your Air Fryer Toaster Oven. Allow the oven and all accessories to cool down completely before disassembling and cleaning.

CLEANING THE HOUSING AND DOOR

- a. Wipe the housing with a soft, damp sponge. A non-abrasive liquid cleanser or mild spray solution may be used to avoid build-up of stains. Apply the cleanser to the sponge, not the oven's surface, before cleaning.
- b. To clean the glass door, use a glass cleaner or mild detergent and a soft, damp sponge or soft plastic scouring pad. Do not use an abrasive cleanser or metal scouring pad as these will scratch the oven's surface.
- c. Wipe the LED screen with a soft, damp cloth. Apply cleanser to the cloth, do not apply cleanser directly on to the LED. Cleaning the LED screen surface with a dry cloth and / or abrasive cleaners may produce scratches.



WARNING

To prevent electrocution, do not immerse the appliance or power cord into water or any other liquid.

CLEANING THE INTERIOR

To clean any spattering that may occur while cooking, wipe the walls with a soft, damp sponge. A non-abrasive liquid cleanser or mild spray solution may be used to avoid build-up of stains. Apply the cleanser to the sponge, not the interior, before cleaning.



WARNING

Use extreme caution when cleaning the heating elements. Allow the oven to cool down completely, and then gently rub a soft, damp sponge or cloth along the length of the heating element. Do not use any type of cleanser or cleaning agent. Let all surfaces dry thoroughly prior to inserting the power plug into a power outlet and turning the oven on.

CLEANING THE CRUMB TRAY

- a. After each use, slide out the crumb tray and discard crumbs. Wipe the tray with a soft, damp sponge. A non-abrasive liquid cleanser or mild spray solution may be used to avoid build-up of stains. Apply the cleanser to the sponge, not the tray, before cleaning. Dry thoroughly.
- b. To remove the baked-on grease, soak the tray in warm soapy water then wash with a soft sponge or soft plastic scouring pad .Rinse and dry thoroughly.
- c. Always ensure to re-insert the crumb tray into the oven after cleaning and prior to inserting the power plug into a power outlet and turning the oven on.

CLEANING THE OVEN RACK, BAKING PAN, AIR FRYER BASKET, ROTISSERIE AND FETCH RACK.

- a. Wash all accessories in warm soapy water with a soft sponge or soft plastic scouring pad. Rinse and dry thoroughly . Do not use abrasive cleansers, metal scouring pads or metal utensils to clean any of the accessories as they may damage the surfaces.
- b. To extend the life of your accessories, cleaning them in the dishwasher is not recommended.

STORAGE

- a. Ensure the oven and all accessories are clean and dry.
- b. Ensure the door is closed.
- c. Store the appliance in an upright position, standing level and on its supporting legs Do not store appliance when wet or hot. Do not store in a wet or hot environment.

06 TROUBLESHOOTING

Possible Problem	Possible Cause	Solution
The oven does NOT work	The appliance is not plugged in	Make sure the oven is plugged in.
	You have not turned on the oven	Touch the POWER ON / OFF icon to power one.
	The door is not closed properly	Make sure the door is closed well.
Steam is coming out from the top of the oven door	You are cooking high moisture content foods	This is normal . The door is vented to release steam created from high-moisture content foods such as frozen breads.
White smoke is coming out of the oven	This is the first time using the oven	This is normal upon first use . We suggest setting the oven to the highest temperature and letting it run empty from 18-20 minutes.
	You're cooking greasy food	This is normal when cooking greasy foods . This will not affect the cooking process.
	The baking pan , crumb tray , or heaters still contain grease or oil residue from previous use	Ensure each component is properly cleaned after each use.
Dark smoke is coming out of the oven	Food is burning	Immediately turn off the oven , be careful when you take out the food.
The ingredients cooked with the oven are not done	Too much food in the oven at once	Reduce the amount of food in the oven when cooking.
	Setting temperature too low or time too short	Set the temperature higher or time longer.
	Choose the incorrect function	Make sure you cook with the proper function.
Foods arecooked unevenly	Ingredients are stacked or close to each other during cooking	Make sure food and ingredients are spread out evenly.
	Baking pan , Air Fry basket or oven rack position is not adjusted	Adjust oven inserts into the proper position. Take caution as these components may be hot.
Foods are not crispy after Air Frying	Ingredients with high moisture	Spraying or brushing a small amount of oil on food evenly can Increase crispiness.
Display shows Error Code " E1 "	There is a short circuit in the temperature monitor	Remove the power cord from the power outlet . Contact Customer Support.
Display shows Error Code " E2 "	The temperature monitor or heaters is Inoperative	Remove the power cord from the power outlet , reconnect and operate again . If it cannot be solved , then Contact Customer Support.

07 LIMITED WARRANTY

GEEK TECHNOLOGY LTD warrants to the original consumer or purchaser this Geek Chef Air Fryer Countertop Oven is free from defects in material or workmanship for a period of One (1) year from the date of purchase. If any such defect is discovered within the warranty period, GEEK TECHNOLOGY LTD, at its discretion, will repair or replace the Product at no cost. This limited warranty is good only to the original purchaser of the product and effective only when used in United States.

For warranty or repair service: Call 1-844-801-8880 and choose the appropriate prompt, or email info@geektechnology.com. Please have your Product's model number, your name, address, city, state, zip code and phone number ready.

NO OTHER WARRANTY IS APPLICABLE TO THIS PRODUCT. THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED. INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S.DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE. INCLUDING WITHOUT LIMITATION, LOST REVENUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE, SOME STATES AND / OR TERRITORIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU, THE ORIGINAL PURCHASER, SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR TERRITORY TO TERRITORY.



Live Your Best Geek Life!



Geek



Geek Facebook



Geek Youtube

Geek Technology Ltd.
1275 Bloomfield Ave
Fairfield, NJ 07004
www.geektechnology.com