



WIRELESS CASSETTE PLAYER

User Manual

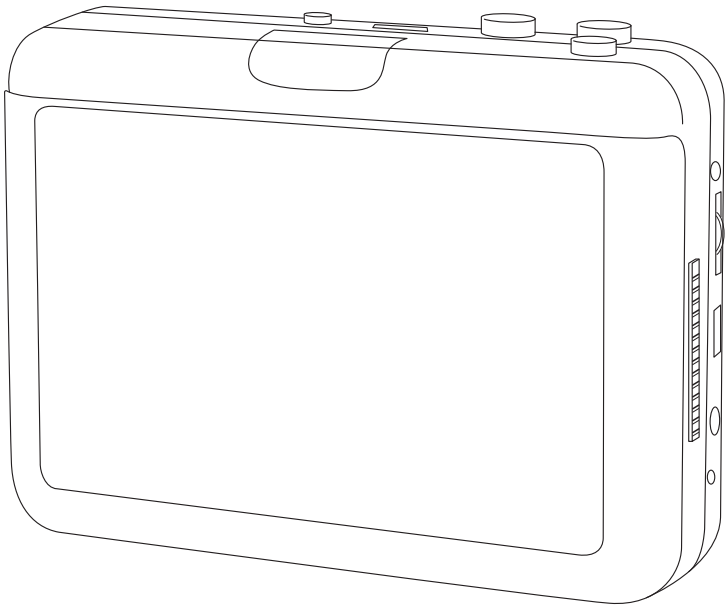

Wireless Cassette Player Button Functions

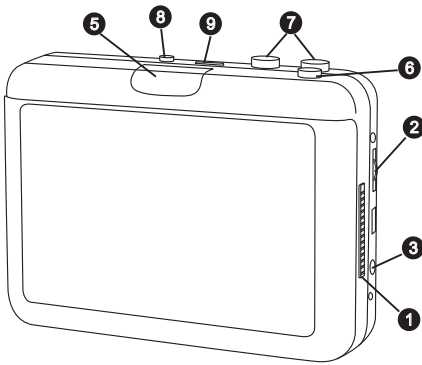

1. EJECT: Slide this switch to open the cassette holder.
2. VOLUME: Roll this switch you can adjust the volume.
3. HEADPHONE JACK: Plug in headphones here.
5. PLAY: Press to play the tape.
6. STOP: Press to stop the tape.
7. FF/REW: Press to fast forward or rewind the tape. If the “REW” button doesn’t work, please press the “FF” button first and try again.
8. DIR: Select the direction of tape playback. It is useful if you want to play the other side of the tape without ejecting it.
9. PLAY MODE: Slide this switch to the left side, the tape will play the opposite side automatically when one side has finished. Slide this switch to the right side, the tape will stop when one side has finished.

Make sure you have received the following items:

- 1 USB Cable
- 2 Earphone
- 3 User Manual
- 4 Wireless Cassette Player

User Manual

- ✓ Bluetooth function: you can transmit the music to other bluetooth receivers (Bluetooth earphone or Bluetooth speaker etc). Please Note: Press the “PLAY” button. The device will auto search and pair the Bluetooth receiver
- ✓ Portable design fits in virtually any bag and enables you to play and transfer cassettes anywhere.
- ✓ Support battery or USB power
- ✓ Audio output enables you to listen by your stereo, head phones or other speaker systems.

Power Supply

- You can insert batteries and use it as portable tape player too. slide the eject switch to open the device. Open the battery case and insert 2* AA batteries, and make sure batteries are inserted in correct direction. Then close the battery case.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The rating information is located at the bottom of the unit.