

MANUAL

AGARO



Espresso Coffee Maker

Model: Regency

Item no: 33869




IMPORTANT SAFEGUARDS

1. Place appliance on flat surface or table, do not hang power cord over the edge of table or counter.
2. Ensure the power cord do not touch hot surface of appliance.
3. To disconnect, turn any control to "off," then remove plug from wall outlet. Always hold the plug. But never pull the cord.
4. Do not let the appliance operate without water.
5. Scalding may occur if the water tank is removed during the brewing cycles.
6. Do not remove the filter when appliance in brewing coffee or when steam and hot water escape from filter and ensure to release the pressure in water tank before removing filter.
7. Relief pressure through steam wand before removing tank cover or filter.
8. Household use only
9. Do not use outdoors.

KNOW YOUR COFFEE MAKER

(Product may be subject to change without prior notice)

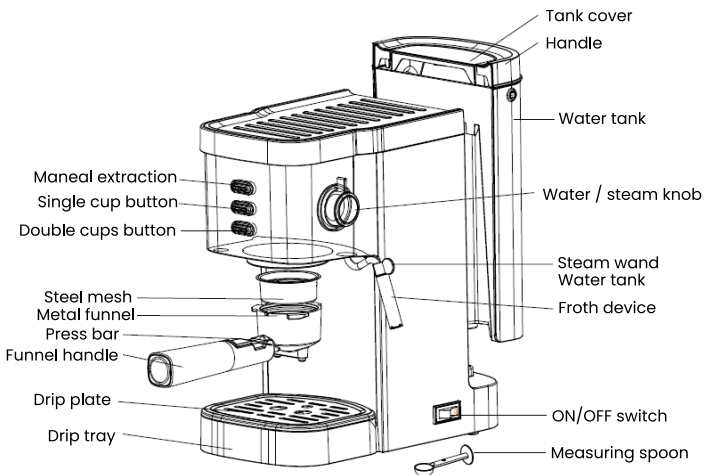

ABOUT THE COLOR OF INDICATOR LIGHTS

1. BLUE lights represent the Preheating and Making Espresso Coffee State
2. White lights represent the Frothing Milk State

BEFORE THE FIRST USE

To ensure the first cup of coffee tastes excellent, you should rinse the appliance with warm water as follows:

1. Pour water into water tank. The water level should not exceed the "MAX" mark in the tank. Then close the water tank cover.

Note: the appliance is supplied with a detachable tank for easy cleaning, you can fill the tank with water firstly, and then put the tank into the appliance.

2. Set steel mesh into filter (no coffee in steel mesh).
3. Place an espresso cup (your cup) on drip plate. Make sure the espresso/steam knob is on the "O" position.
4. Connect to power source. Press the ON/OFF switch. All indicator lights will flash in BLUE color as the appliance starts heating.
5. When the BLUE indicator lights stop flashing, it shows the heating is finished. Turn the espresso/steam knob towards symbol, then press one of the button. The water will flow out and the indicator light will flash when working.
6. When the appliance stops pumping water automatically, you can start to brew espresso.

Note: There may be noise when pumping the water on the first time, it is normal, the appliance is releasing the air in the appliance. After about 20s, the noise will disappear.

PRE-HEATING

To make a cup of good hot Espresso coffee, we recommend you preheating the appliance before making coffee every time, including warming the filter, steel mesh and cup, so that the coffee flavor can not be influenced by the cold parts.

1. Remove the detachable tank and fill it with desired water, the water level should not exceed the "MAX" mark in the tank. Then place the tank into the appliance properly.
2. Set steel mesh into filter, make sure the tube on the filter aligns with groove in the appliance, then fix the filter into the appliance from the "▼" position to the "▼" position firmly.
3. Place an espresso cup (your cup) on removable drip

plate.

4. Then connect the appliance to power source. Make sure the espresso/steam knob is on the "O" position.
5. Press the ON/OFF switch. All BLUE indicator lights will flash as the appliance starts heating.
6. When the BLUE indicator lights stop flashing, it shows the heating is finished. Turn the espresso/steam knob towards " " symbol, then press one of the button. There will be hot water flowing out and the indicator light will flash when working. When the appliance stops pumping water automatically, the pre-heating is finished.

MAKE ESPRESSO COFFEE

1. Remove the filter by turning it in clockwise. Add coffee powder into steel mesh, a measure spoon of coffee powder (7g) can make about a cup of espresso, then press the ground coffee powder tightly with the measure spoon.

NOTE: There are three steel meshes, one is for single-cup, one is for double-cup and one for the powder pod.

2. Set steel mesh into filter, make sure the tube on the filter aligns with groove in the appliance, then fix the filter into the appliance from the "▼" position to the "▼" position firmly.
3. Place the cup (yourself cup) on drip plate.
4. When the BLUE indicator lights stop flashing,, turn the espresso/steam knob towards " " symbol, press one of the button (Manual , 1 shot or 2shot button) according to your demand. The indicator light which you have chosen will flash when working. After a moment, there will be espresso flowing out.

TIPS: The Manual function means the appliance will NOT control the water amount for brewing espresso. You can control the amount of espresso according to your

demand.

5. The appliance will stop working when the coffee-brewing is finished, and then your coffee is ready now.

NOTE: If you want to pause the appliance during working, you can press any button. Meanwhile, all the BLUE indicators will light up. For continue working, you can press one of the button (Manual , 1 shot or 2shot button) . If you turn the espresso/steam knob towards the "O" position, the appliance will stop the making espresso function.

WARNING: Do not leave the appliance unattended during making the coffee, as you need operate manually sometimes!

6. After finishing making the espresso, turn the espresso/steam knob towards "O" position, take out the steel mesh from the filter, and pour the coffee residue.
7. Press the ON/OFF switch to cut off the power source.
8. Let them cool down completely, then rinse under running water.

FROTHING MILK/ MAKE CAPPUCCINO

You get a cup of cappuccino when you top up a cup of espresso with frothing milk.

Note: during making steam, the filter must be assembled in position.

Method:

1. Prepare espresso first with container big enough according to the part "MAKE ESPRESSO COFFEE".
2. Fill a jug with about 100 grams of milk for each cappuccino to be prepared, you are recommended to use whole milk at refrigerator temperature (not hot!).
Note: In choosing the size of jug, it is recommended the diameter is not less than $70\pm 5\text{mm}$, and bear in mind that the milk increases in volume by 2 times, make sure the

height of jug is enough.

3. Insert the froth wand into the milk about two centimetres, then turn the espresso/steam knob to the “☺” position, the three indicators will light on WHITE color, and the Steam will come out from the steam outlet. Froth milk in the way moving vessel round from up to down.

Warning: Be sure to operate carefully as the steam may result in scald to person.

4. When the required pressure is reached, you can turn the espresso/steam knob to the “○” position, the three indicators will turn into BLUE color. After that, as the temperature is high, the appliance will relieve the pressure automatically.

Note: Clean steam wand with wet sponge immediately after steam stops generating, but care not to be hurt!

5. Pour the frothed milk into the espresso prepared, now the cappuccino is ready. Sweeten to taste and if desired, sprinkle the froth with a little cocoa powder.
6. Press the ON/OFF switch to cut off the power source.

TIPS: If you want to brew espresso immediately after frothing milk, please follow the “MAKING ESPRESSO COFFEE” steps.

AUTOMATICALLY POWER-OFF FUNCTION

After pressing ON/OFF switch, if there is no any operation within 15 minutes, the unit will power off automatically.

CLEAN AND MAINTENANCE

1. Turn off the power source and let the appliance cool down completely before cleaning.
2. Clean housing of the appliance with moisture-proof sponge frequently. And clean water tank, drip tray and drip plate regularly then dry them.

Note: Do not clean with alcohol or solvent cleanser. Never immerse the housing in water for cleaning.

3. Detach the filter by turning it clockwise, get rid of coffee residue inside, then you can clean it with cleanser, but at last you must rinse with clear water.
4. Clean all the attachments in the water and dry thoroughly.

CLEANING MINERAL DEPOSITS

1. Fill the tank with water and descaler to the MAX level (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use "household descaler", you can use the citric acid (obtainable from chemist's or drug stores) instead of the descaler (the one hundred parts of water and three parts of citric acid).
2. Turn the espresso/steam knob towards " " symbol, Press one of the button to brew about 100ml hot water. Then turn off the appliance and leave the descaling solution in the appliance for 5 minutes.
3. Turn on the appliance and repeat the Step 2 for three times.
4. Repeat the steps 2 for 2 times with tap water in the MAX level (it is not necessary to wait for 5 minutes).

TROUBLE SHOOTING

Symptom	Cause	Corrections
Water leaks from the bottom of coffee maker.	There is much water in the drip tray.	Please clean the drip tray.
	The coffee maker is malfunction.	Please contact with the customer care
Water leaks out of outer side of filter.	There is some coffee powder on filter edge.	Get rid of them.
Acid (vinegar) taste exists in Espresso coffee.	No clean correctly after cleaning mineral deposits.	Clean coffee maker per the content in “before the first use” for several times.
	The coffee powder is stored in a hot, wet place for a long time. The coffee powder turns bad.	Please use fresh coffee powder, or store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
The coffee maker cannot work anymore.	The power outlet is not plugged well.	Plug the power cord into a wall outlet correctly, if the appliance still does not work, please contact customer care.
The steam cannot froth.	Have not turn the knob the right place.	Only after the knob turn towards the “ ” icon, the steam can be used to froth.
	The container is too big or the shape is not fit.	Use high and narrow cup.
	You have used skimmed milk	Use whole milk or half-skimmed milk

LIMITED ONE YEAR WARRANTY

WARRANTY CARD

Product Name : Espresso Coffee Maker

Model : Regency (Item No: 33869)

Name, Address & Contact no of customer :

Name, Address & Contact no of dealer :

Date of Purchase :

Warranty Valid upto :

Scan - For Extended Warranty Registration



or visit: www.agarolifestyle.com/product-registration

**(Must register within 30 days
from date of purchase to avail
6 MONTHS EXTENDED WARRANTY)**

- Please scan the QR CODE for product registration and avail "6 MONTHS EXTENDED WARRANTY" on product
- Please preserve the invoice for product warranty claim. Customer purchasing from online platforms needs to produce the Online Partner's Invoice copy to claim the warranty

For any feedback or complain, you can also connect us at:
UNIVERSAL CORPORATION LIMITED, 4/1 Middleton Street, Sikkim Commerce House, Kolkata-700071

Email Address : info@uclindia.com

Customer Care No: 9821486487

Scan - To File Complaint



or visit: www.agarolifestyle.com/service

**(Fill & submit the form if you are
facing any product related issues)**

.....
Dealer's Stamp & Signature

To checkout wide range of AGARO products,
please visit www.agarolifestyle.com



Oven Toaster Griller



Hand Blender
With Chopper



Hair Dryer



Knife Set



Camera Accessories



Electric Tooth Brush



Treadmill



Vacuum Cleaner



Hand Massager

& much more...



To checkout wide range of AGARO products,
please visit www.agarolifestyle.com



Tools



Yoga Mat



Foot Massager



Trimmer



Tyre Inflator



BP Monitor



Female
Electric Trimmer



Humidifier



Office Accessories

& much more...