




Response - Big Mow

Commercial Pro

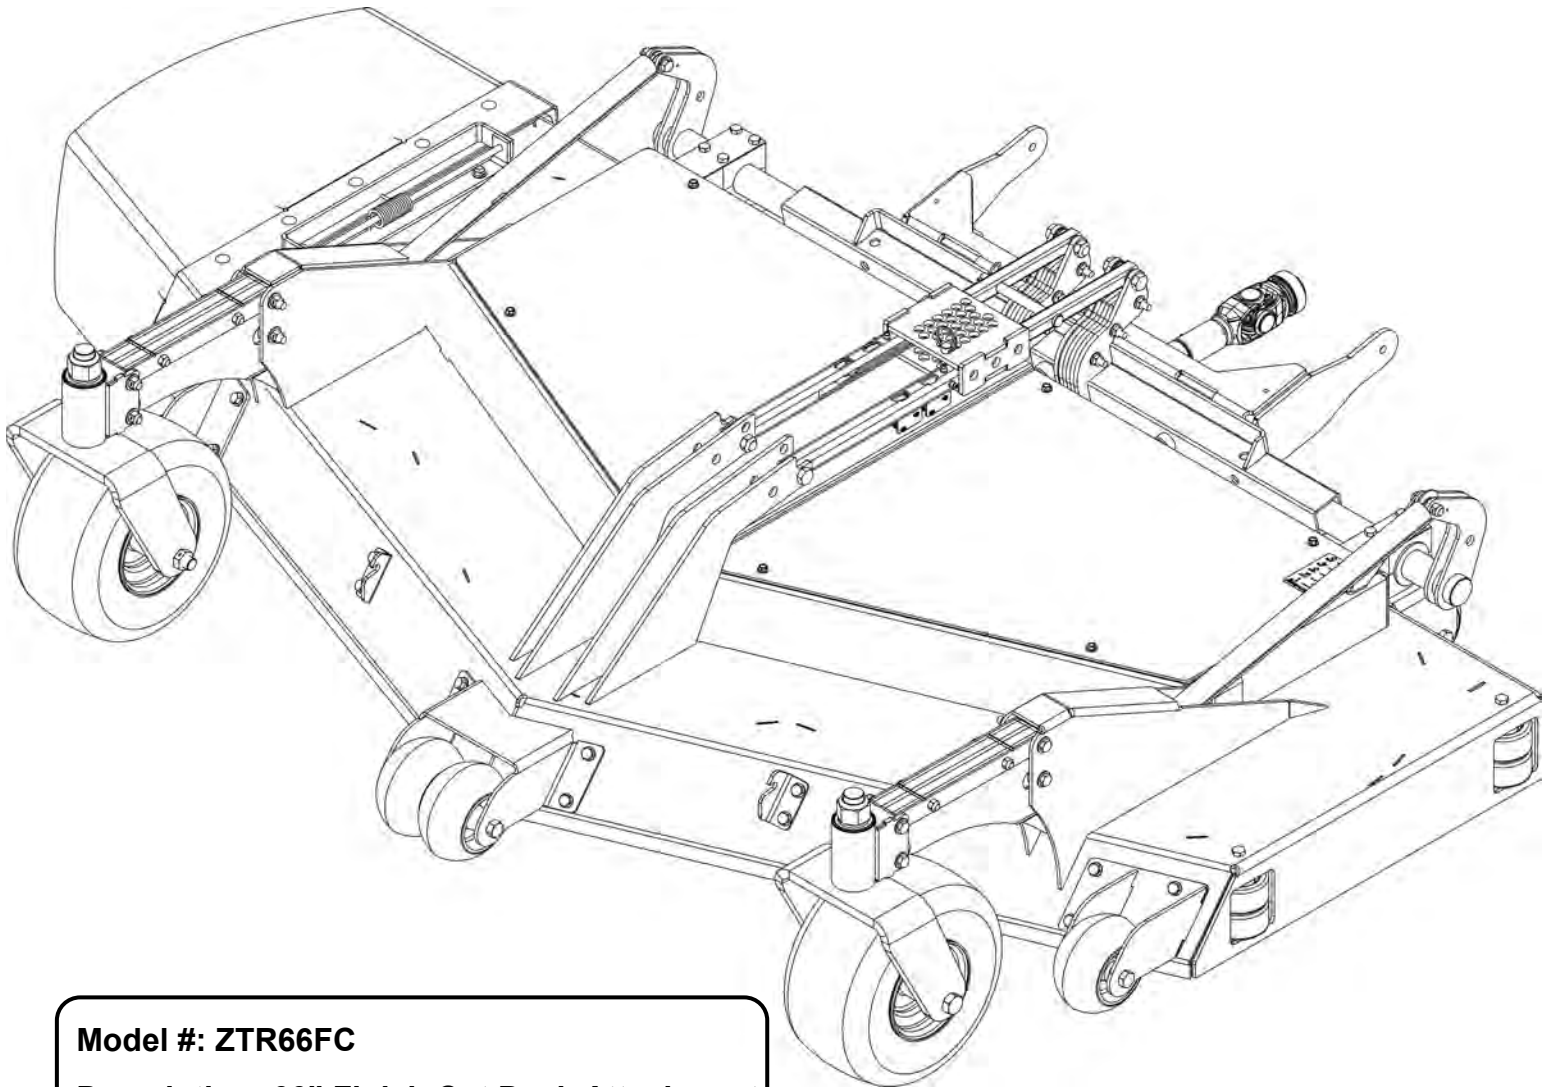

Model #: ZTR66FC

Description: 66" Finish Cut Deck Attachment

SWISHER ACQUISITION INC.

1602 Corporate Drive, Warrensburg Missouri 64093

Phone: 660-747-8183 FAX: 660-747-8650

Toll Free: 1-800-222-8183

**Manufacturing quality lawn care equipment since 1945,
Celebrating over 70 years of innovation**



8/28/2019

OWNER'S MANUAL

STARTING SERIAL # L116-001001



20385 REV 16-001

TABLE OF CONTENTS

LIMITED WARRANTY	3
INTRODUCTION	4-5
- GENERAL	4
- BEFORE OPERATING	4
FEATURES	5
SAFETY INSTRUCTION	6-8
- GENERAL USE	6
- CHILD SAFETY, SLOPE OPERATION, MOWING SAFETY	7
- MAINTENANCE, TRAINING, OPERATION	8
SYMBOLS & DECALS	9
UNCRATING & ASSEMBLY	10
CUSTOMER RESPONSIBILITY	11-12
- OPERATOR PRESENCE, TIRES, BLADE MAINTENANCE	11
- V-BELTS, OVERALL UNIT CARE	11
- DRIVING & TRANSPORT ON PUBLIC ROADS	12
- SPECIFICATIONS, MAINTENANCE SCHEDULE	12
OPERATION	13
- STARTING INSTRUCTIONS	13
- GRASS HEIGHT AND CUTTING SUGGESTIONS	13
- ADJUSTING THE CUTTING HEIGHT	13
SERVICE & ADJUSTMENT	14-18
- DECK MAINTENANCE MODE	14-15
- DECK LEVELING	16
- DECK BELT ROUTING & REPLACEMENT	17
- PTO SHAFT, GEARBOX	18
TROUBLESHOOTING	19
ATTACHMENT IDENTIFICATION	20
REPLACEMENT PARTS	21
NOTES	22-23
SWISHER HISTORY	24

LIMITED WARRANTY

The manufacturer's warranty to the original consumer purchaser is:

This product is free from defects in materials and workmanship for a period of three (3) years for residential use and one (1) year for commercial use from the date of purchase by the original consumer purchaser.

A Commercial Warranty is defined as the machine exceeding 250 hours of use within the first year from the date of purchase by the original purchaser. If the machine does not exceed 250 hours of use within the first year it is subject to fall under a Residential Warranty.

We will repair or replace, at our discretion, parts found to be defective due to materials or workmanship. This warranty is subject to the following limitations and exclusions:

- | | |
|----------------|--|
| 1) Limitations | This warranty applies only to products which have been properly assembled, adjusted, and operated in accordance with the instructions contained within this manual. This warranty does not apply to any product of Swisher that has been subject to alteration, misuse, abuse, improper assembly or installation, shipping damage, or to normal wear of the product. |
| 2) Exclusions | Excluded from this warranty are normal wear, normal adjustments, normal maintenance, and battery*(see battery section). |

In the event you have a claim under this warranty, you must return the product to an authorized service dealer. All transportation charges, damage or loss incurred during transportation of parts submitted for replacement or repair under this warranty shall be borne by the purchaser. Should you have any questions concerning this warranty, please contact us toll-free at 1-800-222-8183. The model number, serial number, date of purchase and the name of the authorized Swisher dealer from whom you purchased the mower will be needed before any warranty claim can be processed.

THIS WARRANTY DOES NOT APPLY TO ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR ALL EXPRESSED WARRANTIES. Some states do not allow the limitation of consequential damages or limitations on how long an implied warranty may last, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights, which vary from state-to-state. This is a limited warranty as defined by the Magnuson-Moss Act of 1975.

INTRODUCTION

Congratulations!

Thank you for purchasing Swisher's Finish Cut Deck Attachment. This machine is built for the greatest efficiency and rapid mowing of large areas. The tilt feature along with the safety chains allow operators to perform routine maintenance. The fully enclosed deck baffling accompanied with mulching blades helps to efficiently discharge the grass and debris for a smoother, cleaner cut.

This manual is a valuable document. Following the instructions for use, service, maintenance, etc. can greatly increase the performance and life of your machine.

NOTE:

If you have never used a Zero Turn mower before, refer to the Operation Controls section of this manual before attempting to operate one for the first time.

General:

In this operator's manual, left and right, backward and forward are used in relation to the normal operator's position on the tractor.


Read Before Operating:

- This machine is constructed only for mowing grass on lawns and other free and even ground without obstacles. The manufacturer's directions concerning operation, maintenance and repairs must be carefully followed.
- This machine must only be operated, maintained and repaired by persons that are familiar with the machine's special characteristics and who are well versed in safety instructions.
- Accident prevention regulations, other general safety regulations, occupational safety rules and traffic regulations must be followed without fail.
- Unauthorized modifications to the design of the machine may absolve the manufacturer from liability for any resulting personal injury or property damage and may void the warranty.
- Read and observe all safety instructions on your mower and in the manual.

Refer to tractor manual for the following instructions:

- Know how to set the parking brake – Lift up on the brake handle until locked.
- Know how to turn mower blades off – PTO switch pushed down.
- Know how to stop the engine – Turn key to off.
- Know how to stop the unit – Return control handles to neutral.

FEATURES

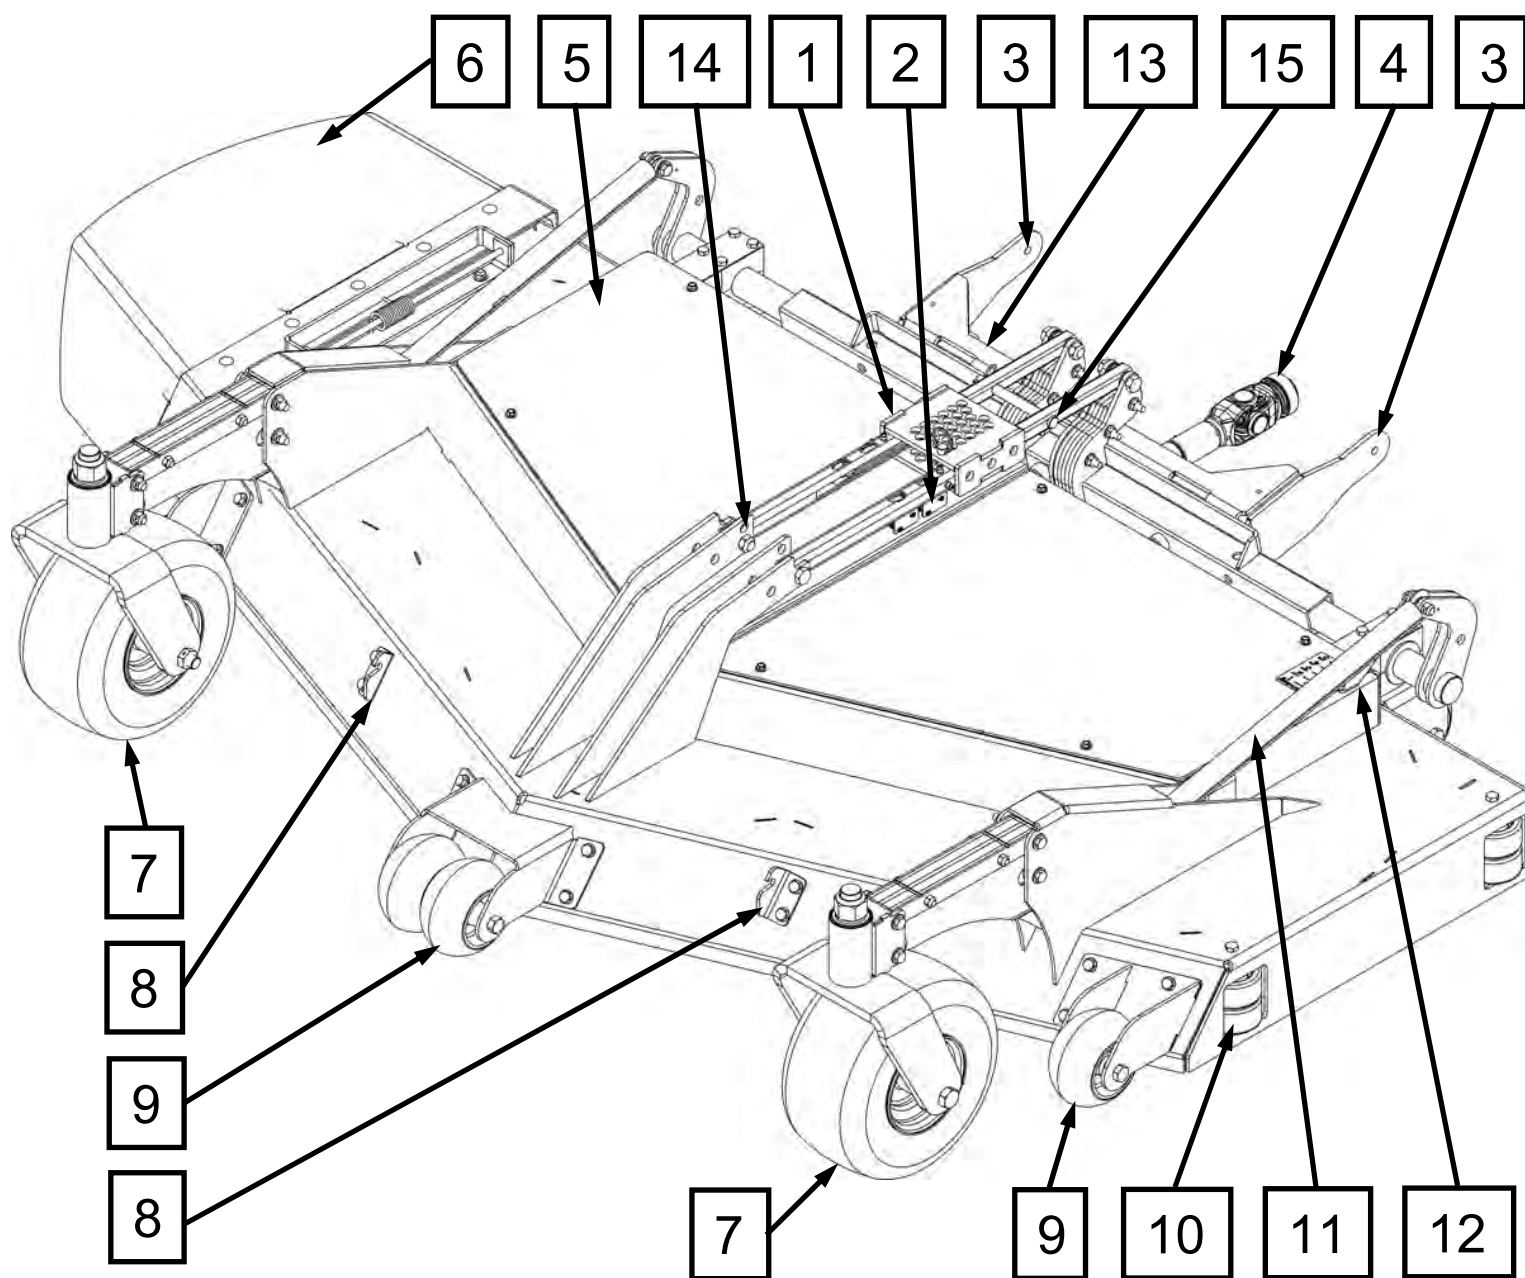

1. Deck Height Adjust Pin Weldment
2. Deck Height Adjust & Tilt Safety Switch
3. Deck to Tractor Mounting Points
4. Splined PTO Shaft w/ Spring Loaded Locking Collar
5. Removable Deck Belt & Pulley Covers
6. Foldable Grass Chute
7. Swiveling Caster Wheels

8. Deck Tilt Safety Chain Mounting Points
9. Horizontal Anti-Scalp Rollers
10. Vertical Anti-Scalp Rollers
11. Chains w/ Adjustable Turnbuckle
12. Deck Height Indicator
13. Side to Side Pivot Bracket
14. Deck Tilt: Winch Strap Mount Location
15. Deck Height Adjust: Strap Mount Location

SAFETY INSTRUCTIONS

These instructions are for your safety. Read them thoroughly & carefully.



This Safety Alert Symbol indicates important messages in this manual. When you see this symbol, carefully read the message that follows and be alert to the possibility of personal injury.

General Use:

- Read all instructions in this operator's manual and on the machine before starting it. Ensure that you understand them and then abide by them.
- Learn how to use the machine, operate its controls safely, how to stop quickly, and recognize safety decals.
- **DO NOT use this machine without the tractor in place and both machines properly connected.**
- Only allow the machine to be used by adults who are familiar with its use and operation.
- Make sure nobody else is in the area of the machine when you start the engine, engage the drive, or operate the machine.
- Stop the machine if someone enters the work area.
- Clear the area of any objects such as stones, toys, etc. that may be caught or thrown by the blades.
- **DO NOT use this machine without the Discharge Chute in place.**
- Stop the engine and disconnect the spark plug before clearing the discharge chute.
- Never take passengers. The machine is only intended for use by one person.
- Always look around before and during reversing maneuvers.
- Slow down before turning.
- Disengage the blades when not mowing.
- Be careful when rounding fixed obstacles so that the blades do not hit them.
- Extreme caution should be used when utilizing the equipped lights in low light conditions.
- Keep the machine a safe distance from holes or other irregularities in the ground.
- Never use the machine if you are tired, if you have consumed alcohol or if you are taking other drugs or medications that can affect your vision, judgment or coordination.
- Beware of traffic when working near or crossing a road.
- Never leave the machine unsupervised with the engine running.
- Always disengage the blades, engage the parking brake, stop the engine and remove the ignition key before leaving the machine.
- Never allow children or other persons not trained in the use of the machine to use or service it. Local laws may regulate the age of the user.
- Make sure that you have first aid equipment close at hand when using the machine.
- Never use the machine when barefoot. Always wear protective shoes or boots.
- Always wear protective glasses or full visor and hearing protection when assembling or operating.
- Never wear loose clothing that can get caught in moving parts.
- Always make sure long hair is not left down when servicing and/or operating the machine. Make sure hair is out of the way of any moving parts or pinch points.

SAFETY INSTRUCTIONS

Children:

- Children are often attracted to the machine and mowing work. Serious accidents may occur if you fail to be on guard for children in the area of the machine.
- Never assume that children will stay put where you last saw them.
- Keep children away from the mowing area and under close supervision by another adult.
- Shut off the machine if children enter the work area.
- Never allow a child to ride with you.
- Never allow children to operate the machine.
- Be extra cautious near corners, bushes, trees or other objects that block your view.

Remember:

The operator is responsible for avoiding dangers or accidents.

Slope Operation:

- Remove obstacles such as stones, tree branches, etc.
- Mow up and down, not side to side. Never drive the mower on terrain that slopes more than 15 degrees.
- Avoid starting or stopping on a slope. If the tires begin to slip, disengage the blades and drive slowly down the slope.
- Always drive evenly and slowly on slopes.
- Do not make sudden changes in speed or direction.
- Avoid unnecessary turns on slopes, if it becomes necessary, turn slowly and gradually downward, if possible.
- Watch for holes, ruts or bumps. On uneven terrain, the machine can tip more easily. Long grass or other debris can hide obstacles.
- Drive slowly and use small movements of the steering controls.
- Do not mow wet grass. It is slippery, and the tires can lose their traction, allowing the machine to slide.
- Do not try to stabilize the machine by putting a foot on the ground.

WARNING



When using the machine, approved personal protective equipment shall be used. Personal protective equipment cannot eliminate the risk of injury, but it will reduce the degree of injury if an accident does occur. Ask your retailer for help in choosing the right equipment.



Mowing Safety:

- Before using, always visually inspect to see that the blades, blade bolts and cutter assembly are not worn or damaged. Replace worn or damaged blades and bolts in sets to preserve balance.
- On multi-bladed machines, take care as rotating one blade can cause other blades to rotate.
- Do not attempt to tilt the machine to the maintenance position while mowing.
- Before using, always visually inspect to see that all bolts and nuts are secure.

SAFETY INSTRUCTIONS

Maintenance & Storage:

- Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition.
- Check the grass chute frequently for wear or deterioration.
- If storing equipment over long periods of time remove all grass clippings, grass build up, and debris from the equipment to prevent corrosion.
- Replace worn or damaged parts for safety.
- When machine is to be parked, stored or left unattended the parking brake should be set and any attachments should never be left in the tilted position unless the safety chains are used to secure the attachments.
- Only tilt the deck to maintenance mode when on a smooth and level surface.

Training:

All drivers should seek and obtain professional and practical instruction. Such instruction should emphasize:

- The need for care and concentration when working with ride-on machines.
- How to properly connect and disconnect the tractor and attachment.
- How to properly drive, control, and operate a ride-on machine with an attachment connected.

Operation:

- Do not operate the machine in a confined space.
- Always disengage PTO, set parking brake, turn the engine off, and remove the key when leaving the machine during operations.
- Never direct discharge of material toward bystanders or allow anyone near the machine while in use.
- Never operate the machine near bodies of water, retaining walls, cliffs or tall curbs. Give the machine ample room to operate and turn around.
- Never operate the machine with defective guards or without safety protective devices in place.
- Disengage the PTO switch, set the brake, stop the engine, remove the ignition key and disconnect the spark plug wire(s).
 - Before clearing blockages or unclogging chute.
 - Before checking, clearing or working on the machine.
 - After striking a foreign object, inspect the machine for damage and make repairs before restarting and operating the equipment.
 - If the machine starts to vibrate abnormally (check immediately).
 - Before lifting up the grass chute.
 - Before making height adjustment unless adjustment can be made from the operator's position.

SYMBOLS & DECALS

			<h2>WARNING</h2> <p>AVOID SERIOUS INJURY OR DEATH</p> <ul style="list-style-type: none"> -Read and follow owner's manual. -Keep hands and feet away from discharge area and blades -Avoid sudden turns, sudden changes in direction, and sudden changes in speed. -Go up and down hills (15° maximum), not across. -If machine stops going uphill, stop blades and back down slowly. -Look down and behind before and while moving backwards. -Do not operate when children or others are around. -Never carry children or others as passengers. -Keep safety devices (guards, shields, defectors, switches, etc.) in place and operating. -Remove objects that could be thrown by blades. -Always set parking brake before leaving seat. -Be sure blades and engine have stopped before placing hands or feet near blades. -Know safe operating instructions before starting engine. <p>18795</p>

18795 - Warning Decal

WARNING

SERIOUS INJURY OR DEATH MAY RESULT FROM MACHINE ROLLOVER

- Failure to follow these instructions could result in serious injury or death
- Do not operate machine on steep slopes or near drop offs
- Avoid sharp and/or quick turns
- Do not exceed the machine weight rating of the ROPS
- Always use the seat belt when the ROPS is locked in the upright position
- Do not jump if machine tips
- If ROPS is foldable
 - Always keep the ROPS fully extended
 - WHEN ROPS MUST BE DOWN-
 - Do not use seat belt
 - Drive with extra care
- If equipped with seat platform, Do not operate machine without seat platform pins in place

286304500

ROPS Warning Decal

IMPORTANT

Operator must be seated to start engine.

OD73

Operator must be Seated Decal - OD73

IMPORTANT

Before exiting the vehicle disengage blades, turn off engine, and engage the parking brake

18797

Before Exiting Decal - 18797

NOTICE

DO NOT ALTER ELECTRICAL SYSTEM
WRONG WIRING CONNECTIONS WILL DAMAGE
ELECTRICAL COMPONENTS AND MAY MAKE
THE SAFETY SWITCHES INOPERATIVE

OD74

Notice Do Not Alter Wiring Decal - OD74

CAUTION

UNSTABLE SURFACE
NO STEP

OD11

No Step Decal - OD11

DANGER

ROTATING DRIVELINE
CONTACT CAN CAUSE DEATH
KEEP AWAY !

DO NOT OPERATE WITHOUT -
ALL DRIVELINE, MOWER AND
EQUIPMENT SHIELDS IN PLACE.
DRIVELINE IS SECURELY ATTACHED
AT BOTH ENDS.

19486

Danger / Entanglement - 19486

WARNING

FLYING DEBRIS

EYE INJURY AND/OR CUTS
POSSIBLE.
KEEP PEOPLE CLEAR OF AREA
WHEN MOWING.
USE CHUTE GAIRD/COVER OR
COMPLETE GRASS CATCHER
WHEN MOWING.
DEBRIS MAY CAUSE INJURY

OD43

Flying Debris Decal - OD43

DANGER

KEEP HANDS and FEET AWAY

OD55

Triangle Danger Decal - OD55

SWISHER
A TRADITION OF QUALITY SINCE 1945

www.swisherinc.com

MODEL NO.

SERIAL NO.

Serial # ID Tag

PARKING BRAKE

CAUTION: VEHICLE MUST BE AT A COMPLETE STOP BEFORE ENGAGING THE BRAKES. DO NOT ATTEMPT TO ENGAGE THE BRAKES WHILE THE VEHICLE IS MOVING.

IMPORTANT: REFER TO MANUAL FOR FURTHER OPERATING INSTRUCTIONS.

TO ENGAGE:

1. PULL UP ON THE RIGHT (BENT) HANDLE UNTIL LOCKED IN THE UP (ENGAGED) POSITION.

TO DISENGAGE:

1. PULL UP SLIGHTLY ON THE BRAKE HANDLE TO RELEASE TENSION UNTIL THE LOCKING PLATE CAN BE PUSHED DOWN TO RELEASE ITSELF FROM THE LOCKED POSITION.
2. ONCE UNLOCKED, PUSH THE BRAKE HANDLE DOWN UNTIL OUT OF TRAVEL.

HYDRO BY-PASS OPERATION:

1. THE LEFT HANDLE IS TO ACTIVATE THE HYDRO BY-PASS AND OPERATES, SEPARATELY, THE SAME AS THE BRAKE ARM. USE ONLY WHEN ENGINE IS TURNED OFF AND MACHINE IS ON LEVEL GROUND.

19484

Brake / Bypass Decal - 19484

UNCRATING & ASSEMBLY

Tools Required:

Gloves, Tire pressure gauge, Nail bar or claw hammer, Wire snips, Gloves, Protective eyewear.

Removing the attachment from the crate:

- Before disassembling the crate and connecting the two machines make sure they are both on a level surface.
- Using nail bar or claw hammer, remove the top and side crate panels.
- Dispose of top and side panels of the crate.
- Remove loose parts and packing material.
- Cut any banding, strapping, or chocks that may be holding the attachment to the crate.
- Check tire pressure on all wheels. *Refer to specifications page 11.*
- This mower attachment may be mounted to the tractor while still on the crate base. Push the attachment towards the rear of the crate base but do not let it roll off completely. Chock the wheels to prevent accidental shifting. Otherwise carefully remove the attachment from the crate base.

Attaching To Tractor

- Disconnect the spark plug wire of the BigMow tractor and place where it cannot make a connection.
- Attach the safety chains to the ROPS and small chain clips to hold the tractor foot rest up out of the way. **(FIG 1)**
- Engage the hydro bypass lever and push the tractor behind the attachment. Line up the mounting arms to the mating connection points on the tractor. Apply a small amount of Moly EP grease to mounting arms.
- Pull out and twist the locking pins on the tractor to hold the pins open.
- Run the winch strap out far enough to connect to the first strap mounting point (Deck Height Adjust Strap Mount Location on page 5). Remove the Ball Lock Pin from the Deck Height Adjustment Pin Plate if present. **(FIG 2)**
- Connect the deck wire harness to the tractor. **DO NOT START THE TRACTOR!**
- Push the tractor and attachment together fully engaging the attachments mounting arms. Rotate the lock pins on the tractor to release them from the open position. Verify the pins are fully seated through the mounting arms. If necessary, the winch strap can be drawn in or otherwise adjusted to help align the mounting arm angle. **(FIG 3)**
- Connect the PTO shaft to the splined gearbox shaft of the tractor by sliding back the locking collar on the PTO coupler and pushing the coupler over the splined gearbox shaft until the locking collar **SNAPS back completely**. Double check the PTO Quick Disconnect is secure by pulling on the PTO shaft without activating the quick disconnect collar.
- Reconnect the spark plug wire

Read all operating instructions, safety instructions, and customer responsibilities before operating this machinery.



DANGER

The PTO shaft turns at a High rate of speed. If the shaft coupler is not secured properly at both ends the shaft could fly loose with enough force to cause serious injury or death!

FIG. 1

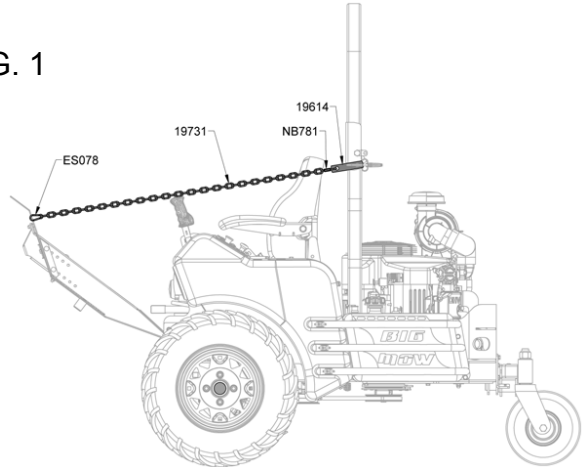


FIG. 2

Mowing mode strap location.


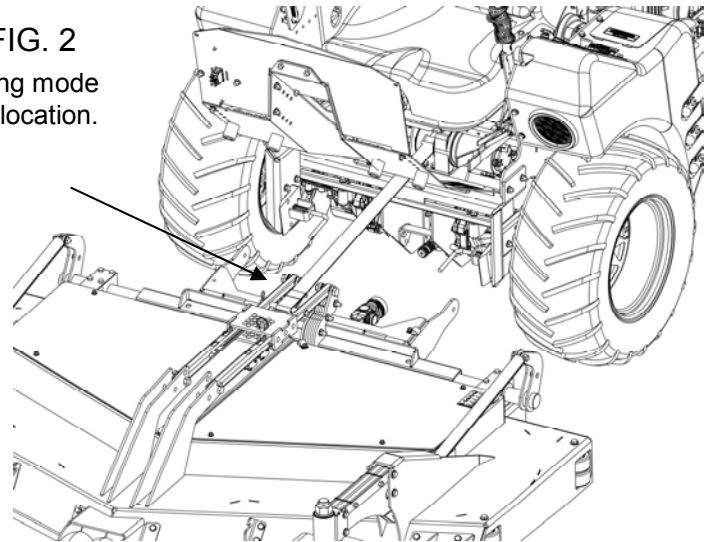


FIG. 3

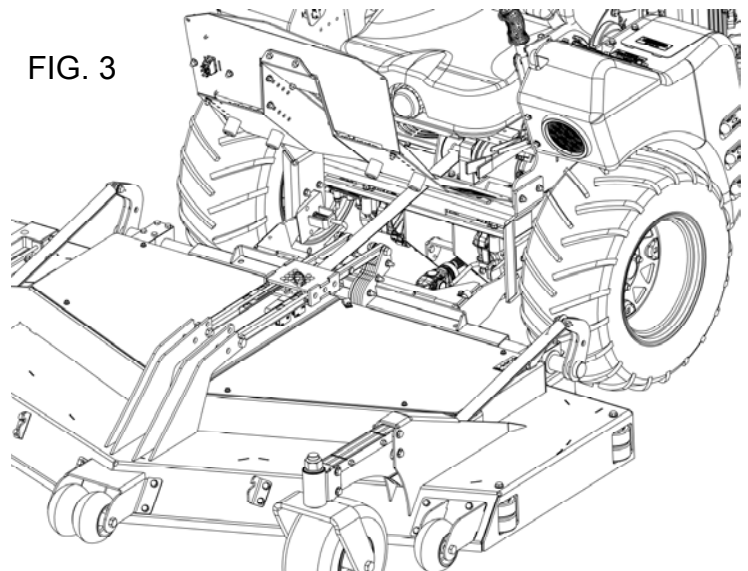

CUSTOMER RESPONSIBILITIES

Operator Presence System:

Be sure to check that the operator presence and interlock systems are working properly before every use. If your mower does not function as described, repair the problem immediately. See the tractor manual for all tractor related safety interlocks.

- The attachment must be connected in order to start the engine of the tractor. If it is not properly or securely connected, the engine will not start.
- If using a finish cut mower attachment, any attempt to tilt the deck into the maintenance position with the engine still running should shut off the engine. If this happens lower the deck back down to a level position before attempting to restart the engine.
- The deck height/tilt switches will cut out at the top of the deck height as well as the end of the tilt function. This is to prevent overloading of the winch. When these positions are reached the winch should not be able to continue lifting. However the deck can be let down, which should reset the switch operation.

Tires:

- Maintain proper air pressure in all tires (SEE SPECIFICATIONS section)
- Keep tires free of gasoline, oil or insect control chemicals which can harm rubber.
- Avoid stumps, stones, deep ruts, sharp objects and other hazards that may cause tire damage.

Blade Maintenance:

For best results, mower blades must be kept sharp.
Replace bent or damaged blades.

- Engage brakes & safely tilt front of mower (SEE WARNING).
- Install safety chains (supplied with tractor) to the front edge of the deck before working under the machine.
- Hold or block blade from turning.
- Loosen blade nut and remove blade.
- Replace blade (SEE SPECIFICATIONS).



CAUTION

Stop engine, apply brakes, and remove ignition key for safety. Disconnect spark plug wire. Wear heavy, thick gloves when holding onto blade. Avoid the sharp edge of the blade.



WARNING

When it is necessary to tilt the mower for any repair or service, use safety chains and/or jackstands to provide adequate support. DO NOT rely on hydraulic or mechanical jacks.

V-Belts:

Check V-belts for deterioration and wear before each use and replace if necessary. Replace belts if they begin to slip from wear. Refer to Quick Reference and Service & Adjustment sections of this manual for instructions on belt part numbers and how to properly replace belts.

Overall Unit Care:

- Reduce the risk of fire by removing grass, leaves and other debris that may accumulate on the machine.
- Allow the machine time to cool before cleaning or putting it in storage.
- Wash mower periodically. Clean above and below deck.
- Keep all electrical connections clean and secure.

CUSTOMER RESPONSIBILITIES

Driving & Transport on Public Roads:

- Check applicable road traffic regulations before driving and transporting on public roads.
- If the machine is transported, you should always use approved fastening equipment and ensure that the machine is well anchored to the towing vehicle.
- The cutting deck should also be lowered to the lowest position and the parking brake engaged during transport.

Specifications

PTO STYLE	Splined w/ Spring Loaded Locking Collar
LIFT MECHANISM	Supplied on accompanying tractor
DECK LEVELING	Chain w/ Adjustable Turnbuckles
ARTICULATION DIRECTION(S)	Front to Back & Side to Side
TIRE SIZE	FRONT: 11 X 6 X 6 w/ 5/8 Bearing
TIRE PRESSURE	FRONT: 40 psi Max
BLADE BOLT TORQUE	35 ft. lbs
CUTTING HEIGHT	Approximately 1.25" – 5"
CUTTING WIDTH	66"
BLADES	Three 22 ½" Mulching Blades
DECK LIFT	Electric switch; Foot or Hand Operated
UNIT MEASUREMENTS	LENGTH: 56" WIDTH: 72" / 83" w/ Grass Chute Down) HEIGHT: 17" WEIGHT: 495 lbs

Maintenance Schedule

	Before Each Use	8 Hours	25 Hours	50 Hours	100 Hours	Season	Before Storage
Check Tire Pressure	X	X					
Check Operator Presence	X						
Check for Loose Fasteners	X				X		X
Sharpen/Replace Mower Blades			X3				
Grease PTO Shaft Joints		X2		X			
Grease Slide Tubes			X2				
Check Belts	X						
Remove Any Debris	X4					X	X

- 1 – Change more often when operating under a heavy load or in high ambient temperatures.
- 2 – Service more often when operating in dirty or dusty conditions.
- 3 – Replace blades more often when mowing in sandy soil.
- 4 – Clean off more frequent when mowing in tall or dry grass conditions or with excessive debris.

OPERATION

Starting:

Starting Instructions are also included on the right side fender compartment decal of the tractor.

- Before starting the vehicle, be sure the area is clear of any people or animals.
- Operator must be sitting in the seat (with seat belt fastened and the ROPS in the upright position).
 - Control handles must be in the neutral lockout position.
 - PTO switch must be in the disengaged position (pushed down).
 - Brake must be engaged.
 - Front attachment must be in an operating position, not in the maintenance/tilt position.
 - Throttle should be in the “slow” position.
- Turn ignition key until engine starts. If the engine struggles to start, engage the choke until the engine fires, then disengage the choke before operating.
- Once started, set engine RPM to maximum (Fast) and then engage the blades.

Grass Height & Cutting Suggestions:

- Do not attempt to cut wet grass.
- The average lawn should be cut to 2 ½” during the cool season and to over 3” during the hot months. For healthier and better looking lawns, mow often and after moderate growth.
- As a rule, never cut more than 1/3 of the total grass blade length. Correct mowing height can reduce weeds and lawn disease.
- For best performance, grass over 6 inches in height should be mowed twice. The first cut should be set relatively high and the second set to the desired height.
- For best looking results and a healthier lawn, mow in different directions each time.
 - Example: If you mow going north and south, the next time mow going east and west.

Adjusting The Cutting Height

1. Starting with the deck resting on the ground, make sure the winch strap is attached to the correct place.
2. Lift the deck higher than the desired position then place the pin in the desired hole on the height adjust bracket.
 - The cutting height is displayed in inches on the left rear portion of the deck. It has a cutting range of approximately 1 ¼” to 5”.
3. Once the pin is securely positioned, lower the deck until the pin is contacted and tension is released from the winch strap.
 - **Important:** Always release tension from the winch strap when operating to help extend the life of the strap.
4. To change the deck height repeat the steps listed above.

SERVICE & ADJUSTMENTS

Deck Maintenance Mode

Refer to next page for visual reference

- Whenever placing the deck into the tilted maintenance position ALWAYS secure the deck using both safety chains to prevent injury or loss.
- Refer to page 5 for all features, descriptions and strap mounting locations.
- To tilt the deck start by finding a safe, smooth and level area before performing the following steps.
- Engage the brake, turn off the engine, remove the key and disconnect the sparkplugs.
- Exit the machine and stand on the left side next to the left control panel. Keep your hands and feet clear of the deck when performing these steps to reduce risk of injury.
- Use the deck height switch to raise the deck and relieve tension off of the deck height pin. Once there is no tension on the pin, **REMOVE IT AND SET IT ASIDE!**
- Lower the deck until the anti-scalp rollers make contact with the ground and make sure there is slack on the winch strap.
- Connect the two safety chains to each side of the ROPS.
- Lift the floor pan and secure it in an upright position using the safety chains. (Fig. 4)
- Remove the pin securing the winch strap to the rear of the deck
- Use the deck height switch to gain more slack until the strap is long enough to pin the strap to the front of the deck using the longer pin you just removed. Refer to Fig. 5 for proper location.
- Use the same switch to begin removing the slack in the strap. Once all slack is removed and slight tension is on the strap, start tilting the deck into the maintenance position.
 - The switch will cut out once the deck reaches its maximum tilt angle. This is normal to the function of the machine and can be reset by lowering the deck back towards the ground.
- Remove the safety chains from the floor pan and allow it to rest against the deck.
- Connect the safety chains to the mounting points on the front edge of the deck, leaving as little amount of slack as possible.
- Once both chains are properly connected and secure, lower the deck slightly to remove the slack in the chains, or until there is slack in the winch strap.
- Use extreme caution when working underneath the deck.
- Always wear proper hearing and eye protection when working on equipment.



WARNING

This attachment is very heavy and can crush and cause serious injury.

Follow instructions for securing the attachment in Maintenance Mode before performing any maintenance.

FIG. 4



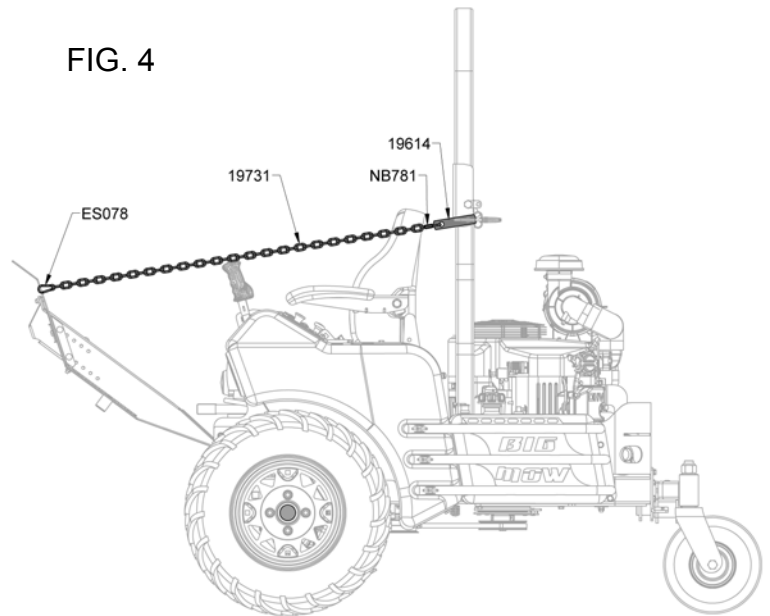


FIG. 5


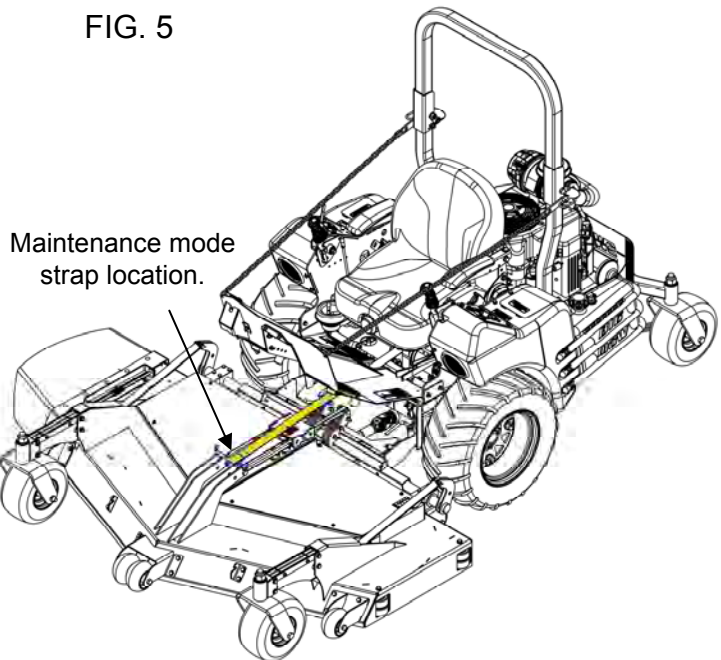


Maintenance mode
strap location.

SERVICE & ADJUSTMENTS

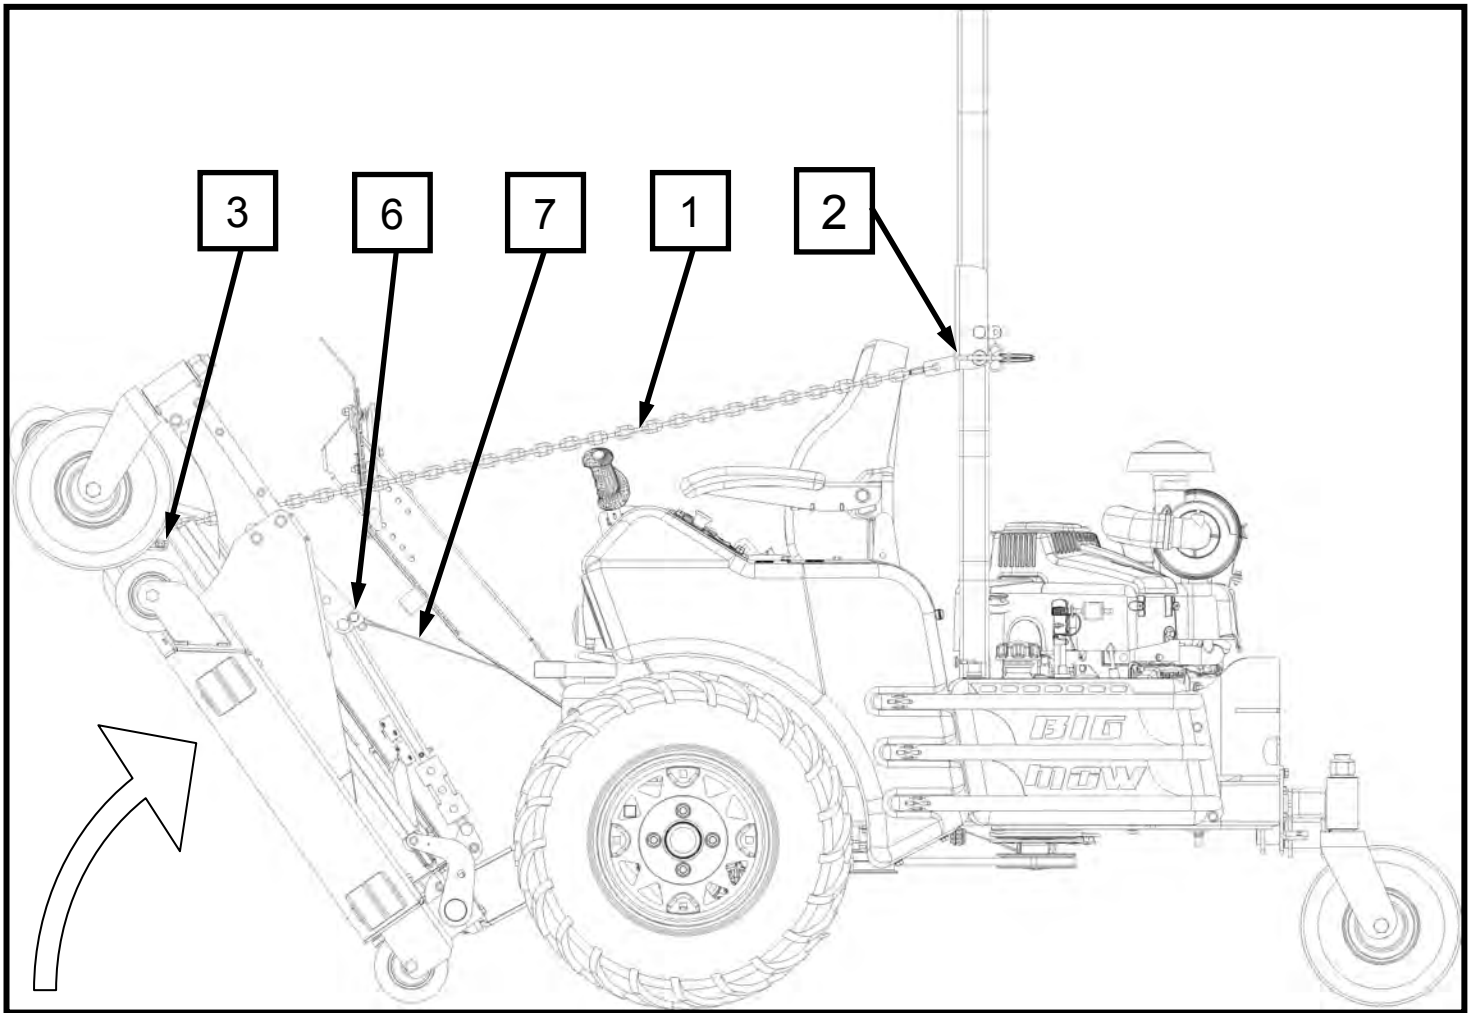

1. Safety Chain(s)
2. ROPS Safety Chain Mount
3. Deck Safety Chain Mount
4. Deck Height/Tilt Switch
5. Maintenance Mode Instructions
6. Front Strap Mounting Location
7. Winch Strap

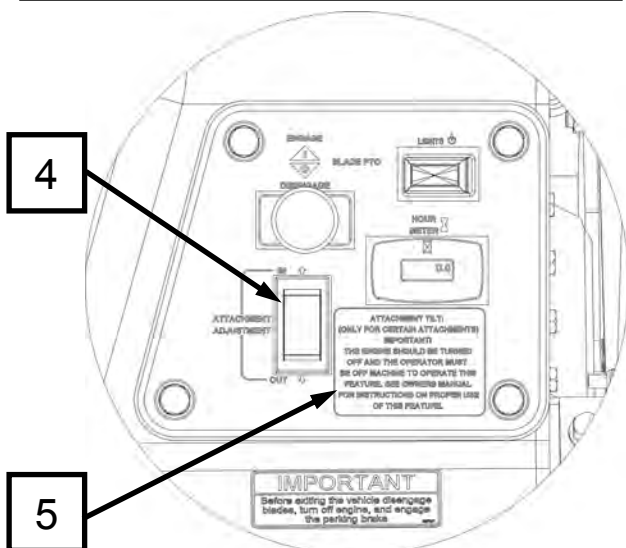
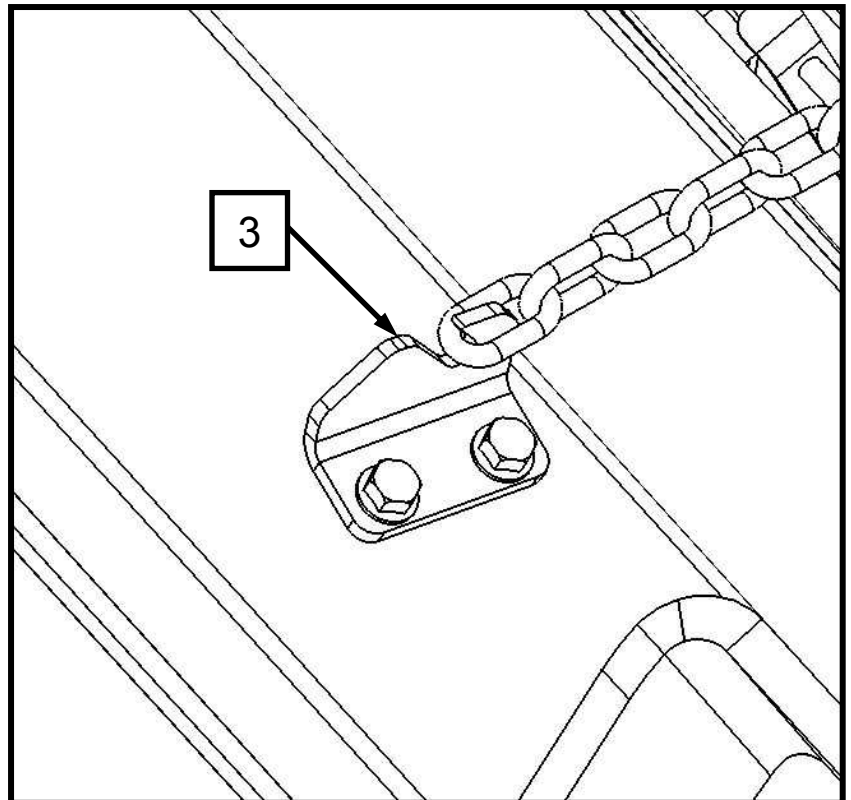


SERVICE & ADJUSTMENTS

Deck Leveling

- If the deck does need adjustment either side to side or front to back, following the steps below;
- Find a level and smooth area to perform the work.
 - Apply the parking brake, shut off the machine, remove the key and disconnect the spark plug.
 - Raise the deck to the highest cutting height setting (5" mark in the height adjustment decal).
 - Determine which side needs to be adjusted by measuring from the ground to the tip of each blade on each side of the mower. For side to side adjustment the blades should be parallel with the back edge of the deck for accurate measurements. If the measurements are within a $\frac{1}{4}$ " of 5" then no adjustment is needed.
 - Pull back the GnarlyWraps™ from the chain that needs to be adjusted. Only perform adjustments on one side if possible.
 - Loosen each locking nut on the turnbuckle.
 - Hold the eyebolt on the end that is connected to the chain to keep it from spinning and begin turning the turnbuckle until the measurements are within $\frac{1}{4}$ " of each other. Shortening the turnbuckle will increase the measurement whereas lengthening the turnbuckle will reduce it. Use small adjustment increments (1 to 2 full turns at a time).
 - Once no more adjustments are needed, tighten the locking nuts on the turnbuckle while continuing to hold the eyebolt that is connected to the chain.
 - Reinstall the GnarlyWraps™ onto the chain. The wraps are required for safe and proper operation.

1. Turnbuckle Assembly
2. Chain
3. Turnbuckle Eyebolt
4. Lock Nut(s)
5. Turnbuckle

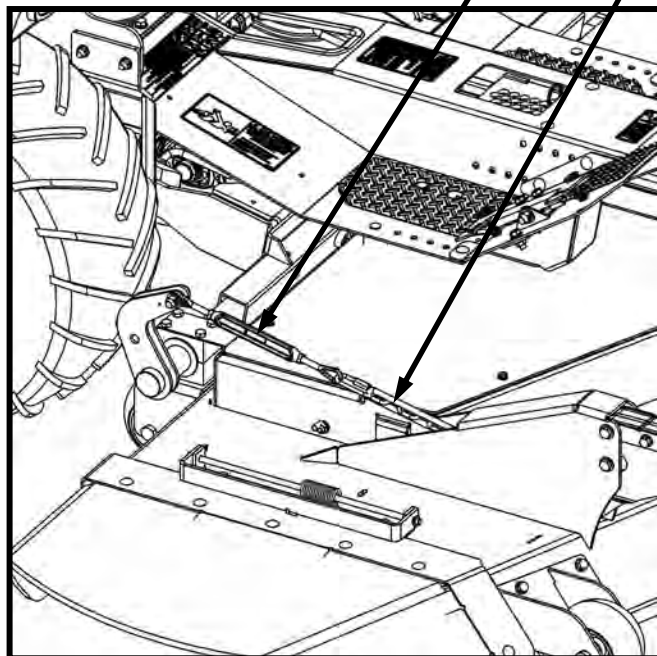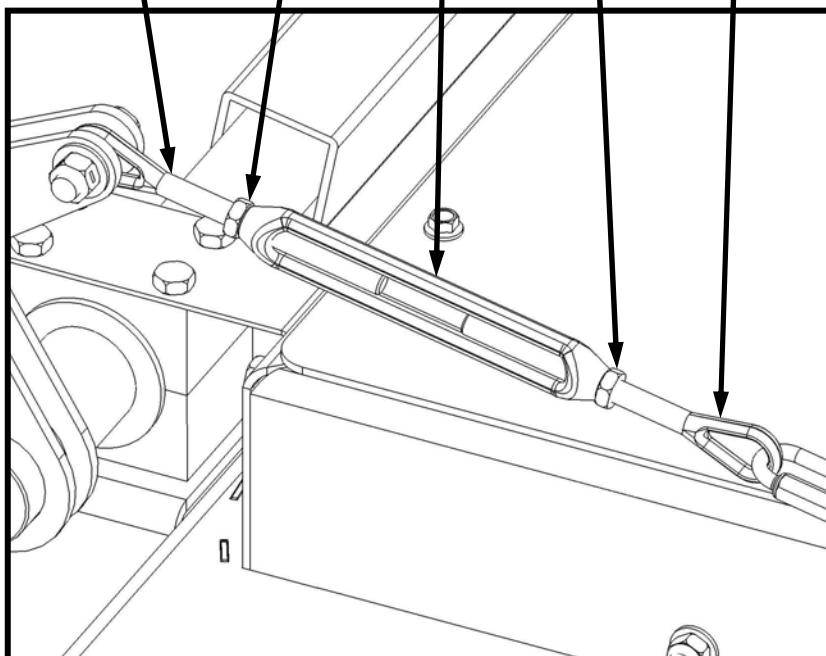

SERVICE & ADJUSTMENTS

Deck Belt Routing & Replacement

For replacement belt part number refer to Replacement Parts Quick Reference Chart in this manual.

Removal


- Apply parking brake.
- Turn off machine and disconnect spark plug wire.
- Lower the deck to its lowest position.
- Remove the belt covers (not shown).
- Loosen or disconnect backside tensioning idler.
- Roll the belt over the top of one of the blade pulleys.
- Once loose, remove the belt from the deck.

- | |
|------------------------------|
| 1. Deck Belt |
| 2. Blade Pulleys |
| 3. Stationary Idler Pulleys |
| 4. Gearbox Pulley |
| 5. Backside Tensioning Idler |
| 6. PTO Shaft (Input) |

Replacement

- Install new belt by placing it around all pulleys. Refer to routing diagram below.
- The belt should be loose at this time.
- Tighten the backside tensioning idler to its original location.
- Check for sufficient tension on all belts. If belt is still loose, continue tightening.
- Reinstall the belt covers.
- Reconnect the spark plug.


Front of Unit (Top View)

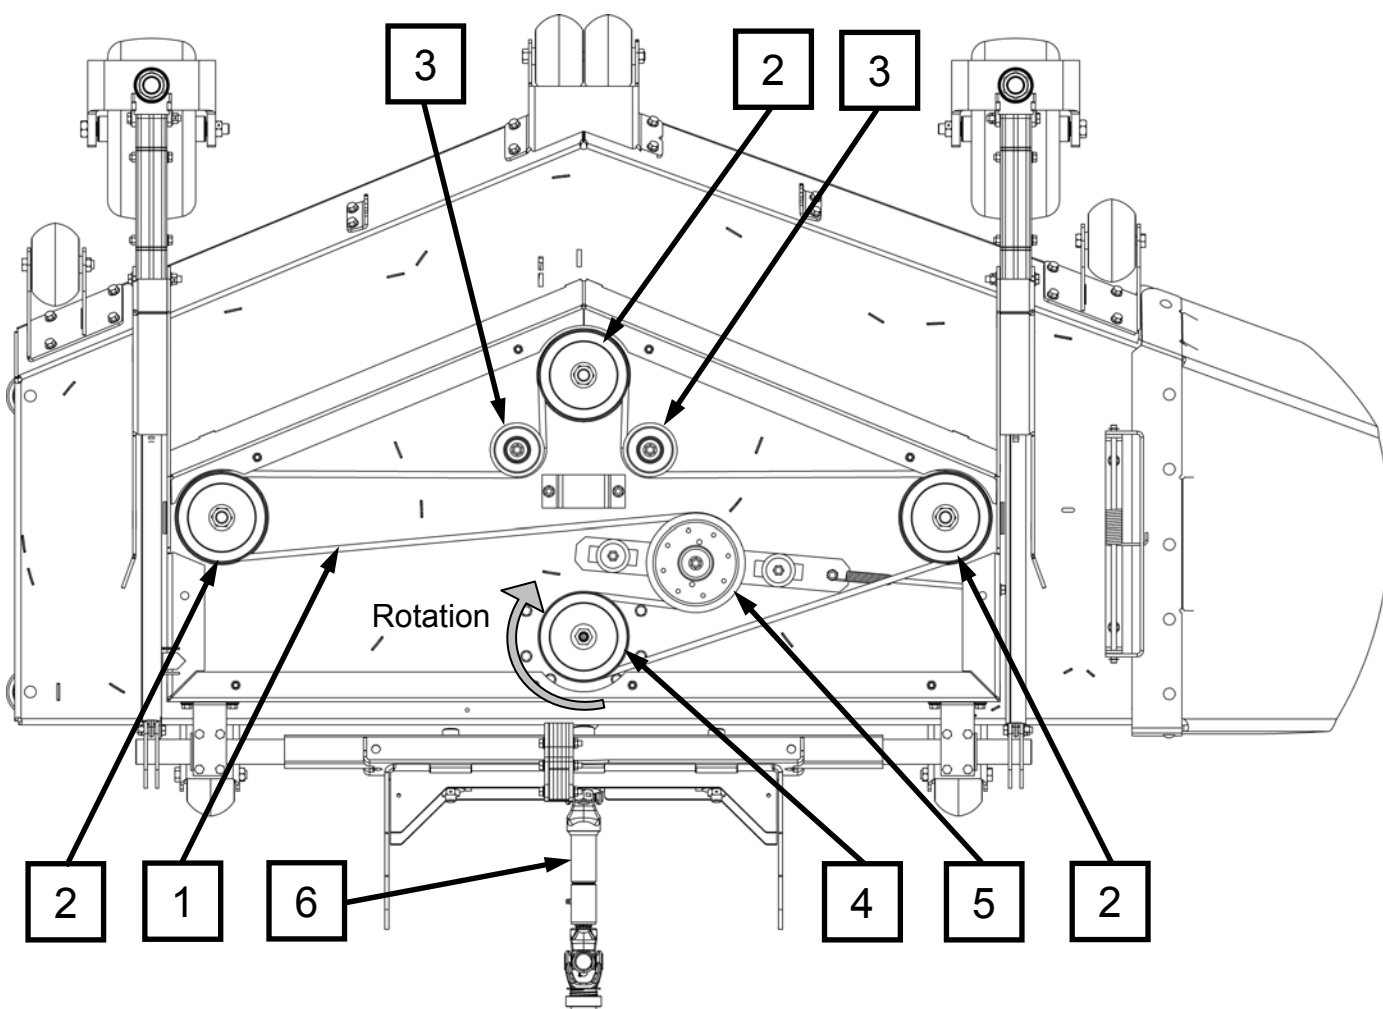

SERVICE & ADJUSTMENTS

PTO Shaft

- Before every use, check to make sure the PTO shaft is securely attached to both the tractor and attachment gearboxes.
- Before every use, check the PTO shaft u-joints to make sure they are not damaged or worn. Simply lift up and down on the shaft when it is securely connected to both pieces of equipment. If there is excessive movement then the PTO shaft may need to be replaced.
- If there is excessive vibration during operation; disengage the PTO switch, set the brake, stop the engine, remove the ignition key and disconnect the spark plug wire(s) and immediately inspect the PTO shaft. Refer to Troubleshooting section.
- It is recommended to grease all PTO Shaft joints every 8 hours (50 hours for extended intervals)
- Lubricate all fittings with a good quality lithium soap compatible E.P. grease meeting the N.L.G.I. #2 specification and containing no more than 1% Molybdenum Disulfide.
- An E.P. grease meeting the N.L.G.I. #2 specification and containing 3% Molybdenum Disulfide may be substituted in the telescoping members only.

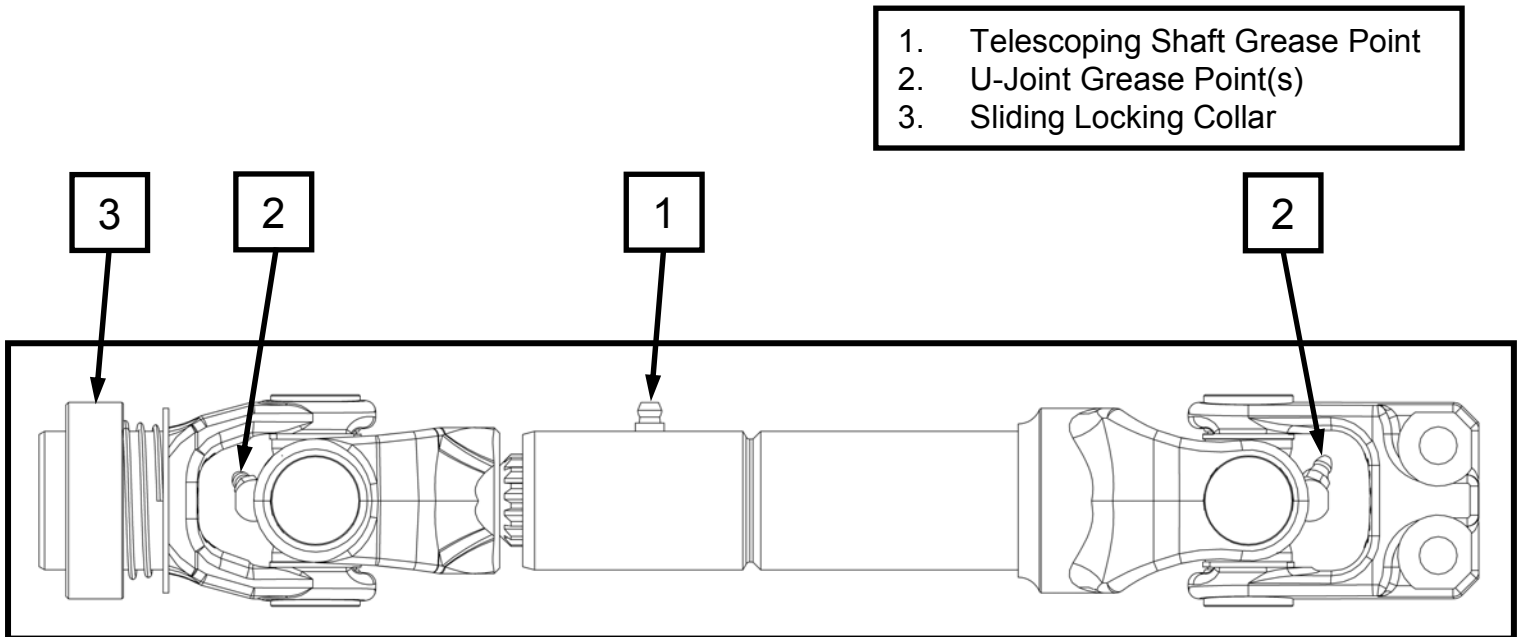

Gearbox

- The gearboxes are lubricated and sealed components. If used and maintained properly, these gearboxes do not require lubrication changes.
- If there are internal component failures within the gearbox, it is recommended to replace the entire gearbox.
- However, if the failed internal components are serviced and/or replaced then new lubrication is required.
- This gearbox requires 4 oz. of Bentonite grease.
 - A recommended brand is Brooks Benalene 900-P-RP.

TROUBLESHOOTING

Problem	Cause	Correction
Engine Will Not Turn Over	1. Deck still in maintenance/tilt mode.	1. Put the deck into its highest cutting height setting before starting.
Excessive Vibration	1. Worn, bent or loose blade(s). 2. Bent or damaged blade driver component(s). 3. Loose part(s) and/or fastener hardware. 4. Faulty blade driver assembly.	1. Replace blade(s); Tighten blade bolt. 2. Replace blade driver or component(s). 3. Tighten loose part(s) and/or hardware; Check for damage. 4. Replace blade driver assembly.
Loss of Power To Engine	1. Faulty fuse. 2. Deck lifted into maintenance/tilt mode. 3. Wire harness not fully connected.	1. Replace faulty fuse. 2. Put deck back into a proper operating position to restart engine. 3. Ensure wire harness is connected.
Poor or Uneven Cut	1. Worn, bent or loose blade(s). 2. Mower deck is not level. 3. Buildup of debris under deck. 4. Bend deck plate. 5. Faulty /damaged blade driver assembly or components.	1. Replace blade(s); Tighten blade bolt. 2. Level deck using turnbuckles. 3. Clean underside of mower deck. 4. Replace deck weldment. 5. Replace blade driver assembly or components.
No Power To Winch	1. Faulty fuse. 2. Wire harness not fully connected. 3. Damaged wire harness 4. Winch spool is bent or damaged. 5. Strap is damaged or broke	1. Replace faulty fuse. 2. Ensure wire harness is connected. 3. Replace wire harness 4. Replace winch. 5. Replace strap.
No Power To Blades	1. No operator in seat when PTO switch is engaged. 2. PTO shaft not connected to Tractor Gearbox. 3. Bent or Damaged PTO shaft 4. Loose or damaged deck belt. 5. Loose or damaged engine-to-gearbox belt (Tractor). 6. Loose or faulty clutch wiring harness. 7. Faulty clutch.	1. Must be an operator in seat when attempting to engage blades. 2. Ensure the PTO shaft is connected to the Tractor gearbox. 3. Replace PTO shaft. 4. Tighten or replace deck belt. 5. Tighten or replace engine-to-gearbox belt. 6. Ensure clutch wiring is properly connected to clutch and harness. 7. Replace clutch.

Note: Refer to the tractor manual for more troubleshooting tips that may include other symptoms or causes not included in this list.

MOWER IDENTIFICATION

Mower Identification

Each mower has its own model number and serial number. The number for the attachment can be found on the back side of the upper belt surround (refer to Symbols & Decal section for reference). All mower parts listed herein may be ordered directly from Swisher or your nearest Swisher dealer.

Unauthorized Replacement Parts

Use only Swisher replacement parts. The replacement of any part on this unit with anything other than a Swisher authorized replacement part may adversely affect the performance, durability and safety of this unit and may void the warranty. Swisher disclaims liability for any claims or damages, whether warranty, property damage, personal injury or death arising out of the use of unauthorized replacement parts.

WHEN ORDERING PARTS, PLEASE HAVE THE FOLLOWING INFORMATION AVAILABLE:

- MODEL NUMBER - _____
- SERIAL NUMBER - _____
- DATE PURCHASED - _____
- PURCHASE FROM - _____
- PART NUMBER (W/ PAINT CODE) - _____
- PART DESCRIPTION - _____

S.A.I.
1602 CORPORATE DRIVE
WARRENSBURG, MO 64093

www.swisherinc.com
TELEPHONE - 1-800-222-8183
FAX - 1-660-747-3160

cust.serv@swisherinc.com

REPLACEMENT PARTS

Quick Reference

Swisher Part #	Part Description
12509	Blade – Mulching, 22.5”
B98	Bearing – Blade
19422	Belt – 146”, A-Section; Deck
19290	Tire/Wheel – 11 x 6 – 5, 4 Ply
3511	Gauge – Wheel
AS001	Roller – Anti-Scalp 3/8 ID
19295	Chute – Discharge, Rubber
18874	Washer – Plastic 2” OD x 3/8” ID
18875	Washer – Plastic 7/8 Sq. x 3/8” ID
19369	Shaft – PTO Quick Disconnect



CAUTION

Use extreme care when working on machinery.

Before performing any maintenance, turn off engine, allow the unit to cool and remove the key. Disconnect spark plug wire.

Set Parking Brake by pulling up on brake arm until locked into the “engaged” position.

Do not wear watch or jewelry. Do not wear loose fitting clothes. Observe all common safety practices with tools.

NOTES

NOTES

SWISHER HISTORY



Back before electricity came to rural Missouri Max Swisher was producing lawn mowers from his mother's chicken house. Max never liked to mow grass. He installed a gearbox on his family's lawn mower creating a self-propelled unit. By tying one end of a rope to the mower and the other end to a tree in the center of the yard the mower circled the tree, shortening the rope and guiding the mower in concentric circles. Max enjoyed relaxing under a shade tree while his invention did all the work.

Max had designed his first self-propelled rotary lawn mower to do his dirty work for him. Neighbors noticed his new invention and began asking him to make more. Today, over 70 years later, Swisher is still producing innovative lawn and garden and ATV/UTV equipment designed to give us all more "relaxing in the shade" time.

Swisher products have been featured nationally on television programs such as Regis and Kathie Lee and seen in publications like ATV Magazine, Country Journal, Popular Mechanics Magazine and others. In January 2000 Popular Mechanics Magazine named Max's zero turning radius riding mower one of the 20th century's top household inventions.

Swisher offers value and function in its products to meet your grounds maintenance needs.

**CELEBRATING OVER 70 YEARS OF INNOVATION
SINCE 1945**

