 


User Guide

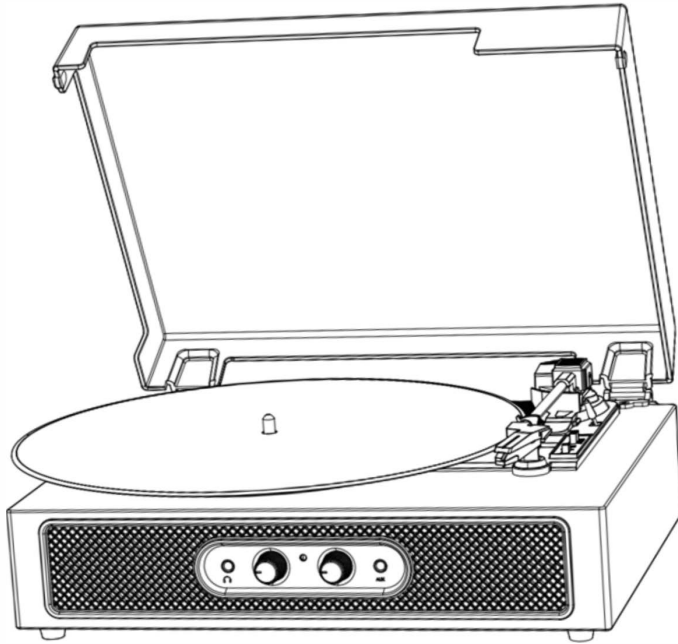

Wireless Turntable

 
Safety & Warnings

- Read all safety notes and instructions before first use even if you are familiar with this product. Retain this user guide for future reference.
- This user guide contains important information about safety, usage and disposal.
- Use the product only as described in this guide and keep it for future reference. If you sell or pass on this turntable, ensure this user guide is provided to the new owner.
- Do not use this product near water.
- This product must only be operated using the power source specified on the rating label or described in this user guide.
- Protect the power cord from being walked on, pinched or damaged, particularly at the plug, power outlet and where the cord exits the product.
- Do not overload electrical outlets, extension cords or power boards, as this may result in fire or electric shock.
- Do not insert any objects into the product through openings, as this may result in contact with dangerous voltage points or cause a short circuit, leading to fire or electric shock.
- Do not spill liquids on the product.
- Do not attempt to service this product yourself.
- Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Any changes or modifications not expressly approved by Kogan.com may impact the operation of this product.
- Do not use attachments or accessories not recommended by Kogan.com, as they may cause hazards or damage the product.
- Take care when moving the product, especially if placed on a cart or stand. Sudden stops, excessive force or uneven surfaces may cause the product to tip over.
- Slots and openings in the cabinet are provided for ventilation to ensure reliable operation and prevent overheating. Do not block or cover these openings.
- Unplug the product during lightning storms or when it will not be used for extended periods of time.


Components

- Vinyl Record Player
- Power Adaptor
- 45RPM Adaptor
- Dust Cover
- User Guide

Overview

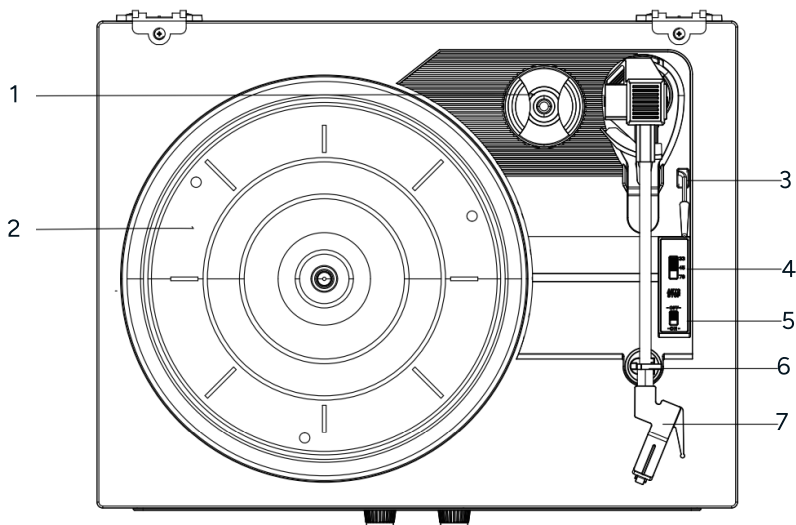

1	45 RPM Adaptor	For 7" records with a centre hole.
2	7-inch turntable	For spinning vinyl records.
3	Tone Arm Lift Lever	For raising and lowering the tone arm.
4	Speed Selector Switch	Select speed according to record labelling (33-1/3,45,78 RPM).
5	Auto Stop Switch	At the end of playback, the rotation automatically stops (to prevent wear and tear on the record).
6	Tone Arm Latch	Used to lock/unlock the tone arm.
7	Ruby Needle	For reading record signals.
8	Built-in Speaker	Built-in independent chamber & 2x5W stereo speakers
9	3.5mm AUX-in Port	Used to input audio from other devices.
10	Switch/Volume Knob	Power switch and volume adjustment.

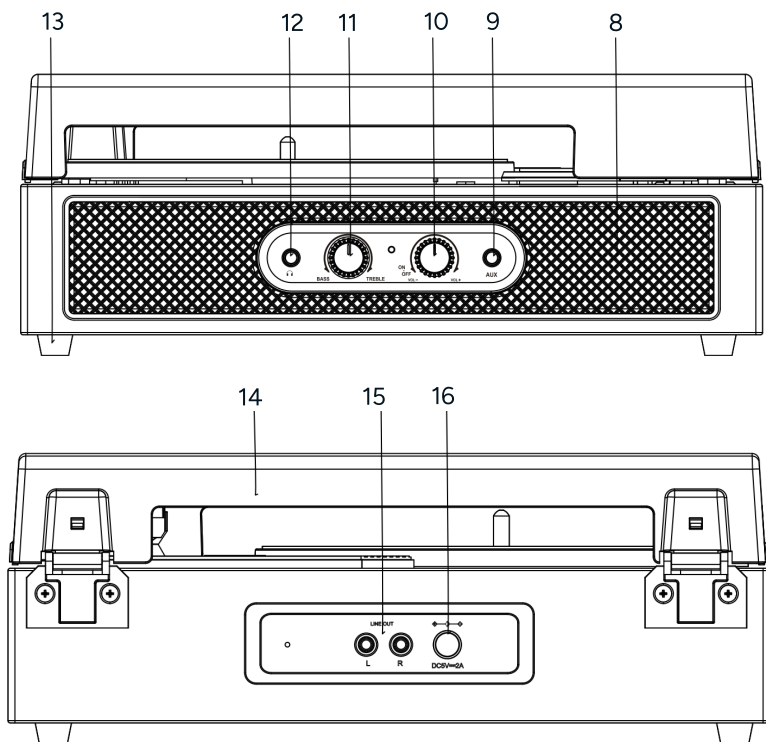 

11	Bass/Treble Knob	• Turn left to adjust bass. • Turn right to adjust treble.
12	3.5mm Audio Jack	Plug in your headphones for private listening.
13	Rubber Foot Pads	Used to reduce vibrations.
14	Dust Cover	Used to protect internal components and records from dust.
15	RCA Output	Connects to any external amplifier or powered speakers.
16	Power Input Port	Connects the supplied power adaptor to an electrical outlet (100-240V; Output: 5V 1A).

 
Operation

Note:

When using the tone arm, stylus and other components of this turntable, handle them with care. These parts are delicate and may be damaged if handled roughly or incorrectly.



Connecting the Unit to Power

1. Plug the supplied power adaptor into the power input port on the rear panel of the unit.
2. Plug the power adaptor into a standard electrical outlet.


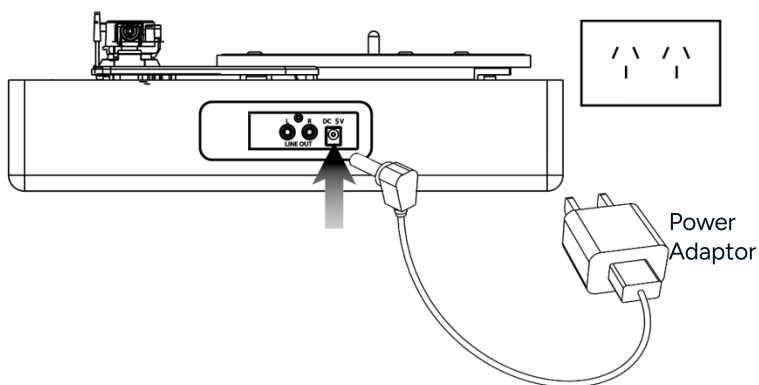


Phono Mode Operating Steps

 
 
1. Turn the 'Power/Volume' knob clockwise to switch the product on.
2. Carefully remove the stylus protector.

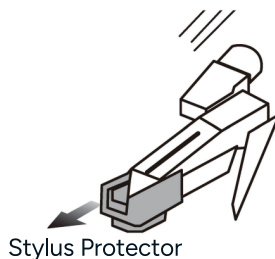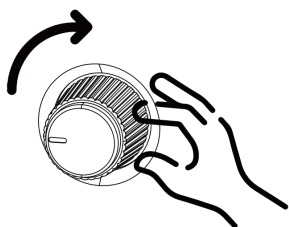

  3. Release the tone arm latch.
4. Use the tone arm lever to raise the tone arm.

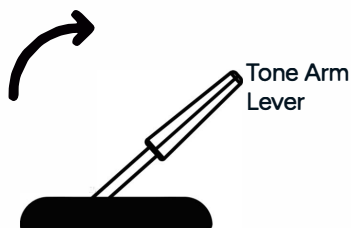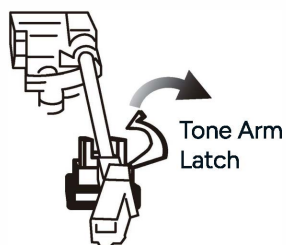

  5. Place the record on the turntable. Move the tone arm so it is positioned above the record.
6. Use the tone arm lift lever to slowly lower the tone arm onto the record groove to begin playback.

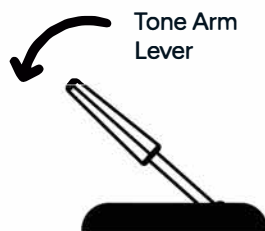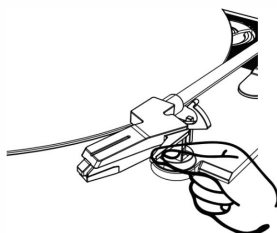


Note:

Ensure to only touch the centre or edges of the record to avoid damaging to the vinyl grooves.


Auto Stop Switch

 - When the 'Auto Stop' switch is set to 'ON', the turntable will begin spinning when the tone arm moves over the record and will automatically stop once playback has finished.
- When the 'Auto Stop' switch is set to 'OFF', the turntable will begin spinning as soon as the product is in Phono mode and will continue spinning even after playback has finished.

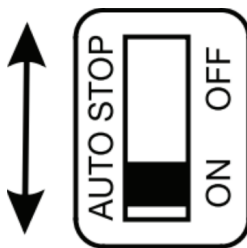

Speed Selector Switch

 - Use this 'Speed Selector' switch to adjust the record speed.
- If using a 45 RPM record, ensure you also use the included 45 RPM adaptor.

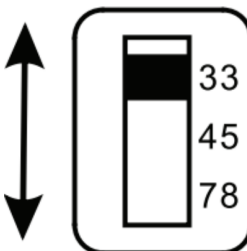

Bluetooth Input Mode

1. Turn the 'Power/Volume' knob clockwise to switch the product on.
2. The product will automatically enter Bluetooth mode and the indicator will flash blue.
3. Open the Bluetooth settings on your device and select 'Kogan TT' from the available devices list.
4. Once connected, the indicator will turn solid blue.
5. Open your music app and begin playback.

Note:

If Bluetooth mode does not start after turning on the power, place the 'Auto Stop' switch to the 'ON' position.

AUX Input Mode

1. Turn the 'Power/Volume' knob clockwise to switch the product on.
2. Connect one end of a 3.5 mm audio cable (not included) to the AUX input on the rear panel of the turntable. The indicator will turn purple.
3. Connect the other end of the cable to your external audio device.
4. Start playback on the external device.
5. Adjust the volume using the 'Power/Volume' knob on the turntable.
6. Use the controls on the external device to manage playback functions.

Bass and Treble Control

When playing vinyl records, use the 'Bass/Treble' knob to adjust bass and treble levels to suit your listening preference.

RCA Line Output

 
- The RCA line output provides an analogue line-level signal and can be connected to powered speakers or an external amplifier.
- Connect the red RCA plug to the right audio channel and the white RCA plug to the left audio channel.

Note:

Do not connect the RCA outputs directly to passive or unpowered speakers, as the volume level will be extremely low.


Removing the Needle

1. Gently pull down the front edge of the needle.
2. Pull needle forward.
3. Pull out and remove.

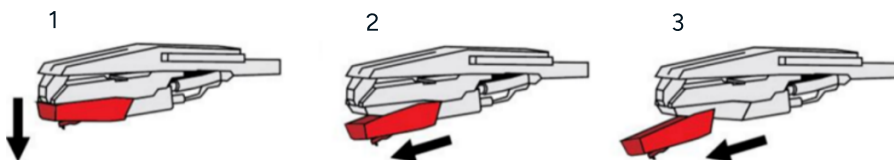

Installing a Needle

 1. Position the needle with its tip facing down.
2. Line up the rear of the needle with the cartridge.
3. Insert the needle with its front end at a downward angle and gently lift the front of the needle upward until it snaps into place.

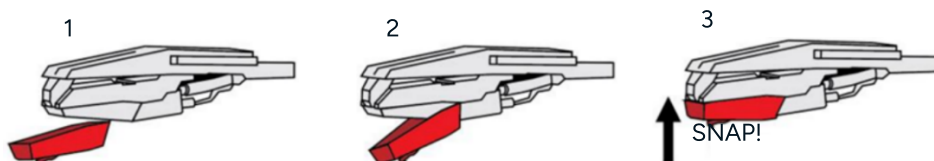

Cleaning & Care

- Do not touch the stylus tip with your fingers. Avoid bumping the stylus against the turntable mat or the edge of a record.
- Clean the stylus regularly using a soft brush, brushing from back to front only.
- Clean records to remove dust and grease using a record cleaning brush and a suitable record cleaning solution.
- Clean the turntable lid and cabinet using a slightly damp microfiber cloth.

Note:

Do not use cleaning products that contains alcohol, benzene or any other harsh chemicals, which may damage the paint and finish of the turntable.

Caring for Your Unit

- As with any electronic product, always unplug the unit from the electrical outlet before cleaning or performing maintenance to reduce the risk of electric shock.
- Store the unit in a cool, dry location.
- Secure the tone arm using the latch on the tone arm rest when the product is not in use.
- Keep all accessories with the unit, including the user guide and power adaptor.
- Do not place or stack objects on top of the unit.

Routine Maintenance

Needles

- Skipping, sliding or sound-related issues are commonly caused by a worn or damaged needle. Under normal use, needles can last up to approximately 1000 hours depending on record condition and care.
- Clean the needle as needed using compressed air or a stylus brush to remove dust and debris.
- Needles are consumable components and must be replaced as part of regular product maintenance.

Belts

- Wobbling, speed inconsistency or uneven rotation is commonly caused by a worn or stretched belt. Belts are consumable components and will require replacement over time.
- For instructions on correct belt installation, contact **help.Kogan.com** for further support.

Wood or Veneer Surfaces

Dust regularly using a clean, soft, dry, lint-free cloth. Wipe in the direction of the grain to remove dust and fingerprints.

ABS Composite Plastic and Vinyl Surfaces

- Dust regularly using a clean, soft, dry, lint-free cloth. For deeper cleaning, use a slightly damp cloth with mild detergent.
- Rinse the cloth in clean water, wring it out thoroughly, and wipe the surface again to remove any residue.
- Dry the surface immediately with a clean cloth to prevent moisture damage.

Troubleshooting

Problem	Possible Cause	Solution
The turntable is not turning on.	Power adaptor is not connected correctly.	Ensure the power adaptor is securely connected to the unit and the power outlet.
	No power at the power outlet.	Check that the electrical outlet is functioning correctly.
	Incorrect power adaptor is being used.	Use only the supplied power adaptor rated at 5V 1A.
Power is on, but the turntable does not spin.	The drive belt has come off the turntable.	Reinstall the belt correctly onto the turn table.
	An AUX input cable is connected.	Disconnect the AUX input cable from the unit.
	Auto stop function is enabled.	Move the tone arm over the vinyl record to start rotation.
Turntable is spinning, but there is no sound or sound is too low.	The stylus protector has not been removed or the stylus is damaged.	Remove the stylus protector or replace the stylus if required.
	The tone arm has not been lowered.	Lower the tone arm onto the record using the tone arm lift lever.
	Internal speaker cable may be loose.	Contact help.Kogan.com support for further assistance.
	External speakers are connected but not powered on.	Ensure external speakers are turned on and volume is set correctly.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.