


70 mm

104 mm

K19


Children's Camera Toys

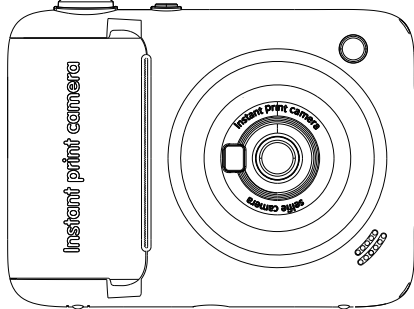

User Manual

V1.0.4

Appearance

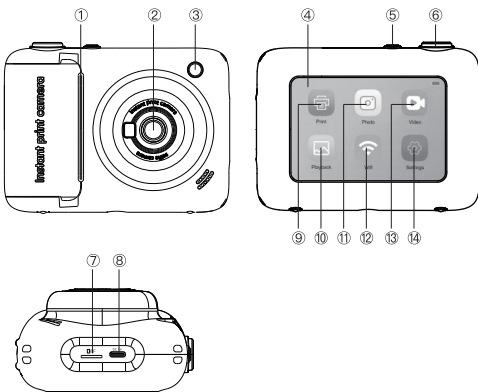

1. Print paper slot
2. Camera lens
3. Flashlight
4. Screen
5. Power / Reset
6. Shutter button
7. TF card slot
8. Type-C charging port
9. Print
10. Album
11. Photo
12. Wi-Fi
13. Video recording
14. Settings

Note: 1. Insert a TF card before use.;
2. This model does not have a separate reset button. If the device freezes (for example, the screen does not respond or operation fails), you can press and hold the power button for 10 seconds to force a reset. The device will restart automatically after resetting.

Power On/Off


- 1. Power On/Off**
- Long press the Power button (5) to turn the camera ON or OFF.

- 2. Auto Screen Off**
- If the camera is idle for 3 minutes, the screen will automatically turn off to save power.
- If the camera is idle for 5 minutes, the camera will automatically power off.

Note:Screen saver and auto power-off times can be adjusted in Settings mode.

Photo Function


- 1. Instant Print**
- Press (9) to enter the print mode.
- Select the printing paper type (Black & White / Color / Sticker).
- Choose the print density (High / Medium / Low).
- Choose print mode (Dot Matrix / Grayscale).
- After setting up, press to enter instant print mode.

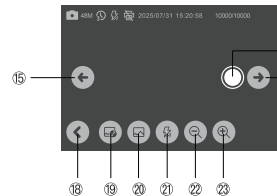

15. Previous Filter (Tap or Swipe Left)
16. Take Photo
17. Next Filter (Tap or Swipe Right)
18. Back
19. Photo Resolution (1M / 14M / 32M / 48M)
20. Shooting Mode (Off / 3 Continuous Shots / 5 Continuous Shots / 3s / 5s / 10s Delay)
21. Flashlight (Off / On / Auto)
22. Zoom In (Tap or Swipe Up)
23. Zoom Out (Tap or Swipe Down)

Video Function


- Press (10) to enter the video recording interface

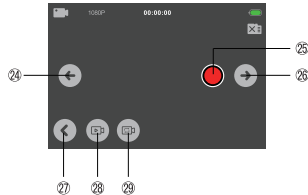

24. Previous Filter
25. Start/Stop Recording
26. Next Filter
27. Go Back
28. Select Resolution (1080P / 720P / VGA)
29. Loop Recording

Album Function

- Press (11) to enter the photo album interface.

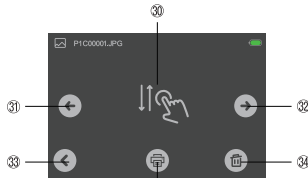

Picture mode




Video mode

30. Enlarge the picture (swipe up) / Reduce the picture (swipe down)
31. Previous
32. Next
33. Back to Previous Level
34. Delete
35. Print
36. Play/Pause

To delete a file, please follow these steps

- Select the file to delete.
- Enter delete mode, then choose "Delete" or "Cancel."

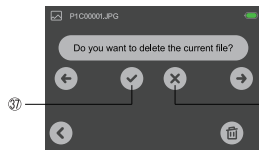


Delete mode

37. Confirm
38. Cancel

***Note:** This action will permanently delete the selected file. Please proceed carefully to avoid data loss.

Music Function


- Press (14) to enter the Settings menu and locate the Music option.

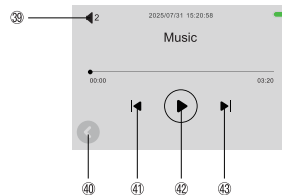

39. Volume Control (Swipe up/down on screen)
40. Go Back
41. Previous Track
42. Play/Pause
43. Next Track

TF Card


1. Make sure the camera is powered off.
2. Insert the TF card in the correct direction.

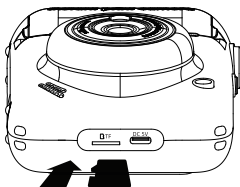


- Notes:**
- TF card must be inserted by an adult.
 - Format the TF card before first use.
 - Supports 8GB / 16GB / 32GB TF cards.
 - Remove the TF card if not used for a long time.

Install Printing Paper


- Step 1:** Open the printer compartment cover.

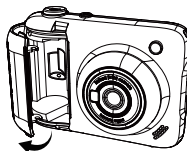

- Step 2:** Place the paper correctly as indicated inside the compartment.

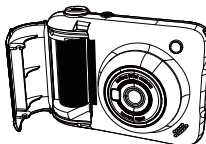

- Step 3:** Close the cover.

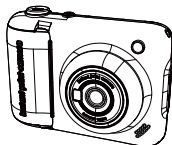

WIFI

- Step 1:** On the camera, enter the WiFi interface.

- Step 2:** Scan the QR code on the right side of the screen, download the corresponding APP-JoyPrt Pro, and open your phone to connect to the camera WiFi (the name and password are displayed on the left side of the interface).



- Step 3:** Open the WalkPrinter app to download or print photos

Connect to computer

- Use a data cable that supports file transfer to connect the camera to your computer.
- The computer will recognize the camera as a removable drive.
- ICONS will also appear on the camera screen

Note:Avoid disconnecting USB or removing the TF card while transferring files to prevent data loss.

SETTINGS

- Press (13) to enter Settings. Swipe up/down to scroll through options.

- 1. Print Photos**
 - Enable/Disable auto print after capture.
- 2. Language**
 - English / Simplified Chinese / Traditional Chinese / Japanese / Spanish / Russian.
- 3. Screen Saver**
 - Off / 1 min / 3 min / 5 min.
- 4. Auto Power Off**
 - Off / 3 min / 5 min / 7 min.
- 5. Loop Recording**
 - Off / 3 min / 5 min / 10 min.
- 6. Volume**
 - Adjust the volume level (0/1/2/3/4/5/6/7/8/9)
- 7. Brightness**
 - Adjust the screen brightness (+2/+1/0/-1/-2)
- 8. Exposure**
 - Adjust the exposure of the picture (+2/+1/0/-1/-2)
- 9. Date/Time**
 - Set date and time.
- 10. Date Watermark**
 - On/Off
- 11. Default Settings**
 - Yes/No
- 12. Music**
 - Select music (must be preloaded on TF card).

- 13. Format**
 - Format memory card.
- 14. Legal & Regulatory Info**
 - Product legal certification information
- 15. Version Info: View firmware version**
 - View firmware version
- 16. Power Off**

Specifications

Model: K19
Display: 3.5-inch HD screen
Viewing Angle: 90° wide-angle
Video Format: AVI
Battery: Built-in 1800mAh lithium battery
Recording Time: Up to 6 hours
Photo Format: JPEG
Storage: Supports TF card 8GB / 16GB / 32GB



WARNING!

This product contains small parts and is not suitable for children under 3 years old (choking hazard). Adult supervision required. Keep packaging materials and instructions for future reference.

Do not use near water or in humid environments. Keep away from open flames.

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.