



HARMONICS Y4

Wireless Stereo Headset


User Manual

Package Contains :

1. Harmonics Y4
2. Charging Cable
3. Earbuds
4. User Manual

Product Discription :

- A. Earbuds
- B. Magnetic Earbud
- C. Volume Up/Next Track
- D. ON/OFF Button
- E. Volume Down/Previous Track
- F.Type-C Charging Port

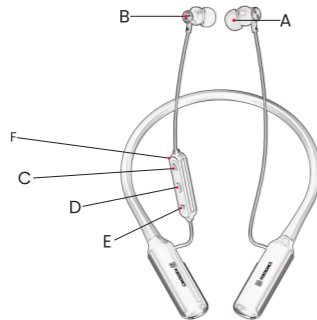

Charging & Battery Info :

Charging: Plug in with Type-C cable – RED LED On

Fully Charged: Takes Upto 3 hours – LED turns off

Low Battery: -- Voice prompt: "Battery low"

Auto Shutdown: If not paired within 5 mins – Device powers off

Charging & Battery Info

Function	How to Do It
Play/Pause Music :	Short press the MFB.
Volume Up :	Short press the volume+ button.
Volume Down :	Short press the volume- button.
Next Track :	Long press the volume+ button.
Previous Track :	Long press the volume- button.
Clear Pairing Record :	Four clicks on MFB while paired.
Power Off	Long press MFB (4s)

Dual Pairing: Connect to Device 1 -> Turn off Bluetooth on Device 1 -> Pair with Device 2 -> Turn Bluetooth back on for Device 1 -> Both devices stay connected.

Additional Points :

- Auto Power Off in Pairing Mode: If not connected within 5 minutes, earbuds will shut down automatically.
- Low Battery Prompt: When power is low, a voice prompt will notify you to charge.
- Charging: Plug into charger; Red LED stays ON (Input: 5V 1A).
- Fully Charged: Upto 4 hours; Blue LED stays ON.
- Power Off: Long press MFB for 4s; Red LED flashes; voice prompt plays
- Answer Call: Short press MFB.
- Redial Last Call: Double-click MFB.
- End Call: Short press MFB.
- Reject Call: Long press MFB for 2s.
- Voice Assistant: Long press MFB for 2s (phone must support it).

Cautions :

1. Avoid extreme heat, cold and humidity.
2. Avoid dropping or crushing the Earphones, stressing the cable by rapid pulling or extreme force or bending the cable at a sharp angle.
3. Wax may build up in the Earphones tips, lowering the sound quality. Carefully remove the wax with a cotton swab or other small tool to improve the sound quality.
4. If you experience discomfort or pain, try lowering the volume or discontinuing use temporarily.



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

(Working Hours : Monday – Saturday, 10:00am – 6:00pm)



E-Waste Management
E: info@3recycler.com

For E-Waste & ROHS compliance refer to www.portronics.com/ewaste

