

Sunbeam

**GOLUNCH
FOOD WARMER**

User Guide

HP3000



Contents

Sunbeam's Safety Precautions	1
Features of your GoLunch Food Warmer	2
Preparing your Food Warmer	3
Using your Food Warmer	3
Care and Cleaning	4
Recipe Suggestions	4

Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώσετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşılığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM FOOD WARMER.

- Do not operate the food warmer on an inclined surface.
- Do not move or cover the food warmer while in operation.
- Do not immerse the base of the food warmer in water or any other liquid.

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Potential injury may occur if this product is misused.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.

- Only use food warmer with the power base provided and ensure switched off before removing from base.
- Use your food warmer well away from walls and curtains.
- Do not use your food warmer in confined spaces.
- Do not touch any metal surface of the food warmer whilst in use as it will be hot.

- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the power base or warming base in water or any other liquid.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- Avoid spillage on the connectors of the warming base and base stand during normal use or cleaning.
- The heating element surface is subject to residual heat after use.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Features of your GoLunch Food Warmer

Carry handle

Warming base

Cool touch body insulates the food keeping it warm.

Removable food container

700ml stainless steel container to be filled with food for warming.

Food container lid

With ring pull handle for easy opening.


ON/OFF switch

Illuminates when ON to indicate food is warming.

Outer lid

Sealed lid so food odours are contained.

Removable power base

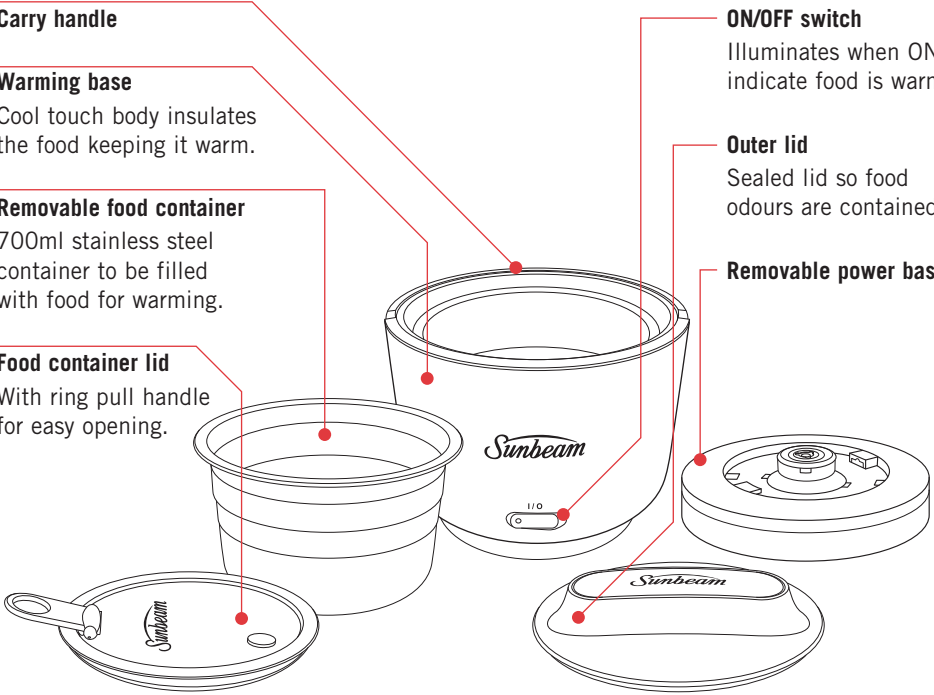

Preparing your Food Warmer

Fill your GoLunch food warmer before you leave the house with pre-prepared foods, soups or last night's leftovers.

1. Fill the removable food container with food and place container lid on tightly.
2. Place the removable food container inside the warming base and twist the outer lid on until secure.
3. Carry by the handle when transporting.

Using your Food Warmer

Note: Do not use with uncooked food. Ensure all food is fully cooked before heating in the Food Warmer.

1. Before using for the first time, wash the removable food container and lid in warm soapy water. Rinse and dry thoroughly then replace.
2. Place food inside the removable food container, replace lid and place inside the warming base. Twist on the outer lid to secure.
3. Plug in the food warmer and turn the power switch to ON. A power light will illuminate to indicate that the appliance is switched on.

Note: Turn on your food warmer well in advance of your meal time as food will take approximately 2 hours (3.5 hours from frozen) to reach optimum eating temperature of 75°C.

CAUTION: Do not use if the removable food container or food warmer is wet, dry before use.

CAUTION: Ensure food is fully and evenly heated before consuming.

NOTE: Do not microwave the removable food container.

Care and Cleaning

Switch off the food warmer and allow to cool before cleaning.

Remove food container and fill with warm soapy water.

Use a non-abrasive cloth or sponge to clean and dry thoroughly before use.

The removable food container and lid are dishwasher safe.

Before cleaning the warming base remove the plug from the power point.

Wipe the exterior of the food warmer with a damp cloth and polish dry. **DO NOT** use harsh abrasives, scourers or chemicals to clean any part of your slow cooker as these will damage the surfaces.

CAUTION: Do not immerse the base of the food warmer in water or any other liquid.

Recipe Suggestions

Your GoLunch food warmer can be used to heat a wide range of foods.

- Frozen soups
- Frozen 'wet' dishes
- Pasta sauce dishes
- Casseroles
- Stews
- Curries
- Noodles
- Stir Fries
- Slow cooked meals
- Canned meals
- Pre-packaged meals

12 Month Replacement Guarantee

This Sunbeam product is covered by a 12 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase by creating a MySunbeam account on our website and uploading a copy of your original receipt.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- cover damage caused by:
 - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;

- servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
- use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
- exposure of the product to abnormally corrosive conditions; or

- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Australia

www.sunbeam.com.au
1300 881 861
Units 5 & 6,
13 Lord Street,
Botany NSW 2019
Australia

New Zealand

www.sunbeam.co.nz
0800 786 232
Level 6, Building 5,
Central Park,
660-670 Great South Road,
Greenlane, Auckland
New Zealand

Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

Australia | **visit** www.sunbeam.com.au
phone 1300 881 861
mail Units 5 & 6, 13 Lord Street,
Botany NSW 2019 Australia.

New Zealand | **visit** www.sunbeam.co.nz
phone 0800 786 232
mail Level 6, Building 5,
Central Park,
660-670 Great South Road,
Greenlane, Auckland.

Sunbeam Corporation Limited | ABN 45 000 006 771
Sunbeam Corporation is a division of GUD Holdings Limited.
Sunbeam is a registered trademark.

Made in China to Sunbeam's specification.
Due to minor changes in design or otherwise,
the product you buy may differ slightly from the one shown here.
Approved by the appropriate electrical regulatory authorities.

©Copyright Sunbeam 2015.

01/15