

**SENCOR®**

**Let's live!**



**SET TOP BOX  
SDB 5002T**

**USER'S MANUAL  
EN**





# Contents

SAFETY INFORMATION .....	3
INTRODUCTION	
Front panel.....	7
Rear panel.....	7
Remote control .....	8
SYSTEM CONNECTION	
General.....	9
Connecting the TV.....	9
Connecting a HiFi System .....	9
GETTING STARTED	
Welcome.....	10
Installation.....	10
OPERATION	
Changing channels.....	12
Access the Electronic Programme Guide (EPG).....	12
EDIT CHANNEL	
Edit Channel menu.....	13
TV Channel list .....	13
Radio Channel list.....	14
Delete All.....	14
SYSTEM SETUP	
System setup menu.....	15
Language.....	15
TV System .....	16
Local Time Setting.....	16
Timer Setting.....	17
Parental Lock .....	17
OSD Setting.....	18
Favorite .....	18
Audio Description Setting.....	19
Multiview Setting .....	19
Other .....	20

TOOLS	
Tools main menu.....	21
Information.....	21
Factory Setting .....	21
Software Upgrade.....	22
Remove USB device safely.....	22
NETWORK	
Network.....	23
GAME	
Game .....	23
MEDIA PLAYER	
Media Player main menu.....	24
Media Playback.....	24
HDD Information.....	26
DVR Setting .....	27
TIMESHIFT/RECORD	
Timeshift.....	28
Record .....	29
TROUBLESHOOTING .....	30
SPECIFICATIONS .....	31

## Safety information

TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



**CAUTION**

To reduce the risk of fire and electric shock, do not remove the cover (or back panel) of the unit. Refer servicing to qualified service personnel.



The lightning flash with arrow head symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.



**WARNING**

**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**



**CAUTION**

**TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.**



This symbol indicates that the device has double insulation between the dangerous mains voltage and the parts accessible to the user. In the case of servicing use only identical spare parts.

The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.

## IMPORTANT SAFEGUARDS

In addition to the careful attention devoted to quality standards in the manufacturing of your set-top box, safety is a major factor in the design of every instrument. However, safety is your responsibility, too. This sheet lists important information that will help assure your enjoyment and proper use of the set-top box and its accessories. Please read them carefully before installing and operating your set-top box.

### Installation

1. Read and Follow Instructions- All the safety and operation instructions should be read before the set-top box is operated. Follow all operating instructions.
2. Retain Instructions- The safety and operating instructions should be retained for future reference.
3. Heed all Warnings-Comply with all warnings on the set-top box and operating instructions.
4. Power - This set-top box is supplied with a DC adaptor power plug. To prevent electric shock, ensure the adaptor is inserted correctly into the power outlet.
5. Power Sources- This set-top box should only be operated with the rating specified on the label on the back panel of the set-top box. If you are not sure of the type of power supply to your home or office, please consult your set-top box dealer or electrician. For set-top boxes intended to operate from battery power, or other sources, refer to the operating instructions.
6. Overloading- Do not overload wall outlets or extension cords as this can result in a risk of fire or electric shock. Overloaded AC outlets, extension cords, frayed power cords, damaged or cracked wire insulation, and broken plugs are dangerous. They may result in a shock or fire hazard. Periodically examine the cord, and if its appearance indicate damage or deteriorated insulation, have it replaced by your service technician.
7. Power-Cord Protection- Power-supply cords should be routed so that they are not likely to be walked on or damaged by items placed upon or against them, paying particular attention to the point where they exit from the set-top box.
8. Ventilation- Slots and openings in the case are provided for ventilation to ensure reliable operation of the set-top box and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the set-top box on a bed, sofa, rug, or heat register. This set-top box should not be placed in a built-in installation such as a book case or rack, unless proper ventilation is provided or the set-top box manufacturer's instructions have been followed.
9. Attachments- Do not use attachments unless recommended by the set-top box manufacturer as they may cause hazards.

10. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus.  
Caution: Maintain electrical safety. Powerline operated equipment or accessories connected to this unit should bear safety certification mark on the accessory itself and should not be modified so as to compromise the safety features. This will help avoid any potential hazard from electrical shock or fire. If in doubt, contact a qualified service personnel.
11. Accessories- Do not place this set-top box on an unstable cart, stand, tripod, bracket, or table. The set-top box may fall, causing serious injury to a child or adult as well as serious damage to the set-top box. Use this set-top box only with a cart, stand, tripod, bracket, or table recommended by the manufacturer's or sold with the set-top box. Any mounting of the product should follow the manufacturer's instructions and use of a mounting accessory recommended by the manufacturer.
- 11a. A set-top box and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause damage to the set-top box.
12. Outdoor Antenna Grounding- If an outside antenna or cable system is connected to the set-top box, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984 (Section 54 of Canadian Electrical Code, Part 1) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
13. Power Lines-An outside antenna system should not be located in the vicinity of overhead power lines, other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching or approaching such power lines or circuits, as contact with them might be fatal. Installing an outdoor antenna can be hazardous and should be left to a professional antenna installer.

## Use

14. Cleaning- Unplug the set-top box from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
15. Objects that may touch dangerous voltage points or „short-out“ parts could result in a fire or electric shock. Never spill liquid of any kind on the set-top box.
16. Lightning-For added protection for this set-top box during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set-top box due to lightning and power line surges.

 
## Service

17. Servicing-Do not attempt to service this set-top box yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. Conditions Requiring Service-Unplug the set-top box from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - A. When the power adaptor or connecting power cord is damaged.
  - B. If liquid has been spilled, or objects have fallen into the set-top box.
  - C. If the set-top box has been exposed to rain or water.
  - D. If the video does not operate normally by following the operating instructions. Adjust only those controls that are covered by operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set-top box to its normal operation.
  - E. If the set-top box has been dropped or cabinet has been damaged.
  - F. When the set-top box exhibits a distinct change in performance-this indicates a need for service.
19. Replacement Parts-When replacement parts are required, have the service technician verify that the replacements he uses have the same safety characteristics as the original parts. Use of replacements specified by the set-top box manufacturer can prevent fire, electric shock, or other hazards.
20. Safety Check-Upon completion of any service or repairs to this set-top box, ask the service technician to perform safety checks recommended by the manufacturer to determine that the set-top box is in safe operating condition.
21. Wall or Ceiling Mounting- The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
22. Heat-The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.


# Introduction

## About STB


### Front panel

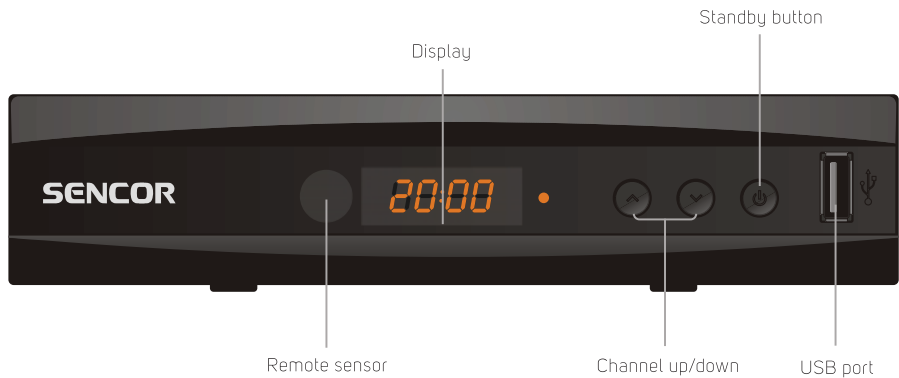

### Rear panel

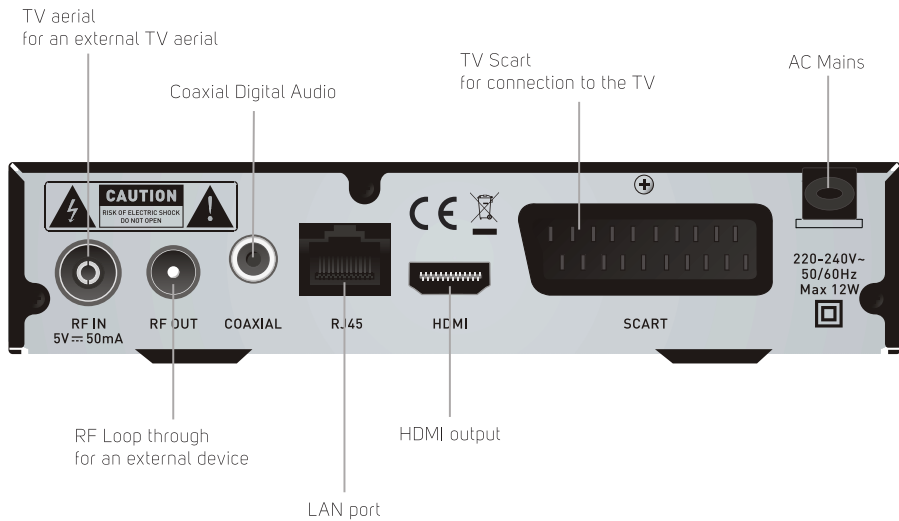 

## Remote control

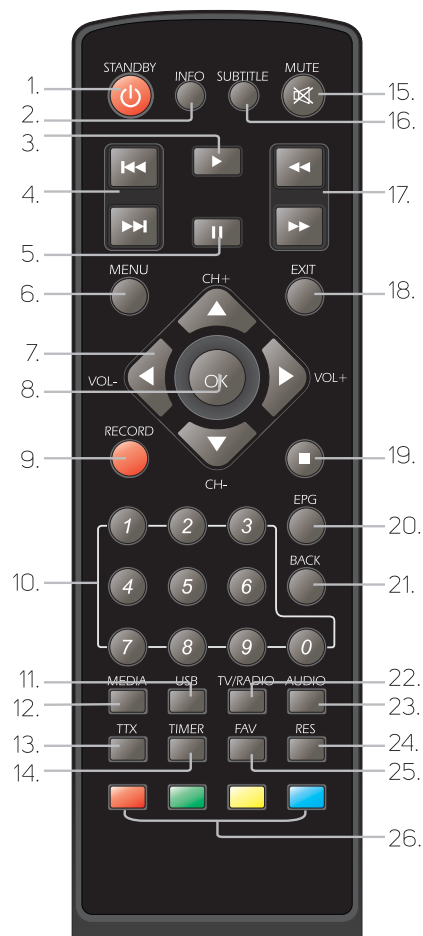 

1. **STANDBY**  
(switch the STB on and standby)
2. **INFO**  
(Press for current channel information)
3. **PLAY**
4. **Previous/Next**
5. **PAUSE** (Pause/Active timeshift function)


6. **Menu**  
(Open and close the menu screen)
7. **Cursor/CH+, -/VOL+,-**  
(Cursor/CH+/-: Channel Up and Down)  
(VOL+/-: Volume Up and Down)
8. **OK button**  
(Confirm a selection within a menu)
9. **RECORD**  
(Record the TV program)
10. **Numeric entry**  
(Enter numeric values and select the channel directly by entering it's number)
11. **USB**  
(Enter Video menu)
12. **MEDIA**  
(Enter Record menu)
13. **TTX** (Open interactive service)
14. **TIMER**  
(Timer setup)
15. **MUTE** (Turn off/on the volume)
16. **SUBTITLE** (On/Off Subtitle)
17. **Search backward / forward**
18. **EXIT** (Exit from menu)
19. **STOP**  
(Stop program playback or recording)
20. **EPG**  
(Open up Electronic Program Guide Menu)
21. **BACK**  
(Switch to previous channel)
22. **TV/RADIO**  
(Switch between TV and Radio)
23. **AUDIO**  
(Select audio mode and audio track)
24. **RES** (Switch HDMI resolution)
25. **FAV**  
(Open the Favorite list)
26. **RED/GREEN/YELLOW/BLUE Buttons**  
(For interactive function/Submenu function buttons)

# System connection

 
## General

There are many different types of TV and other equipment that you can connect to the STB. In this manual you will see some of the most common ways to connect your equipment.

## Connecting the TV

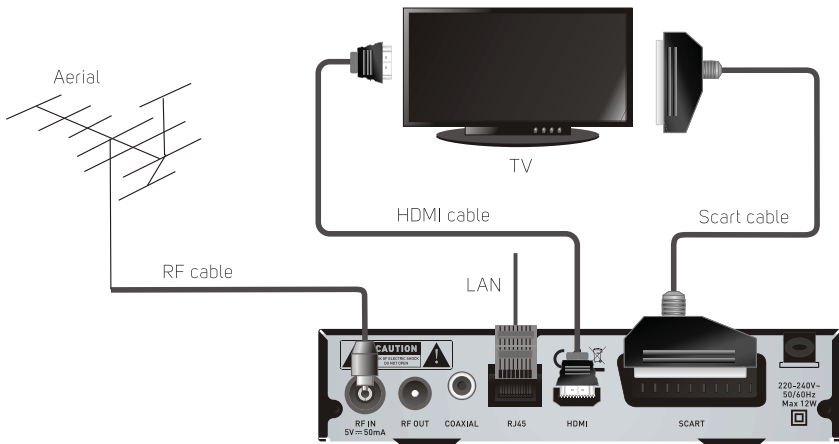


## Connecting a HiFi system

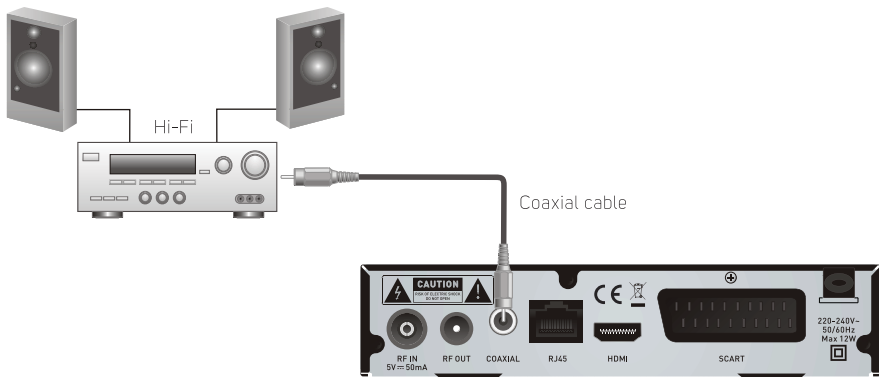 

# Getting started

## Welcome

 
If you use the STB for the first time, the „Welcome“ menu appears. Press cursor button to setup the Region, Language, Display Mode and Aspect Mode. Highlight „OK“ and press the „OK“ button to start channel search.

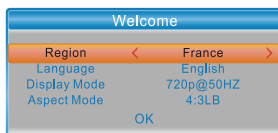

## Installation

„Installation“ menu allows you to set up channel search and LCN Installation option.

 
1. Press the „MENU“ button to enter main menu.
2. Press „UP“ or „DOWN“ button to highlight „Installation“, press „RIGHT“ button to enter the Installation menu.
3. Press „UP“ or „DOWN“ cursor button to highlight the desired item and press „OK“ button to enter the sub-menu.
4. Press „EXIT“ button to exit.

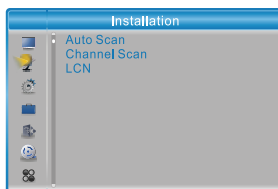

## Auto Scan

„Auto Scan“ menu allows you to set up automatically channel search.

 
1. Select the „Auto Scan“, press „OK“ button to enter the Auto Scan menu.
2. Press the cursor button to set „FTA Only“, „T2 Signal Only“, „T2 Lite Support“.
3. Highlight „Search“, press the „OK“ button to start auto scan.

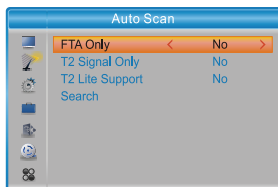

## Channel Scan

„Channel Scan“ menu allows you to set up manually channel search.

 1. Select „DVBT Channel Scan“, press the „OK“ button to enter the Channel Scan menu.
2. Press cursor button to set Scan mode, Scan Band, Channel No., Frequency and Bandwidth, then highlight „Search“, press „OK“ button to start channel scan.

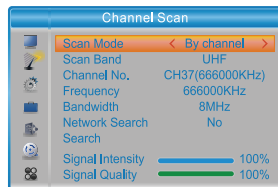

## LCN

If LCN( Logical Channel Number) Select function is activated, you can't change the original number of TV channels by scanning.

You can activate/disactivate the LCN function by setting the „LCN“ to on/off.

# Operation

## Changing Channels

There are three ways of channel selection - stepping through the channel list, selection by number and from the on-screen channel list.

1. Stepping through the channel list:  
To move through the channel list, press the upward arrow or downward arrow key on the remote control.
2. Selected by number:  
Enter the channel number directly by pressing numeric buttons, and press the „OK“ button to select desired channel.
3. Selected by on-screen channels list:  
You can also select the required channel directly from on-screen channel list. This is displayed using the STB's main menu. See „Edit Channel“ in this manual for operation detail.

 
 
## Accessing the Electronic Program Guide (EPG)

### Accessing the EPG of all channels:

1. Press „EPG“ button to enter EPG menu.
2. Press cursor button to switch between channel list, events schedule of the selected channel and now/next events.
3. Press „Green“ button to Timer the event.
4. Press „Red“ button to display „Time Bar“ menu.
5. Press „OK“ button to display the information about selected event.
6. Press „EXIT“ button to go back to the previous menu.

### In „Time bar“ menu:


- ← Exit time bar.
- ↶ Back to the current time.
- ⏭ Jumps time forward or backward every half an hour.
- ⏮ Jumps time forward or backward every 2 hours.
- ⏪ Jumps time forward or backward every 24 hours.

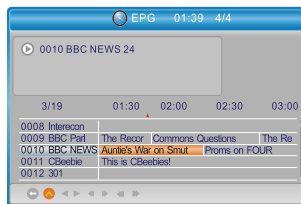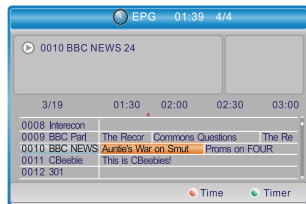

# Edit channel

## Edit Channel menu

 1. Press the „MENU“ button to enter main menu.
2. Press „UP“ or „DOWN“ button to highlight „Edit Channel“, press „RIGHT“ button to enter the Edit Channel menu.
3. Press „UP“ or „DOWN“ cursor button to highlight the desired item and press „OK“ button to enter the sub-menu.
4. Press „EXIT“ button to exit.

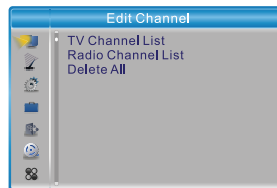

## TV Channel list

1. In the Edit Channel menu, select „TV Channel List“, press „OK“ button to enter TV channel list menu.
2. Press „UP“ or „DOWN“ button to highlight channel, press the „OK“ button to preview the desired TV channel.



Use this menu to favor, lock, skip, move, sort, delete and rename channel.

- Press „FAV“ button, then press „OK“ button to edit the FAV function.
- Press „Red“ button to activate „Lock“ function. You will be asked to input the password (The default password is „0000“), then press „OK“ button to lock the selected channels.
- Press „Green“ button to activate „Skip“ function, then press „OK“ button to skip the desired channel.
- Press „Yellow“ button to activate „Move“ function, highlight the desired channel and press „OK“ button to confirm. Press „UP“ or „DOWN“ button to select the new position and press „OK“ button. The channel will be moved to the new position.

- Press „Blue“ button to enter Edit channel sub menu.
  - Press „OK“ button again to cancel the corresponding function.
  - Press „color“ buttons again to exit the corresponding function.
3. Press „Exit“ button to save and go back to „Edit Channel“ menu

## Radio Channel list

 
1. In the Edit Channel menu, select „Radio Channel List“, press „OK“ button to enter the Radio Channel list menu.
2. Press „UP“ or „DOWN“ button to highlight channel press the „OK“ button to listen the desired Radio channel.

### Note:

Basically, the operation of „Radio Channel List“ is the same as „TV Channel List“, but there is one point different: In „Radio Channel List“ mode, there is no video information, so it will always display Radio's logo in the right side preview window.

## Delete All

1. In the Edit Channel menu, select „Delete All“, press „OK“ button.  
You are asked to input a password(the default password is „0000“).
2. A warning window appears.  
Select „Yes“, press „OK“ button to delete all channels.  
Select „No“, Press „OK“ button to cancel deleting.

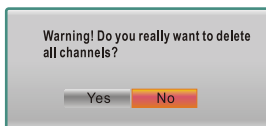


# System setup

## System setup menu

System setup menu allows us to set Language, TV System, Local Time Setting, Timer Setting, Parental Lock, OSD Setting, Favorite, Auto Description Setting, Multiview Setting and Other.

 1. Press the „MENU“ button to enter main menu.
2. Press „UP“ or „DOWN“ button to highlight „System Setup“, press „RIGHT“ button to enter the System Setup menu.
3. Press „UP“ or „DOWN“ cursor button to highlight the desired item and press „OK“ button to enter the sub-menu.
4. Press „EXIT“ button to exit.

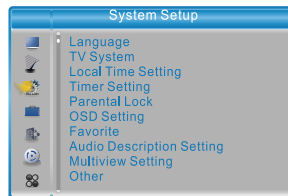

## Language

This menu allows you to set Language of system, Audio, Subtitle and Teletext and to set subtitle function.



Subtitle: Off/Normal/Hard of Hearing

## TV System

This menu allows us to set Video Resolution, Aspect Mode and Digital Audio Out.

Video Resolution: Set up various video resolutions (recommended resolution 1080p/50Hz)

Aspect Mode: Auto/4:3PS/4:3LB/16:9

Digital Audio Out: LPCM Out/ BS Out



## Local Time Setting

This menu allows you to set the region and time.

Region: This menu is used for changing the region setting.

GMT Usage: This menu is used for open the usage of GMT.

The options are: By Region/User Define

 
GMT Offset: This menu is valid only when selected „User Define“ in GMT Usage menu.

The GMT offset range is „-11:30 ~ +12:00“, increasing half hour progressively.

Daylight Saving: The options are: On

Date: „Date“ and „Time“ menus are valid only when selected „Off“ in GMT Usage menu.

Time: Press numeric button to input the time.

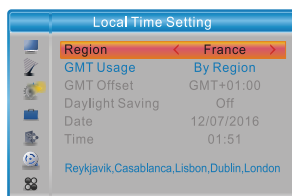

## Timer Setting

This menu allows us to set the program timer. You can set 8 timers.

**Timer Mode:** Off/Once/Daily/Weekly/Monthly

 
**Timer Service:** Channel/Record

**Wakeup Channel:** You can select a desired channel as the wakeup channel.

**Wakeup Date:** Press numeric button to input wakeup date.

**Wakeup Time:** Press numeric button to input the wakeup time.

**Duration:** Press numeric button to input the duration time.

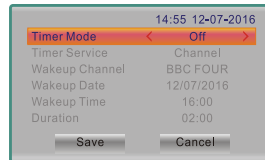

## Parental Lock

This menu allows you to protect menu and channel, and change the Password.

1. In „System Setup“ menu, select „Parental Lock“ and press „OK“ button, you are asked to input a password (the default password is „0000“).
2. After inputting the correct password by pressing numeric buttons, the parental lock menu appears.

 
**Menu Lock:** To lock the Edit channel/ Installation menu. When you want to enter these menus, you must input the password.

You can set menu lock to on/off.

**Rating Lock:** Off/ AGE 4/AGE5/AGE6/AGE7/AGE8/AGE9/AGE10/AGE11/AGE12/ AGE13/AGE14/AGE15/AGE16/AGE17/AGE18

**New Password:** To change the password.

**Confirm Password:** To confirm the new password.

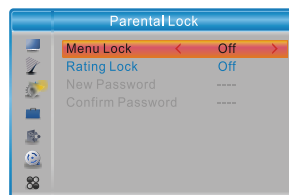


## OSD Setting

This menu allows you to set OSD Timeout and OSD Transparency.

OSD Timeout: 1-10 seconds.

 OSD Transparency: To set the OSD transparency to Off/10%/20%/30%/40%.

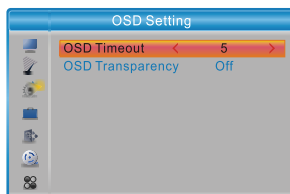

## Favorite

This menu allows you to rename the favorite group.

1. In System setup menu, select „Favorite”, press „OK” button to enter Favorite menu.
2. Select desired group, press „OK” button to open the mock keypad. Input letter and numeric one by one by pressing the cursor button and press „OK” button to confirm. After finishing input, press Blue button to confirm. You changed Favorite group name successfully.
3. Press „EXIT” button to quit the group rename menu.



 
## Audio Description Setting

This menu allows us to set AD Service, Use AD as default and AD Volume Offset:

AD Service: On/Off

Use AD as default: On/Off


AD Volume Offset: -3~3

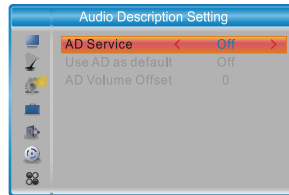

## Multiview Setting


This menu allows us to set Multiview

 1. In „System Setup” menu, select „Multiview Setting” and press „OK” button, you can select your desired item 4+1 Pictures or 3x3 Pictures.
2. After you select your desired item, press „EXIT” button to exit the main menu.  
In full screen mode press „BLUE” button to enter/escape multiview mode.

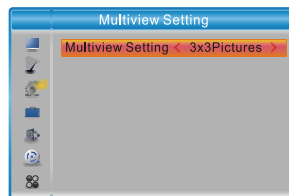

Multiview Setting: 4+1 Pictures/3x3 Pictures

 4+1 Pictures

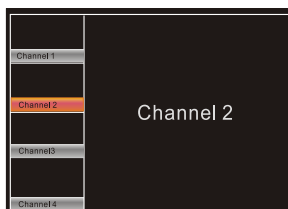

3x3 Pictures



## Other

This menu allows us to set Antenna Power, Channel Play Type, Beeper and Auto Standby.

Antenna Power: On/Off

When „Antenna Power“ is selected „On“, the STB will provide 5V power to antenna. It will not provide when selected „Off“.

 
Channel Play Type: All/Free/Scrambled

Beeper: On/Off

Auto Standby: 30Min/1 Hour/2 Hour/3 Hour/Off

No command to STB on front panel or Remoter in 30 Min- 3 hours and no timer event, the STB will enter standby mode automatically.

If Off is selected, the STB can't enter standby mode automatically.

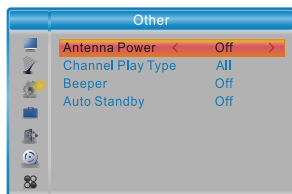

# Tools

## Tools main menu

1. Press the „MENU“ button to enter main menu.
2. Press „UP“ or „DOWN“ button to highlight „Tools“, press „RIGHT“ button to enter the Tools menu.
3. Press „UP“ or „DOWN“ cursor button to highlight the desired item and press „OK“ button to enter the sub-menu.
4. Press „EXIT“ button to exit.



## Information

This menu can display some parameters information in this STB.

1. In „Tools“ menu, select „Information“, press „OK“ button to open information window.
2. Press „EXIT“ button to exit.



## Factory Setting

This menu allows you to re-set the STB back to factory settings, clear all existed channels.

1. In the „Tools“ menu, select „Factory Default“, press „OK“ button.  
You are asked to input a password (the default password is „0000“).

 
2. A confirmation window is displayed.  
Select „Yes“ to return back to factory settings and clear all channels.  
Select „No“ to cancel back to factory settings.
3. Press „EXIT“ button to exit.



## Software Upgrade


We offer the functions for user to upgrade software version by OTA or by USB.

1. Enter „Tools“ menu, select „S/W Upgrade by OTA“ or „Upgrade by USB“, press „OK“ button, Software Upgrade menu is shown.
2. Press cursor button to select the desired item, then highlight „Start“ and press „OK“ button to start upgrade.
3. Press „EXIT“ button to exit.

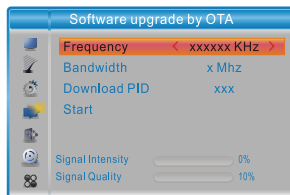

## Remove USB device safely

 In „Tools“ menu, select „Remove USB device safely“, Press „OK“ button to confirm. Then a window is displayed. Press „OK“ button again.

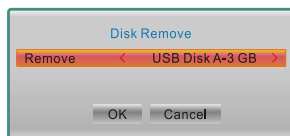


# Network

## Network

This menu allows you to set the network options, watch the weather forecast and listen to the Net Radio.

 - Network Setting: Net choose (Select the way of network connection)  
Settings (Set up network parameters)
- Network Application: Radio Channel (Listen to internet radios)  
Weather Channel (See the weather forecast)

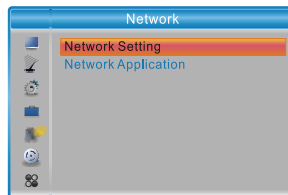

# Game

## Game

This menu allows you to play games.

1. Press the „MENU“ button to enter main menu.
2. Press „UP“ or „DOWN“ button to highlight „Game“, press „RIGHT“ button to enter the Game menu.
3. Press „UP“ or „DOWN“ cursor button to highlight the desired item and press „OK“ button to enter the game.
4. Press „EXIT“ button to exit.



# Media Player

## Media Player main menu

Ensure to insert an external Mass Storage Device on the USB port.

 
1. Press the „MENU“ button to enter main menu.
2. Press „UP“ or „DOWN“ button to highlight „Media Player“, press „RIGHT“ button to enter the Media Player menu.
3. Press „UP“ or „DOWN“ cursor button to highlight the desired item and press „OK“ button to enter the sub-menu.
4. Press „EXIT“ button to exit.



## Media Playback

This function allows you to play files from USB port.

1. In „Media player“ menu, select „Record“, „Video“, „Music“ or „Image“ by pressing button „1“
2. Press „OK“ button to enter Media Playback menu.
3. Press „UP“ or „DOWN“ cursor buttons to select a desired media file and press „OK“ button to play the files.
4. Press „EXIT“ button to exit.

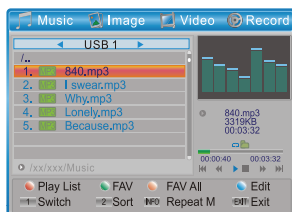

**Record:**

„RED“ button: Press „Red“ button to open rename window.

„GREEN“ button: Move the highlight to the program which you want to lock. Pressing „Green“ button, it will ask you to input password. Default password is „0000“. After input correct password, the program is locked. If you want to unlock the program, press the „Green“ button again.

„YELLOW“ button: Press „Yellow“ button to delete recorded file.

„1“ button: Press to switch TAB between Music/Image/Video/Record.

„EXIT“ button: Return to parent directory.

**Video:**

„BLUE“ button: Press „Blue“ button to enter to edit sub-menu.

„1“ button: Press to switch TAB between Music/Image/Video/Record.

„2“ button: Press „2“ button to open the sort. You can sort by Name/Time/Size.

„EXIT“ button: Return to parent directory.

**Music:**

„RED“ button: Press „RED“ button to show and edit Play List.

„GREEN“ button: Move the highlight to the file which you want to add to play list, then press „Green“ button to add. It will mark a favorite icon on the file. Press again to cancel favorite and delete the file from play list.

„YELLOW“ button: Press „Yellow“ button to add all file of current directory to play list. Press again to delete all file of current directory from the play list.

„BLUE“ button: Press „Blue“ button to enter to edit sub-menu.

„1“ button: Press to switch TAB between Music/Image/Video/Record.

„2“ button: Press „2“ button to open the sort window.

You can sort by Name/Time/Size/Favorite.

„INFO“ button: Press „INFO“ button to set repeat mode. The option is Repeat Folder/Random Folder/Repeat One.

„EXIT“ button: Return to upper directory.

**Image:**

„RED“ button: Press „Red“ button to show and edit play list.

„GREEN“ button: Move the highlight to the file which you want to add to play list, then press „Green“ button to add. It will mark a favorite icon on the file.

„YELLOW“ button: Press „Yellow“ button to add all file of current directory to play list. Press again to delete all file of current directory from the play list.

„BLUE“ button: Press „Blue“ button to enter to edit sub-menu.

„1“ button: Press to switch TAB between Music/Image/Video/Record.

„2“ button: Press „2“ button to open the sort window.

You can sort by Name/Time/Size/Favorite.

„INFO“ button: Press „INFO“ button to open image setup

„3“ button: Press „3“ button to view image in multi view mode

„EXIT“ button: Return to parent directory.

## HDD Information

 
 
This menu can display some parameters of Removable Disk.

1. In „REC“ menu, select „HDD Information“, press „OK“ button to open HDD information window.
2. Press „EXIT“ button to exit.



Press YELLOW button to open Format menu.

- Format FAT/NTFS  
Press „LEFT“ or „RIGHT“ cursor button to change Disk Mode.  
Select „OK“ to format. Select „Cancel“ to cancel.
- DVR Set REC&TMS/Record/Timeshift  
Press BLUE button to open DVR Set menu.  
Press „LEFT“ or „RIGHT“ cursor button to change DVR Type.  
Select „OK“ to confirm. Select „Cancel“ to cancel.

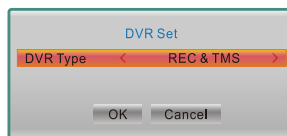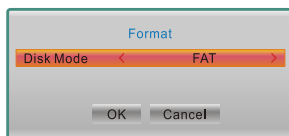

## DVR Setting

This menu allows us to set the DVR Setting.

In „Media Player“ menu, select „DVR Setting“, press „OK“ button to enter „DVR Setting“ menu. Press „UP“ or „DOWN“ cursor button to select desired item, press „LEFT“ or „RIGHT“ cursor button to change the setting, press „OK“ button to enter the sub-menu. Press „EXIT“ button to exit.

Timeshift:	Pause/Off/Auto
Step to:	30sec/1min/5min/10min/15min/20min/30min
Timeshift to Record:	On/Off
PS Record:	On/Off
After Recording:	Watch TV/Go to Standby-mode



## Timeshift/Record

Plugging an external Mass Storage Device on the USB port gives you access to Time Shift/Record a broadcast programme.

- Pause a broadcast programme and continue watching it later (Time Shift)
- Record a broadcast programme.
- When the space available on the Mass Storage Device runs out, recording operation of broadcast will stop.

 
### Note:

Please use USB 2.0 disk when recording or timeshift.  
For timeshift and recording feature, you need take bigger size USB pen driver or HDD (>2GB) for recording.

## Timeshift

### Initiate

- Time Shift can be done in viewing mode by pressing the „PAUSE“ button.
- Press „RIGHT“ or „LEFT“ button to move the cursor to the time you desired to view. Press „OK“ button to confirm.



### Playback

During the playback, it is possible to perform the following actions:

- Press „PAUSE“ button to pause the playback
- Press „FORWARD“ button to fast forward the playback
- Press „BACKWARD“ button to rewind the playback

### Stop the Time Shift

Press „STOP“ button to stop TimeShift.

## Record

### Instant record

- In viewing mode, press „RECORD“ button to instantaneously start a record on the current channel.
- Press „RECORD“ button again can input duration.  
Press „STOP“ button to stop recording, then a confirmation window appears.
- Select „Yes“ to stop recording. Select „No“ to continue recording.

### Timer Record

- You can enter timer setting menu to set a timer record by EPG or System set up option.

**Note:**

It's possible to watch another program from the same multiplex during recording function is active.

**Note:**

Please select famous brand USB 2.0 USB HDD or USB stick for Recording and Timeshift, such as SAMSUNG, HITACHI and SONY. Some USB devices maybe can't be supported due to its quality.

## Troubleshooting

In some region, the digital terrestrial signal may be weak. So you'd better use the antenna in which the booster was built, for watching the weak signal channels.

Problem	Possible cause	What to do
Standby light not lit	Mains lead unplugged Mains fuse blown	Check mains lead Check fuse
No signal found	Aerial is disconnected Aerial is damaged/misaligned Out of digital signal area	Check aerial lead Check aerial Check with dealer
No picture or sound	Scart/AV is not selected on your TV	Reduce to another channel
Scrambled channel message	Channel is scrambled	Select alternative channel
No response to remote control	Receiver off Handset not aimed correctly Front panel obstructed Hand set batteries exhausted	Plug in and turn on plug Aim handset at front panel Check for obstructions Replace handset batteries
Forgotten channel lock code		Re-install channels to cancel channel lock
Forgotten menu lock code		Contact help line
The remote control will not operate your STB	(1) The batteries in your remote control need replacing (2) There is an obstruction blocking the signal path between the remote control and the box.	(1) Replace the batteries (2) Check that there is nothing in the way of the path between the remote control and the receiver
After moving the STB to another room you find you are no longer able to receive digital reception	The aerial feed former new point may come through a distribution system which may reduce the digital signal now received by the box.	Try a direct feed from the antenna

## Specifications

<b>TUNER &amp; CHANNEL</b>	<ul style="list-style-type: none"> <li>• RF INPUT CONNECTOR ×1 (IEC-TYPE, IEC169-2, FEMALE)</li> <li>• RF OUTPUT CONNECTOR ×1 (IEC-TYPE, IEC169-2, MALE (LOOPTHROUGH))</li> <li>• FREQUENCY RANGE: 174MHz~230MHz(VHF) 470MHz ~862MHz (UHF)</li> <li>• SIGNAL LEVEL: -15 ~ -70 dbm</li> </ul>
<b>DECODER</b> <ul style="list-style-type: none"> <li>• Video decoder</li> <li>• Audio decoder</li> <li>• INPUT RATE</li> <li>• VIDEO FORMATS</li> <li>• VIDEO OUTPUT</li> <li>• MODULATION</li> </ul>	<ul style="list-style-type: none"> <li>• MPEG-2 MP@HL, AVC/H.264 HP @L4.1 MPEG-4 ASP, HEVC/H.265 SUPPORTED</li> <li>• MPEG-1 Layer 1,2/PCM/HE-AAC V1.0 ICE958 SPDIF/Dolby D+ and Dolby D</li> <li>• MAX. 48Mbit/s</li> <li>• 4:3/16:9 SWITCHABLE</li> <li>• HDMI, CVBS</li> <li>• QPSK,16QAM,64QAM, 256QAM</li> </ul>
<b>CONNECTION</b> <ul style="list-style-type: none"> <li>• MAIN POWER CABLE</li> <li>• TUNER</li> <li>• HDMI</li> <li>• DATA PORT</li> <li>• SCART</li> <li>• SPDIF</li> </ul>	<ul style="list-style-type: none"> <li>• FIXED TYPE</li> <li>• ANTENNA INPUT×1, RF OUTPUT ×1</li> <li>• HDMI OUTPUT ×1</li> <li>• USB x 1</li> <li>• TO TV x 1</li> <li>• COAXIAL ×1</li> </ul>
<b>POWER SUPPLY</b> <ul style="list-style-type: none"> <li>• INPUT VOLTAGE</li> <li>• POWER CONSUMPTION</li> </ul>	<ul style="list-style-type: none"> <li>• 220-240V~, 50/60Hz</li> <li>• MAX. 7W</li> </ul>

### Note:

Design and Specifications are subject to change without notice.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.



### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

# SENCOR®

## EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Authorized service centers**

Visit [www.sencor.eu](http://www.sencor.eu) for detailed information about authorized service centers.

# SENCOR®

Let's live!

[www.sencor.cz](http://www.sencor.cz)

Designed in Europe by Sencor®, Made in China

