 


BOLOXA

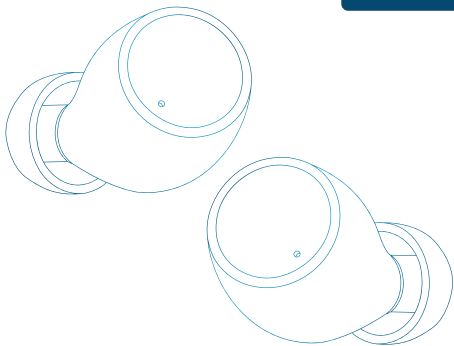

USER MANUAL

B16 WIRELESS EARBUDS

Customer Service

 
BOLOXA BOLOXA

✉ Email: support@boloxa.ltd

🌐 Web: www.boloxa.ltd

Packing List

BOLOXA BOLOXA BOL



Charging Case *1



Wireless Earbud *2



Spare Ear tips *3



USB-C

 
Charging Cable *1



User Manual *1


Product Overview

BOLOXA BOLOXA




Earbud LED Light/
Built-in Mic

 Touch Sensor
Area




Outer Light of
Charging Box

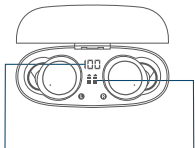 

Charging Case LED
Power Indicator

 The Battery Icons
about the Earbuds



USB-C
Charging Port

First-time use

BOLOXA BOLOXA BOLO

- Prior to first use, please remove the blue insulation sticker of the earbuds.
- Fully charge both earbuds and charging case when first-time use.
- Keep the charging port dry before charging.
- Use the provided USB-C charging cable to get charge.

Warnings

BOLOXA BOLOXA BOLO

 
- Keep away from liquids and extreme heat.
- Keep the earbuds out of children's reach.
- Do not throw and drop the earbuds to avoid damage.
- Do not disassemble the earbuds, or make any modifications to the structure or any part of it.
- Low Battery Warning :
Earbud LED Light: **Red** light flashes once every 5 secs.
Prompt Sound: "please charge" sound every 1 minute.

LED Battery Power Display

BOLOXA B

Battery indicator of Charging Case


When charging, the digital display will show the Real-time power of the charging case from "0" to "100"; When fully charged, it will be 100 all the time until the power supply is cut off.

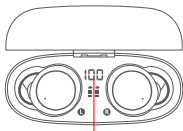

"0" to "100"

Battery indicator of Earbuds

 Put the earbuds back into the box to charge the earbuds. The battery icons will flash when charging, will turn off after fully charged.

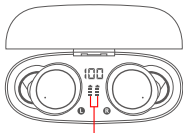

icons will flash

 
* Features with NTC temperature-control protection, B16 earbuds will not charge if the temperature reaches 45 degrees or higher. (Charging case will automatically protect themselves in that case.) It is recommended to stop charging firstly, recharge after the temperature drops below 45 degrees.

Power On/Off

BOLOXA BOLOXA B


Automatically Power On/Off

The earbuds will automatically power on when you take the earbuds out of the charging case; they will power off when you put them back into the case.

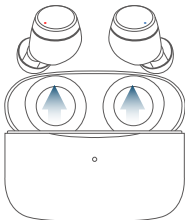

Manually Power On

 Touch & hold earbud for 3s, the earbud's LED light will flash **Blue** for 1s and then power on.



Manually Power Off

Touch & hold either earbud for 5s, both will flash **Red** light and then power off. (In disconnected mode)

