



Smart Finder USER MANUAL

 
23235



HOW TO ADD ITEMS (iOS)

Requires: iOS or iPad OS with the latest software

1. Place the Smart Finder next to your iPhone or iPad.
2. Press the back button to start the Smart Finder. At the beep, the device will be powered on and ready to pair.



3. Turn on Bluetooth on your device.
4. Open the Find My app on your iPhone, iPad.
5. In the Find my app tap items-Add item-other supported item.
6. Click on 'Continue'.
7. Name your Finder then click "Continue".
8. Choose an emoji.
9. Click on "Continue" and then "Finish" to complete the pairing process.
10. The unit will be paired successfully after two beeps.
11. Once paired, you can find the unit location, serial number or move it on the app.

 
Tips:

Complete the pairing process within 10 minutes. If the device enters standby mode after four beeps, press the power button once and restart the pairing process.

HOW TO ADD ITEMS (Android™)

Note: Ensure your device is running Android 9 or later. Previous versions of Android are not supported. Download and install the Find Hub app on Google Play. This app is required to connect and manage your Smart Finder on Android devices.

1. Place the unit next to your Android phone.
2. Press the back button to start the Smart Finder. At the beep, the device will be powered on and ready to pair.



3. Turn on Bluetooth on your device.
4. Keep the device within 20 cm/7.9 in and open the Find Hub app
5. Pop-up the notification on your phone → Click "Connect" → "Agree and Continue" → "Open the Application".
6. Click the Settings icon to re-change the item name and item type.

HOW TO REMOVE ITEMS

- If other phones want to add this finder, you need to remove it from Find My / Find Hub app first.

- Click the setting icon, Select "Remove from Find Hub" to remove the finder. When you hear a long sound, indicating that it is successfully. When remove item is completed.

- Note: If the finder is not near from your phone, remove item maybe fail. Then it can not be add item to other phones until it is factory reset.

HOW TO POWER OFF

 
 
After quickly pressing the back button 3 times, quickly press and hold the button for 3 seconds. When 4 beeps are heard, it indicates that the device has successfully powered off.

FACTORY RESET

Quickly press the back button 5 times, then quickly press and hold the button for 5 seconds until a long beep is heard. This indicates that the factory reset was successful.

HOW TO REPLACE OR REMOVE THE BATTERY

Continuously press the top cover of the Smart Finder while simultaneously rotating your palm approximately 50 degrees to open the top cover. Once the top cover is open, you can remove the battery.

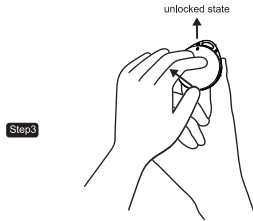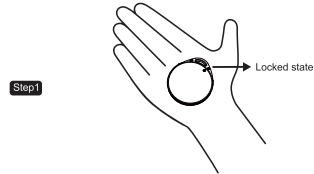

SPECIFICATIONS

Product Name	Smart Finder
Model Name	23235
Range	≥30m(≥98 feet) depending on environment
Temperature	0°C to +45°C (5°F to 122°F)
Operating Frequency Band	2.402GHz-2.480GHz
Alarm	Max. 70 dB.
Material	PC+ABS
Dimensional Size	37.3*32.5*8.8mm
Maximum radio-frequency power transmitted	

Compliance Content

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

*a) Battery type CR2032;
b) Nominal voltage 3Vdc.

This product contains a replaceable and non-rechargeable DC 3V CR2032 coin battery. please attention below warnings:

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 100° C or incinerate.
- Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Disclaimer: This is neither an anti-theft nor an anti-lost device.
This device provides the last detected location.

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

If a battery has been ingested, or there is a possibility one might have been ingested, please seek medical attention and inform the medical authorities that you suspect battery ingestion.

It's not always clear when a child has swallowed a button battery, as there are no specific symptoms. However, they might:

- cough, gag, or drool;
- seem to have a stomach bug or virus;
- vomit;
- complain of pain in their stomach, chest, or throat;
- appear tired or sluggish; and
- lose their appetite.

Since the signs aren't obvious, it's important to keep a close eye on loose, used, or spare button batteries in your home, as well as the products that contain them. If the battery compartment does not close securely, stop using the product and keep it away from children.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc., registered in the U.S. and other countries. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

This product has been certified by Google to meet Find Hub network accessory specifications. Google is not responsible for the operation of this product. Google is also not responsible for ensuring that the product complies with any applicable safety standards or other requirements.

Find Hub network requires location services and Bluetooth to be turned on. Requires cell service or internet connection. Works on Android 9+ on select devices and in certain countries for age-eligible users.

Google, Android, Google Play and Find Hub are trademarks of Google LLC.