

RECYCLING BIN

vonhaus

3007240 - User Guide

3007630

3007631 1013216

3007772 1013217

1500148 1013218

1500149 1013219

1500150 1013220

1013212 1013221

1013213



WARNINGS & PRECAUTIONS



PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE

This Recycling Bin is for domestic use only. Do not use for commercial purposes.

Do not use the Recycling Bin for any purpose that is not explicitly specified in this User Guide.

This product is not a toy. Children should be supervised at all times to ensure they do not play with the Recycling Bin.

WARNING! Every effort has been taken to smooth any rough edges, however, take care when handling the Recycling Bin as some edges may be sharp.

CAUTION: Keep hands and fingers away from the lid and mechanism.

Always rinse items thoroughly before recycling.

Always empty the Recycling Bin before attempting to move the unit.

CLEANING & MAINTENANCE

Keep the Recycling Bin clean so that it does not emit any unpleasant odour. Daily emptying is ideal. Wipe down with cleaning wipes or rinse well with water and mild detergent. Dry thoroughly before use.

Sprinkle some bicarbonate of soda in the bottom of each compartment to absorb any moisture and deodorize the Recycling Bin.

Compartments must be cleaned immediately if any waste has spilt.

To deep clean your Recycling Bin, rinse thoroughly, then add a gallon of warm water into a bucket along with a few drops of dish washing liquid and ½ cup of bleach. Mix the solution, then use to clean the inside and outside of the Recycling Bin with the help of a long-handled mop or brush. Rinse and dry thoroughly before placing back into position.

DISPOSAL INFORMATION

Please recycle where facilities exist. Check with your local authority for recycling advice.

CUSTOMER SERVICE

If you are having any issues with your product, please contact DOMU Brands Customer Service team - support@domu.co.uk

WARRANTY

To register your product and find out if you qualify for a free extended warranty, go to:

www.VonHaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the Warnings and Precautions page of this User Guide, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returned goods will not be accepted unless re-packaged in its original colour box and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the product second-hand or for commercial or communal use.

COPYRIGHT

All material in this instruction manual are copyrighted by DOMU Brands Ltd.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

KOŠ ZA RECIKLIRANJE

vonhaus

3007240 - Navodila

3007630

3007631 1013216

3007772 1013217

1500148 1013218

1500149 1013219

1500150 1013220

1013212 1013221

1013213



OPOZORILA IN VARNOSTNI UKREPI



PROSIMO, DA PREVIDNO PREBERETE TE NAVODILA IN VZDRŽITE PRIHODNOST

Ta koš za recikliranje je namenjen samo za domačo uporabo. Ne uporabljajte v komercialne namene.

Koša za recikliranje ne uporabljajte za namene, ki niso izrecno določeni v tem priročniku.

Ta izdelek ni igrača. Otroke je treba ves čas nadzorovati, da se prepričajo, da se ne igrajo s košem za recikliranje.

OPOZORILO! Vsak napor je bil vložen za glajenje grobih robov, vendar bodite pozorni pri ravnanju s košem za recikliranje, saj so nekateri robovi lahko ostri.

POZOR: Roke in prste držite stran od pokrova in mehanizma.

Pred recikliranjem predmete vedno temeljito sperite.

Pred poskusom premikanja enote vedno izpraznite koš za recikliranje.

ČIŠČENJE IN VZDRŽEVANJE

Koš za recikliranje naj bo čist, da ne oddaja neprijetnega vonja. Dnevno praznjenje je idealno. Obrišite s čistilnimi robčki ali dobro sperite z vodo in blagim detergentom. Pred uporabo temeljito posušite.

Na dno vsakega predela potresemo nekaj sode bikarbone, da absorbira vlago in deodorira koš za recikliranje.

Če je odpadejo odpadki, je treba prostore takoj očistiti.

Za globoko čiščenje posode za recikliranje temeljito izperite, nato pa dodajte galon tople vode v vedro, skupaj z nekaj kapljicami tekočine za pomivanje posode in 1/2 skodelice belila. Raztopino zmešajte, nato pa s čiščenjem krpe ali krtače z dolgimi ročaji očistite notranjo in zunanjo posodo za recikliranje. Preden se vrnete na svoje mesto, temeljito sperite in posušite.

INFORMACIJE O ODSTRANJEVANJU

Reciklirajte tam, kjer obstajajo objekti. Za nasvete o recikliranju se obrnite na lokalno oblast.

STORITEV ZA STRANKE

Če imate kakršne koli težave z vašim izdelkom, se obrnite na skupino za podporo strankam blagovne znamke DOMU - support@domu.co.uk

GARANCIJA

Če želite registrirati svoj izdelek in ugotoviti, ali izpolnjujete pogoje za brezplačno podaljšano garancijo, pojdite na:

www.VonHaus.com/warranty

Prosimo, da hranite dokazilo o nakupu ali izjavo kot dokazilo o datumu nakupa.

Garancija velja samo, če izdelek uporabljate izključno na način, ki je naveden na strani Opozorila in previdnostni ukrepi v tem priročniku in so natančno upoštevana vsa druga navodila. Vsaka zloraba izdelka ali način uporabe bo razveljavila garancijo.

Vrnjeno blago ne bo sprejeto, razen če ga ponovno zapakirate v originalni barvni škatli in ga spremlja ustrezen in izpolnjen obrazec za vračilo. To ne vpliva na vaše zakonske pravice.

Po tej garanciji nobenih pravic ni dodeljeno osebi, ki izdelek pridobi v rabljeni ali za komercialno ali komunalno uporabo.

AVTORSKE PRAVICE

Vse gradivo v tem priročniku je avtorsko zaščiteno pri podjetju DOMU Brands Ltd.

Vsaka nepooblaščen uporaba lahko krši svetovne zakone o avtorskih pravicah, blagovnih znamkah in druge zakone.