

SENCOR®

Let's live!

**BLUETOOTH SPEAKER
SSS 601**

**USER'S MANUAL
EN**



Table of Contents

1. Important safety instructions.....	4
2. Description of the BT speaker	6
3. Putting into operation.....	7
4. LED indicator.....	7
5. Volume control.....	7
6. Pairing devices via Bluetooth.....	8
6.1 Pairing.....	8
6.2 BT button.....	8
7. Audio AUX IN.....	8
8. Charging	8
9. Technical specifications	9

Declaration

We reserve the right to make corrections, changes and translations in this user's manual without prior notice. For this reason, we recommend that you regularly visit our website and acquire the latest information.

1. Important safety instructions

General safety instructions

- Read this user's manual. Follow the instructions contained in this user's manual.
- Heed all warnings.
- Adhere to all instructions.
- Use only accessories determined by the manufacturer.
- **An open flame must not be placed on the appliance, e.g. burning candle.**
- Use the appliance in a temperate climate zone.
- Neither the manufacturer nor the vendor of the appliance under no condition takes responsibility for any direct or indirect damages caused by not adhering to instructions for installation, set-up, use, servicing or cleaning of this appliance as described in this user's manual.
- Protect the appliance against being knocked, dropped, hit, shaken and against vibrations, humidity and dust.
- Before allowing children to use the appliance, they must be appropriately to their age, informed about the correct and safe use of the appliance.

Installation, operation

- Install the appliance according to the instructions in the user's manual.
- Leave free space on all sides of the appliance, necessary for proper air circulation. This removes the heat created during operation. Covering the ventilation openings of the appliance's case creates a risk of overheating or damaging the appliance. It is necessary to ensure that the ventilation openings are not blocked, e.g. by a newspaper, a table cloth, a curtain, etc. Follow the installation instructions in the user's manual.
- Do not install the appliance in direct sunlight or near sources of heat, such as heaters, heat exchangers, stoves or other devices (including amplifiers) producing heat. High temperatures significantly reduce the lifetime of electronic components in the appliance. Do not use or leave the appliance in the vicinity of an open fire.
- **The appliance must not be exposed to dripping or running water and objects filled with water must not be placed on it, e.g. vases.** Protect the appliance against rain, spray or contact with any other liquid; do not leave or install the appliance outdoors. Do not use the appliance outdoors. Not adhering to these instructions creates a risk of electrical shock or fire hazard.
- Do not use this appliance near water.
- Do not try to circumvent the polarised power plug safety feature. If the power plug cannot be inserted into your power socket, contact a qualified electrician to replace the old type of power socket.

- Before connecting the appliance into a power socket, check that the voltage in your power socket corresponds to the voltage on the rating label of the appliance or on its power adapter.
- Make sure that the power cord is not stepped on or compressed, particularly near the power plug, power socket and at the point where it exits the appliance or the adapter. The power plug (adapter) is used as a disconnection appliance and must be easily accessible.
- Remember to always disconnect the power plug (adapter) from the power socket before disconnecting the power cable from the rear side of the appliance.
- Disconnect the appliance from the power socket during storms or if you will not be using it for a longer time.
- Avoid moving the device from a cold environment to a warm one or vice versa, or when using the device in a very humid environment. Air humidity may condense on some components inside the case of the appliance and the appliance may stop working temporarily. If this occurs leave the appliance in a warm and well ventilated place and wait 1 – 2 hours without using it, and the appliance can once more be used as usual. Be careful especially when using it during a cold season.
- Neither the manufacturer nor the vendor of the appliance under no condition takes responsibility for any direct or indirect damages caused by not adhering to instructions for installation, setup, use, repair or cleaning of this appliance as described in this user's manual.

Repairs and maintenance

- To prevent risk of injury through electric shock or the creation of a fire, do not take the appliance out of the case - there are no parts inside the case repairable or adjustable by the user without relevant equipment and qualifications. Should the appliance require adjustment or repair, contact a professional service centre.
- In the case of any unusual events occurring during the use of the appliance, e.g. if there is a distinct smell of burning insulation or smoke comes out of the appliance, immediately turn off the appliance, disconnect the appliance from the power source and do not use the appliance until you have received the results of the inspection performed by the employees of the professional service centre.
- Have all repairs carried out by qualified personnel. Repairs are necessary if the appliance has been damaged in any way, for example if the power cord is damaged, liquid was poured on the appliance, foreign objects have entered the appliance, the appliance has been exposed to rain or moisture, if the appliance is not working as usual or if it has fallen.
- Before cleaning, carrying or other maintenance, disconnect the plug (adapter) from the power socket.
- Clean the appliance only with a dry cloth.
- For cleaning do not use petrol, thinners or any other solvents or use any abrasive cleaning agents, steel wool or any sponges with steel wool.


**Attention:**

To prevent a fire hazard or injury by electrical shock, do not expose this appliance to rain or humidity.

**Attention:**

Batteries must not be exposed to excessive heat, for example sunlight, fire, etc.

2. Description of the BT speaker

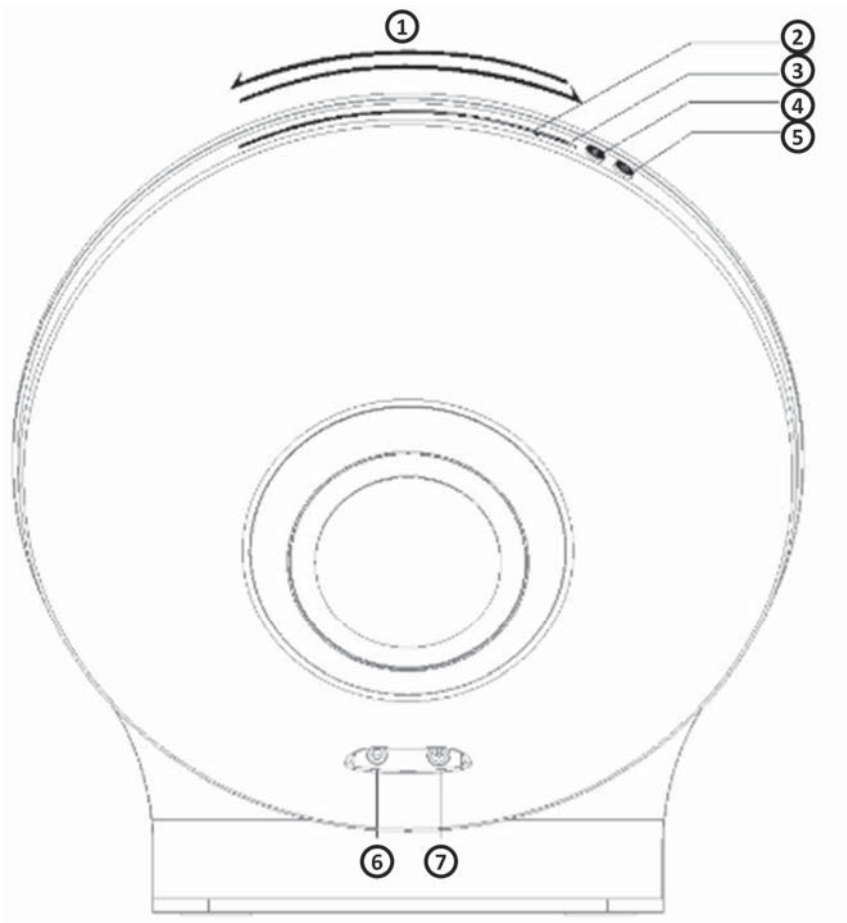

1	Touch area for controlling volume -/+
2	Microphone
3	LED indicator
4	BT button
5	Power On button
6	Socket for audio AUX IN mini jack (3.5 mm)
7	Power supply slot

3. Putting into operation

- Thoroughly study the safety instructions contained in this user's manual before first use.
- During first use, connect the power adapter to the power grid and to the power supply socket (no. 7 in figure "description of the BT speaker"). Turn on the BT speaker using the Power On button (no. 5). Turning on/off is indicated by a sound signal. Turn off the BT speaker by pressing the Power On button (no. 5).

**Attention:**

After a longer period of non-activity, the appliance will turn itself off.

4. LED indicator

- The LED indicator shows the following states of the BT speaker:
 - a. Intermittent blue light - the appliance is ready to be paired via Bluetooth or an audio cable, the source of the audio signal is not connected
 - b. Constant blue light – the BT speaker is paired with another device (via Bluetooth or an audio cable)
 - c. Constant red light – battery is charging
 - d. Intermittent red light – low battery power

5. Volume dial

- The volume of the BT speaker is set by touching the touch area (no. 1 in figure "description of the BT speaker"). Finger movement in the touch zone will be accompanied by a light signal on the LED indicator. Sliding the finger from left to right will increase the volume. Decrease the volume by sliding the finger from right to left.

**Attention:**

Avoid controlling the BT speaker with wet hands.

6. Pairing devices via Bluetooth

6.1 Pairing

Turn on the BT speaker and search for its Bluetooth name "SSS601" in the device to which you wish to pair and start the pairing process.

If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000".

6.2 BT button

Press the BT button (no. 4 in the figure "description of the BT speaker") to start or stop music playback during a Bluetooth connection. An incoming call will be accompanied by an acoustic signal and it will pause the music being played. Short press the BT button to pick up / end the incoming call. Long press the BT button to reject the incoming call.

7. Audio AUX IN

- On the rear side, the BT speaker is equipped with a 3.5 mm jack (no. 6 in figure "description of the BT speaker"). Your device can be connected via an audio cable that is supplied together with the BT speaker. First connect the audio connector to your appliance and then into the socket in the BT speaker.

**Attention:**

Before connecting your device and the BT speaker, ensure that the output signal from your device is at the minimum level (minimum output volume). This will prevent damaging the BT speaker.

8. Charging

- A low battery power level is indicated on the indication panel of the BT speaker by an intermittent red light. If this situation occurs, connect the charging adapter to a power socket and then to the BT speaker. After connecting the power adapter, the battery will start charging. The ongoing charging process is indicated by a (constant) red light on the indication panel of the BT speaker.
- A charged battery provides power for several hours of operation at normal volume levels. A high volume consumes more battery power; therefore, we recommend listening at normal volume levels.

**Attention:**

For charging, use only the original accessories supplied with the appliance. To achieve the maximum battery lifetime, it is best to start charging the battery after the low battery power notification by the LED indicator. Charge continuously until fully charged. When the operating time of the battery becomes very short, the battery's lifetime has been use up; have the battery replaced at an authorised service centre.

Recommendation:

When not using the appliance for an extended period of time, we recommend fully charging the battery once every two to three months. We do not recommend storing the appliance with a flat battery, it may result in irreparable damage to the battery (loss of capacity).

9. Technical Parameters

INPUTS	BLUETOOTH, AUX IN
AUX	3.5 mm stereo jack (mini)
Bluetooth	v 4.0
Built-in battery	2200 mAh Li-Ion
Amplifier power	2 x 20 W and 2 x 10 W
Power supply	external, 19 V, 3400 mA
Operating temperature	0 – 40 °C, non-condensing humidity
Dimensions (whd)	282*293*167 mm
Weight	2.4 kg

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit www.sencor.eu for detailed information about authorized service centers.