


NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

Company: Hangzhou Jiesheng Electronic Commerce Co., Ltd
Email: omiga_service@outlook.com



INSTRUCTION MANUAL

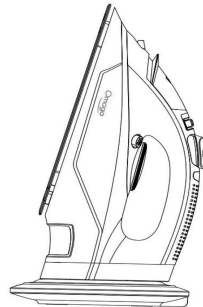

MODEL NO: KB-950RV
Cordless Iron

NOTE: The appliance is not turned off completely in auto shut-off mode. To switch the product off, unplug the product from the mains outlet.

CLEANING AND MAINTENANCE

Emptying and storing
When you have finished ironing, unplug and empty all water from your iron and set the steam switch at the off position. When cool, store the iron on its heel on the charging base with the power cord wrapped loosely around the iron's heel.

Cleaning the soleplate
Do not use scouring powder or solution as this could cause damage to the coating. If any man-made fibres fuse to the soleplate, set the iron at the MAX position and pass it over a clean piece of cotton to draw the deposit off the surface.

To clean the exterior
Allow the iron to cool and wipe over with a damp cloth and mild detergent, then wipe dry.

Self Clean
Your iron has a built in self clean system designed to keep the water valve, steam chamber and steam vents clear of lint and loose mineral deposits.


- 1 Fill the iron with water to the MAX line.
 - 2 Set the steam switch to the OFF position.
 - 3 Connect the charging base to a mains supply outlet and rest the iron on its heel on the charging base.
 - 4 Set the temperature dial to the MAX setting and wait for the temperature to be reached - the temperature indicator light will illuminate red until the required temperature is reached, then it will turn green.
 - 5 Whilst the iron is still very hot, hold the iron horizontally over a sink.
- CAUTION: The soleplate will still be hot, so ensure the charging base and plug are kept away from it and the sink.

- 6 Press and hold the self-clean button.
 - 7 Whilst still holding the self-clean button, gently move the iron back and forth until the water tank is empty. 8 When steam and hot water cease to be released from the soleplate, release the self-clean button .
 - 9 When the process is complete, re-connect the iron heel to the charging base and allow to heat up - this will dry the soleplate.
 - 10 Disconnect the charging base from the ains supply outlet.
 - 11 With the iron resting on its heel, allow it to fully cool down.
 - 12 Wipe the soleplate with a cold, damp cloth. After this cleaning operation, empty out any remaining water.
- IMPORTANT: Do not attempt to descale the soleplate with descaling products.

TROUBLE SHOOTING

This chapter summarizes the most common problems you could encounter with your iron.

PARTS DIAGRAM

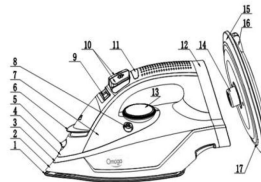

1. Soleplate
2. Skirt
3. Watertank
4. Handle cover
5. Spray nozzle
6. Water inlet cover
7. Handle
8. Self-clean button
9. Steam button
10. Spray/Shot steam button
11. Lamp cover
12. Back cover
13. Temperature dial
14. Connector
15. Base cover
16. Base
17. Lamp ring

FEARURES

- 120V/60Hz/1500W
- Cordless iron with dry, steam, spray
- Powerful burst of steam up to 0.8 g/press
- Variable steam controlled through Temperature dial
- Ceramic soleplate
- With indicator light and heel rest
- Vertical steam feature, ideal for suits, dresses and delicate fabrics
- Adjustable thermostat and steam control
- Fabric temperature guide
- Self-clean, Anti-calc, Anti-drip and Auto Shut Off feature
- Water tank capacity: 350ml
- Continuous steam up to 20g/min

TEMPERATURE GUIDE

IMPORTANT SAFEGUARDS

- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:
1. Read all instructions.
 2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
 3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
 4. Use appliance only for its intended use.
 5. To avoid the risk of electric shock, do not immerse the iron in water or other liquids.
 6. Always turn the iron to OFF () before plugging or unplugging the iron from the electrical outlet. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
 7. Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away. Coil the cord into the provided cord reel for storing.
 8. Always disconnect the iron from the electrical outlet before filling the iron with water, emptying the water from the iron, and when the iron is not in use.
 9. Do not operate the iron with a damaged cord or in the event the iron has been dropped or damaged or there are visible signs of damage or it is leaking. To avoid the risk of electric shock, do not disassemble the iron. Supply cord replacement and iron repairs must be conducted by a qualified serviceman or the manufacturer. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly. Contact Customer Service for information on examination, repair, or adjustment as set forth in the Limited Warranty.
 10. The iron must be used and rested on a stable surface.
 11. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
 12. Do not leave the iron unattended while the iron is connected or on an ironing board.
 13. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down—there might be hot water in the reservoir.
 14. To avoid a circuit overload, do not operate an iron on the same circuit with another high-wattage appliance.
 15. If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.

SAVE THESE INSTRUCTIONS

Heat setting markings on the temperature dial of all Omiga irons match those of the International Textile Care Labelling Code.

Symbol	(130°C) Max Cool	(160°C) Max Warm	(210°C) Max Hot	MAX setting
Control dial positions	●	●●	●●●	
Fabric:	Nylon, Acetates, synthetic fabrics	Wool, Polyester mixtures	Cotton, Linen, Rayon, Nylon mixtures	
Ironing:	Iron on wrong side, if moisture required, use damp cloth (not Acetate)		Fabrics requiring this setting usually require steam pressing.	
With water in tank:		Dry and spray	← Steam/spray/hot of steam →	
Without water in tank:		← Dry ironing →		

OPERATION INSTRUCTIONS

- 1) **Filling the tank**
Before first use, remove all packaging, including the protective cover on the soleplate. Make sure the iron is not plugged in. Set the steam switch to off. Fill the water tank via the filling hole. To fill the tank with the maximum amount of water, we recommend the iron is tilted vertically whilst being filled. Do not overfill the iron otherwise it will cause leaking from around the filler cap and may run down the iron. WE RECOMMEND THE USE OF DEIONISED, DISTILLED OR DEMINERALISED WATER.

Never use battery topping up fluid or water containing any substances like starch, sugar, fragrant additives or deionised water from a refrigerator.

- 2) **Charging base**
Plug in the charging base and switch on at the mains. The charging base power light will illuminate. Rest the iron on its heel on the charging base, ensuring that the heel connector meets the charging base connector. Connection is made when the power indicator light on the handle illuminates. Wait until the iron reaches the desired temperature, then commence ironing.

Throughout your ironing session, the iron must be replaced onto the charging base every few seconds or whenever you adjust your garments, to keep the heat topped up.

- 3) **Temperature Selection**
Set the temperature dial to the temperature required (see "Temperature Guide"). The temperature indicator light will illuminate red until the required temperature is reached, then it will turn green.

NOTE: It is normal for the temperature indicator light to flicker between red and green whilst the temperature cycles up and down during charging.
Tip: We recommend the temperature indicator light is allowed to cycle red and green twice before you begin ironing. The temperature indicator light and the power indicator light will switch on and off whilst you are ironing and replacing the iron on the base.

Problem	Solution
No power or not heating up.	1. Check the fuse. Try a new fuse with the same rating. 2. Try a different appliance in the socket as it may be the socket that is at fault. 3. Check the temperature dial has not been set to MIN. 4. Check the iron has not gone into auto shut-off mode. Wait for it to heat back up.
Overheating or not getting hot enough.	1. Adjust the temperature dial to ensure the setting matches that recommended on the garment. 2. Allow the iron to reach temperature and stabilise for 1-2 minutes if it has just been plugged in, or re-activated after auto shut-off.
Not steaming or poor steam.	1. Ensure the temperature is set within the steam band and that the steam level is set to the correct level... 2. Check that there is enough water in the tank. 3. Allow the iron to reach temperature before using steam. 4. Perform a self-clean to clear away limescale inside the iron (refer to "Self Clean" section).
Dripping from the holes in the soleplate.	1. Ensure the temperature is set within the steam band. The iron will not be hot enough to produce steam if the temperature is set too low. 2. The steam level should be set lower if the temperature is set lower to prevent it from dripping. 3. Allow the iron to reach temperature before using steam.
Tripping Electrics.	1. Try using a different socket. 2. Ensure there are no other appliances being used on the same set of sockets as the iron.
The iron emits some white powder from the soleplate	1. If the iron is new, this is residue from manufacturing materials and will diminish after the first couple of uses. 2. If the iron has been used many times, this could be a sign of limescale build-up and a self clean should be performed. Please see "CLEANING AND MAINTENANCE" section.
Leaking water.	1. Do not overfill the iron. 2. Ensure the filler cap is closed properly.

Tip: Begin with cool fabrics and work up to higher settings. An iron heats up quicker than it cools down so this will save you time and energy.



- 4) **Switching on the steam**
If required, switch on the steam using the steam switch. The amount of steam is automatically adjusted to suit the temperature selected.
 - 5) **Using the water spray**
For stubborn creases, use the water spray button. If using for the first time, you may need to press this a few times to pull the water through.
 - 6) **Steam boost**
Press the steam boost button for an extra steam burst for stubborn creases / heavy fabrics.
- NOTE: For optimum steam quality, do not operate the shot more than three times in succession.

FUNCTION

- Dry ironing**
Your iron can be used for dry ironing. Set the steam switch to off and set the temperature dial as desired.
You won't need water in the tank unless using the water spray or steam boost features.
- Vertical steam**
Vertical steam is useful for removing creases from hanging clothes, curtains, etc. Hold the iron between 1cm and 2cm away from the item and press the steam boost button.
- Anti-drip system**
This prevents water escaping from the soleplate when the iron is too cold. During use, the anti-drip system may emit a loud click, particularly during heat-up or whilst cooling down. This is perfectly normal and indicates that the system is functioning correctly.
- Anti-scale system**
This system reduces scale deposits and helps prolong the life of the iron.
- Auto shut-off**
If the iron is not taken off the charging base for 8 minutes, the product will automatically turn off for safety and to save energy. When this happens, the power indicator light will flash.
To restart the iron, disconnect the iron from the charging base and replace, then wait for the temperature to rise again.

