

versa

Mini-433 Door/Window Transmitter

Installation & Setup Guide

FEATURES

- Single zone Door / Window Transmitter
- Miniature design with easy installation
- Patented Bluefield magnet alignment indicator
- Compatible with DSC control panels that support 1-way 433Mhz



LED Indicators

LED	Meaning
Blue	Lights when the magnet is within proper range of the Mini-433 (1 inch max). LED is active for 15 minutes after battery is first installed or when the cover is removed.
Green	Flashes when the Mini-433 transmits. LED is active for 15 minutes after battery is first installed or when cover is removed.
Red	Upon low battery condition, flashes once about every five seconds for two minutes after a transmission.

MOUNTING

- Choose a mounting location where the device is stationary, and the magnet is mounted to the moving part of the door or window.
- Check your control panel's instruction manual for how to confirm RF signal strength before permanently mounting the transmitter.
- Avoid mounting in areas where it will be exposed to moisture or where the operating temperature of 32 to 120°F (0 to 50°C) will be exceeded.
- Keep the Mini-433 and magnet away from metal or metallic surfaces such as foil wallpaper.
- Avoid mounting the Mini-433 in areas with a large quantity of metal or electrical wiring, such as a furnace or utility room.
- Use the adhesive tape provided to mount the transmitter and magnet.

Mount the Mini-433 & Magnet


1. Mount the Mini-433 on the frame of the protected door or window using double-faced tape (supplied).
2. Mount the magnet (supplied) on the protected door or opening portion of the protected window. Check that the blue LED lights when the door or window is closed.

PROGRAMMING (refer to your control's instructions)

1. Place your panel in the preferred RF enrollment mode.
2. When prompted, Open / Close magnet
3. Complete zone programming as per installation manual.
4. Alternatively, the device serial number can be entered into the control during programming.

BATTERY REPLACEMENT

1. Slide the top cover, in the direction shown, to open and remove the old battery.
2. Install a fresh battery with + side UP. See Specifications section for compatible batteries.
3. Replace the cover and slide in the opposite direction from opening.

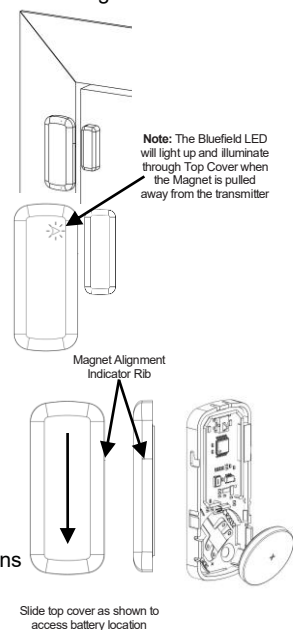

SPECIFICATIONS

Dimensions:	Transmitter: 1" (25.4mm) x 2.2" (55.9mm) x 0.25" (6.4mm) Magnet: 0.25" (6.35mm) x 0.25" (6.35mm) x 1" (25.4mm)
Operating Conditions:	32° - 122°F / 0° - 50°C Relative Humidity 95%, (non-condensing); UL Tested at 85%
Magnet Gap:	Wood / Metal Surfaces Maximum: 1", 1/4" (25.4mm, 6.35mm)
Battery:	3VDC, 225mAh, Lithium Coin Cell; Panasonic CR2032 Use of another battery may present a risk of fire or explosion.

FEDERAL COMMUNICATIONS COMMISSION STATEMENTS The user shall not make any changes or modifications to the equipment unless authorized by the Installation Instructions or User Manual. Unauthorized changes or modifications could void the user's authority to operate the equipment. FCC/IC STATEMENT This device complies with Part 15 of the FCC Rules, and Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference (2) This device must accept any interference received, including interference that may cause undesired operation. Cet appareil est conforme à la partie 15 des règles de la FCC et exempt de licence RSS d'Industrie Canada. Son fonctionnement est soumis aux conditions suivantes: (1) Cet appareil ne doit pas causer d'interférences nuisibles. (2) Cet appareil doit accepter toute interférence reçue y compris les interférences causant une réception indésirable.
REFER TO THE INSTALLATION INSTRUCTIONS FOR THE CONTROL WITH WHICH THIS DEVICE IS USED FOR DETAILS REGARDING LIMITATIONS OF THE ENTIRE ALARM SYSTEM.
The product should not be disposed of with other household waste. Check for the nearest authorized collection centers or authorized recyclers. The correct disposal of end-of-life equipment will help prevent potential negative consequences for the environment and human health.

RES BURG BATTERY CAUTION: Risk of fire, explosion and burns. Do not recharge, disassemble, heat above 212°F (100°C) , or incinerate. Dispose of used batteries properly. Keep away from children. Attention de batterie: Risque d'incendie, d'explosion et de brûlures. Ne rechargez pas, démonter, chauffer au-dessus de 212° F (100°C), ou incinérer. Débarrassez-vous des batteries utilisées de façon appropriée. Gardez à partir des enfants.
--

WARNING	
• INDESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN. • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Do not force discharge, recharge, disassemble, heat above (manufacture's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

versa

103 - 19292 60 Ave
Surrey, BC V3S3M2
® 2024 Versa Wireless Inc.
www.versawireless.com

