

POFOTO

User Manual

Portable Video Player



Model PD07

POFOTO, Empowering Senses, Elevating Moments.
If you have any questions, please contact: help@pofotovip.com

Warm Tips

How to Get a 24 Month Warranty

Contacts us to register it within 3 weeks after receiving your player.

Enjoy Your New DVD Player!



Email us:

help@pofotovip.com

EN

 
USEFUL TIPS	I
PRODUCT DESCRIPTION.....	3
BUTTON INTRODUCTION	4
REMOTE CONTROL INSTRUCTION	5
RANGE OF USE.....	8
RANGE OF USE CONNECTION	9
ENJOY FUN WITH A TELEVISION	9
SETUP PAGE.....	9
SYSTEM SETUP	10
LANGUAGE SETUP	11
AUDIO SETUP	11
VIDEO SETUP	12
DIGITAL SETUP.....	12
SPECIFICATIONS	13
TROUBLESHOOTING	14
WARRANTY.....	17

USEFUL TIPS


1. Battery. Please recharge the Battery for at least 6 hours before the initial use. If you connect this player with AC power, you can use it directly.

Note: Make sure you switch off the unit before charging. The charging indicator LED will change from RED to OFF to indicate that the battery has been fully charged. When the unit is on, the LED turns Orange.

2. LCD Screen. If you find scratches on the screen, just remove the screen protector.

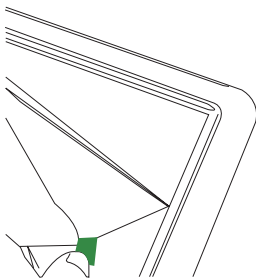

 3. Laser Pickup. There is a round card inside the player. Before you insert a disc, please remove the card. Please DO NOT touch the laser pickup or other parts with your hand.

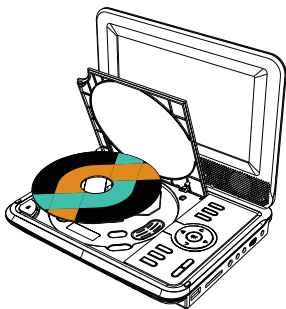


4. Disc Format

Disc Format Supported	CD,DVD,DVD+R/-R,DVD+RW/-RW,VCD SVCD,CD-R/RW
Disc Format NOT Supported	Blu-ray, HD DVD,Discs recorded in the AVCHD format, DVD-Audio,Version 1.0 of DVD-RW,DVD-ROM,CD- ROM,CDV,CD-G SACD,Photo CD,DVD-RAM that cannot be removed from their cartridges,2.6-GB and 5.2-GB DVD-RAM,PAL discs

5. Language Settings. Press key [SET UP] → [OSD Lang] → Change the display language. It is the same procedure for Audio, Subtitles and Menu.

6. About the Maintenance.

 
- Wipe with a soft,dry cloth to clean this unit
- Use eyrglass cleaner to remove stubborn dirt from the LCD.
- Do not use alcohol, paint thinner or benzine to benzine to clean it.
- Do not press onto the LCD screen or drop the product from a high place.
- This unit is not waterproof. To prevent a fire, do not place any container filled with liquid near this unit (such as a vase or flower pot) or expose it to dropping, splashing,rain or moisture.

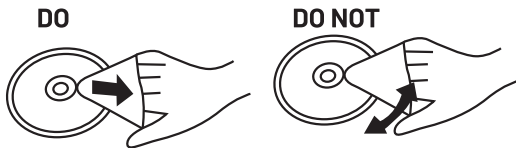


- To clean discs, wipe with a damp cloth and then wipe dry.
- Do not attach labels or stickers to any discs (This may cause discwarping, making it unusble).
- Do not write on the discs with a ball-point pen or any other writting onstrument.
- To protect discs from scratches and dirt, please return them to their cases or cartridges when the are not in use.
- Do not use discs that are badly warped or cracked, or irregularly shaped discs, such as heart shapes.

PRODUCT DESCRIPTION

 
Package Contents

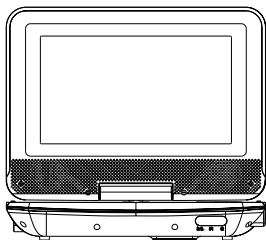


Portable Video Player

 


Remote Controller

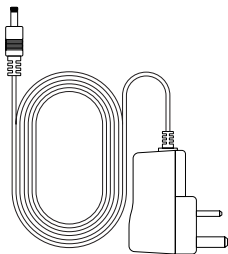 

AC Adapter


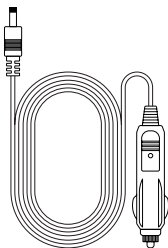 


Car Charger

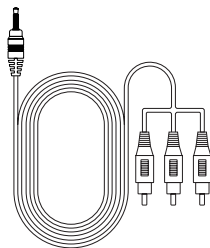 


3-in-1 AV Cable

  BUTTON INTRODUCTION

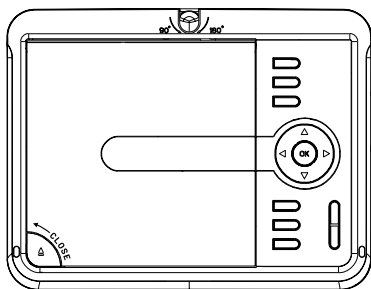

LCD ON/OFF	Turn the unit screen on and off
VOL -/VOL+	Controls the volume up or down.
STOP	Press to stop current video
MENU	Press to return to the root menu for DVD.
MODE	Press repeatedly to switch the mode for AV IN or DVD
SETUP	Press to enter the setup menu,then use the direction keys and OK to set system menu.
DIRECTION KEYS	Use direction keys for: previous/next,fast forward/ fast rewind
OK	Press to enter the selected item or the choice.
DVD/USB/SD	Press repeatedly to switch input source: Disc/USE mode/SD card
FWD/REV	Press fo achieve fast/rewind forward

 
REMOTE CONTROL INSTRUCTION

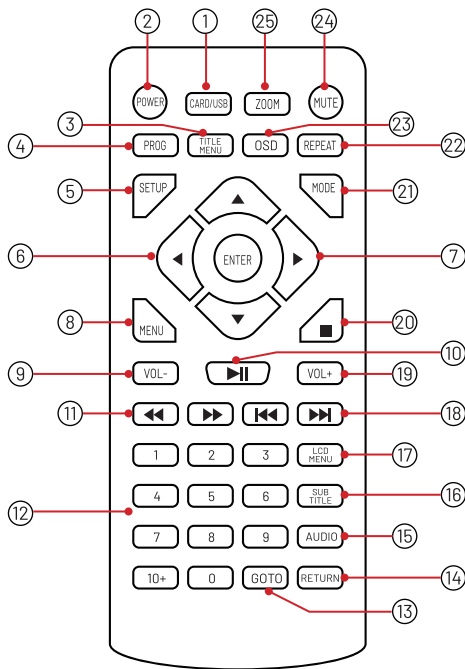

1. CARD/USB	Switch between DVD, CARD and USB modes
2. POWER	Turn the unit on and off
3. TITLE MENU	All program titles can be displayed
4. PROG	Program a loaded disc to play chapters and titles or tracks in a specified order
5. SETUP	Show Setup menu directly (except the AV mode)
6. DIRECTION BUTTON	Selection/Enter -To select: Press up, down, left, or right -To enter: Press[OK] -Frame forwrd/Frame backward: (while paused) press left or right
7. ENTER	Press to confirm option
8. MENU	View the main menu on a loaded DVD
9. VOL-	Decrease volume,minimum to 0
10. PLAYER/PAUSE	Play or pause the audio/movie playback. Confirm the selection or press it to select the file to play
11. Fast Forward/Fast Rewind	Select fast forward/rewind speed
12. 0-10+Number Keys	Press number to input a DVD chapter or CD track (invalid for some discs)
13. GOTO	Press to go to a specific time index/title/ chapter
14. RETURN	During DVD play,press this key,to main menu
15. AUDIO	Press to swith left and right channels
16. SUBTITLE	Change subtitle mode

17. LCD MENU	Press this key to adjust the screen
18. PREV/NEXT	Press to play previous chapter/title/track
19. VOL+	Increase volume,maximum to 15
20.PAUSE	Stop the audio/video/photo playback
21. MODE	Select "DVD"mode or"AV IN"mode
22. REPEAT	Repeat the loaded disc
23. OSD	Display audip and video information such as title,play time,etc.
24. MUTE	Mute the sound (Press again to activate the sound)
25. ZOOM	Short press to select 2X, 3X, 4X, 1/2, 1/3, 1/4

 RANGE OF USE

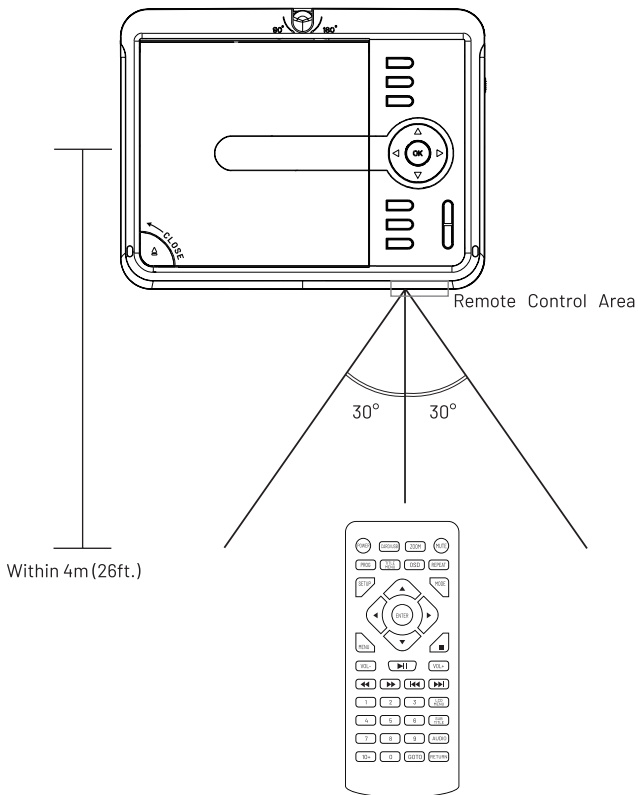

The distance and angles are approximate.

Within 4m (26ft.) in front

 
Within 30 degrees angle either left or right

RANGE OF USE CONNECTION

Here are the instructions about how to play games on a DVD player:

1. Use your PC to download games from the attachment file.
2. Unzip the NES file folder to your PC, and copy the folder to a USB stick (16GB to 32GB).
3. Plug the USB stick into the right-side USB slot and plug the game joystick into the backside USB slot.
4. Turn on the player and press "USB/SD card", choose "USB" mode.


ENJOY FUN WITH A TELEVISION

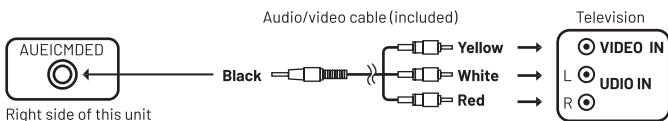

SETUP PAGE

Menu Operation

 1. Press **[SETUP]** on the remote control or on the unit to show the setup menu.
2. Press **[LEFT]/[RIGHT]** to select an item. The submenu of the selected item will be instantly shown.
3. Press **[UP]/[DOWN]** to continue to select an item in the submenu then press **[OK]/[ENTER]** to enter. Use **[UP]/[DOWN]** to select an option, then press **[OK]/[ENTER]** to confirm it or press **[LEFT]** to cancel.
4. Press **[UP]/[DOWN]** to continue to set other items in the submenu.
5. Press **[LEFT]** to go back to the superior menu of the current one.
6. Press **[SETUP]** again and press **[ENTER]/[OK]** to exit the setup menu.

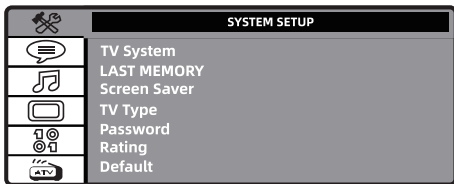

SYSTEM SETUP

[TV System]

Set TV Type to NTSC, PAL, or Auto.

[LAST MEMORY]

1. ON: Each time you turn on the unit or stop the disc, it will memorize the last play duration. Next time you turn on the unit and play the same disc, the unit will play from that memorized point.
2. OFF: Disable the last memory function.

[Screen Saver]

1. ON: If the image remains motionless on the screen, for example the disc is paused, stopped etc., for several minutes, a screen saver will appear on the screen. You can press any key or button to wake it up.
2. OFF: Turn off the screen saver function.

[TV Type]

Setup panel display to 4:3PS, 4:3LB, 16:9

1. 4:3 Normal / PS PANSCAN

If the unit is connected to a conventional TV set, the wide-screen image will be displayed on the screen in its native aspect ratio with some part on the left and right cut off.

2. 4:3 Normal / LB LETTERBOX

If the unit is connected to a conventional TV set, the wide-screen image will be displayed in its native aspect ratio with black borders on the top and the bottom side.

3. 16:9 wide

Select this option if the unit is connected to a wide-screen TV set. The wide-screen image will be displayed in full screen in its native aspect ratio while the 4:3 image will be stretched out horizontally to fit in the screen.

[Password]

 
Enter the default password "0000" then set your password.

[Rating]

When setting a rating level, a password screen is shown. Follow the on-screen instructions. **Do not forget your password.**

[Default]

Return the portable DVD to factory default beyond the maximum output of the speaker in sound effects processing.

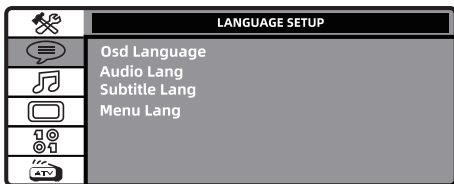

LANGUAGE SETUP

 
The Audio menu allows you to change the audio setup of the DVD.

[Osd Language] Set this on-screen display language in this item.

[Audio Lang] Set the default audio language.


[Subtitle Lang] Set the subtitle language.

[Menu Lang] Set the menu language.

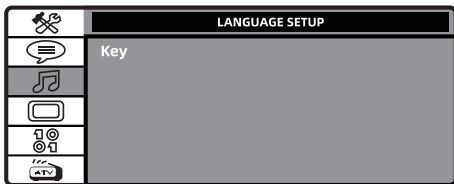

AUDIO SETUP

 [Key] Adjusts the key of the audio from # to b.

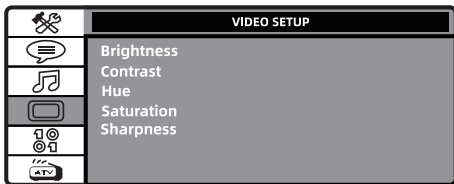

VIDEO SETUP

 
[Brightness] Adjusts the screen brightness.

[Contrast] Adjusts the screen contrast.

[Hue] Adjusts the screen hue.

[Saturation] Adjusts the screen saturation.

[Sharpness] Adjusts the screen sharpness between 0-8.

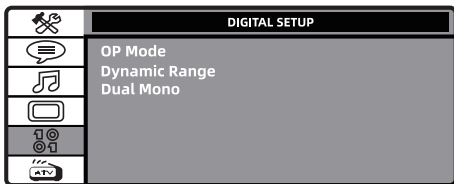

DIGITAL SETUP

[OP Mode]

1. Line Out

Separate a soundtrack into two independent ones. This mode can be regarded as night mode. For playing AC-3 DVD discs, the volume will be lower than RF OUT.

2. RF Remod

Combine two soundtracks into one. This mode can be regarded as a day mode.

For DVD discs playing AC-3, the volume is higher than the Line Out.

[Dynamic Range] FULL, 6/8, 4/8, 2/8, OFF.

[Dual Mono] Set down Stereo, Mono L, Mono R, Mix-Mono.

SPECIFICATIONS

DIVX Playback

DIVX is a video (movies and video) recording format, which is commonly known as AVI.

DIVX disc features high quality that is comparable with the DVD's and larger capacity. For example:

1.5H movie	In MPEG-1/2 format	In DivX
DVD(MPEG-2)	About 1.5-2GB	About 600-800MB
VCD(MPEG-1)	About 800MB-1G	About 600-800MB

Difference among MPEG 1, MPEG 2 and MPEG 4

	MPEG 1	MPEG 2	MPEG 4
Speed(kb/s)	1380kb/s (352*288)	6500kb/s	8800kb/s (720*576)
Quality	Good	Excelled	Perfect
Hardware	Low	Medium	High

Supported format for different files

File	Supported Format
Compatible Disc	CD-R, CD-RW, VCD, SVCD, CVD, DVD±R, DVD±RW
Audio	MP3, WMA, OGG, AAC (Bit rates: 32-192kbps)
Video	AVI, MPG, MP4, VOB, FLV, RMVB Resolution must be within 720*576
Picture	JPG
E-book	TXT (Code: ANSI)

Specification

Compatible DISC	CD,DVD,CD-R(RW),DVD±R,DVD±RW,VCD SVCD(RW)
Frequency response	20HZ to 20KHZ
Video output	1 Vp-p/5 Ohm unbalanced
Audio output	1.4 Vrms/10 kohm
Dynamic range	Better than 85dB
Laser	Semiconductor laser,Waver length:650
Power source	DC9-12V 1A
Battery Type	Li polymer

TROUBLESHOOTING

Before contacting the customer service,please kindly check by yourself with the following chart.

Trouble shooting	Solution
The player can't read discs	• Please clean the laser and DVDs with the alcohol first.(P2) • Ensure the disc is in the right format for our DVD player.Our player doesn't support Dolby,pirate,burnt and blu rays DVDs. • Find your product order and email to "Contact seller" (help@pofotovip.com)

The player doesn't work	• Make sure the power switch has been set to the "ON" position • Check connections to the AC adaptor or battery pack. • Check the status of the indicator light Under the premise of power connection, if it's on, there is a problem with the motherboard; if it's off, there is a problem with the motherboard or power adapter • Find your product order and email to "Contact seller" (help@pofotovip.com)
Picture is distorted	• The disc might be damaged. Try another disc • It is normal for some distortion to appear during forward or reverse scanning
The player doesn't read MP4 on the USB or Card	DVD player supports MP4 files in your USB Drive/ Card, but you need to convert the formats first. You can download a converter FormatFactory, to complete the conversion. Any questions please contact customer service for more help. (help@pofotovip.com)
Remote controller doesn't work	• Replace the battery (AAA battery) • All buttons fail: A problem with remote controller or receiver • Individual buttons fail: Find your product order and email to "Contact seller" (help@pofotovip.com) • Note: The remote controller needs to be aimed directly at the front of the Video Player, within 8 m and 30 degrees (P7)

The player sound is too low.	• Check that the two speakers of the player are working properly,cover one speaker with your hand,and check if the other speaker is sounding • Check whether the disc you put in meets the specifications(P13).Our player does not support DTS,which is the audio track of Dolby Disc.Please try another disc(not pirate,burnt,Dolby and Blu-ray discs)to hear whether it will play louder
No sound or distorted sound	• The speaker is off if headphones are connected • Make sure your DVD is placed properly and all cables are securely connected into the appropriate jack. • Audio may not be output due to how files were created.
Can't advance through a movie	You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.
Other problem	Static discharges or other external interferences can cause the DVD player to malfunction.When this happens disconnect the power plug and plug it back in.If the problem happened again, disconnect the device from main power and contact Customer Service or a repair shop.

WARRANTY

Our company provides customers with a warrant of **24 MONTHS** from the date of purchase.

Should you experience any problems not covered by the FAQ, please don't hesitate to email us at help@pofotovip.com

WARRANTY EXCLUSION

The warranty will not be valid if:

1. The product has not been installed, operated or maintained in accordance with the manufacturers operating instructions provided with the product.
2. The product has been used for purposes other than its intended function.
3. The product has been used for purposes other than household use.
4. The damage or malfunction of the product is caused by any of following conditions:
 - Incorrect voltage.
 - Accidents (including liquid or moisture damage)
 - Misuse or abuse of the product
 - Faulty or improper installation
 - Mains supply problems including power spikes or lightning damage
 - Infestation by insects
 - Tampering or modification of the product by persons other than authorized service person
 - Exposure to abnormally corrosive materials
 - Insertion of foreign objects into the unit
 - Used with accessories not pre-approved

