 


# Kinglucky



K18 User Manual


# Packing List

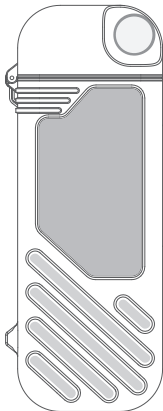


sound



microphone

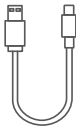


Charging line

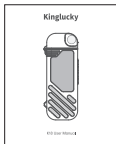


operation instructions

# Introduction to Audio Usage

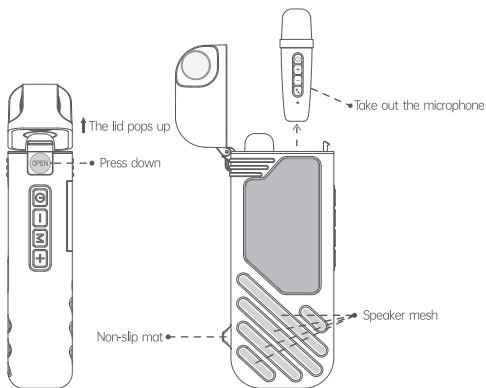


The audio system only provides storage space for the microphone and does not have the function of charging the microphone; Removing or inserting the microphone will not automatically turn on or off, and the power button needs to be manually operated.

# Introduction to Audio Functions

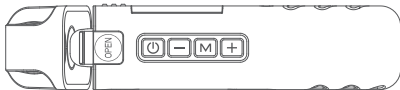


|                                                          |            |                 |             |
|----------------------------------------------------------|------------|-----------------|-------------|
| Power on/off                                             | Long press | Pause/Play      | Short press |
| Previous song                                            | Long press | Volume down     | Short press |
| M Switch playback mode, Bluetooth/TF card/USB drive, etc |            |                 | Short press |
| M Long press to switch LED lighting effects              |            |                 | Long press  |
| Next song                                                | Long press | Volume increase | Short press |

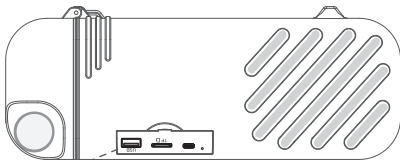

|  |               |                                                                                                                                                                                                       |
|--|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | USB port      | Automatically switch to USB mode when inserting MP3 audio files.                                                                                                                                      |
|  | TF card slot  | Automatically switch to TF mode when inserting MP3 audio files.                                                                                                                                       |
|  | charging port | Audio Type-C 5V charging interface.                                                                                                                                                                   |
|  | pilot lamp    | When there is no device connection, the blue light flashes. If the device is successfully connected, the blue light stays on, The red light stays on during charging and goes out when fully charged. |

# Introduction to Microphone Functions

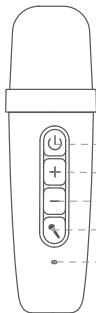


- Long press the microphone to turn it on and off, short press once to mute the microphone.
- Short press microphone volume up, double-click reverb up.
- Short press the microphone to decrease volume, double-click to decrease reverberation.
- Short press to turn on/off the original sound, long press to switch to the magic sound.
- The blue light of the unconnected device is flashing, the device connection success indicator light is constantly on, the red light is on during charging, and the red light goes out when fully charged.




- Microphone Type-C 5V charging port.

# Bluetooth Connection Guide

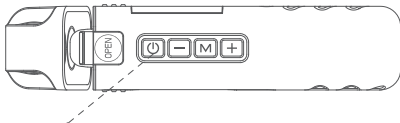

1. Long press to power on (switch to "Bluetooth mode") to automatically enter Bluetooth pairing mode.

2. Open the Bluetooth settings function on your phone, select "K18", confirm successful pairing (after successful connection, the voice prompt "Bluetooth connected").

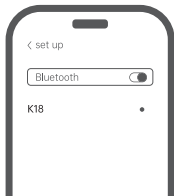

# Product Parameters

## Audio parameters

Output power: 10W

Input signal: 42DB


Battery: 1500mAh\*2 ( 3000mAh)

Charging voltage: DC5V

Frequency range: 90Hz-18KHz

## Major function

- Adopting a high fidelity electroacoustic system
- 3.7V high-performance battery
- Strong sound penetration and wide coverage
- Super MP3 audio decoding technology
- All digital audio processing, clear sound quality, high sensitivity

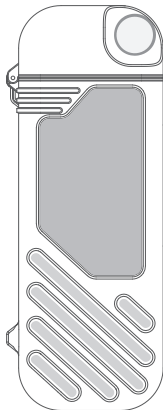

# Common Problem Handling

1.If the indicator light does not light up after booting up:

Please check if the speaker battery is sufficient, or connect the speaker to a 5V/1A power source for charging. It takes about 3-4 hours to fully charge.

2.The microphone has no sound:

It may be that the power is not turned on, the mode is incorrect, or the volume has not been adjusted. Please adjust the microphone volume properly.

3.If there is no reverberation in the audio system:

It may be that the reverberation switch has been turned off, please turn on the reverberation switch.

4.If there is noise in the microphone:

Perhaps due to environmental noise, signal interference, or the microphone being too close to the speaker, please readjust the direction of the microphone.

5.If Bluetooth playback is interrupted:

It may be because the Bluetooth distance is too far, or there are obstacles between the phone and the amplifier that affect signal transmission. Please stay close to the connected phone and avoid obstacles.

6. If Bluetooth cannot connect:

It may be due to the distance being too far, obstacles, or being connected by other phones. Please approach the phone to avoid obstacles and disconnect the phone.

7.If unable to charge:

Check if the charger is functioning properly and if the red indicator light on the charging port is on when charging the audio system.

matters needing attention:

The product battery is a built-in rechargeable battery. Please do not disassemble or replace it by yourself. Use the correct method to charge the device. Do not place the device near a fire source or expose it to sunlight refraction. The heating of the battery will damage the safety device and cause the battery to explode or burn.