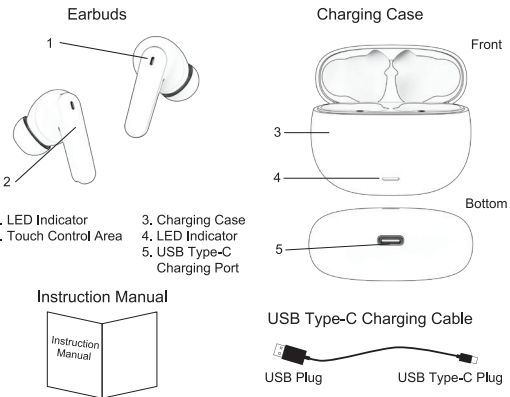


Size: 297(W) x 105(H)mm

FRONT SIDE

 ACTIVE NOISE CANCELLING TRUE WIRELESS EARBUDS INSTRUCTION MANUAL Thank you for purchasing the Active Noise Cancelling True Wireless Earbuds. This manual provides more information about the wireless earbuds, please read the instructions before using. 	Product Overview  1. LED Indicator 2. Touch Control Area 3. Charging Case 4. LED Indicator 5. USB Type-C Charging Port Instruction Manual  USB Type-C Charging Cable  Package Contents 1(One) Pair Earbuds 1.22in. x 0.91in. x 0.83in. (3.1cm x 2.3cm x 2.1cm) each 1(One) Portable Charging Case 2.36in. x 1.81in. x 1.02in. (6cm x 4.6cm x 2.6cm) 1(One) USB Type-C Charging Cable 11.8in. (30cm) 1(One) Instruction Manual Specifications Driver Diameter: Impedance: Frequency Response: Sensitivity: ANC: Earbud Battery Capacity : Charging Case Battery Capacity: Bluetooth Version: Bluetooth Range: Playtime: Charging Time: USB Type-C Charging Cable Included USB Type-C Charging Cable Rating 5V/1A Max. 10 mm 32 Ohms 20 Hz - 20 kHz 98 dB +/- 3 dB -18 dB +/- 3 dB Li-ion 3.7V 35 mAh Per Earbud Li-ion 3.7V 230 mAh 5.3 32.8 Feet 6 - 8 Hours (BT+ANC) 8 - 10 Hours (BT only) 2 Hours	Power On/Off Power On Touch and hold the Touch control area of earbuds for 3 seconds and the LED will flash. Power Off Touch and hold the Touch control area of earbuds for 5 seconds and the LED will be off. Pair the wireless earbuds with your mobile device 1. Keep the distance between the earbuds and mobile device within 32.8 feet. 2. De-activate the Bluetooth function on your mobile device. 3. Put the earbuds back to charging case before use. Take both earbuds out from charging case and wait for 3 to 5 seconds for auto pairing. The earbud has indicator blinking. Another earbud will stop blinking when auto pairing is done successfully. 4. Activate the Bluetooth function on your mobile device and select "EP-0715 TWS" from the list shown. 5. After pairing is successful, both earbuds LED will stop blinking. *Attention: If the auto pairing is not successful, manual pairing between earbuds is essential by following below procedures: 1. Make sure the earbuds are charged. 2. De-activate the Bluetooth function on your mobile device, (if you had been paired the earbuds to some other mobile device(s) nearby, please sure to de-activate those device(s) too). 3. Power on both earbuds simultaneously by pressing the touch control area for 3 seconds and wait for 3 to 5 seconds for auto pairing. (Keep the Bluetooth function off on your mobile device before this operation.) 4. Activate the Bluetooth function on your mobile device and select "EP-0715 TWS" from the list shown. 5. After pairing successfully, both earbuds LED will stop blinking. Reconnect the wireless earbuds to your mobile device When powered on, the wireless earbuds will automatically connect with the last successfully paired device.	Disconnect the wireless earbuds from your mobile device Power off the wireless earbuds; or Switch off the Bluetooth on your mobile phone; or Leave the earbuds 60ft away from your mobile phone or further. Answer / Reject a call When receive a call, press the touch control area once (on either earbud) to accept the call, or answer the call normally via your mobile phone. Press and hold 2 seconds to reject it. End a call To end the call, just press touch control area at any side of earbud with Beep sound to end it. Functions Pause / Play Music: Short Press on touch control area Go back to previous song: Double click left touch control area . Advance to next song: Double click right touch control area . Voice Assistant: Press and hold touch control area for 2 seconds. Triple click the touch control area to switch between ANC ON, ANC OFF and Transparent Mode with prompt sound. Charging your Earbuds 1. Open the charging case cover. 2. Insert the Earbuds into the charging case. 3. The earbuds will start the charge automatically. 4. LED indicator light of the Earbuds will be turned on when charging. 5. Once fully charged, the LED will be off. Note: If the charging is not start, take out both earbuds from the charging case and insert again after few seconds.
--	---	---	--

BACK SIDE

Recharge Charging Case ⚠ For your safety, please always use appropriate 5V output charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the USB Type-C charging cable provided with the packaging. 2. Connect the USB plug to a USB port on a wall adapter, then connect the USB Type-C plug to the USB Type-C charging port on the charging case to begin charging 3. The last digit of the Battery Level Indicator will be flashing during charging. 4. Once fully charged, the Battery Level Indicator will stop flashing. 5. The Earbuds Battery Charging Indicator will be flashing during the earbuds are charging and will be off after fully charged. NOTE: You must select a qualified charger from a regular manufacturer. You must charge the charging case and earbuds if it has been not used for more than 6 months.  ⚠ CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.	FAQ If the wireless earbuds cannot be paired with your device, please try the following: Ensure that your earbuds are in pairing mode or reconnection mode Ensure that Bluetooth search function of your mobile device is activated. If the wireless earbuds will not turn on: Make sure the earbuds are fully charged. Make sure the protective stickers are removed from the Earbuds Can I change the battery for the earbuds and the charging case? The wireless earbuds and the charging case use a built-in non-detachable battery which cannot be removed. If the charging case cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works.	⚠ Safety instructions for the lithium battery and charging the product -The input voltage to the product is 5V 1A. -In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. -Only charge the product at ambient temperatures between 10 °C/ 50 °F and 40 °C/104 °F. - Do not heat above 70 °C/158 °F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.	FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.  FCC ID: 2ADM5-EP-0715 Item# EP-0715 Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in China Keep all relevant information for future reference
--	---	---	--