 
 


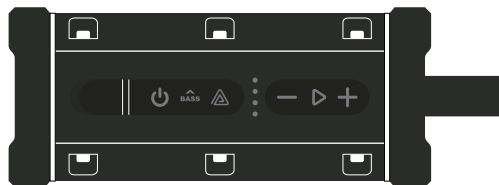


MAGX

PORTABLE OUTDOOR SPEAKER

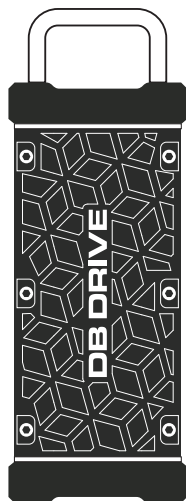

User Manual

 What's Included

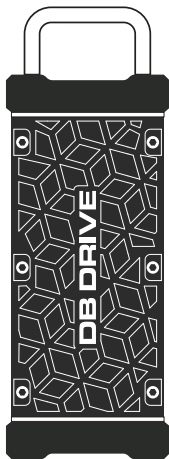

Portable Speaker




User Manual




USB-C Cable

Controls

Each button supports multiple actions depending on press duration

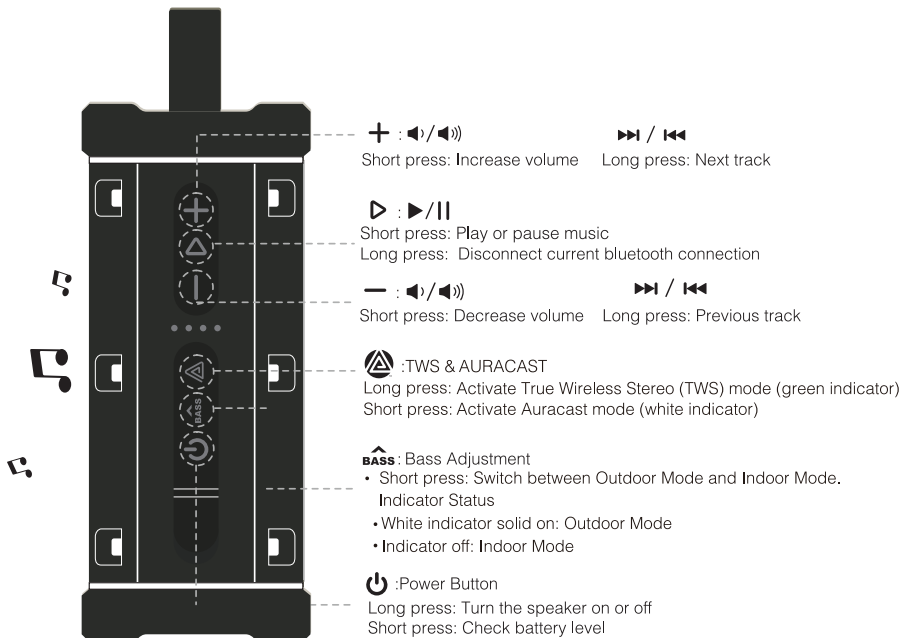

Bluetooth Pairing

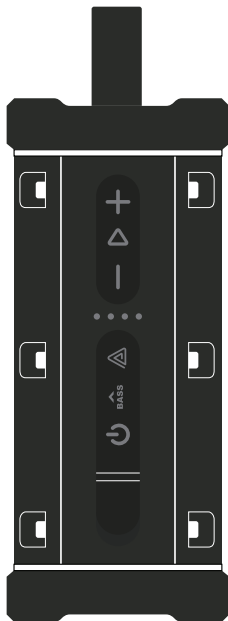

< Settings

Bluetooth 

Devices 

MAGX Connected 

Now Discoverable




- Long press the "  " button to turn on the speaker. Bluetooth pairing mode activates automatically, indicated by a flashing blue light.
- On your mobile device, go to **Settings**→**Bluetooth**
- Select **MAGX** from the list of available devices
- When connected, you will hear a confirmation sound

Note:

- 1.If the conneted Bluetooth device cannot be located, long press the "  " button to disconnect the active connection.
- 2.The speaker will automatically power off if not used for about 20mins.

Battery & Charging

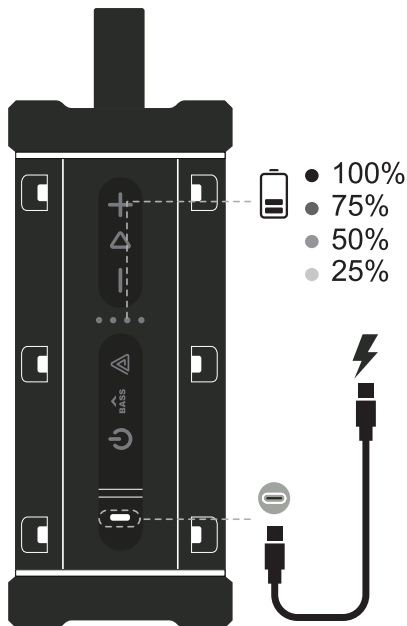

Checking Battery Level

Short press the Power button to check the current battery level

- A full charge is indicated by four bars

Charging

- Charge the speaker using the included USB-C cable
- A power adapter with an output of 20W or higher is recommended
- Supports USB-C PD fast charging up to 30W.
- Full charging time is approximately 3 hours (12–15V / 2A)

Charging Status Indicator


One blue indicator flashing: Charging in progress
Four indicators solid on: Fully charged

Note: When speaker battery is low, it will issue a sound prompt and the volume will automatically decrease, pls charge the speaker with the included USB-C power cable.

Power Bank Function



PD 30W OUT

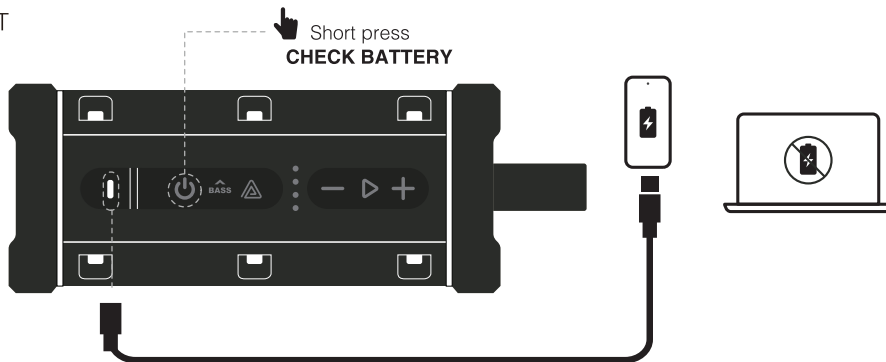


The speaker supports reverse charging, which allows it to supply power to other devices (such as smartphones or tablets):

- Use a compatible USB-C data cable to connect the speaker and the device.
- The white indicator will flash during charging

Ensure the speaker's battery level is at least 20% to maintain reverse charging efficiency

Note: Please don't supply power to large electronic devices (such as computers).

Waterproof Dustproof IP68

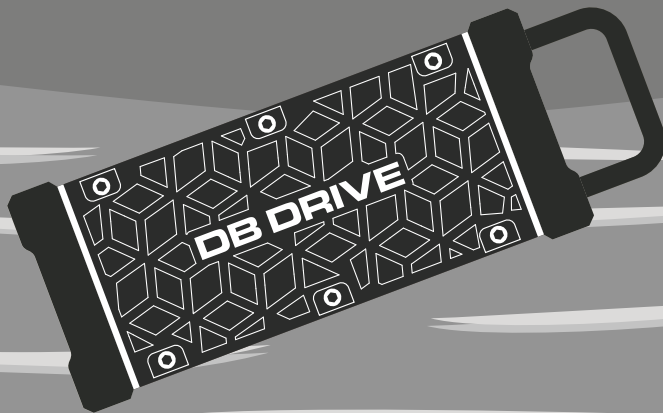

Important:

Ensure the charging port is fully closed before exposure to water

Do not charge the speaker while it is wet or submerged

Waterproof performance may decrease over time due to wear and tear

Magnet Mount



MAGNETIC MOUNT


The speaker features a built-in magnetic mounting surface on one side, allowing it to securely attach to suitable metal surfaces or compatible magnetic accessories. Each magnetic position is marked with a smiley face icon, with a U-shaped mark underneath for easy identification.

Magnetic Strength & Function

Equipped with a high-strength magnetic system
Enables quick and convenient attachment to flat metal surfaces
Provides stable positioning during normal use


Usage Notes

- Keep the magnetic surface away from magnetically sensitive items such as credit cards, magnetic cards, or data storage devices
- Ensure the contact surface is clean, dry and flat to maintain optimal magnetic adhesion
- The magnetic mount is intended for surface attachment only
- Do not use it for hanging or load-bearing purposes
- Magnetic performance may vary depending on surface material, thickness, and environmental conditions

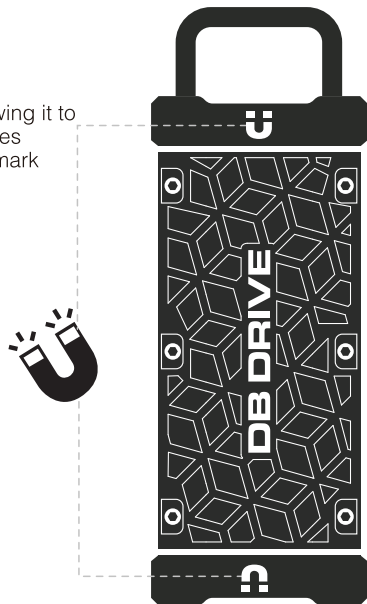

True Wireless Stereo

TWS

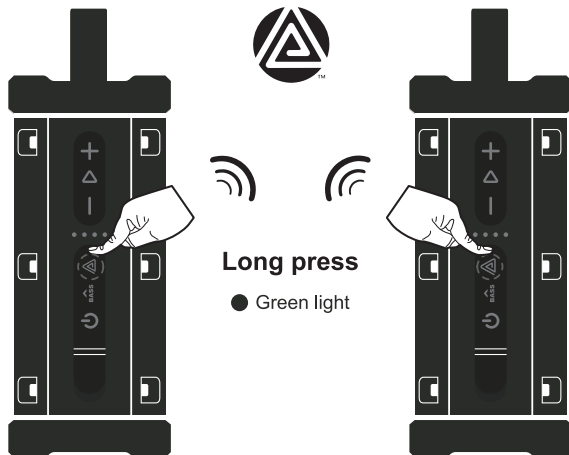

STEPS

1. Power on both MAGX speakers.
2. Press and hold the “” button on both speakers for about 3 seconds to active TWS and enter into TWS mode.
The speaker will have a sound to remind. When TWS pairing is successful, the “” button indicator will remain blue or flash blue, this speaker will act as primary speaker (left channel), the “” button indicator will remain solid green, it's as the secondary speaker(right channel).
3. To disconnect from TWS mode, short press the “” button on either of MAGX speaker, and a sound prompt will notify you of the disconnection

TWS connection notes:

1. After TWS paired, the “” button and “” button indicators will turn off automatically after about 1 minute, please press any key to reactivate the indicators light if need.
2. If power on the two MAGX at BT mode next time, they will TWS paired automatically.
3. Place the left and right speakers in the corresponding positions to enjoy true stereo sound.

Multi-Speaker Connection


STEPS

1. Power on multiple MAGX speakers.
2. Connect your mobile device to one of the speakers.
3. Short press the "  " button on this speaker to activate Auracast mode.
4. The "  " button indicator will remain solid white. This speaker will act as the primary speaker.
5. Short press the "  " button on each additional speaker one by one to complete pairing.

When pairing is successful, the indicator lights on all connected speakers will remain solid white.

Note

- Auracast technology allows audio to be broadcast to multiple speakers simultaneously.
- Supports connection of up to 100 speakers
- Ideal for parties and outdoor gatherings

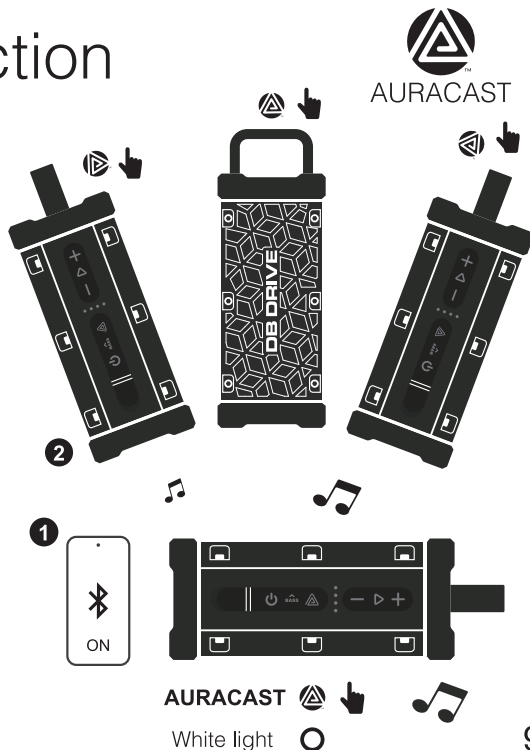

IMPORTANT SAFETY NOTICE

- To maintain optimal battery performance, fully charge the speaker at least once every three months when not in regular use.
- Battery life may vary depending on usage patterns and environmental conditions.
- Do not expose the speaker to liquids while the charging port is open or while charging.
- Charging in wet conditions may result in permanent damage to the speaker
- Salt water, chlorinated pool water and other chemicals may damage waterproof seals or internal components.
- After exposure to such substances, rinse the speaker with clean water, dry it thoroughly and ensure the charging port is completely dry before charging.
- Do not charge the speaker until it is completely dry and clean.
- Charging while moisture is present may cause damage to the speaker or battery
- When using an external power adapter, ensure it complies with USB-C PD standards.
- Use of non-certified or incompatible chargers may result in damage.

Children & Storage Safety

- Keep the product and accessories out of reach of children and pets.
- Small parts may pose a choking hazard.
- Store the product in a dry well-ventilated place when not in use.
- Ensure the product is completely dry and powered off before storage.

SPECIFICATIONS

Audio

- Product name: PORTABLE BLUETOOTH SPEAKER
- Dynamic Power: 100 Watts
- Frequency Response: 60 Hz - 20 kHz
- Signal-to-Noise Ratio: > 80 dB

Speaker Units

- 2 × 3.66-inch Woofer (53 × 93 mm)
- 1-inch Tweeter (Ø25 mm)
- 2 × 5.9-inch Passive Radiator (53 × 150 mm)

Battery & Power

- Battery: Li-ion 32.4 Wh (7.2 V / 4500 mAh)
- Music Play Time: Up to 25 hours (depending on volume and content)
- Charging Time: Approx. 3 hours
- Power Input: 30W (MAX) PD Voltage: 5-15V(5V,9V,12V,15V)
- Power Bank: 30W (MAX) PD Voltage: 5-15V(5V,9V,12V,15V)

Connectivity

- Bluetooth Version: 5.4
- Bluetooth Profiles: A2DP 1.4, AVRCP 1.6
- Bluetooth Frequency Range: 2402 – 2480 MHZ

Dimensions & Weight

Product Size: 254 × 92 × 92 mm

Net Weight: 1.2 kg



LIMITED WARRANTY

DB Drive warrants its products purchased in the USA from an authorized DB Drive dealer.

All products are warranted to be free from defects in material and workmanship under normal use and service for a period of one (1) year from purchase date to the original purchaser of the product (the “warranty period”).

DB Drive will either repair or replace (as its option) any unit that had been found to be defective and under warranty provided the defect occurs within the one (1) year warranty period.

This limited warranty extends to units having been subjected to misuse, abuse, neglect, or accident. In DB Drive’s judgment, products that show evidence of having been altered, modified, or serviced without DB Drive’s authorization, will be ineligible under this warranty.

To obtain warranty services please contact your retailer or visit our website at www.dbdrive.net for more details.



DB Research L.L.P. • 302 Hanmore Industrial Parkway • Harlingen, TX 78550
Ph: (877) 787-0101 • Fax: (956) 421-4513 • tech support: support@dbdrive.net

Designed & Engineered in the USA 

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.