



User Guide

SUMMARY

This guide provides basic information for using and upgrading this product, including topics such as components, features, networks, and HP resources.

Legal information

© Copyright 2026 HP Development Company, L.P.

Google, Googlebook, Google Drive, and Chrome are trademarks of Google LLC. Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or countries. USB Type-C, USB-C and the 10 Gbps port logos are registered trademarks of USB Implementers Forum.

Second Edition: September 2026

First Edition: August 2026

Document Part Number: Q25464-002

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

Safety warning notice

Reduce the possibility of heat-related injuries or of overheating the computer by following the practices described.

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows, rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows, rugs or clothing, during operation. The computer and the AC adapter provided by HP comply with the user-accessible surface temperature limits defined by applicable safety standards.

Table of contents

1 About this guide	1
2 Components	2
Right	2
Left	2
Display	3
Keyboard area	4
Touchpad	4
Special keys	5
Action keys	6
Top	7
Bottom	7
Labels	8
3 Navigating the screen	11
Using touchpad and touch screen gestures	11
Tap	11
Scrolling (touchpad only)	11
One-finger scrolling (touch screen only)	12
One-finger swipe (touch screen only)	12
Two-finger pinch zoom	13
4 Power and battery	14
Factory-sealed battery	14
Charging the battery	14
5 Printing	15
6 Backing up, resetting, and recovering	16
Backing up	16
Resetting	16
Recovering	16
Installing the Chromebook Recovery Utility	17
Creating recovery media	17
Recovering the Googlebook operating system with recovery media	18
Setting up your computer after a reset or recovery	18
Erasing and reformatting the recovery media	18
7 More HP resources	19
8 Specifications	20
Input power	20

Operating environment	20
9 Electrostatic discharge	22
10 Accessibility	23
HP and accessibility	23
Finding the technology tools you need	23
The HP commitment.....	23
International Association of Accessibility Professionals (IAAP).....	24
Finding the best assistive technology.....	24
Assessing your needs.....	24
Accessibility for HP products	24
Standards and legislation.....	25
Standards.....	25
Mandate 376 - EN 301 549	25
Web Content Accessibility Guidelines (WCAG).....	25
Legislation and regulations	25
Useful accessibility resources and links.....	26
Organizations	26
Educational institutions.....	26
Other disability resources.....	27
HP links.....	27
Contacting support	27
Index	28

1 About this guide

This guide provides basic information for using and upgrading this product.

-
-  **WARNING!** Indicates a hazardous situation that, if not avoided, **could** result in serious injury or death.
 -  **CAUTION:** Indicates a hazardous situation that, if not avoided, **could** result in minor or moderate injury.
 -  **IMPORTANT:** Indicates information considered important but not hazard-related (for example, messages related to property damage). Warns the user that failure to follow a procedure exactly as described could result in loss of data or in damage to hardware or software. Also contains essential information to explain a concept or to complete a task.
 -  **NOTE:** Contains additional information to emphasize or supplement important points of the main text.
 -  **TIP:** Provides helpful hints for completing a task.
-

2 Components

Your computer features top-rated components. This chapter provides details about your components, where they are located, and how they work.

Right

Use the illustration and table to identify the component on the right side of the computer.

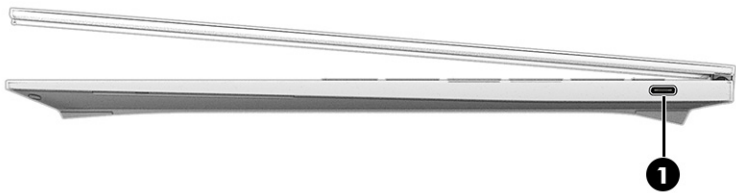 


Table 2-1 Right-side component and description

	Component	Description
(1)	USB Type-C® 10 Gbps port with HP Sleep and Charge	Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. - and - Connects a display device that has a USB Type-C connector, providing DisplayPort output.

Left

Use the illustration and table to identify the components on the left side of the computer.

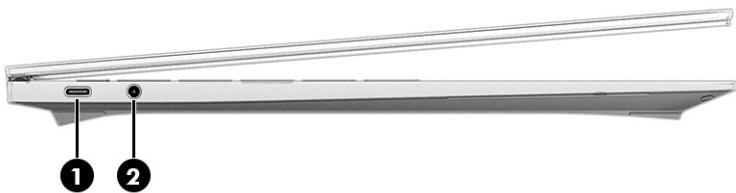 


Table 2-2 Left-side components and their descriptions

	Component	Description
(1)	USB Type-C 10 Gbps port with HP Sleep and Charge	Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the computer is off. NOTE: Use a standard USB Type-C charging cable or cable adapter (purchased separately) when charging a small external device. - and - Connects a display device that has a USB Type-C connector, providing DisplayPort output.
(2)	 Audio-out (headphone)/Audio-in (microphone) combo jack	Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional standalone microphones. WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>. NOTE: When a device is connected to the jack, the computer speakers are disabled.

Display

Use the illustration and table to identify the components on the display.

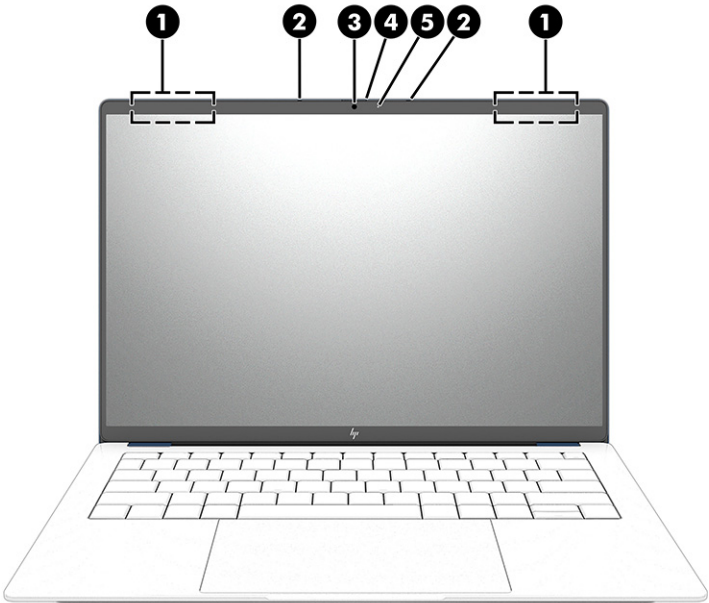 


Table 2-3 Display components and their descriptions

	Component	Description
(1)	WLAN antennas*	Send and receive wireless signals to communicate with wireless local area networks (WLANs).
(2)	Internal microphones (2)	Record sound.
(3)	Camera	Allows you to video chat, record video, and record still images. NOTE: Camera functions vary depending on the camera hardware and software installed on your product.
(4)	Camera privacy cover	By default, the camera lens is uncovered, but you can slide the camera privacy cover to block the camera’s view. To use the camera, slide the camera privacy cover in the opposite direction to reveal the lens.
(5)	Camera light	On (white): The camera is in use. Off: The camera is turned off by the software.

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

Keyboard area

Keyboards can vary by language.

Touchpad

The touchpad setting and component ia described here.

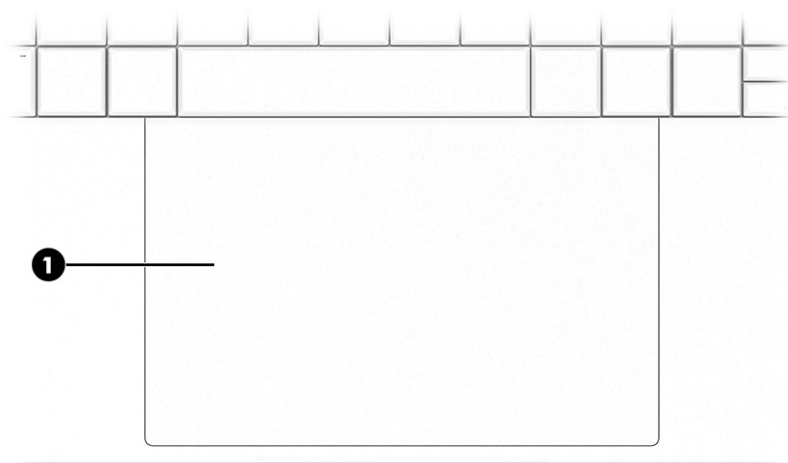 


Table 2-4 Touchpad component and its description

	Component	Description
(1)	Touchpad zone	Reads your finger gestures to move the pointer or activate items on the screen.

Special keys

Use the illustration and table to locate the special keys.

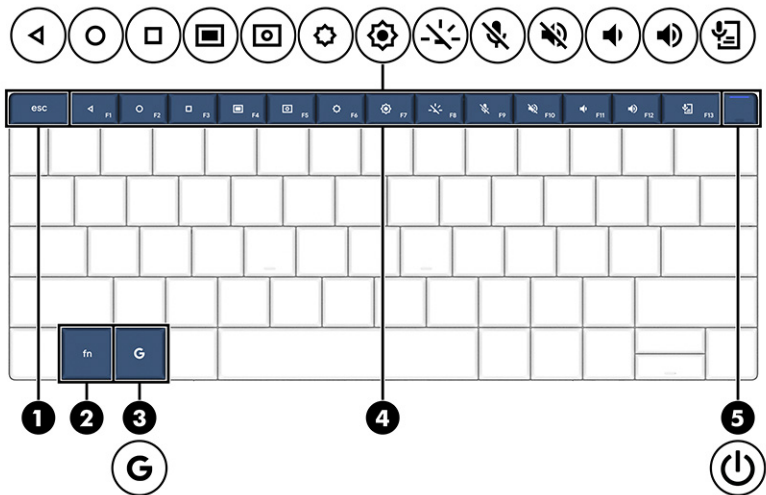 


Table 2-5 Special keys and their descriptions

	Component	Description
(1)	esc key	Activates certain computer functions when pressed in combination with other keys, such as tab or shift .
(2)	fn key	Executes frequently used system functions when pressed in combination with another key.
(3)	 Google™ key	Opens the <i>All apps</i> menu and a combined web and system search box.
(4)	Action keys	Execute frequently used system functions.
(5)	 Power key and fingerprint reader	Press the fingerprint reader to unlock the computer screen or to resume computer operations. - When the computer is off, press the key briefly to turn on the computer. - When the computer is in the sleep state, press the key briefly to exit sleep (select products only). IMPORTANT: Pressing and holding down the power key results in the loss of unsaved information. If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power key for at least 10 seconds to turn off the computer.



Action keys

Action keys perform specific functions and vary by computer. To determine which keys are on your computer, look at the icons on your keyboard and match them to the descriptions in this table.

- To use an action key, press and hold the key.

Select your language at the bottom of the page.

Table 2-6 Action keys and their descriptions

Icon	Key	Description
	Back	Displays the previous page in your browser history.
	Home	Closes the active window.
	Overview	Displays all open windows.
	Full screen	Display the current window at full-screen size.
	Screenshot	Opens the screenshot tool to capture on-screen images or videos.
	Brightness down	Press with the Google key to decrease keyboard backlight brightness.
	Brightness up	Press with the Google key to increase keyboard backlight brightness.
	Keyboard backlight	Enables or disables the keyboard backlight.
	Mute microphone	Enables or disables the microphone.
	Mute	Mutes speaker sound.
	Volume down	Decreases speaker volume incrementally while you hold down the key.
	Volume up	Increases speaker volume incrementally while you hold down the key.
	Dictation key	Enables or disables dictation or “speak to type” mode.

Top

Use the illustration and table to identify the top component.

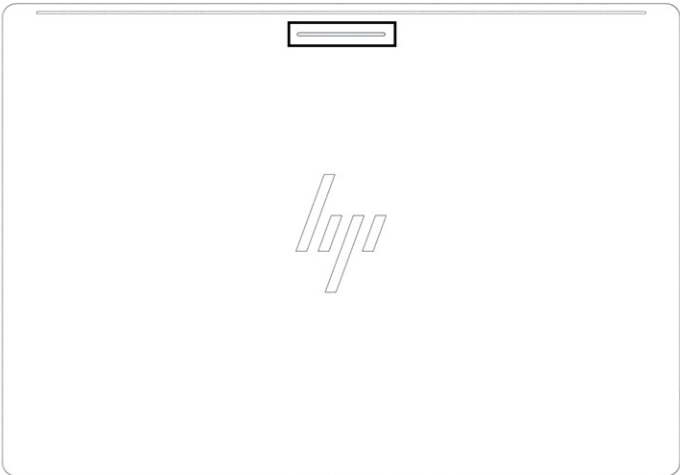 


Table 2-7 Top component and description

Components	Description
Glowbar	Indicates battery charge status. Green: The battery is charged to between 60% and 94% of the battery’s maximum charge. Yellow: The battery is charged to between 20% and 59% of the battery’s maximum charge. Red: The battery is charged to between 0% and 19% of the battery’s maximum charge. IMPORTANT: Charge your computer regularly to prevent accidental data loss.

Bottom

Use the illustration and table to identify the bottom components.



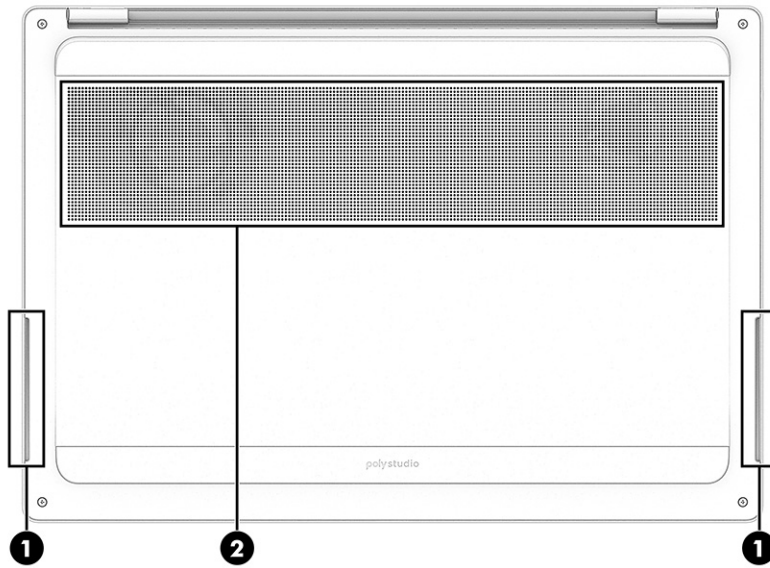 


Table 2-8 Bottom components and descriptions

	Component	Description
(1)	Speakers	Produce sound.
(2)	Vent	Enables airflow to cool internal components.

NOTE: The computer fan starts automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Labels

The labels affixed to the computer provide information you might need when you troubleshoot system problems or travel internationally with the computer. Labels might be in paper form or imprinted on the product.



IMPORTANT: Check the following locations for the labels described in this section: the bottom of the computer, inside the battery bay, under the service door, on the back of the display, or on the bottom of a tablet kickstand.

- **Service label**—Provides important information to identify your computer. When contacting support, you might be asked for the serial number, the product number, or the model number. Locate this information before you contact support.

Your service label will resemble one of the following examples. Refer to the illustration that most closely matches the service label on your computer.

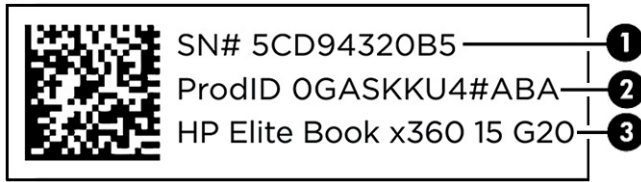 


Table 2-9 Service label components

Component
(1) Serial number
(2) Product ID
(3) HP product name

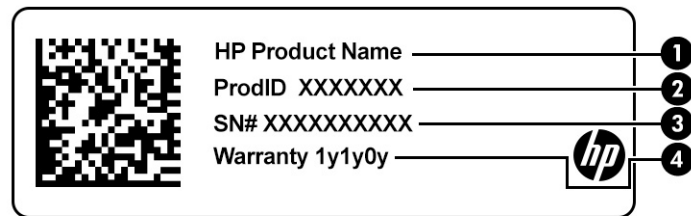 


Table 2-10 Service label components

Component
(1) HP product name
(2) Product ID
(3) Serial number
(4) Warranty period

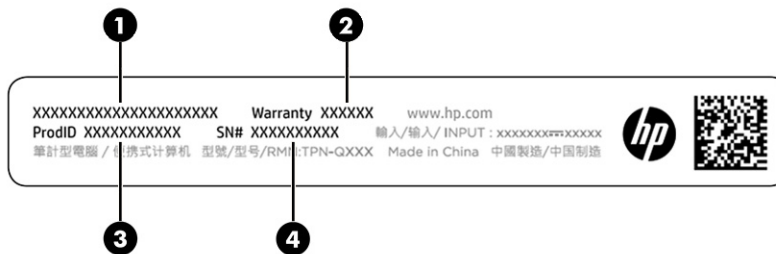 


Table 2-11 Service label components

Component
(1) HP product name

Table 2-11 Service label components (continued)

Component	
(2)	Warranty period
(3)	Product ID
(4)	Serial number

- Regulatory labels—Provide regulatory information about the computer.
- Wireless certification labels—Provide information about optional wireless devices and the approval markings for the countries or regions where the devices have been approved for use.

3 Navigating the screen

Depending on your computer model, you can navigate the computer screen using one or more methods.

- Use touch gestures directly on the computer screen.
- Use touch gestures on the touchpad.

Using touchpad and touch screen gestures

The touchpad helps you navigate the computer screen and control the pointer using simple touch gestures. To navigate a touch screen (select products only), touch the screen directly using gestures described in this chapter.

Tap

Use the tap or double-tap gesture to select or open an item on the screen.

- Point to an item on the screen, and then tap one finger on the touchpad zone or touch screen to select the item. Double-tap to open it.



- Tap two fingers on the touchpad zone to bring up a context-sensitive menu.



NOTE: To open the context-sensitive menu on the touchscreen, use a long press with a single finger.



 
Scrolling (touchpad only)

Scrolling is useful for moving up, down, or sideways on a page or image. Scrolling to the left or the right with two fingers scrolls the screen, if there is more content viewable to either side, or moves back and forth through web browser history.

- Place two fingers slightly apart on the touchpad zone, and then drag them up, down, left, or right.



NOTE: Scrolling speed is controlled by finger speed.

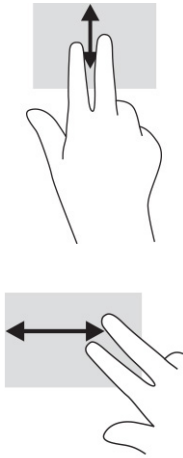


One-finger scrolling (touch screen only)

Scrolling to the left or the right with one finger moves back and forth through web browser history.

- Place one finger on the touch screen, and then drag it across the touch screen in a left or right motion.



 
NOTE: Scrolling speed is controlled by finger speed.

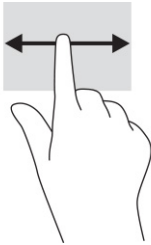

One-finger swipe (touch screen only)

Swiping one finger up from the bottom of the screen displays the Home screen. Swiping up from the bottom and then holding briefly displays an overview of recently-used apps.

 
- Place your finger on the bottom of the screen, quickly slide your finger up a short distance, and then lift it.

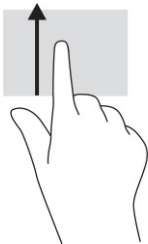

Two-finger pinch zoom

Use the two-finger pinch zoom to zoom out or in on images or text.

 - Zoom out by placing two fingers apart on the touch screen and then moving your fingers together.
- Zoom in by placing two fingers together on the touch screen and then moving your fingers apart.

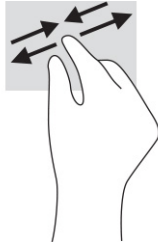

4 Power and battery

Your computer can operate on either battery power or external power. When the computer is running on battery power and an external power source is not available to charge the battery, it is important to monitor and conserve the battery charge.

Factory-sealed battery

You cannot easily replace the battery in this product. Removing or replacing the battery could affect your warranty coverage. If a battery is no longer holding a charge, contact support.

When a battery reaches the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

Charging the battery

When you connect the computer to external power, the battery begins to charge, and the Glowbar changes appearance.

1. Connect the AC adapter to the computer.
2. Verify that the battery is charging by checking the AC adapter and Glowbar light indicator located on the lid of the Googlebook™.
3. While the battery is charging, keep the AC adapter connected until the Glowbar indicator turns green.

5 Printing

You have several ways to print from your computer.

- Print with the built-in solution.
- Print using the HP Print app.

For more information, refer to the Googlebook support website.

6 Backing up, resetting, and recovering

This chapter provides information about the standard procedures of backing up your personal data, resetting your computer to original factory conditions, and recovering your operating system.

Backing up

You can back up your data to an optional USB flash drive or SD memory card or through Google Drive™.

For detailed information about creating a backup, go to <http://www.support.google.com>.

Resetting

A factory reset erases the information on your computer hard drive, including files in the Downloads folder. Before you reset, back up your files to an optional USB flash drive, to an SD memory card, or through Google Drive. The factory reset will not delete your files at these locations.

You might want to reset your computer in the following circumstances:

- You see an error message asking you to reset your device.
- You are having problems with your user profile or settings.
- You restarted your computer, and it still doesn't work properly.
- You want to change the owner of your computer.

To reset your computer:

1. Under the **Settings** menu, select **System**, and then select **Reset Options**.
2. In the **Reset Options** section, select **Erase all data (factory reset)**.
3. Confirm factory reset by selecting **Erase all data**.
4. After you complete the reset, you will be returned to the beginning of the setup experience.



NOTE: The account you sign in with after you reset your computer is recognized as the owner account.

Recovering

When your Googlebook doesn't work properly, you can perform a recovery.

A recovery reinstalls the operating system, software programs, and original factory settings. It deletes locally saved files and saved networks for all accounts. A system recovery does not affect Google accounts or data synced to Google Drive.



IMPORTANT: Recovery permanently erases everything on your computer hard drive, including your downloaded files. If possible, back up your files before you recover your computer.



NOTE: For more information about performing a system recovery on your computer, go to the Googlebook support site.

Before you begin the recovery process, you need the following prerequisites:

- A USB flash drive or SD memory card with a capacity of 32 GB or greater. All data is erased from this storage device when the recovery media is created, so back up all files from the device before you begin.
- A separate computer with internet access. You must also have administrative rights to the computer.
- A computer AC adapter. The computer must be plugged into AC power during recovery.
- You see an error message asking you to **Start the recovery process**. If this message is not already displayed:
 - Turn on the computer, press and hold the **esc+f3** keys, and then press the power button. The computer restarts, and the screen shows the “Start the recovery process” screen.

Installing the Chromebook Recovery Utility

The Chromebook™ Recovery Utility recovers the original operating system and software programs that were installed at the factory. You can install this utility from the Chrome™ Web Store on any other computer using a USB flash drive.



NOTE: Use this option if you do not have Internet access on your computer.

To install the Chromebook Recovery Utility:

- Open the Chrome Web Store, search for **Chromebook Recovery Utility**, select **Chromebook Recovery Utility** from the Apps list, and follow the on-screen instructions.

Creating recovery media

You can use recovery media to recover the original operating system and software programs that were installed at the factory.

To create recovery media:

1. Turn on a computer that has internet access.



NOTE: You must have administrative rights to the computer.

2. Open the Chrome browser and select the **Extensions** menu.
3. In the menu, select **Device Recovery Utility**.
4. Follow the on-screen instructions to create the recovery media.



NOTE: All data and partitions on your recovery media will be deleted. Do not remove the USB flash drive or SD memory card until the process is complete.

Recovering the Googlebook operating system with recovery media

Use these instructions to recover the Googlebook operating system on your computer using the recovery media that you created.

1. Disconnect any external devices connected to your computer, plug in the power cord, and then turn on the computer.
2. To enter recovery mode, press and hold **esc+f3**, and then press the power button. When the **Start the recovery process** screen appears, insert the recovery media into your computer. The recovery process begins immediately.
3. Wait while the integrity of the recovery media is verified.



NOTE: Do not disrupt the system recovery process after the verification step is complete.



NOTE: If an error message is displayed, you might need to run the Chrome Recovery Utility again or use a different USB flash drive or SD memory card.

4. When the “System Recovery is complete” message appears, remove the recovery media.

The computer restarts with the operating system reinstalled.

Setting up your computer after a reset or recovery

After a reset or recovery is complete, perform the initial setup process.

For details about setting up the computer, go to <http://www.support.google.com>.

Erasing and reformatting the recovery media

When you create recovery media, the USB flash drive or SD memory card is formatted as a recovery tool. After recovery, you must erase the recovery media to reuse your storage device. Follow these steps to use the Chromebook Recovery Utility to erase the recovery media.

1. Open the Chrome browser and select the **Extensions** menu.
2. Select **Device Recovery Utility**.
3. Select the **Settings** icon, and then select **Erase recovery media**.
4. Select the USB flash drive or SD memory card that you inserted, select **Continue**, and then select **Erase now**.
5. After the recovery media is erased, select **Done** to close the Chromebook Recovery Utility, and then remove the USB flash drive or SD memory card.

The media is ready to be formatted using a formatting tool provided by your operating system.

7 More HP resources

To locate resources that provide product details, how-to information, and more, use this table.

Table 7-1 Additional information

Resource	Contents
<i>Setup Instructions</i>	• How to set up the computer • Help to identify computer components
<i>HP Support Assistant</i> app (select products only) Install HP Support Assistant to get access to HP tools and troubleshooting for printers and peripherals. Go to the Chrome Web Store and install the HP Support Assistant app.	• Optimizes computer performance and resolves problems using the latest software updates, diagnostic tools, and guided assistance
HP website To access the latest user guide, go to http://www.hp.com/support, and follow the instructions to find your product. Then select Setup & User Guides.	• Support information • Ordering parts and finding additional help • Accessories available for the device
Worldwide support To get support in your language, go to http://www.hp.com/support, and select your country.	• Online chat with an HP technician • Support telephone numbers • HP service center locations
<i>Safety & Comfort Guide</i> Go to http://www.hp.com/ergo.	• Proper workstation setup • Guidelines for posture and work habits that increase comfort and decrease risk of injury • Electrical and mechanical safety information
<i>Regulatory, Safety, and Environmental Notices</i> This guide is provided in the box.	• Regulatory and safety information • Battery disposal information
<i>Limited Warranty*</i> Go to http://www.hp.com/go/orderdocuments.	• Warranty information

*You can find your HP Limited Warranty located with the user guides on your product and/or on the CD or DVD provided in the box. In some countries or regions, HP may provide a printed warranty in the box. For countries or regions where the warranty is not provided in printed format, you can request a copy from <http://www.hp.com/go/orderdocuments>. For products purchased in Asia Pacific, you can write to HP at POD, PO Box 161, Kitchener Road Post Office, Singapore 912006. Include your product name, and your name, phone number, and postal address.

8 Specifications

When you travel with or store your computer, the input power ratings and operating specifications provide helpful information.

Input power

The power information in this section might be helpful if you plan to travel internationally with the computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100 V to 240 V, 50 Hz to 60 Hz. Although the computer can be powered from a standalone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for use with this computer.

The computer can operate on DC power within one or more of the following specifications. The voltage and current for your computer is located on the regulatory label.

Table 8-1 DC power specifications

Input Power	Rating
Operating voltage and current	5 V DC @ 3 A / 9 V DC @ 3 A / 12 V DC @ 5 A / 15 V DC @ 5 A / 20 V DC @ 5 A - 100 W USB-C®
	5 V DC @ 3 A / 9 V DC @ 3 A / 12 V DC @ 5 A / 15 V DC @ 4.33 A / 20 V DC @ 3.25 A - 65 W USB-C
	5 V DC @ 3 A / 9 V DC @ 3 A / 10 V DC @ 5 A / 12 V DC @ 5 A / 15 V DC @ 4.33 A / 20 V DC @ 3.25 A - 65 W USB-C
	5 V DC @ 3 A / 9 V DC @ 3 A / 10 V DC @ 5 A / 12 V DC @ 5 A / 15 V DC @ 5 A / 20 V DC @ 4.5 A - 90 W USB-C
	5 V DC @ 3 A / 9 V DC @ 3 A / 12 V DC @ 5 A / 15 V DC @ 5 A / 20 V DC @ 5 A / 5 V DC USB-A port @ 2 A - 100 W USB-C + 10 W USB-A
	5 V DC @ 3 A / 9 V DC @ 3 A / 12 V DC @ 5 A / 15 V DC @ 5 A / 20 V DC @ 5 A / 28 V DC @ 5 A - 140 W USB-C



NOTE: This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

Operating environment

Use the operating specifications for helpful information when you travel with or store your computer.

Table 8-2 Operating environment specifications

Factor	Metric	U.S.
Temperature		



Table 8-2 Operating environment specifications (continued)

Factor	Metric	U.S.
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%
Maximum altitude (unpressurized)		
Operating	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating	-15 m to 12,192 m	-50 ft to 40,000 ft

9 Electrostatic discharge

Electrostatic discharge is the release of static electricity when two objects come into contact—for example, the shock you receive when you walk across the carpet and touch a metal door knob.

A discharge of static electricity from fingers or other electrostatic conductors can damage electronic components.



IMPORTANT: To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

- If removal or installation instructions direct you to unplug the computer, first be sure that it is properly grounded.
 - Keep components in their electrostatic-safe containers until you are ready to install them.
 - Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.
 - Use nonmagnetic tools.
 - Before handling components, discharge static electricity by touching an unpainted metal surface.
 - If you remove a component, place it in an electrostatic-safe container.
-

10 Accessibility

HP's goal is to design, produce, and market products, services, and information that everyone everywhere can use, either on a standalone basis or with appropriate third-party assistive technology (AT) devices or applications.

HP and accessibility

Because HP works to weave diversity, inclusion, and work/life into the fabric of the company, it is reflected in everything HP does. HP strives to create an inclusive environment focused on connecting people to the power of technology throughout the world.

Finding the technology tools you need

Technology can unleash your human potential. AT removes barriers and helps you create independence at home, at work, and in the community. AT helps increase, maintain, and improve the functional capabilities of electronic and information technology.

For more information, see [Finding the best assistive technology on page 24](#).

The HP commitment

HP is committed to providing products and services that are accessible for people with disabilities. This commitment supports the company's diversity objectives and helps ensure that the benefits of technology are available to all.

The HP accessibility goal is to design, produce, and market products and services that can be effectively used by everyone, including people with disabilities, either on a standalone basis or with appropriate assistive devices.

To achieve that goal, this Accessibility Policy establishes seven key objectives to guide HP actions. All HP managers and employees are expected to support these objectives and their implementation in accordance with their roles and responsibilities:

- Raise the level of awareness of accessibility issues within HP, and provide employees with the training they need to design, produce, market, and deliver accessible products and services.
- Develop accessibility guidelines for products and services, and hold product development groups accountable for implementing these guidelines where competitively, technically, and economically feasible.
- Involve people with disabilities in the development of accessibility guidelines, and in the design and testing of products and services.
- Document accessibility features, and make information about HP products and services publicly available in an accessible form.
- Establish relationships with leading AT and solution providers.
- Support internal and external research and development that improves AT relevant to HP products and services.
- Support and contribute to industry standards and guidelines for accessibility.

International Association of Accessibility Professionals (IAAP)

IAAP is a not-for-profit association focused on advancing the accessibility profession through networking, education, and certification. The objective is to help accessibility professionals develop and advance their careers and to better enable organizations to integrate accessibility into their products and infrastructure.

As a founding member, HP joined to participate with other organizations to advance the field of accessibility. This commitment supports HP's accessibility goal of designing, producing, and marketing products and services that people with disabilities can effectively use.

IAAP will make the profession strong by globally connecting individuals, students, and organizations to learn from one another. If you are interested in learning more, go to <http://www.accessibilityassociation.org> to join the online community, sign up for newsletters, and learn about membership options.

Finding the best assistive technology

Everyone, including people with disabilities or age-related limitations, should be able to communicate, express themselves, and connect with the world using technology. HP is committed to increasing accessibility awareness within HP and with our customers and partners.

Whether it's large fonts that are easy on the eyes, voice recognition that lets you give your hands a rest, or any other AT to help with your specific situation—a variety of ATs make HP products easier to use. How do you choose?

Assessing your needs

Technology can unleash your potential. AT removes barriers and helps you create independence at home, at work, and in the community. AT helps increase, maintain, and improve the functional capabilities of electronic and information technology.

You can choose from many AT products. Your AT assessment should allow you to evaluate several products, answer your questions, and facilitate your selection of the best solution for your situation. You will find that professionals qualified to do AT assessments come from many fields, including those licensed or certified in physical therapy, occupational therapy, speech/language pathology, and other areas of expertise. Others, while not certified or licensed, can also provide evaluation information. You will want to ask about the individual's experience, expertise, and fees to determine if they are appropriate for your needs.

Accessibility for HP products

These links provide information about accessibility features and AT, if applicable and available in your country or region, that are included in various HP products. These resources will help you select the specific AT features and products most appropriate for your situation.

- HP Aging & Accessibility: Go to <http://www.hp.com>, type **Accessibility** in the search box. Select **Office of Accessibility at HP**.
- HP computers: For Windows products, go to <http://www.hp.com/support>, type **Windows Accessibility Options** in the **Search our knowledge library** search box. Select the appropriate operating system in the results.
- HP Shopping, peripherals for HP products: Go to <http://store.hp.com>, select **Shop**, and then select **Monitors** or **Accessories**.

If you need additional support with the accessibility features on your HP product, see [Contacting support on page 27](#).

Additional links to external partners and suppliers that may provide additional assistance:

- [Microsoft Accessibility information \(Windows and Microsoft Office\)](#)
- [Google Products accessibility information \(Android, Chrome, Google Apps\)](#)

Standards and legislation

Countries worldwide are enacting regulations to improve access to products and services for persons with disabilities. These regulations are historically applicable to telecommunications products and services, PCs and printers with certain communications and video playback features, their associated user documentation, and their customer support.

Standards

The US Access Board created Section 508 of the Federal Acquisition Regulation (FAR) standards to address access to information and communication technology (ICT) for people with physical, sensory, or cognitive disabilities.

The standards contain technical criteria specific to various types of technologies, as well as performance-based requirements which focus on functional capabilities of covered products. Specific criteria cover software applications and operating systems, web-based information and applications, computers, telecommunications products, video and multimedia, and self-contained closed products.

Mandate 376 – EN 301 549

The European Union created the EN 301 549 standard within Mandate 376 as an online toolkit for public procurement of ICT products. The standard specifies the accessibility requirements applicable to ICT products and services, with a description of the test procedures and evaluation methodology for each requirement.

Web Content Accessibility Guidelines (WCAG)

Web Content Accessibility Guidelines (WCAG) from the W3C's Web Accessibility Initiative (WAI) helps web designers and developers create sites that better meet the needs of people with disabilities or age-related limitations.

WCAG advances accessibility across the full range of web content (text, images, audio, and video) and web applications. WCAG can be precisely tested, is easy to understand and use, and allows web developers flexibility for innovation. WCAG 2.2 has also been approved as [ISO/IEC 40500:2012](#).

WCAG specifically addresses barriers to accessing the web experienced by people with visual, auditory, physical, cognitive, and neurological disabilities, and by older web users with accessibility needs. WCAG 2.2 provides characteristics of accessible content:

- **Perceivable** (for instance, by addressing text alternatives for images, captions for audio, adaptability of presentation, and color contrast)
- **Operable** (by addressing keyboard access, color contrast, timing of input, seizure avoidance, and navigability)
- **Understandable** (by addressing readability, predictability, and input assistance)
- **Robust** (for instance, by addressing compatibility with ATs)

Legislation and regulations

Accessibility of IT and information has become an area of increasing legislative importance.

The [HP policy landscape](#) website provides information about key legislation, regulations, and standards in the following locations:

- United States
- Canada
- Europe
- Australia

Useful accessibility resources and links

These organizations, institutions, and resources might be good sources of information about disabilities and age-related limitations.



NOTE: This is not an exhaustive list. These organizations are provided for informational purposes only. HP assumes no responsibility for information or contacts you encounter on the internet. Listing on this page does not imply endorsement by HP.

Organizations

These organizations are a few of the many that provide information about disabilities and age-related limitations.

- American Association of People with Disabilities (AAPD)
- The Association of Assistive Technology Act Programs (ATAP)
- Hearing Loss Association of America (HLAA)
- Information Technology Technical Assistance and Training Center (ITTATC)
- Lighthouse International
- National Association of the Deaf
- National Federation of the Blind
- Rehabilitation Engineering & Assistive Technology Society of North America (RESNA)
- Telecommunications for the Deaf and Hard of Hearing, Inc. (TDI)
- W3C Web Accessibility Initiative (WAI)

Educational institutions

Many educational institutions, including these examples, provide information about disabilities and age-related limitations.

- California State University, Northridge, Center on Disabilities (CSUN)
- University of Wisconsin - Madison, Trace Center
- University of Minnesota computer accommodations program

Other disability resources

Many resources, including these examples, provide information about disabilities and age-related limitations.

- ADA (Americans with Disabilities Act) Technical Assistance Program
- ILO Global Business and Disability network
- EnableMart
- European Disability Forum
- Job Accommodation Network
- Microsoft Enable

HP links

These HP-specific links provide information that relates to disabilities and age-related limitations.

[HP comfort and safety guide](#)

[Accessibility at HP](#)

Contacting support

HP offers technical support and assistance with accessibility options for customers with disabilities.



NOTE: Support is in English only.

- Customers who are deaf or hard of hearing who have questions about technical support or accessibility of HP products:
 - Use TRS/VRS/WebCapTel to call (877) 656-7058 Monday through Friday, 6 a.m. to 9 p.m. Mountain Time.
 - Visit [Accessibility at HP](#).
- Customers with other disabilities or age-related limitations who have questions about technical support or accessibility of HP products:
 - Call (888) 259-5707 Monday through Friday, 6 a.m. to 9 p.m. Mountain Time.

Index

- A**
- accessibility 23-25, 27
 - accessibility needs
 - assessment 24
 - action keys 6
 - back 6
 - brightness down 6
 - brightness up 6
 - dictation key 6
 - full screen 6
 - home 6
 - identifying 5
 - keyboard backlight 6
 - mute 6
 - mute microphone 6
 - overview 6
 - screenshot 6
 - volume down 6
 - volume up 6
 - assistive technology (AT)
 - finding 24
 - purpose 23
 - AT (assistive technology)
 - finding 24
 - purpose 23
 - audio-in (microphone) jack,
 - identifying 3
 - audio-out (headphone) jack,
 - identifying 3
- B**
- back action key 6
 - backing up 16
 - battery
 - charging 14
 - factory sealed 14
 - Bluetooth label 8
 - brightness down action key 6
 - brightness up action key 6
- C**
- camera 4
 - identifying 4
 - camera light, identifying 4
 - camera privacy cover,
 - identifying 4
- Chromebook Recovery Utility,
 - installing 17
- components
 - bottom 7
 - display 3
 - keyboard area 4
 - left side 2
 - right side 2
 - top 7
- customer support,
 - accessibility 27
- E**
- electrostatic discharge 22
 - esc key, identifying 5
- F**
- fingerprint reader 5
 - fingerprint reader, identifying 5
 - fn key, identifying 5
 - full screen action key 6
- G**
- glowbar, identifying 7
 - Google key, identifying 5
- H**
- headphone (audio-out) jack 3
 - home action key 6
 - HP Assistive Policy 23
 - HPSA, identifying 19
- I**
- input power 20
 - internal microphones,
 - identifying 4
 - International Association of Accessibility Professionals 24
- J**
- jacks
 - audio-in (microphone) 3
 - audio-out (headphone) 3
- K**
- keyboard backlight action key 6
- keys
 - esc 5
 - fn 5
 - Google 5
 - power 5
- L**
- labels
 - Bluetooth 8
 - regulatory 8
 - serial number 8
 - service 8
 - wireless certification 8
 - WLAN 8
 - lights
 - camera 4
- M**
- microphone (audio-in) jack,
 - identifying 3
 - mute action key 6
 - mute microphone action key 6
- O**
- operating environment 20
 - overview action key 6
- P**
- ports
 - USB Type-C Plus with HP Sleep and Charge 2, 3
 - power key, identifying 5
 - printing 15
 - product name and number, computer 8
- R**
- recovery media
 - creating 17
 - erase 18
 - recovery, performing 16
 - regulatory information
 - regulatory label 8
 - wireless certification labels 8

resetting 16
resources, accessibility 26

S

screenshot action key 6
scrolling touch screen gesture 12
scrolling touchpad gesture 11
Section 508 accessibility
 standards 25
serial number, computer 8
service labels, locating 8
speakers, identifying 8
specifications 20
standards and legislation,
 accessibility 25
support 19
swiping touch screen gesture 12
system recovery
 Chrome operating system 18
 Chromebook Recovery
 Utility 17
 recovery media 17

T

tap gestures 11
touch screen gestures
 one-finger scrolling 12
 one-finger swipe 12
 two-finger pinch zoom 13
Touchpad and touch screen
 gestures, tap 11
touchpad gestures, scrolling 11
touchpad zone, identifying 4, 5
traveling with the computer 8
two-finger pinch zoom touch
 screen gesture 13

U

USB Type-C port with HP Sleep and
 Charge, identifying 2, 3

V

vent, identifying 8
volume down action key 6
volume up action key 6

W

wireless certification label 8
WLAN antennas, identifying 4
WLAN device 8
WLAN label 8