

# Installation, Use & Maintenance Instruction Manual

**SL 80 FRESCO 900**  
**SL 80 FRESCO 1200**



GB



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. This appliance is marked according to the European directive 2002/96/EC on waste electrical and electronic equipment (WEEE).

# CONTENTS

GB

**Warnings**

**Installation**

**Working**

**Maintenance**

**Wiring diagram**


## WARNINGS


\* **The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure they do not play with the appliance.**

\* **The air sucked can't be conveyed through or into a duct used to let out fumes from appliances fed by energy other than electric power (eg. centralized heating, radiators, water-heaters, etc.).**

\* **To evacuate the air outlet, please comply with the pertaining rules given by competent authorities.**

\* Provide the room with an adequate aeration when a cooker hood and appliances fed by energy other than electric power (gas-, oil-, or coal- stoves, etc.) are used simultaneously. The cooker hood, when evacuating the sucked air, could generate a negative pressure in the room- which can't exceed the limit of 0.04 mbar, in order to avoid the suck of exhausts deriving from the heat-source. Therefore the room should be provided with air-intakes to allow a constant flow of fresh air.

**If the rating label in the cooker-hood shows the symbol  , the appliance is built in class II° and it does not need any earth connection.**

**If the rating label in the cooker-hood does not show the symbol  , the appliance is built in class I° and it needs the earth connection.**

\* When performing the electrical connections on the appliance, please make sure that the current-tap is provided with earth connection and that voltage values correspond to those indicated on the label placed inside the appliance itself.

\* Before carrying out any cleaning or maintaining operations, the appliance needs to be removed from the electric grid. If the appliance is not provided with a non-separable flexible cable and plug, or with another device ensuring omnipolar disconnections from the grid, with an opening distance between the contacts of at least 3 mm, then such disconnecting devices must be supplied within the fixed installation.

**If the fixed appliance is endowed with a supply cord and a plug, the appliance has to be put in a place where the plug can be reached easily.**

\* **The use of materials which can burst into flames should be avoided in close proximity of the appliance. When frying, please pay particular attention to fire risk due to oil grease. Being highly inflammable, fried oil is especially dangerous. Do not use uncovered electric grills. In order to avoid possible fire risk, all instructions for grase-filter cleaning and for removing eventual grease deposits should be strictly followed.**

**Do not flambé under the range hood.**

**CAUTION: Accessible parts may become hot when used with cooking appliances.**

# INSTALLATION

Before installing the appliance, make sure that none of the parts is damaged in any way.

In case of damaged parts, contact your retailer and do not proceed with installation.

Read all of the following instructions with care before installing the appliance.

- Use an air outlet pipe of the shortest possible length.

- Limit the number of pipe bends.

- Use a material approved by standards and regulations.

- Avoid any sudden changes in pipe section (recommended constant diameter: 150 mm or equal surface area).

\* Before installing the appliance, in order not to damage the appliance itself, the metal grease filter should be removed. Such filter can be removed by pushing the special filter handle toward the back side of the cooker hood and turning it downwards so to unfasten it from its slot (Fig. 1).

Wall stirrup-fixing.

\* By using the special drilling jig (Fig. 2 X), perforate the wall according to the pattern indicated by the jig itself, and pay attention in order not to damage water pipes and electric wires. Perforation should be performed with a  $\varnothing$  8 mm wall-drill. Then insert into the proper plastic reinforcements (Fig.2 A). The hood-bearing stirrup (Fig. 2 S) can be applied by using the screws provided with the equipment (Fig.2 B). Now hook the cooker hood onto its bearing (Fig.3) and then adjust horizontally and vertically the position of the appliance by acting on the special metric screws (Fig. 4 V,T).

## Fixing the ornamental chimney


\* Before fixing the chimney, place the electric feeding equipment into the ornamental pipe and provide it with a hole for the air outlet if the appliance is used in its sucking version.

Fix the supporting bracket of the chimney to the wall or to ceiling (fig. 5), install both chimneys in their suitable place above the hood, then lift the upper chimney (the internal one) until it reaches the supporting bracket, previously installed.

Fix the upper chimney both in the right and in the left side through the two screws supplied.

**Warning:** Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

## WORKING

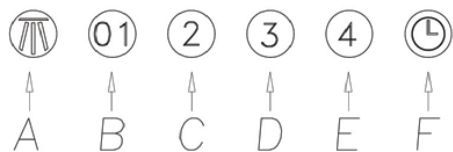

- A: Light switch on/off
- B: Motor switch on/off (1st rate level)
- C: 2nd rate level switch
- D: 3rd rate level switch
- E: 4th rate level switch
- F: 10-minute timer.

## MAINTENANCE

An accurate maintenance guarantees good functioning and long-lasting performance.

\* Particular care is due to the grease filter panel. It can be removed by pushing its special handle toward the back-side of the cooker hood and turning the filter downwards so to unfasten it from its slot (Fig.1).

To insert the filter just perform the opposite operation.

After 30 hours working the push button control panel will signal the saturation of the grease filter by lighting all the buttons.

The grease filter needs cleaning by regular hand-washing or in dishwashers every two months at least or depending on its use.

\* To clean the appliance itself tepid water and neutral detergent are recommended, while abrasive products should be avoided. For steel appliances specialized detergents are recommended (please follow the instructions indicated on the product itself to obtain the desired results).

\* If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

There is a fire risk if cleaning is not carried out **in accordance with the instructions.**

To replace the **LED lamps**, remove first the glass-blocking ring (Fig. 6A), by levering with a screw-driver and thus removing the opaque glass (Fig. 6B)- when performing this operation hold the opaque glass carefully.

Remove the lamp (Fig. 6C) without touching it with uncovered hands.

Replace it with another lamp of the same kind. After the replacement, reinsert the glass-blocking ring and fasten it.

# WIRING DIAGRAM

