


# USER'S GUIDE

Safety Instructions .....	1
Installation.....	2
Temperature Controls.....	3
Interior Features.....	4-8
Ice & Water Service.....	9-13
Water Filter .....	12-13
Care & Cleaning .....	13-14
Food Storage Tips .....	15
Food Storage Chart .....	16
Storage & Maintenance .....	17
Before You Call .....	18
Warranty .....	19
Guide de L'Utilisateur.....	20
Guia del Usuario .....	40

Should you need assistance, it is helpful to have the complete model and serial number identification of your refrigerator. This is on a data plate located at the top of the fresh food compartment. Record these numbers below for easy access.

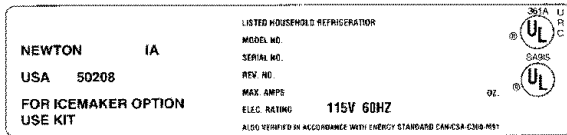

Model Number
Serial Number
Revision Number
Date of Purchase

For additional questions, please contact us:

Maytag Appliances Sales Company  
 1-800-688-9900 USA  
 1-800-688-2002 CANADA  
 1-800-688-2080 TTY USA  
 (Mon.-Fri., 8am-8pm Eastern Time)  
 Internet: <http://www.maytag.com>

**Important:** For service and warranty information, see back cover.

**Note:** In our continuing effort to improve the quality of our products it may be necessary to make changes to the appliance without revising this guide.

**Important:** Keep this guide and sales receipt in a safe place for future reference. Proof of original purchase is needed for warranty service.




# Important Safety Instructions .....

**⚠ WARNING** — When using your appliance, always follow basic precautions, including the following:

- Use the refrigerator only for its intended purpose.
- To prevent possibility of hazard due to electrical shock, never plug the refrigerator into a receptacle which has not been grounded adequately and in accordance with the local and national electrical codes. See the ⚠ warning and grounding instructions.
- Unplug the refrigerator before cleaning or replacing a light bulb.
- In case of power failure, minimize door openings. If the power failure is of a long duration, protect the food by placing blocks of dry ice on top of the packages or check with a local frozen foods locker about temporary storage. Frozen foods which have thawed completely should not be refrozen and should be discarded.
- Any electrical service cord that becomes frayed or damaged should be immediately repaired or replaced. Never unplug your appliance by pulling on the power cord.
- Your refrigerator should not be operated in the presence of explosive fumes.
- Children should not climb, hang or stand on the shelves of this refrigerator.

**Important:** Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigerators are still dangerous... even if they will sit for "just a few days." If you are getting rid of your old refrigerator, please follow the instructions below to help prevent accidents.


- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

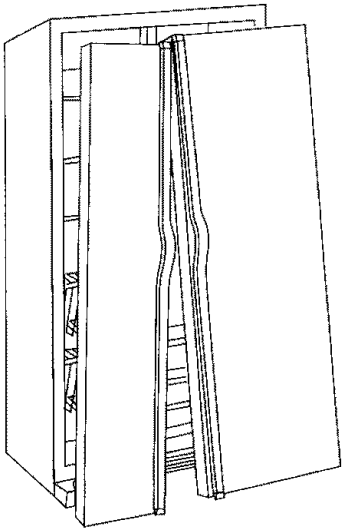

**⚠ WARNING** — This appliance is designed to operate on a normal 115 volt, 15 amp, 60 cycle line. There should be a separate, grounded circuit serving this appliance only. Do not use an extension cord. Do not use any device that will alter the electrical performance of this appliance.

This appliance is equipped with a three-pronged grounding plug for your protection against possible electrical shock hazards. It must be plugged into a grounding receptacle. Where a standard two-prong wall receptacle is encountered, it is the personal responsibility and obligation of the customer to have it replaced with a properly grounded three-prong wall receptacle. Do not under any circumstances, cut or remove the third (ground) prong from the power cord. Do not use an adapter plug. Do not use an extension cord.

POWER SUPPLY CORD WITH 3-PRONG GROUNDING PLUG

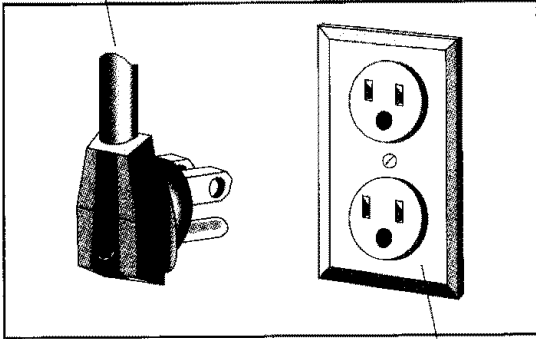

GROUNDING TYPE WALL RECEPTACLE

**Save These Instructions**





# Installation

Your new refrigerator was packed carefully for shipment. Remove and discard shelf packing clips (if used) located just above each shelf where they hook onto the frame. To remove plastic clips wiggle the clips sideways and pull straight out.

## Location

- Allow for a free flow of air through the front base grille.
- Install the refrigerator where the room temperature will not go below 55° F. With temperatures below 55°, the refrigerator will not run frequently enough to maintain proper temperature in the freezer.
- Allow a minimum 1/2" clearance on the sides, top and back for ease of installation. If the refrigerator is placed with the door hinge side against a wall, you may want to allow additional space so the door can be opened wider.
- Use caution when installing the unit on vinyl or hardwood floors so as not to mark or otherwise damage the flooring. A piece of plywood, a rug or other material should be used to protect the floor while positioning the unit.

## Energy Saving Tips

- Locate the refrigerator away from heat producing appliances such as the range or dishwasher, heat vents and direct sunlight.
- Level the refrigerator and do not block ventilation around the front grille.
- Keep the freezer full to near capacity so less cold air will escape during door openings. When the freezer is less than two-thirds full, place milk cartons half full of water in the freezer.
- Let hot dishes cool slightly before putting into the refrigerator or freezer.
- Cover liquids.
- Wipe moisture from the outside of containers before placing them into the refrigerator.
- Avoid opening the doors too often.

## Leveling

To enhance appearance and to maintain optimal performance, the refrigerator must be level. Your refrigerator has wheels which can be adjusted for leveling:

- Remove the lower hinge covers (see fig. 1). To do this, grasp each cover near the hinge and apply pressure. The attachment tabs will snap out, allowing removal of the covers.
- Adjust the wheels with a screwdriver (see fig. 2).
- To lock the cabinet in place, turn down both leveling/lock feet, located near the front wheels (see fig 3).
- Replace the hinge covers.
- If the floor is not level and it is necessary to raise the rear of the cabinet, we suggest rolling the rear wheels onto a piece of plywood or other shim material.

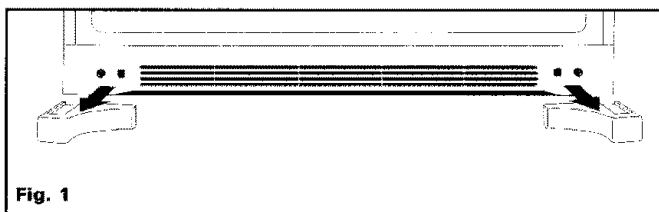


Fig. 1

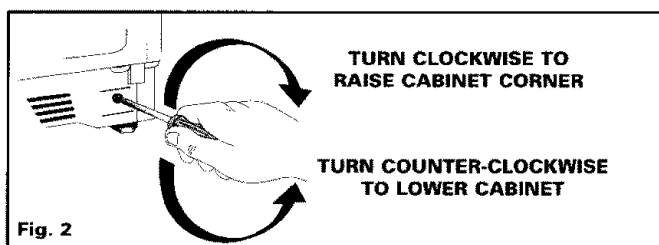


Fig. 2


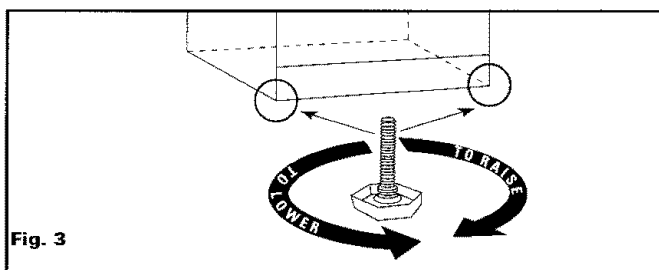


Fig. 3



# Temperature Controls .....

Your refrigerator has Maytag's Dual Cool™ freshness design to control fresh and frozen food temperatures. The controls are located at the top front of the fresh food compartment.

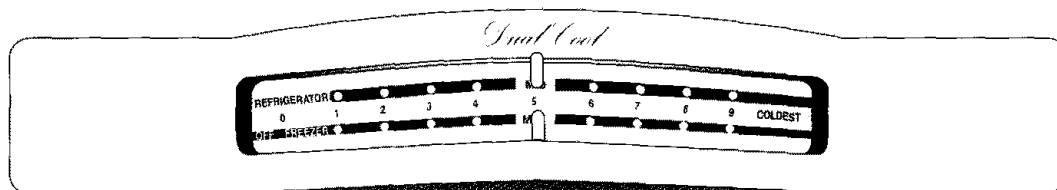

To adjust the controls, move the slide to the left or right as desired.

## Initial Dual Cool™ Control Settings

- The refrigerator and freezer controls have settings from 1 (warmest) to 9 (coldest). Initially set both controls on 5.
- Let the refrigerator run at least 8-12 hours before adding food.

## Warm Cabinet Surfaces

At times, the front of the refrigerator cabinet may be warm to the touch. This is a normal occurrence that helps prevent moisture from condensing on the cabinet. The condition will be more noticeable when you first start the refrigerator, during hot weather and after excessive or lengthy door openings.

<b>Dual Cool™ Control Guide</b>	
<b>Refrigerator:</b>	<b>Move Control to:</b>
Too Warm	Next higher setting.
Too Cold	Next lower setting.
<b>Freezer:</b>	<b>Move Control to:</b>
Too Warm	Next higher setting.
Too Cold	Next lower setting.
<b>Turn refrigerator Off</b>	
Move the freezer control to OFF.	

## No Defrosting

Your refrigerator is designed to defrost automatically.

**Note:** During the automatic defrost cycle, you may notice a red glow/reflection in the vents on the back wall of the freezer compartment and you may hear the sound of water droplets coming into contact with the defrost heater. This is normal during the defrost cycle.

**NOTE:** Setting the freezer control to OFF stops cooling in BOTH compartments. It does not shut off power to the refrigerator.

## Adjusting the Dual Cool™ Controls

- 24 hours after adding food, you may decide that one or both compartments should be colder or warmer. If so, adjust the control(s) as indicated in the table above.
- Except when starting the refrigerator, do not change either control more than one number at a time.
- Allow 24 hours for temperatures to stabilize before resetting.
- Changing either control will have some effect on the temperature of the other compartment.






# Interior Features.....

## Shelves

### Tempered Glass Cantilever Shelves

These shelves are adjustable so the refrigerator interior can be customized for varying food storage needs.

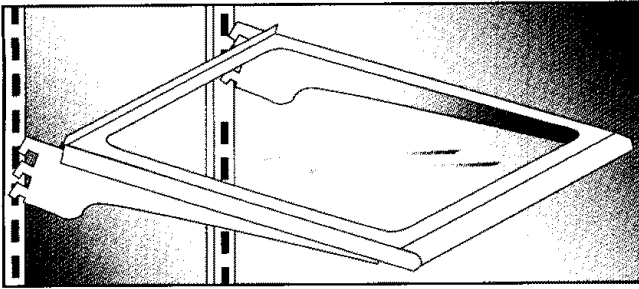

**To remove a shelf:** Unload. Lift up the rear of the shelf slightly, pull the shelf straight out.

**To move a shelf to a different position:** After removing, tilt up the front edge of the shelf. Insert the hooks into the desired openings and let the shelf settle into place. Be sure the shelf is securely locked at the rear.

### Spill-Catcher™ Shelves (select models)

Spill-Catcher™ shelves have a spill retainer edge to contain spills and make clean-up easier.

Some Spill-Catcher™ shelves, feature the Easy Glide slide-out feature. To slide out, grasp the front of the shelf and pull forward. Push the shelf in to return to original position.

**WARNING** — Never attempt to adjust a shelf that is loaded with food (except the Elevator™ shelf - see above).

### Elevator™ Shelf (select models)

The Elevator™ shelf is equipped with a spill-retaining edge and the Easy Glide slide-out feature. It can be adjusted up or down without unloading. To slide out, grasp the front of the shelf and pull forward. Push the shelf in to return to original position.


**To adjust the Elevator™ shelf:** Unfold the recessed crank handle so it is at a right angle to the shelf front. Crank to the right (clockwise) to raise the shelf, or to the left (counterclockwise) to lower the shelf.

 
**To remove:** Unload the shelf. Grasp the shelf front and pull completely forward. Press up on the stops (both sides) and continue pulling the shelf forward, clear of the frame.

**To replace:** Align the shelf to the frame and push it all the way back. It is not necessary to depress the stops for reinstallation.

In ordinary use, the Elevator™ shelf frame assembly does NOT require removal. Though unlikely, and not recommended, the correct removal procedure is as follows:


- Unload the shelf completely.
- Slide the shelf forward about two inches and manually move the two rear latches toward the shelf center.
- While supporting the entire shelf and frame from underneath, lift slightly and rotate the assembly approximately 30° to allow the rear mechanism to clear the vertical rear side rails.
- The entire assembly can then be moved forward and clear of the refrigerator compartment.
- To reinstall, reverse the removal procedure. Be sure the shelf is in a level position. When the sliding shelf is pushed to the rear, it will reposition the rear latches to their correct operating position.

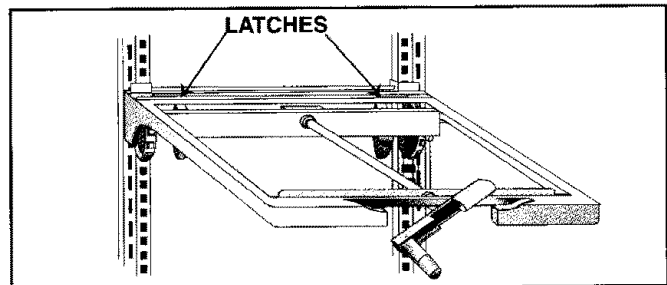




## Interior Features (continued) .....


The **Pick-Off Door Bins** (select models) are designed to accommodate gallon-plus sized containers. They are adjustable and easily removed. To remove: Lift the bin up until it clears the retainers on the door liner, then pull the bin straight out. Reverse the above procedure to replace the bin.

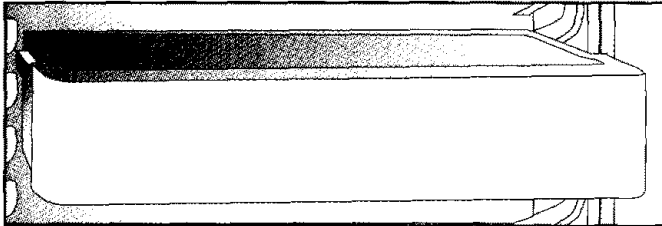


**Keepers** (select models) fit in refrigerator and freezer door shelves to secure bottles and other containers in place when the door is opened or closed. Keepers are adjusted by sliding side to side.

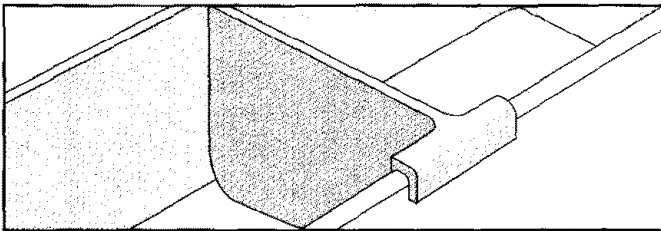


The **Tall Bottle Retainer** (select models) prevents tall bottles from tipping forward. It is adjusted by sliding side to side.

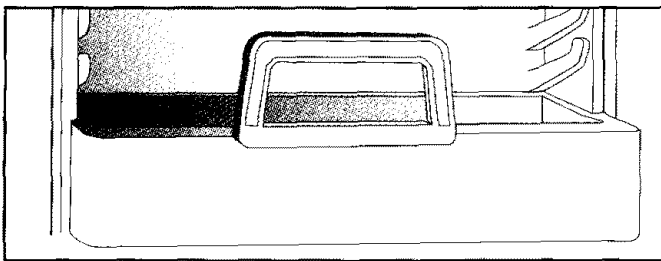


**Tilt Out Refrigerator Door Bins** (select models) tilt out to conveniently load or retrieve awkward containers such as tall, liter bottles, or bagged items.

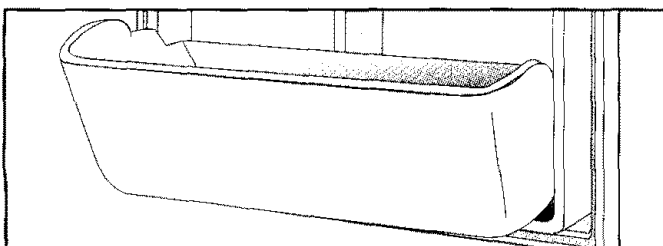


The **Dairy Compartment**, located in the refrigerator door, may be equipped with a Keeper or Butter Dish.

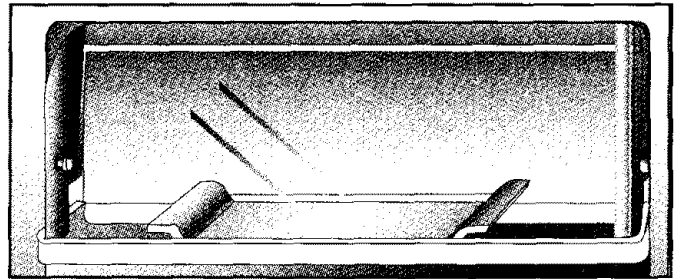


The **Egg Cradle** (style may vary/select models) holds a "dozen-plus" eggs. It can be removed to carry to a work area or to be washed.

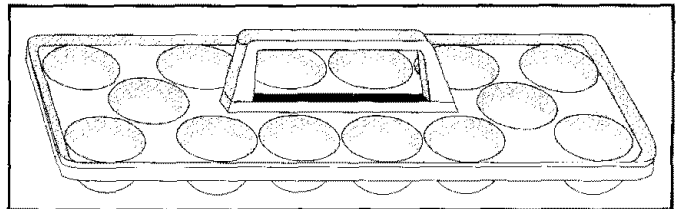

The **Multi-Use Rack** (select models) provides a place for storing wine horizontally. The rack also holds canned beverages or an egg carton. Position the rack on the left hand side of a refrigerator shelf. **Note:** The Multi-Use Rack cannot be positioned on an **Elevator™ Shelf**.

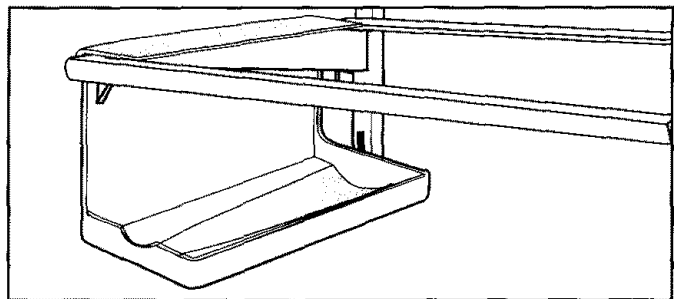

The **12-Pack Rack** (select models) suspends from any of the spill-proof refrigerator shelves. It hooks over the framework wires under the shelf. The sloped design allows cans to roll forward as one is removed.

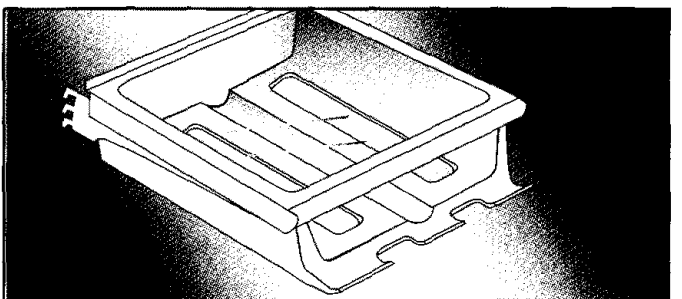

## Freezer Compartment

The freezer shelves (wire or glass) rest on support rails molded into the wall of the freezer. Select models offer freezer shelves that slide forward for easier access to items at the rear of the shelf.

**To remove a freezer shelf:** Completely unload the shelf and lift straight up. Tilt the shelf sideways and pull it straight out. To replace, reverse the above procedure.

The freezer basket(s) (number will vary by model) slide out for more convenient access to the frozen foods. The basket(s) rest and slide on support rails molded into the wall of the freezer.

**To remove a freezer basket:** Slide the basket out until it stops. Depress tabs located at the rear of each side of the basket, continue sliding forward until basket is out. To replace, line the basket up with the support rails and slide it into place.


### StairStep™ Freezer Baskets (select models)

StairStep™ freezer baskets interact for easier access to contents in the lower part of the freezer.

Pull the lower basket forward to gain access to its contents. Continue pulling the lower basket to open the upper basket as well. Reverse to close both baskets.


Pulling the upper basket open provides access to its contents. The lower basket will also move forward however it will not open.

**To remove the baskets:** Pull forward on the upper basket until it stops. Lift up slightly and continue pulling forward. The baskets are removed together. Reverse the above procedure to replace the baskets.

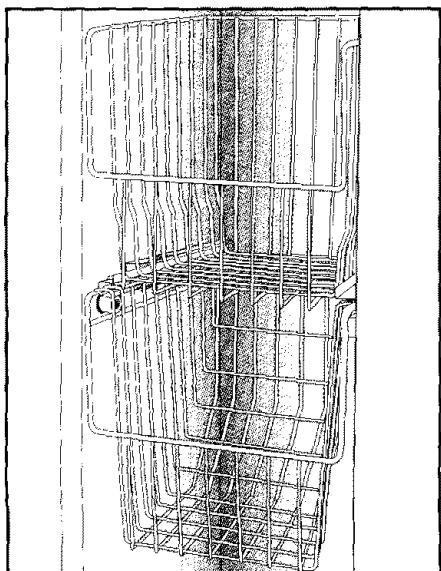

## Drop Down Freezer Door Baskets (select models)

Provide convenient storage space for frozen food items that tend to shift such as bagged vegetables.

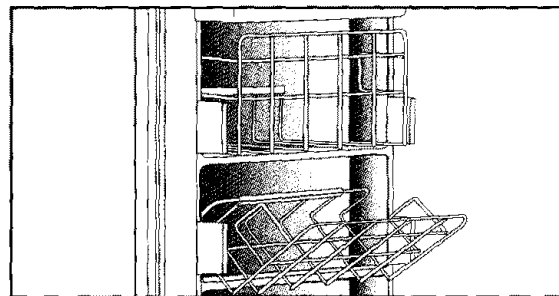


## Special Storage Areas

### Adjusti-Temp™ (top drawer - select models)


This drawer is designed to provide a short term storage area for fresh meats, cheeses and luncheon meats.

The temperature control for this drawer is located on the left side wall of the refrigerator, near the front of the drawer. The “cool” setting maintains a temperature within the drawer consistent with the surrounding fresh food compartment. To achieve a lower temperature within the drawer, slide the control towards the “cold” setting. A lower temperature within the drawer is recommended when storing fresh meat, poultry or fish.

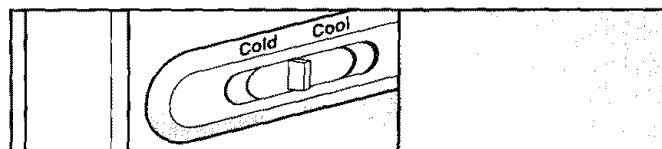

### VariTemp (bottom drawer - select models)

 The temperature control for this drawer is located on the shelf front above the drawer. Slide the control left or right. The “cheese” setting provides a temperature similar to that of the surrounding fresh food compartment. The “meat” setting provides a lower temperature within the drawer which is recommended when storing fresh meat, poultry or fish.



**For best results, keep either style of temperature controlled drawer tightly closed.**

 


# Interior Features (continued) .....

## Humidity Controlled Crisper(s) (select models)

Crisper drawers are designed for fruit and vegetable storage. The adjustable humidity control located above the drawers can be set to the left for fruit storage (lower humidity) or to the right for vegetable storage (higher humidity).

**To remove:** Pull the drawer out until it stops. Tilt the drawer front up and pull out. To replace the drawer, align the drawer in the tracks, lift the drawer front and slide in.




*For best results, keep crispers tightly closed .*

## ClimateZone™ Technology Storage Drawers (select models)

ClimateZone™ Technology Storage Drawers provide accurate temperature control for storing meats, fruits and vegetables. The top drawer offers meats, citrus and produce settings. The middle drawer has citrus and produce settings. ClimateZone™ Technology drawers are equipped with Automatic Humidity Control (see pg. 8). The drawers operate electronically to provide optimal temperatures and a numerical temperature display for each food setting according to the chart below.

**ClimateZone™**  
technology

Item	Storage Temperature
Citrus	39° F
Produce	34° F
Meats	31° F

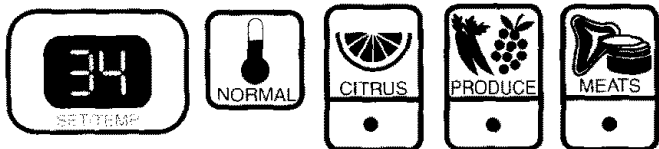

ClimateZone™ Technology can also be turned off by pressing Normal on the keypad. When turned off, the drawers operate as standard sealed crisper drawers with no temperature display.

### Notes:

- If a ClimateZone™ Technology drawer is left open, the display will flash. Close the drawer completely and the display will return to normal.
  - After prolonged drawer openings and/or loading the drawers, etc. the temperature readout may rise by a few degrees. This is normal. The temperature will recover in a short period of time.
  - Handle fresh meat with care to avoid cross-contamination. Store meat in airtight containers and be sure to wipe up spills of meat juices immediately using hot, soapy water.
- To disinfect: Remove drawer from refrigerator. Disinfect with solution of liquid chlorine bleach diluted with water according to bleach label instructions.
- For enhanced flavor, store hard cheeses on the Citrus setting.
  - Frozen meats will thaw very slowly on the Meat setting. Most thawing should be done outside of the drawers, on the lowest shelf in the refrigerator.
  - Under heavy usage conditions during hot, humid weather, the exterior surfaces of the ClimateZone™ Technology drawers may fog. This is normal. The condensation will clear once the door is closed for a period of time.
  - Due to the accuracy and the location of the ClimateZone™ Technology temperature sensor system, drawer temperatures measured with household refrigerator thermometers may vary from the drawer temperature display. This is normal.
  - If ClimateZone™ Technology drawers are not opened for a period of four weeks, they will automatically go to the Normal or "off" state. The display will turn off.

**To remove:** Pull the drawer out until it stops. Tilt the drawer-front up and pull out. To replace the drawer, align the drawer in the tracks, lift the drawer-front and slide in.

### Light Bulb Replacement

A light bulb is located behind the upper ClimateZone™ Technology compartment. The light bulb part number is 61004862; see your Maytag dealer for replacement or call 1-800-688-8408 to order direct.

**Warning:** To prevent electric shock, always unplug the refrigerator before changing the light bulb. Wear gloves as protection against possible broken glass.



**To remove the compartment assembly for bulb replacement:** Unload and remove shelf located above the ClimateZone™ Technology drawers. Unload and remove the drawer. Remove two 1/4" hex screws located on the left hand side. Lift the top compartment assembly upward (approx. 1 inch) and pull forward (approx. 2-3 inches). The assembly should rest on its supports.

**Replace the bulb:** Unscrew bulb and replace. **Caution:** Handle the light bulb with care to prevent breakage. The bulb may be hot from use.

**To replace:** Lift the assembly back into its original position. Align the screw holes. Make sure the assembly is pushed firmly to the left of the refrigerator cavity. Replace the two screws. Replace the drawers into the assemblies, replace the shelf above the assemblies, and reconnect the power to the refrigerator.

**Removal of the Compartment Assemblies for Cleaning**

Unload and remove shelf located above the ClimateZone™ Technology drawers. Unload and remove the drawers. Remove two 1/4" hex screws located on the left side. Lift the top compartment assembly upward (approx. 1 inch) and pull forward (approx. 2-3 inches). The assembly should rest on its supports. Disconnect the power cords to free the assembly, then pull completely out. Repeat with second compartment assembly.

**To replace:** Lift the lower assembly back into its original position leaving enough space to reach the power cords. Reconnect the assembly power cords. Push the assembly in all the way to the original position. Align the screw holes. Make sure the assembly is pushed firmly to the left of the refrigerator cavity. Replace the two screws. Repeat with top assembly. Replace the drawers into the assemblies, replace the shelf above the assemblies, and reconnect the power to the refrigerator.

**Notes:**

- **Replace the assemblies in their original positions.** The ClimateZone™ Technology assembly with the **Meats** option is always in the **top** position.
- The drawers are interchangeable between the compartments.

**Snack Center Drawer (select models)**

Provides a convenient storage area for miscellaneous food and snack items. This drawer does not have the adjustable temperature and humidity capabilities.

**Automatic Humidity Control (select models)**

Some crispers are equipped with an automatic humidity control system, eliminating the need for manual humidity slide controls on the drawer. A fabric-like material\* covers small air vents in the shelf insert above the crispers.

This material controls the flow of moisture out of the crisper to provide the optimum environment for your food. If a food spill should occur on the air vent or fabric-like material, wipe with a clean, damp cloth.



\*Maytag Automatic Humidity Control system features a unique, patented material called Shape Memory Polymer (SMP) that when laminated to fabric, becomes DIAPLEX. DIAPLEX is manufactured by Mitsubishi.




**ChillKeeper™ (select models)**

The ChillKeeper™ compartment is located in the refrigerator door and is designed to quick chill items and to store beverages. The ChillKeeper™ shelf can be detached, inverted and snapped onto the uppermost tabs in the compartment if two-tier storage is not needed.


**To open:** Grasp the opening on the right side of the compartment cover and swing to the left. The cover will automatically latch when closed.

**NOTE:** If the latching mechanism is accidentally dislocated, place the eraser end of a pencil next to the latch and apply gentle pressure to the right.

The ChillKeeper™ control is located on the left wall of the refrigerator. Move the slide to “Cold” to provide colder temperatures in the ChillKeeper™.

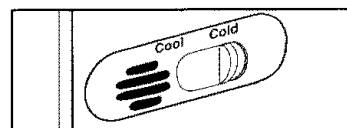

The ChillKeeper™ utility drawer is located at the bottom of the compartment. The lockable utility drawer provides storage for items such as batteries, film and prescription medications. The lock is located on the left side of the drawer. To unlock and open the drawer, move the pin to the “Unlock” position and slide the drawer out. To close, slide the drawer back in and move the pin into the “Lock” position.

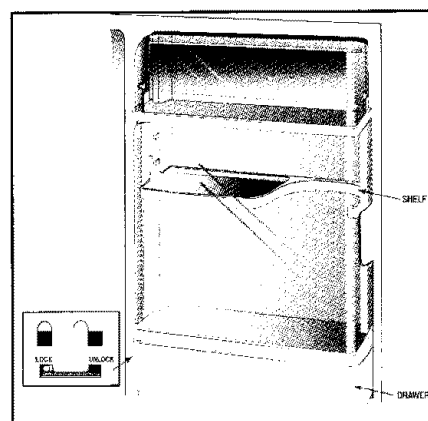



# Ice Service

## Nondispenser Models


The freezer compartment is equipped with ice cube trays and an ice storage bin. The bin stacks on top of the stacked ice cube trays. To release the ice cubes from a tray, hold the tray upside down over the bin and twist both ends.

The refrigerator is automatic ice maker ready. The number for the ice maker kit needed appears on the data plate (see front cover).

### Adjustable Ice Level (select models)

Some factory installed ice makers are equipped with a sensor arm to adjust the amount of ice in your ice storage tray for times when less ice is needed.

**To adjust the amount of ice produced:** Push the plastic sensor arm inward and rotate to the desired capacity.

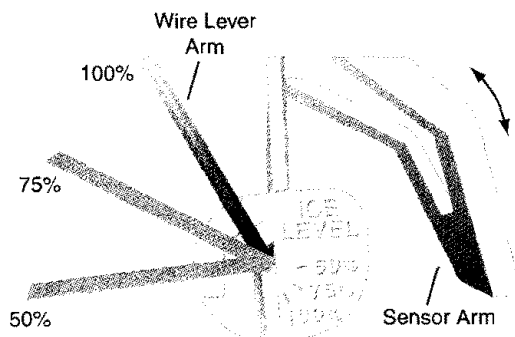

**Note:** Energy rating guides that are posted on the refrigerator at the time of purchase do not include optional ice maker energy usage.

## Dispenser Models

### Automatic Ice Maker

After your refrigerator has been connected to the water supply, move the wire lever arm into the down position. This will start its operation. The ice maker will fill with water when the freezer reaches the proper temperature. It may be 8 to 12 hours before the ice maker furnishes any usable ice cubes.

Discard all the cubes from the first two or three batches made. These initial ice cubes may be irregularly shaped, discolored, or contain impurities from the new water supply piping.

When the ice cubes are ejected it is normal for several cubes to be joined together at the ends. They can easily be broken apart. The ice maker will continue to make ice until the supply of ice cubes raises the wire lever arm, shutting the ice maker off.

To manually stop the operation of the ice maker, move the wire lever arm into the up (off) position.

Certain sounds may accompany the various cycles of the ice maker.

- buzzing of the water valve
- running of the water as the tray fills
- rattling of the ice cubes falling into an empty ice bin.

If the ice is not used frequently, the ice cubes will become cloudy, shrink, stick together and taste stale. Empty the ice storage bin periodically and wash it in lukewarm water. Be sure to dry the bin before replacing it.

To check the ice level or gain access to the ice bin, lift open the door on the ice bin.

To remove the bin, first turn off the ice maker. This is done by opening the door on the ice bin and moving the ice maker wire lever up to the "off" position. Then reach under the bin front and pull down on the back edge. After it snaps free, pull the bin straight forward. To replace the ice bin, align the bottom rails to the corresponding shelf grooves and push it straight back until it stops and latches. Make sure the tabs at the back of the bin that turn the spiral auger are positioned between the prongs from the auger motor. Turn the ice maker on by lowering the wire arm.

Beverages and foods should **not** be placed in the ice storage bin for quick chilling. These items can block the wire lever arm, causing the ice maker to malfunction.

### For Your Safety

Do not place fingers or hands on the automatic ice making mechanism while the refrigerator is plugged in.


Under certain rare circumstances, ice cubes may be discolored, usually appearing with a green-bluish hue. The cause of this unusual discoloration is a combination of factors such as certain characteristics of local waters, household plumbing and the accumulation of copper salts in an inactive water supply line which feeds the ice maker.

Continued consumption of such discolored ice cubes may be injurious to health. If such discoloration is observed, discard the ice cubes and contact your local water utility or water treatment company.



# Ice and Water Service .....

## Automatic Ice and Water Dispenser (select models)

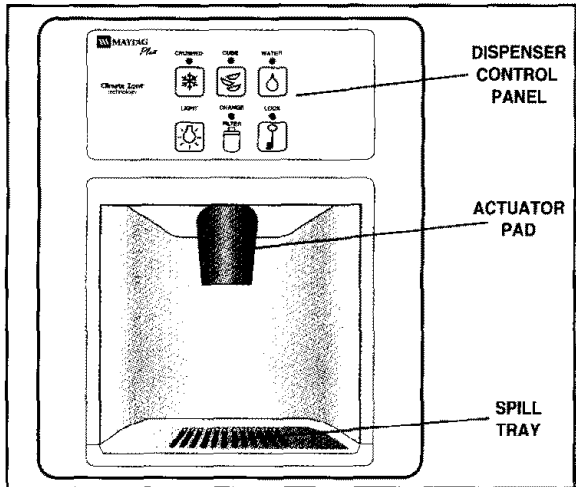


### Dispensing Water and Ice

To dispense ice or water, position a glass against the top portion of the actuator pad and press. Hold the glass high in the dispenser opening to avoid spills.

To stop dispensing, release the pressure on the actuator pad and hold the container in position momentarily to catch the last pieces of ice or the last drops of water. The ice delivery door will remain open for a short time. When it closes, a closing sound can be heard.

The control key pads are located on the dispenser control panel. To select the desired function, press the appropriate pad. When ice cubes, crushed ice or water are selected, a light above the selection glows.

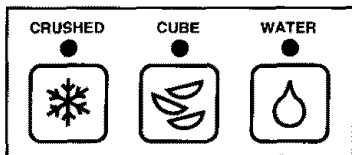

Water from the dispenser is not as cold as ice water. For colder water, simply add ice before dispensing the water. The first glass or two of water dispensed each time may be warmer than subsequent glasses. A full glass of water will be cooler than a partial glass. To prevent splashing, fill the glass with ice before adding water.

**NOTE:** When using the ice dispenser for the first time, discard the first two or three dozen cubes. When using the water dispenser for the first time, press the actuator

pad for one to two minutes to bleed the air from the water line. Discard the first five to six glasses of water dispensed. This will insure pure and fresh water for drinking.

### Ice Dispensing Tips

- Some crushed ice may be dispensed even though cubed ice was selected. This happens occasionally when a few cubes are accidentally channeled into the crusher.
- Likewise, when changing from crushed ice to cubes, some crushed ice may be dispensed. This may also happen if irregular sized cubes or ice chips are in the storage bin.
- If the ice dispenser is not used frequently, ice cubes may clump together and may need to be broken apart or discarded.
- A slight pause may be noticed when dispensing crushed ice. This is normal because the ice is being channeled to the crusher. Crushed ice pieces will vary in size and shape.
- Do not add ice to the storage bin which was not produced by your ice maker, it may not crush and/or dispense properly.
- Avoid operating the ice dispenser continuously for more than five minutes. Remove large quantities from the bin by hand.
- Avoid dispensing ice directly into fine china or delicate crystal. The pressure of pressing against the actuator pad and the ice dropping into the container can cause cracking or chipping of delicate items.




# Ice and Water Service (continued) .....

## Spill Tray


**DO NOT** pour water into the Spill Tray grille at the bottom of the dispenser area. This is a spill area, NOT a drain. Normal, small spills will evaporate. Larger spills should be wiped up with a soft cloth or sponge. The grille slides out for clean up. It is recommended to clean the spill area occasionally to prevent mineral deposits.

## Dispenser Light

When the actuator pad is pressed, the dispenser light automatically illuminates. To manually turn the light on, press the  pad.

To turn the light off, press the pad again.

## Dispenser Lock

To interrupt power to the water and ice dispenser so it cannot be used, press the  pad 3 times within 10 seconds.

An indicator light above the lock pad is illuminated when the dispenser is locked. Press the pad 3 times within 10 seconds again to unlock the ice and water service.

## Water Filter Change Reminder (select models)

For some refrigerator models featuring water filters, the Water Filter Change Reminder function monitors the life of the filter and provides a reminder when it is time for the filter to be changed.



When the system detects either 12 months of usage, or the filtering of 416 gallons of water (whichever comes first), the CHANGE FILTER indicator light will illuminate. This indicates that the water filter should be changed (see page 12) and the light reset.

**To reset the CHANGE FILTER light:** Press and hold the LIGHT and LOCK pads until the CHANGE FILTER light blinks (approx. 3 seconds). The control is now reset for 12 months or another 416 gallons.

**Note:** The Water Filter Change Reminder will count down 12 months if the filter bypass is in place (see page 12).

## Water Filter (select models)

The water filter mounts in the upper fresh food compartment, on the underside of the Dual Cool™ control housing.

Your refrigerator was delivered from the factory with a filter bypass in place. The filter cartridge can be found packaged inside of the refrigerator. It can be easily installed without using any additional parts, screws or fasteners.

### Notes:

- The ice and water dispenser and the icemaker should not be operated unless either the filter bypass or a filter is in place.
- If water flow to the ice maker or dispenser decidedly decreases or if an objectionable taste or odor returns, change the filter sooner than 12 months or 416 gallons.

## Special Notices

It is essential that operation, maintenance and filter replacement requirements be carried out as scheduled. This product is for cold water use only.

Do not use with water that is microbiologically unsafe, or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts.

For your own knowledge and safety, it is recommended that your water quality be periodically tested.

The contaminants or other substances removed or reduced by this water treatment system are not necessarily in your water. The feed water connection must conform to applicable plumbing codes.

### Notes:

- Leave the refrigerator door open while removing and installing filters or plugs; this will prevent water from flowing through the system and running into the fresh food compartment. As an added precaution, turn off the ice maker by moving the wire lever arm into the up (OFF) position.
- A newly installed water filter cartridge may cause water to temporarily spurt from the dispenser.

## Initial Filter Cartridge Installation


1. Twist the cap of the filter bypass 1/4 turn counterclockwise (as viewed from the bottom) so the ears on the plug can disengage. Remove the filter bypass from the filter head apparatus.

**Do Not** dispose of this filter bypass. It should be stored for future use, in the event that you choose to use the water and ice dispenser without a filter.

2. Carefully remove the filter from its packaging.
3. Apply the month sticker to the cartridge as a reminder to replace the filter within a year.
4. Remove the red cap from the filter.
5. Lubricate the O-ring with food grade vegetable oil.
6. Line up the cartridge ears so it can be inserted into the filter head. The unlocked symbol will line up with the indicator line that is molded into the light shield area. Rotate the cartridge into the head. Twist the cartridge 1/4 turn clockwise to lock it into place. You will feel a stop and the locked symbol should now be lined up with the indicator line.
7. Lower the icemaker wire lever arm into the down (ON) position.
8. Dispense water through the dispenser for 10 minutes.
9. Carefully check for leaks.

## Replacing the Filter Cartridge

1. Twist the filter cartridge 1/4 turn counterclockwise (as viewed from the bottom) so that ears on the cartridge are able to disengage from the head. The unlocked symbol will be lined up with the indicator line that is molded into the light shield area. Twist gently until the cartridge is free from the head, but **DO NOT** pull. Avoid tipping the cartridge to prevent spillage. Dispose of the used cartridge.
2. Carefully remove the replacement filter from its packaging. (Read the label carefully to be sure you have the correct replacement filter cartridge).
3. Follow steps 3 through 9 under Initial Filter Cartridge Installation.

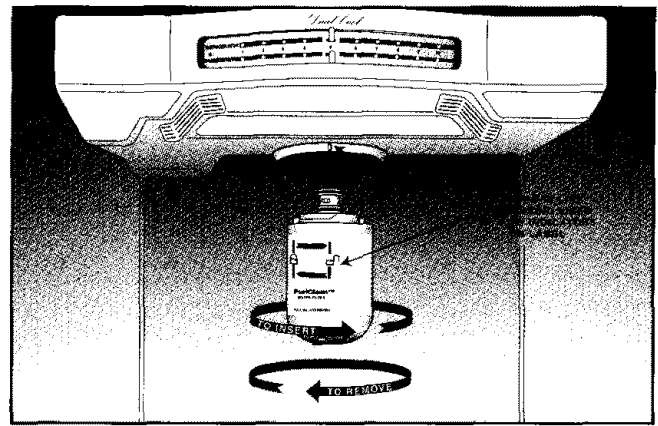

**Note:** Filter life may be affected by abnormal feed water conditions or unusual incidents such as hydrant flushes, reservoir turnover or varying local water conditions.



# Ice and Water Service (continued) .....

## Periods of Non-Use

If the refrigerator has been out of use for more than 2 weeks (ie: placed in storage or has been moved) the filter should be replaced when the refrigerator is put back into service.

## Replacement Filter Cartridges


For replacement filter cartridges or for service, contact your local dealer or Maytag Appliances Sales Company, Maytag Customer Assistance, U.S.:1-800-688-9900, Canada: 1-800-688-2002

Replacement Filter Model Number:  
UKF7002AXX - Taste, odor, chlorine, cysts, and lead

The PuriClean™ Water Filter is manufactured for Maytag Appliances by:

Cuno Incorporated  
400 Research Parkway  
Meriden, CT 06450

Rated Flow: .5 gpm (1.9 L)  
Min. Op. Temp: 33° F (.6° C)  
Max. Op. Temp: 100° F (38° C)  
Min. Op. Press: 30 psi (207 KPa)  
Max. Op. Press: 125psi (862 KPa)

The filter listed below has been tested and certified to NSF International under ANSI/NSF Standards 42 and 53 for the reduction of impurities as indicated:	
	UKF7002AXX
Taste/Odor	Yes
Chlorine Class 1 Std.42	Yes
Turbidity Std.53	Yes
Particulate Std. 42	Yes (Class 1)
Cyst Std. 53	Yes
Lead Std. 53	Yes
Capacity	416 gal. (1574 L)
Function	Chemical/ Mechanical

See accompanying Product Data Sheet for further information on filter.



# Care and Cleaning .....

**CAUTION:** Disconnect the power cord before cleaning. Do not touch refrigerated surfaces with wet or damp hands. Damp objects stick to cold metal surfaces. Before cleaning the freezer, allow it to warm up. Allow glass shelves to warm up before immersing in warm water.

## Cleaning Under the Refrigerator

Your refrigerator can be rolled out for cleaning the floor underneath. Raise the leveling feet if engaged (see page 2). Pull the refrigerator straight out from the wall.

## No Clean™ Commercial-duty Condenser

A clean condenser means more efficient refrigerator operation. Thanks to the unique design of the No Clean™ condenser there's no longer a need for routine condenser cleaning in normal home usage surroundings. Some operating environments may be particularly dusty or greasy. In these situations, the condenser can be periodically cleaned to insure maximum efficiency.

## Refrigerator Cleaning Chart

Refrigerator Exterior		
Part	Cleaning Agents	Tips and Precautions
Base grille	Soap and water Mild liquid sprays Vacuum cleaner attachment	
Condenser	Cleaning brush (Part No. 20001017). Available from your dealer.	No need for cleaning unless environment is particularly greasy, dusty or there is significant pet traffic in the home.
Door handles	Soap and water Mild liquid sprays	
Painted metal surfaces: Cabinet, doors	Soap and water Mild liquid sprays	Dry with a clean, soft cloth. Do not wipe the refrigerator with a soiled dishwashing cloth or wet towel. These may leave residue that can scratch and weaken the paint. Do not use scouring pads, powdered cleansers, bleach or cleaners containing bleach. These products can scratch and erode the paint finish. Do not wax plastic or vinyl parts.
Refrigerator & Freezer Interior		
Door gasket	Baking soda and water Soap and water	Use 1-2 tablespoons baking soda per quart of water. Be sure to wring out excess water from sponge or cloth when cleaning around controls, lights, or electrical parts.
Glass shelves	Soap and water Glass cleaner Mild liquid sprays	<b>Allow the glass to warm up to room temperature before immersing in warm water.</b> Never use hot water.
Interior and door liner	Soap and water Baking soda and water	See above for baking soda solution. <b>DO NOT</b> use abrasive cleaners, concentrated detergents, bleaches, cleaning waxes, solvents or polish cleaners to clean the refrigerator interior.
Drawers, drawer cavity, bins, egg cradle, etc.	Soap and water	<b>DO NOT</b> wash in an automatic dishwasher.
Automatic Humidity Control mesh/vent area	Water only	Wipe with a clean, damp cloth.
ClimateZone™ Technology Storage Drawers	Soap and water. To disinfect: Chlorine bleach and water solution according to bleach label instructions.	Remove drawers from compartments. Rinse thoroughly and dry.
ClimateZone™ Technology Compartment Assemblies	Water only	Wipe with a clean damp cloth. <b>DO NOT</b> use abrasive cleaners, concentrated detergents, bleaches, cleaning waxes, solvents or polish cleaners to clean the compartment assemblies.



# Food Storage Tips .....

## **Fresh Food Storage**

- The fresh food compartment of a refrigerator should be kept between 34°F and 40°F with an optimum temperature of 37°F. To check the temperature, place an appliance thermometer in a glass of water and place in the center of the refrigerator. Check after 24 hours. If the temperature is above 40°F adjust the controls as explained on page 3.
- Temperatures measured elsewhere in the refrigerator may vary from crisper readout temperatures (select models) due to location of crisper thermostat.
- Avoid overcrowding the refrigerator shelves. This reduces the circulation of air around the food and results in uneven cooling.

## **Fruit and Vegetables**

- Store in the crisper drawers to help preserve the fruit and vegetable quality for longer time periods.
- Sort fruits and vegetables before storage and use bruised or soft items first. Discard those showing signs of decay.
- Always wrap odorous foods such as onions and cabbage so the odor does not transfer to other foods.
- While vegetables need a certain amount of moisture to remain fresh, too much moisture can shorten storage times (especially lettuce). Drain vegetables well before storing.

## **Meat and Cheese**

- Raw meat and poultry should be wrapped securely so leakage and contamination of other foods or surfaces does not occur.
- Occasionally mold will develop on the surface of hard cheeses (Swiss, Cheddar, Parmesan). Cut off at least an inch around and below the moldy area. Keep your knife or instrument out of the moldy area. The remaining cheese will be safe and flavorful to eat. Do **NOT** try to save individual cheese slices, soft cheese, cottage cheese, cream, sour cream or yogurt when mold appears.

## **Dairy Food**

- Most dairy foods such as milk, yogurt, sour cream and cottage cheese have freshness dates on their cartons for appropriate length of storage. Store these foods in the original carton and refrigerate immediately after purchasing and after each use.

## **Frozen Food Storage**

- The freezer compartment of a refrigerator should be kept at 0°F or lower. To check the temperature, place an appliance thermometer between the frozen packages and check after 24 hours. If the temperature is above 0°F, adjust the control as described on page 3.
- A freezer operates more efficiently when it is at least two-thirds full.

## **Packaging Foods for Freezing**

- To minimize dehydration and quality deterioration use aluminum foil, freezer wrap, freezer bags or airtight containers. Force as much air out of the packages as possible and be sure they are tightly sealed. Trapped air can cause the food to dry out, change color and develop an off-flavor (freezer burn).
- Overwrap fresh meats and poultry with suitable freezer wrap prior to freezing.
- **Do not refreeze meat that has completely thawed.**

## **Loading the Freezer**

- Avoid adding too much warm food to the freezer at one time. This overloads the freezer, slows the rate of freezing and can raise the temperature of frozen foods.
- Leave space between the packages so cold air can circulate freely, allowing food to freeze as quickly as possible.
- Avoid storing hard-to-freeze foods such as ice cream and orange juice on the freezer door shelves. These foods are best stored in the freezer interior where the temperature varies less with door openings.

**Food Storage Chart** (Storage times are approximate and may vary depending on type of packaging, storage temperature, and the quality of the food when purchased.)

Foods	Refrigerator	Freezer	Storage Tips
<b>DAIRY PRODUCTS</b>			
Butter	1 month	6-9 months	Wrap tightly or cover.
Milk & cream	1 week	Not recommended	Check carton date. Close tightly. Don't return unused portions to original container. Don't freeze cream unless whipped.
Cream cheese, cheese spread & cheese food	1-2 weeks	Not recommended	Wrap tightly.
Cottage cheese	3-5 days	Not recommended	Store in original carton. Check carton date.
Sour cream	10 days		
Hard cheese (Swiss, Cheddar & Parmesan)	1-2 months	4-6 months May become crumbly	Wrap tightly. Cut off any mold.
<b>EGGS</b>			
Eggs in the shell,	3 weeks	Not recommended	Refrigerate small ends down.
Leftover yolks or whites	2-4 days	9-12 months	For each cup of yolks to be frozen, add 1 tsp. sugar for use in sweet, or 1 tsp. salt for non-sweet dishes.
<b>FRUIT</b>			
Apples	1 month	8 months (cooked)	May also store unripe or hard apples at 60-70°F.
Bananas	2-4 days	6 months (whole/peeled)	Ripen at room temperature before refrigerating. Bananas & avocados darken when refrigerated.
Pears, plums, avocados	3-4 days	Not recommended	
Berries, cherries, apricots	2-3 days	6 months	
Grapes	3-5 days	1 month (whole)	
Citrus fruits	1-2 weeks	Not recommended	May also store at 60-70°F. If refrigerated, store uncovered.
Pineapples, cut	2-3 days	6-12 months	Will not ripen after purchase. Use quickly.
<b>VEGETABLES</b>			
Asparagus	1-2 days	8-10 months	Don't wash before refrigerating. Store in crisper.
Brussels sprouts, broccoli, cauliflower, green peas, lima beans, peppers	3-5 days	8-10 months	Wrap odorous foods. Leave peas in pods. Store in crisper.
Cabbage, celery	1-2 weeks	10-12 months	Wrap odorous foods & refrigerate in crisper.
Carrots, parsnips, beets, & turnips	7-10 days	8-10 months	Remove tops. Wrap odorous foods & refrigerate in the crisper.
Lettuce	7-10 days	Not recommended	Store in crisper.
<b>POULTRY &amp; FISH</b>			
Chicken and Turkey, whole	1-2 days	12 months	Keep in original packaging for refrigeration. When freezing longer than 2 weeks, overwrap with freezer wrap.
Chicken and Turkey, pieces	1-2 days	9 months	
Fish	1-2 days	2-6 months	
<b>MEATS</b>			
Bacon	7 days	1 month	Fresh meats can be kept in original packaging for refrigeration. Place in the Meat and Cheese Drawer. When freezing longer than 2 weeks, overwrap with freezer wrap.
Beef or lamb, ground	1-2 days	3-4 months	
Beef or lamb, roast & steak	3-5 days	6-9 months	
Ham, fully cooked, whole	7 days	1-2 months	
half	5 days	1-2 months	
slices	3 days	1-2 months	Unopened, vacuum-packed luncheon meat may be kept up to 2 weeks in the Meat and Cheese Drawer.
Luncheon meat	3-5 days	1-2 months	
Pork, roast	3-5 days	4-6 months	
Pork, chops	3-5 days	4 months	
Sausage, ground	1-2 days	1-2 months	
Sausage, smoked	7 days	1-2 months	
Veal	3-5 days	4-6 months	Processed meats should be tightly wrapped and stored in the Meat and Cheese Drawer.
Frankfurters	7 days	1 month	

Sources: United States Department of Agriculture; Food Marketing Institute; Cooperative Extension Service, Iowa State University



# Storage and Maintenance of Refrigerator .....

## Vacations

If you will be gone for a month or less, leave the controls at the usual settings.

During longer absences:

- a) remove all food,
- b) shut off the ice maker (if installed) and the valve where you tapped into the water line to supply the refrigerator,
- c) disconnect the refrigerator from the electrical outlet,
- d) remove the filter cartridge (select models) and install the filter bypass (see pages 12-13), dispose of the used cartridge. A new cartridge can be installed when the refrigerator is put back into service.

**Note:** Disconnecting power to the refrigerator will suspend the 12 month countdown for the water filter change reminder (select models).

- e) clean and dry the refrigerator thoroughly,
- f) leave the doors open to prevent odors.

## Moving

When moving, follow steps a–f under Vacations. In addition, remove and carefully pack any items that are easily removable. Ship the refrigerator in an upright position with the doors taped shut and shelves secured.

.....

## Replacing a Light Bulb

**CAUTION:** Disconnect the power cord before replacing light bulb(s). Wear gloves as protection against replacing possible broken glass.

**Always use a standard 40 or 60 watt appliance bulb when replacing a fresh food or freezer compartment bulb.**

### Refrigerator

There are two light bulbs located at the top of the refrigerator compartment, on the underside of the Dual Cool™ control housing.

To replace a light bulb(s), remove the control cover from the control housing:

- grasp the control cover at the two rear “finger tabs”. These are located at the upper rear of the fresh food compartment, behind the light shields.
- pull down slightly to clear the retainer tabs and slide the cover forward until it is free.
- replace the bulb(s) with a 60-watt, standard base appliance bulb(s).
- After replacing the bulb(s), align the control cover on to the ribs on the control housing and slide it straight back until it snaps onto the retainer tabs.

On select models, there is an additional light located behind the top crisper drawer. To replace see page 7.

### Freezer

The freezer light is located on the back wall of the freezer compartment.

To replace:

- unhook the tabs on the top of the light shield by pressing in with the thumb on the center top of the light shield
- pivot the shield down
- unscrew the bulb when cool and replace it with a standard 40-watt appliance bulb
- replace the bulb cover by pivoting it back into place and snapping the tabs into the appropriate slots.

### Dispenser Light (dispenser models only)

To replace:

- Locate the light bulb in the dispenser area to the left of the actuator.
- Unscrew the used bulb and remove.
- Replace the bulb, using a 120V, 7-watt bulb.



# Before You Call

## Check these points if your refrigerator...

<b>Won't run</b>	<ul style="list-style-type: none"> <li>the temperature control turned to "Off"</li> <li>the power cord not plugged in</li> <li>no power at the electrical outlet</li> <li>the circuit breaker tripped or the house fuse blown</li> <li>refrigerator is in automatic defrost</li> </ul>
<b>Runs too long/ too frequently</b>	<ul style="list-style-type: none"> <li>modern refrigerators are larger and run colder, which requires more running time to provide more stable temperatures</li> <li>prolonged door openings</li> <li>the base grille blocked</li> <li>too many door openings</li> <li>the door not sealing (due to a package or a container holding door open)</li> <li>warm room temperature</li> </ul>
<b>Noisy operation</b>	<ul style="list-style-type: none"> <li>the cabinet not level</li> <li>a weak floor</li> </ul>
<b>Odor in cabinet</b>	<ul style="list-style-type: none"> <li>odor producing foods should be covered or wrapped</li> <li>the interior needs cleaning</li> </ul>
<b>Warm air from cabinet bottom</b>	<ul style="list-style-type: none"> <li>normal air flow for condenser circulation</li> </ul>
<b>Cabinet vibrates</b>	<ul style="list-style-type: none"> <li>the cabinet not level</li> <li>a weak floor</li> </ul>
<b>Moisture on inside cabinet walls</b>	<ul style="list-style-type: none"> <li>can occur during hot, humid weather with frequent or prolonged door openings</li> <li>door not closed properly</li> </ul>
<b>Excessive moisture in or around crisper</b>	<ul style="list-style-type: none"> <li>food not wrapped properly</li> <li>hot, humid weather</li> </ul>
<b>No temperature readout in the ClimateZone™ Technology (select models) drawer display</b>	<ul style="list-style-type: none"> <li>the normal setting has been chosen</li> <li>the drawer has not been opened for four weeks</li> </ul>
<b>Cabinet light not working</b>	<ul style="list-style-type: none"> <li>the bulb burned out</li> <li>no power at the outlet</li> </ul>
<b>Refrigerator compartment too warm</b>	<ul style="list-style-type: none"> <li>the refrigerator control set too warm</li> <li>prolonged door openings</li> </ul>
<b>Refrigerator compartment too cold</b>	<ul style="list-style-type: none"> <li>the refrigerator control set too cold</li> </ul>
<b>Freezer compartment too warm</b>	<ul style="list-style-type: none"> <li>the freezer control set too warm</li> <li>prolonged door openings</li> </ul>
<b>Sizzling sound in freezer</b>	<ul style="list-style-type: none"> <li>a normal sound caused by defrost water dripping on defrost mechanism</li> </ul>
<b>Visible glow in the freezer vents</b>	<ul style="list-style-type: none"> <li>the appearance of a red glow or reflection is normal during the defrost cycle</li> </ul>
<b>Freezer not freezing properly</b>	<ul style="list-style-type: none"> <li>products with high sugar content may not harden completely when frozen (ice cream, concentrated juice, etc.)</li> <li>adjust freezer control to a colder setting</li> </ul>
<b>Water Filter Change Reminder light (select models) comes on when the filter bypass is in place</b>	<ul style="list-style-type: none"> <li>This is normal. The control will count down 12 months or 416 gallons whether the filter or the filter bypass is in place. Reset the light (see pg. 11)</li> </ul>
<b>Ice cubes evaporate</b>	<ul style="list-style-type: none"> <li>cold air moving over the ice cubes causes shrinkage, especially with limited usage. This is normal</li> </ul>
<b>Automatic ice maker not operating</b>	<ul style="list-style-type: none"> <li>the stop arm in OFF (up) position</li> <li>the water supply turned off</li> <li>the water pressure too low</li> <li>the freezer too warm</li> </ul>
<b>Front cabinet surface warm to the touch</b>	<ul style="list-style-type: none"> <li>special design to limit condensation during periods of high humidity</li> </ul>
<b>Ice dispenser not operating</b>	<ul style="list-style-type: none"> <li>ice jam in the dispenser</li> <li>ice maker not operating</li> <li>lock switch on</li> </ul>
<b>Water dispenser not operating</b>	<ul style="list-style-type: none"> <li>water supply turned off</li> <li>water pressure too low</li> <li>lock switch on (see pg. 10)</li> </ul>

NOTE: For further assistance contact Maytag Appliances Sales Company, Maytag Customer Assistance: U.S. 1-800-688-9900 or Canada 1-800-688-2002





# Warranty.....

## Full One Year Warranty

For one (1) year from the date of original retail purchase, any part that fails in normal home use will be repaired or replaced free of charge. Ice Maker – when purchased with the refrigerator and installed by the dealer the ice maker will be considered part of the refrigerator for warranty purposes.

## Limited Warranty — Major Refrigeration Components

### Second thru Fifth Year:

After the first year from the date of original retail purchase, through the end of the fifth year, Maytag Appliances will repair or replace, at its option, free of charge for parts and labor, any part of the sealed refrigeration system (consisting of the compressor, evaporator, condenser, drier and connecting tubing) and the cabinet liner (exclusive of the door liner) which fail in normal home use. Mileage and transportation charges, if required, shall be the responsibility of the owner.

## Limited Warranty — PuriClean™ Water Filter:

With regard to the water filter cartridge, Maytag Appliances will replace any part of the water filter cartridge which fails due to a defect in workmanship or materials, for a period of *Thirty Days from the date of original purchase*. This is a full 30 day warranty, and during this warranty period we will also provide free of charge, all labor and in-home service required to replace the defective part.

## Limited Warranty — Other Parts:

### Second Year:

Parts other than major refrigeration components which fail in normal home use during the second year following the date of original retail purchase will be repaired or provided free of charge for the part itself, with the owner paying all other costs, including labor, mileage and transportation.

**Please note:** The full warranty and the limited warranties apply when the refrigerator is located in the United States or Canada. Refrigerators located elsewhere are covered by the limited warranties only including parts that fail during the first year.

## LIMITATIONS OF LIABILITY

The warrantor shall not be liable for any incidental or consequential damages, including food loss. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation or exclusion may not apply to you.

**The specific warranties expressed above are the ONLY warranties provided by the manufacturer. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.**

## To Receive Warranty Service

To locate an authorized service company in your area contact the Maytag dealer from whom your appliance was purchased; or call Maytag Appliances Sales Company, Maytag Customer Assistance at the number listed below. Should you not receive satisfactory warranty service, please call or write:

Maytag Appliances Sales Company  
Attn: CAIR<sup>SM</sup> Center  
P.O. Box 2370  
Cleveland, TN 37320-2370  
U.S. 1-800-688-9900  
CANADA 1-800-688-2002  
U.S. customers using TTY for deaf, hearing impaired or speech impaired, call 1-800-688-2080.

**NOTE:** When writing about an unsolved service problem, please include the following information:

- (a) Your name, address and telephone number;
- (b) Model number, serial number, and revision number (found on the top front interior of the refrigerator compartment);
- (c) Name and address of your dealer and the date the appliance was bought;
- (d) A clear description of the problem you are having;
- (e) Proof of purchase (sales receipt).

## What Is Not Covered By These Warranties:

1. Conditions and damages resulting from any of the following:
  - a. Improper installation, delivery, or maintenance.
  - b. Any repair, modification, alteration or adjustment not authorized by the manufacturer or an authorized servicer.
  - c. Misuse, abuse, accidents, or unreasonable use.
  - d. Incorrect electric current, voltage or supply.
  - e. Improper setting of any control.
2. Warranties are void if the original serial numbers have been removed, altered, or cannot be readily determined.
3. Light bulbs.
4. Products purchased for commercial or industrial use.
5. The cost of service or service call to:
  - a. Correct installation errors.
  - b. Instruct the user on proper use of the product.
  - c. Transport the appliance to the servicer.
6. Consequential or incidental damages sustained by any person as a result of any breach of these warranties.  
Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above exclusion may not apply.

User's Guides, service manuals and parts catalogs are available from Maytag Appliances Sales Company, Maytag Customer Assistance.

**MAYTAG • One Dependability Square • Newton, Iowa 50208**

**MAYTAG ONLINE** <http://www.maytag.com>



# Before You Call.....

## Check these points if your refrigerator...

<b>Won't run</b>	<ul style="list-style-type: none"> <li>• the temperature control turned to "Off"</li> <li>• the power cord not plugged in</li> <li>• no power at the electrical outlet</li> <li>• the circuit breaker tripped or the house fuse blown</li> <li>• refrigerator is in automatic defrost</li> </ul>
<b>Runs too long/ too frequently</b>	<ul style="list-style-type: none"> <li>• modern refrigerators are larger and run colder, which requires more running time to provide more stable temperatures</li> <li>• prolonged door openings</li> <li>• the base grille blocked</li> <li>• too many door openings</li> <li>• the door not sealing (due to a package or a container holding door open)</li> <li>• warm room temperature</li> </ul>
<b>Noisy operation</b>	<ul style="list-style-type: none"> <li>• the cabinet not level</li> <li>• a weak floor</li> </ul>
<b>Odor in cabinet</b>	<ul style="list-style-type: none"> <li>• odor producing foods should be covered or wrapped</li> <li>• the interior needs cleaning</li> </ul>
<b>Warm air from cabinet bottom</b>	<ul style="list-style-type: none"> <li>• normal air flow for condenser circulation</li> </ul>
<b>Cabinet vibrates</b>	<ul style="list-style-type: none"> <li>• the cabinet not level</li> <li>• a weak floor</li> </ul>
<b>Moisture on inside cabinet walls</b>	<ul style="list-style-type: none"> <li>• can occur during hot, humid weather with frequent or prolonged door openings</li> <li>• door not closed properly</li> </ul>
<b>Excessive moisture in crisper</b>	<ul style="list-style-type: none"> <li>• food not wrapped properly</li> <li>• hot, humid weather</li> </ul>
<b>Foods dry out (fresh or frozen)</b>	<ul style="list-style-type: none"> <li>• the packages not wrapped or sealed properly</li> <li>• the crisper not tightly closed</li> <li>• temperature control set too cold</li> </ul>
<b>Cabinet light not working</b>	<ul style="list-style-type: none"> <li>• the bulb burned out</li> <li>• no power at the outlet</li> </ul>
<b>Refrigerator compartment too warm</b>	<ul style="list-style-type: none"> <li>• the refrigerator control set too warm</li> <li>• prolonged door openings</li> </ul>
<b>Refrigerator compartment too cold</b>	<ul style="list-style-type: none"> <li>• the refrigerator control set too cold</li> </ul>
<b>Freezer compartment too warm</b>	<ul style="list-style-type: none"> <li>• the freezer control set too warm</li> <li>• prolonged door openings</li> </ul>
<b>Sizzling sound in freezer</b>	<ul style="list-style-type: none"> <li>• a normal sound caused by defrost water dripping on defrost mechanism</li> </ul>
<b>Visible glow in the freezer vents</b>	<ul style="list-style-type: none"> <li>• the appearance of a red glow or reflection is normal during the defrost cycle</li> </ul>
<b>Freezer not freezing properly</b>	<ul style="list-style-type: none"> <li>• products with high sugar content may not harden completely when frozen (ice cream, concentrated juice, etc.)</li> <li>• adjust freezer control to a colder setting</li> </ul>
<b>Ice cubes sticking in tray</b>	<ul style="list-style-type: none"> <li>• trays may be coated with residue film from minerals in the water. Wipe trays with vinegar-soaked cloth until clean. If residue is heavy, clean trays each time the refrigerator is cleaned.</li> </ul>
<b>Ice cubes evaporate</b>	<ul style="list-style-type: none"> <li>• cold air moving over the ice cubes causes shrinkage, especially with limited usage. This is normal.</li> </ul>
<b>Automatic ice maker not operating</b>	<ul style="list-style-type: none"> <li>• the stop arm in OFF (up) position</li> <li>• the water supply turned off</li> <li>• the water pressure too low</li> <li>• the freezer too warm</li> </ul>
<b>Front cabinet surface warm to the touch</b>	<ul style="list-style-type: none"> <li>• Special design to limit condensation during periods of high humidity.</li> </ul>
<b>Ice dispenser not operating</b>	<ul style="list-style-type: none"> <li>• ice jam in the dispenser</li> <li>• ice maker not operating</li> <li>• lock switch on</li> </ul>
<b>Water dispenser not operating</b>	<ul style="list-style-type: none"> <li>• water supply turned off</li> <li>• water pressure too low</li> <li>• lock switch on</li> </ul>

NOTE: For further assistance contact Maytag Appliances Sales Company, Maytag Customer Assistance: U.S. 1-800-688-9900 or Canada 1-800-688-2002

## IMPORTANT WATER FILTER INFORMATION

### For models featuring the Water Filter Change Reminder system:

Replacement Filter Model #: UKF7002AXX ONLY

Replace filter when the Water Filter Change Reminder light illuminates, or sooner if objectionable taste or odor returns, or if water flow to the ice maker or dispenser decidedly decreases.

### For all other dispenser models using a water filter:

Replacement Filter Model #s available:

UKF7001AXX - Taste, odor, chlorine, cysts and lead

UKF6001AXX - Taste, odor, chlorine and lead

UKF5001AXX - Taste, odor and chlorine

Replace filter every six months, or sooner if objectionable taste or odor returns, or if water flow to the ice maker or dispenser decidedly decreases.

**NOTE:** The filters for dispenser models *without* the Water Filter Change Reminder feature are **not interchangeable** with the filter designated for use with the Water Filter Change Reminder system.

## RENSEIGNEMENTS IMPORTANTS SUR LE FILTRE À EAU

### Pour les modèles comportant le système de rappel de changement de filtre à eau:

Recharge de Filtre Numéro de Modèle: UKF7002AXX SEULEMENTE

Changer le filtre lorsque le voyant Water Filter Change Reminder s'allume, ou si le débit d'eau au distributeur ou à l'appareil à glace diminue fortement ou que l'eau présente à nouveau un goût ou une odeur désagréable, changer le filtre plus rapidement que recommander.

### Pour tous les autres modèles dotés d'un distributeur avec filtre à eau:

Recharge de Filtre Numéro de Modèle:

UKF7001AXX - Goût, odeur, chlore, organismes kystiques et plomb

UKF6001AXX - Goût, odeur, chlore et plomb

UKF5001AXX - Goût, odeur et chlore

Changer le filtre chaque 6 mois, ou si le débit d'eau au distributeur ou à l'appareil à glace diminue fortement ou que l'eau présente à nouveau un goût ou une odeur désagréable, changer le filtre plus rapidement que recommander.

**REMARQUE:** Les filtres pour les modèles avec distributeur sans la caractéristique de rappel de changement de filtre à eau ne sont pas interchangeables avec les filtres conçus pour être utilisés avec le système de rappel de changement de filtre à eau.

## INFORMACIÓN IMPORTANTE SOBRE EL FILTRO DE AGUA

### Para los modelos con sistema recordatorio de cambio del filtro de agua:

Numeros de repuesto para Cartuchos de Filtro: UKF7002AXX SOLO

Cambie el filtro se enciende la luz del indicador de CHANGE FILTER (Filtro De Cambio), o si el flujo de agua hacia la máquina para hacer hielo o el dispensador disminuye bastante o si despiden un sabor u olor dudoso, cambie el filtro de inmediato.

### Para todos los otros modelos con distribuidores que usen un filtro de agua:

Otenible numeros de repuesto para Cartuchos de Filtro:

UKF7001AXX - Sabor, olor, cloro, nódulos y plomo


UKF6001AXX - Sabor, olor, cloro y plomo

UKF5001AXX - Sabor, olor y cloro


Cambie el filtro cada 6 meses, o si el flujo de agua hacia la máquina para hacer hielo o el dispensador disminuye bastante o si despiden un sabor u olor dudoso, cambie el filtro de inmediato.

**NOTA:** Los filtros para los modelos con distribuidores sin recordatorio de cambio del filtro de agua no son intercambiables con los filtros diseñados para ser usados con el sistema recordatorio de cambio de filtro de agua.


The filters listed below have been tested and certified to NSF International under ANSI/NSF Standards 42 and 53 for the reduction of impurities as indicated:

	Models Without Water Filter Change Reminder			Models With Water Filter Change Reminder
	UKF7001AXX	UKF6001AXX	UKF5001AXX	UKF7002AXX
Taste/Odor	Yes	Yes	Yes	Yes
Chlorine Class 1 Std.42	Yes	Yes	Yes	Yes
Turbidity Std.53	Yes	No	No	Yes
Particulate Std. 42	Yes (Class I)	Yes (Class I)	No	Yes (Class I)
Cyst Std. 53	Yes	No	No	Yes
Lead Std. 53	Yes	Yes	No	Yes
Capacity	250 gal. (946 L)	250 gal. (946 L)	500 gal. (1893 L)	416 gal. (1574 L)
Function	Chemical/ Mechanical	Chemical/ Mechanical	Chemical	Chemical/Mechanical

Les filtre indiqués ci-dessous ont être testés et sont homologués NSF International conformément aux normes ANSI/NSF 42 et 53 pour la réduction des impuretés indiquées:

	Modèles sans le système de rappel de changement de filtre à eau			Modèles avec le système de rappel de changement de filtre à eau
	UKF7001AXX	UKF6001AXX	UKF5001AXX	UKF7002AXX
Goût/Odeur	Oui	Oui	Oui	Oui
Chlore Classif. I, norme 42	Oui	Oui	Oui	Oui
Turbidité, norme 53	Oui	Non	Non	Oui
Particules, norme 42	Oui (classif. I)	Oui (classif. I)	Non	Oui (classif. I)
Org. kystiques, norme 53	Oui	Non	Non	Oui
Plomb, norme 53	Oui	Oui	Non	Oui
Capacité	250 gal. (946 L)	250 gal. (946 L)	500 gal. (1893 L)	416 gal. (1574 L)
Fonction	Chimique/ Mécanique	Chimique/ Mécanique	Chimique	Chimique/Mécanique

El filtro que se enumeran a continuación han sido probados y certificados para NSF International bajo las Normas ANSI/NSF 42 y 53 para la reducción de impurezas como se indica:

	Para los modelos con no sistema recordatorio de cambio del filtro de agua			Para los modelos con sistema recordatorio de cambio del filtro de agua
	UKF7001AXX	UKF6001AXX	UKF5001AXX	UKF7002AXX
Sabor/Olor	Sí	Sí	Sí	Sí
Clase de Cloro 1 Norma 42	Sí	Sí	Sí	Sí
Turbiedad Norma 53	Sí	No	No	Sí
Particulado Norma 42	Sí (Class I)	Sí (Clase I)	No	Sí (Clase I)
Nódulo Norma 53	Sí	No	No	Sí
Plomo Norma 53	Sí	Sí	No	Sí
Capacidad	250 gal. (946 L)	250 gal. (946 L)	500 gal. (1893 L)	416 gal. (1574 L)
Función	Química/ Mecánica	Química/ Mecánica	Química	Química/Mecánica



# Warranty.....

## Full One Year Warranty

For one (1) year from the date of original retail purchase, any part that fails in normal home use will be repaired or replaced free of charge. Ice Maker -- when purchased with the refrigerator and installed by the dealer the ice maker will be considered part of the refrigerator for warranty purposes.

## Limited Warranty — Major Refrigeration Components

### Second thru Fifth Year:

After the first year from the date of original retail purchase, through the end of the fifth year, Maytag Appliances will repair or replace, at its option, free of charge for parts and labor, any part of the sealed refrigeration system (consisting of the compressor, evaporator, condenser, drier and connecting tubing) and the cabinet liner (exclusive of the door liner) which fail in normal home use. Mileage and transportation charges, if required, shall be the responsibility of the owner.

## Limited Warranty — PuriClean™ Water Filter:

With regard to the water filter cartridge, Maytag Appliances will replace any part of the water filter cartridge which fails due to a defect in workmanship or materials, for a period of Thirty Days from the date of original purchase. This is a full 30 day warranty, and during this warranty period we will also provide free of charge, all labor and in-home service required to replace the defective part.

## Limited Warranty — Other Parts:

### Second Year:

Parts other than major refrigeration components which fail in normal home use during the second year following the date of original retail purchase will be repaired or provided free of charge for the part itself, with the owner paying all other costs, including labor, mileage and transportation.

**Please note:** The full warranty and the limited warranties apply when the refrigerator is located in the United States or Canada. Refrigerators located elsewhere are covered by the limited warranties only including parts that fail during the first year.

## LIMITATIONS OF LIABILITY

The warrantor shall not be liable for any incidental or consequential damages, including food loss. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation or exclusion may not apply to you.

**The specific warranties expressed above are the ONLY warranties provided by the manufacturer. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.**

## To Receive Warranty Service

To locate an authorized service company in your area contact the Maytag dealer from whom your appliance was purchased; or call Maytag Appliances Sales Company, Maytag Customer Assistance at the number listed below. Should you not receive satisfactory warranty service, please call or write:

Maytag Appliances Sales Company  
Attn: CAIR<sup>SM</sup> Center  
P.O. Box 2370  
Cleveland, TN 37320-2370  
U.S. 1-800-688-9900  
CANADA 1-800-688-2002  
U.S. customers using TTY for deaf, hearing impaired or speech impaired, call 1-800-688-2080.

**NOTE:** When writing about an unsolved service problem, please include the following information:

- (a) Your name, address and telephone number;
- (b) Model number, serial number, and revision number (found on the top front interior of the refrigerator compartment);
- (c) Name and address of your dealer and the date the appliance was bought;
- (d) A clear description of the problem you are having;
- (e) Proof of purchase (sales receipt).

## What Is Not Covered By These Warranties:

1. Conditions and damages resulting from any of the following:
  - a. Improper installation, delivery, or maintenance.
  - b. Any repair, modification, alteration or adjustment not authorized by the manufacturer or an authorized servicer.
  - c. Misuse, abuse, accidents, or unreasonable use.
  - d. Incorrect electric current, voltage or supply.
  - e. Improper setting of any control.
2. Warranties are void if the original serial numbers have been removed, altered, or cannot be readily determined.
3. Light bulbs.
4. Products purchased for commercial or industrial use.
5. The cost of service or service call to :
  - a. Correct installation errors.
  - b. Instruct the user on proper use of the product.
  - c. Transport the appliance to the servicer.
6. Consequential or incidental damages sustained by any person as a result of any breach of these warranties.  
Some states do not allow the exclusion or limitation of consequential or incidental damages, so the above exclusion may not apply.

User's Guides, service manuals and parts catalogs are available from Maytag Appliances Sales Company, Maytag Customer Assistance.

**MAYTAG • One Dependability Square • Newton, Iowa 50208**

