

 


Quick Start Guide

✉support@onnaisafe.com

Model No.: HX-010

QUICK START GUIDE VIDEO


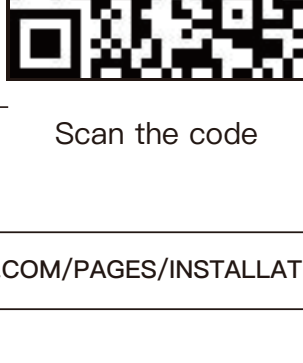


Scan the code

[HTTPS://ONNAISAFE.COM/PAGES/INSTALLATION-GUIDE](https://onnaisafe.com/pages/installation-guide)

Get

  QUICK START GUIDE

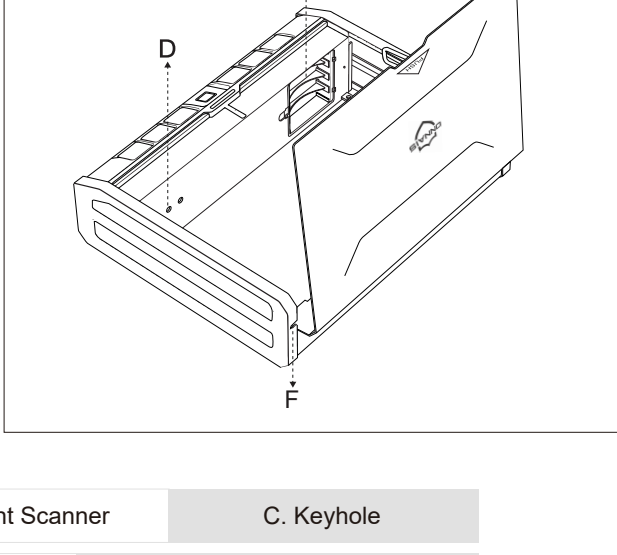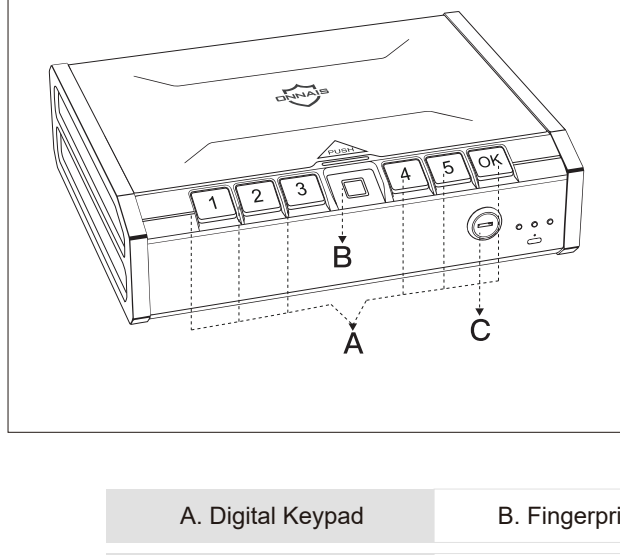

A. Digital Keypad

B. Fingerprint Scanner

C. Keyhole

 
D. Built-in Light

E. Battery Box

F. Steel Cable Groove

1

Step 1 . Use your key

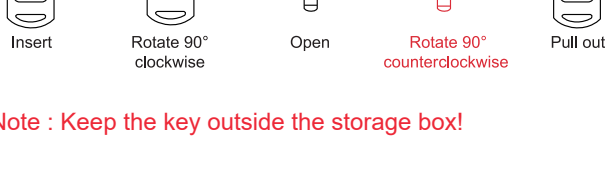

Note : Keep the key outside the storage box!

Step 2 . Install the battery

Please load 4 AA 1.5 Volt alkaline batteries into the battery box (The unit does not contain batteries).



Low battery warning: Red light flashing, beeps 10 times continuously.

 
⚠ Note : The device can only be set when it is in an unlocked state!

Step 3 . Reset your device

1. Make sure the batteries are installed.
2. Quick press the "RESET" button 3 times continuously and you will hear 2 beeps. Then the initial factory data will be cleared.

Step 4 . Add digital password

1. Press the "ADD" button, then add the digital password (5-15 digits) and press the "OK" button. You will hear a beep after pressing the "OK" button.
2. Enter the same digits again and press the "OK" button. You will hear two long beeps if setting successfully. Otherwise, it will beep three times rapidly.



Success— 2 long beeps
Failure— 3 rapid beeps

2

Note : Be sure to press the "OK" button when you enter the digital password.

Only one set of digital passwords can be set. Multiple groups of digital passwords are not supported.

Step 5 . Add fingerprints

1. Be sure to add digital password successfully before adding fingerprints
2. Press the "ADD" button and put your finger on the designated place 6 times. You will hear 2 long beeps at the 6th time if setting successfully.
3. Repeat the above step if you want to add more fingerprints.

Note : The fingerprints can be added up to 30 groups. Don't press the fingerprint area too hard when adding fingerprints.

More Function Guide

Delete Fingerprints:

Please unlock first, press the "DEL" button, the indicator will flash red. Then press your fingerprint that needs to be deleted on the scanner.

Note: You can continuously delete other fingerprint, just press the "DEL" button again to exit.

 
Restore Factory Settings:

Please unlock first, press the "RESET" 3 times continuously, two beeps indicate successfully.

Note: Resetting means that all data will be cleared. The initial password is "12134353".


3

Must-Read:

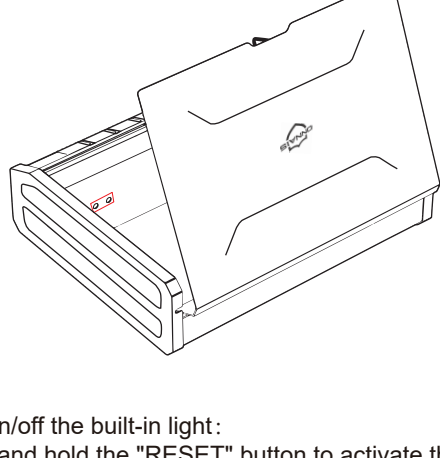


Turn on/off the built-in light:
Press and hold the "RESET" button to activate the built-in light, repeating this step can turn off the light.

 Note: The built-in light will remain illuminated for only 3 minutes. After the light goes out, please press any key to restore the light.

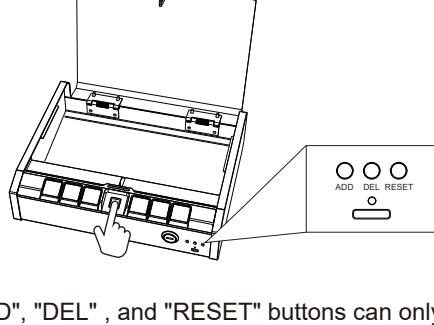

 The "ADD", "DEL", and "RESET" buttons can only be used after unlocking, they can't be used when the lid is closed.

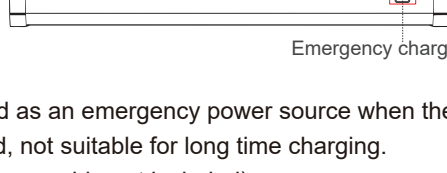

Emergency charging port

Used as an emergency power source when the battery is dead, not suitable for long time charging.
(Charge cable not included)

4

Steel Cable Installation Steps



5

Questions & Answers

Have a question?

Find your answers here

Question 1: Tried to add the digital password, but I can not make it right.

Answer: You need to clear the default digital password before adding personal password. Quick press the "RESET" button 3 times continuously before adding personal digital password. Refer to "Add digital password" on Quick Start Guide for more information (Page 2).

Question 2: Why I cannot record my fingerprint?

Answer: It's a must to add the digital password before recording fingerprint. Without adding digital password will cause the failure to record fingerprint. Besides, make sure your finger is clean without dirt or water, otherwise it will influence the fingerprint recognition. Refer to "Add fingerprints" on Quick Start Guide (Page 3).

Question 3: I accidentally input the wrong number when I am adding the digital password. What should I do next?

Answer: Continue the setting procedure and end with "OK" button. The device will beep twice with red light which tells you the passwords are not added correctly. Then reset the device and add the digital password again.

Question 4: Can not open it with code or fingerprint.

Answer: If this happens, use the key to open the box first. Then Quick press the "RESET" button 3 times continuously to clear all data. Add the digital password and fingerprint afterwards. Also check if the battery is dead. If it doesn't help, contact us at support@onnaisafe.com directly for friendly service and help.

Question 5: Can I Mute the buttons? I do not want the operation sound.


Answer: Quick press the "OK" button 3 times continuously to mute the sound. Repeat the same step to recover the operation sound.

Question 6: How shall I contact the seller regarding replacements/refunds or other technical issues?

Answer: The unit has 365 days replacement warranty and lifetime technical support. Send an email to support@onnaisafe.com with your order ID. We will work toward a resolution in 24 hours.

6

 Follow Onnais on Instagram & Facebook for faster help

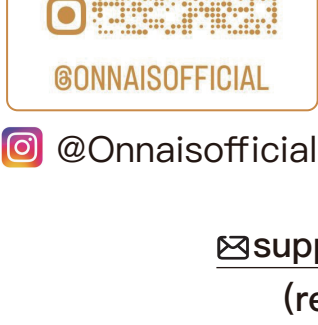

@Onnaisofficial



@Onnais

✉support@onnaisafe.com
(reply in 24 hours)