



ELECTRIC PRESSURE COOKER

User Manual

Model: YBW609F-1



Toll Free: 1800-121-922-922

IMPORTANT: Read the instructions carefully before operating the appliance and keep them for future reference.



TABLE OF CONTENTS

Safety Introductions	2
Product Components	3
How To Use	5
Clean And Maintenance	8
Troubleshooting	9
Limited Warranty	10

TECHNICAL SPECIFICATIONS

Model : YBW609F-1

Rated Voltage : 220V~240V 50Hz

Rated Power : 1000W

Capacity : 6L




Working Pressure : 45-95 Kpa

SAFETY INTRODUCTIONS

Important Safety Instructions


When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:

1. The Inner Pot should be washed before first use.
2. Always check the Anti-blockage Vent if clogs before use.
3. To prevent injury and scald, do not open the lid by force when in use.
4. Do not touch the lid or any of the stainless steel surface when in use, as these surface will become hot during operation.
5. Before removing cooker, allow cooker and parts to cool down with a safe temperature.
6. Do not lift the pressure cooker by the lid handle, always use the Carry Handle.
7. Unplug the appliance when not in use and before cleaning.
8. Do not immerse the cord, plug or cooker in water or any other liquids to avoid electrical shock or damaging the cooker.
9. Do not place the cooker on an unstable surface. Do not use on newspaper, foam, or any other material that may block the exhaust at the bottom.
10. Do not use the pressure cooker near or under surfaces that are heat sensitive or those that may be damaged by steam.
11. Close supervision is necessary when any appliance is used near children to avoid injury to themselves or others.
12. Keep the cooker out of reach from children or someone who is physical, sensory or mental dysfunction.
13. Do not operate this appliance with a damaged cord or plug. If your cooker experiences any malfunctions or has been damaged in any way, do not attempt to use it.
14. Use of any accessories that are not intended for this product may damage the unit, which is subject to void of warranty.
15. Do not overfill the Inner Pot. Overfilling may result in generating more pressure or clogging the exhaust pipe. If the food is easy to expand, such as rice, beans and grains, it should not to exceed the 3/5 of pot. On the other hand, it must exceed 1/5 of pot each time for good performance.

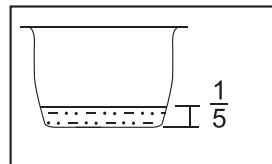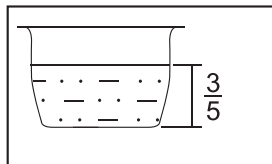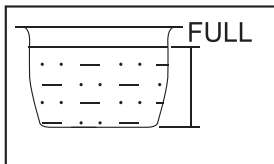


PRODUCT COMPONENTS

Unit Drawings

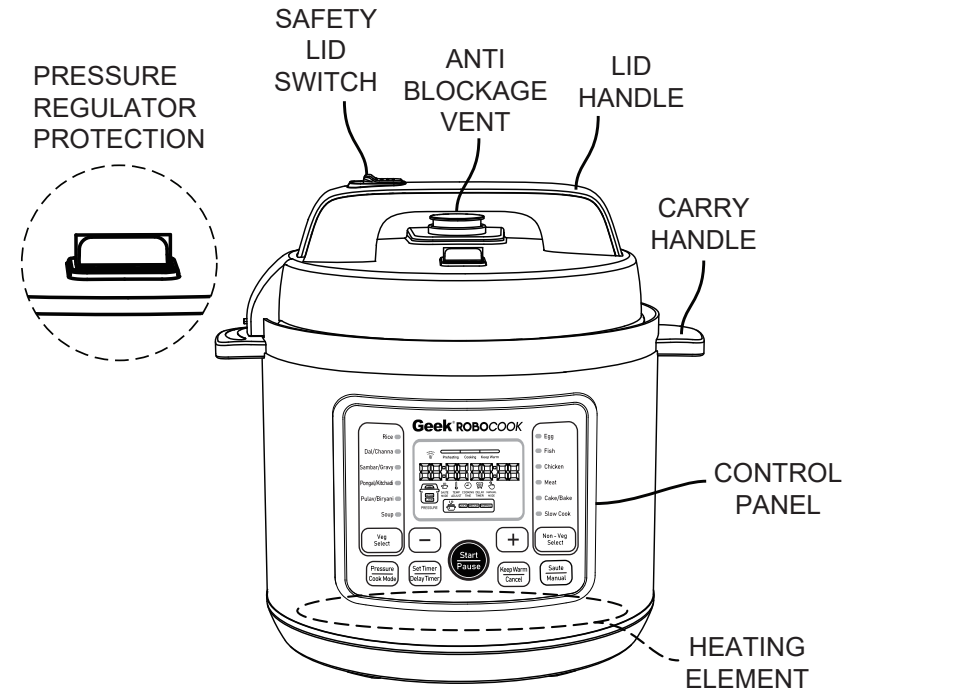


2-METER
POWER CORD

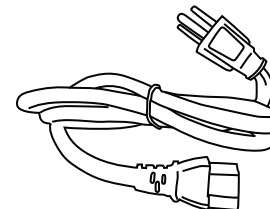

HEAT RESISTANT
SILICONE MITTS



MEASURING CUP

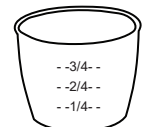

PRODUCT COMPONENTS


Unit Drawings



1. INNER POT
2. CONDENSATION CUP
3. CONTROL PANEL
4. HEATING ELEMENT
5. SEALING RING
6. ALUMINUM COVER PLATE

HOW TO USE

Menu

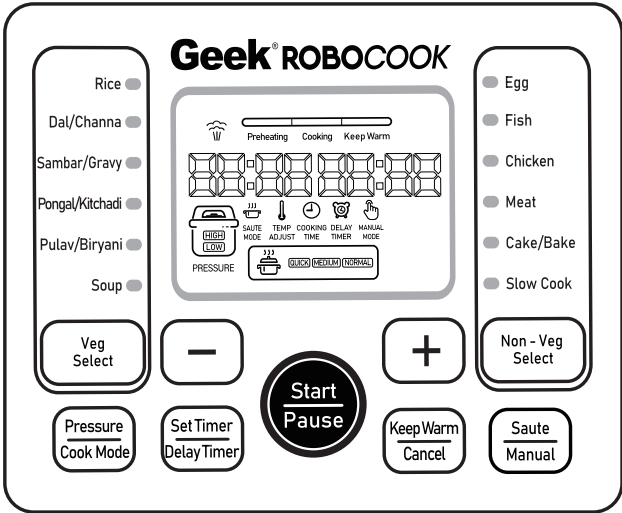

PRESSURE COOKER SETTINGS

Function	CookingTime Range	Default Cook Mode	CookingTime			Default Pressure
			Quick	Medium	Normal	
Rice	10 - 18m	Medium	10m	12m	18m	Low
Dal/Channa	20-60m	Medium	20m	40m	60m	High
Sambar/Gravy	5-15m	Medium	5m	8m	15m	Low
Pongal/Kitchadi	10-20m	Medium	10m	15m	20m	High
Pulav/Biryani	5-25m	Medium	5m	15m	25m	Low
Soup	15-45m	Medium	15m	25m	45m	Low
Egg	3-5m	Medium	3m	4m	5m	Low
Fish	8-15m	Medium	8m	10m	15m	Low
Chicken	10-30m	Medium	10m	20m	30m	Low
Meat	20-60m	Medium	20m	40m	60m	High
Cake/Bake	35-60m	Medium	35m	40m	60m	N/A
Slow Cook	2-8h	Medium	2h	4h	8h	N/A
Manual	1-60m	Medium	1m	10m	60m	Low
Keep Warm	60 - 70°C					

Note : All functions can start heating without lid for pre-cooking purpose.

HOW TO USE

Before First Use

1. Remove packaging materials such as cardboard, plastics or styrofoam.
2. Clean all the parts by wiping with a soft damp cloth or sponge and dry thoroughly.
3. Thoroughly clean the Inner Pot in the dishwasher or with warm soapy water. Rinse, towel or air-dry, and place in the cooker.

Operating Instruction

1. Open the lid and add the ingredients into the Inner Pot.
2. With the lid securely locked in place, select the button for the desired cooking function.
Note: Default times are programmed of each cooking function. In addition, three cook modes of "Quick", "Medium" and "Normal" are set for quick and easy choosing. Moreover, in any time, cooking time can be adjusted by pressing the "+" or "-" button. And pressure can be switched between "High" and "Low".
3. Press "Start" button after all are set, the cooker will automatically start working and timer will begin to count down.
4. When cooking is complete, the cooker will beep and automatically turn to keep warm. If you want to cancel before the timer finishes counting down, press "Keep Warm/Cancel".
5. Before open the lid, the pressure must be released manually by sliding the Pressure Regulator Protection to  position. Always be careful in this part as hot steam will be released from Antiblockage Vent. The lid will not open unless all the pressure has been released. Do not open the lid by force, in case of injury and scald. If it does not open freely, there is still pressure inside the cooker.
6. Slide the Safety Lid Switch to  position, and turn it clockwise to open the lid.

HOW TO USE

How To Use Saute Function

This function allows cooking over high heat without the lid. To saute your meats or vegetables prior to pressure cooking:

1. Remove lid from cooker.
2. Add oil or butter as directed in your recipe and then place food into the Inner Pot.
3. Select the "Saute" function. And set temperature or time you need then press "Start" button.
4. Stir or trun food as needed until desired color and consistency is reached.
5. When cooking is complete, the cooker will beep and automatically turn to keep warm.
If you want to cancel before the timer finishes counting down, press "Keep Warm/Cancel" button.

How To Use Slow Cook & Cake/Bake Function

1. Prepare desired food and place into Inner Pot.
2. **Place the lid onto the cooker and turn it anticlockwise to lock it in place. Slide Pressure Regulator Protection to  Position.**
3. Select the "Slow Cook" function. And set time you need then press "Start" button.
4. The cooker may take 5-20 minutes around to reach temperature before beginning count down.
5. When cooking is complete, the cooker will beep and automatically turn to keep warm.
If you want to cancel before the timer finishes counting down, press "Keep Warm/Cancel" button.

How To Use Delay Timer

If you wish to program your cooker to automatically cook prepared food at a later time, you can program the cooker to delay cooking by up to 24 hours. However, it is not recommended to use this function to cook foods that may spoil. Leaving raw foods inside the cooker for long periods of time prior to cooking may result in the food spoiling.

EX: If you wish to program to automatically turn on in 3 hours later. Select the "Delay Timer" and choose time until the screen displays 03:00. Then select the desired function as usual.


CLEAN AND MAINTENANCE

Basic Cleaning

1. Always make sure the cooker is unplugged, depressurized and completely cooled down before dismantling.
2. Wash inner pot, condensation cup and lid in hot water with dish soap. Rinse and dry thoroughly. To clean the condensation cup, remove it from the side of the cooker. Once clean and dry, snap the condensation back onto the side of the cooker.
3. Wipe the exterior of the cooker with a soft damp cloth and store cooker in a cool and dry place.

Warning : Never immerse or place cooker housing into water.

How To Clean The Lid

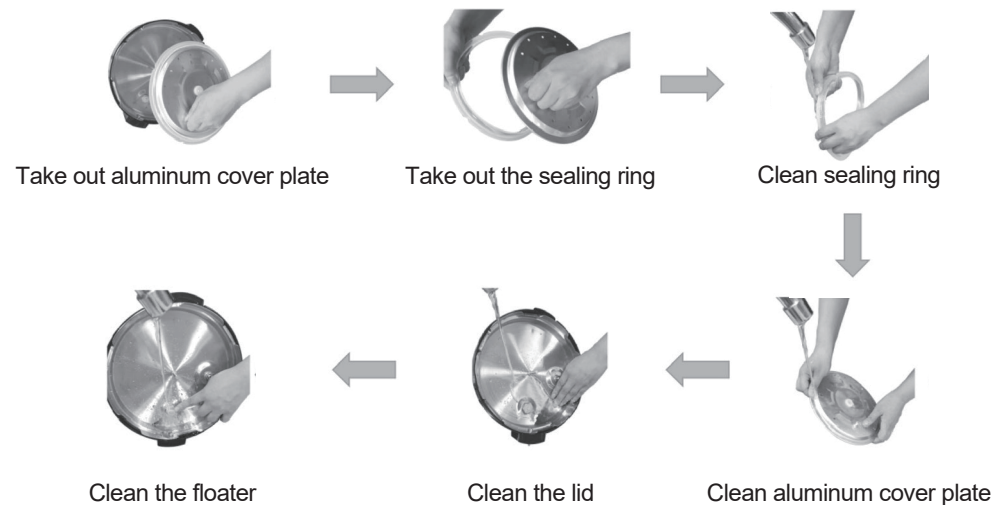

TROUBLESHOOTING

Troubleshooting

PROBLEM	REASON	SOLUTION
E01	Temperature sensor disconnected.	Contact customer services.
E02	Temperature sensor has short circuited.	Contact customer services.
E03	A. Temperture at the bottom of the cooking pot is too high.	Unplug and allow cooker to cool down completely.
	B. Power board is burned.	Contact customer services.
E04	A. Loose connection of the internal wire.	Ensure power cord between cooker and outlet are tight.
	B. The pressure switch disconnected.	Contact customer services.

LIMITED WARRANTY

Limited Warranty

Harkin Global Solutions Pvt. Ltd. warrants to the original consumer or purchaser this product is free from defects in material or workmanship for a period of One (1) year from the date of purchase. If any such defect is discovered within the warranty period, Harkin Global Solutions Pvt. Ltd. at its discretion, will repair or replace the product at no cost. This limited warranty is good only to the original purchaser of the product.

For warranty or repair service: Call 1800-121-922-922 and choose the appropriate prompt, or email care@harkin.in. Please have your product's model number, your name, address, city, state, zip code and phone number ready.

THIS LIMITED WARRANTY DOES NOT APPLY TO :

1. Failure of product to perform during power failures and interruptions or inadequate electrical service.
2. Damage caused by transportation or handling.
3. Damage caused to the product by accident, vermin, lightning, winds, fire, floods, or acts of God.
4. Damage resulting from accident, alteration, misuse, abuse, or improper installation, repair, or maintenance. Improper use includes using an external device that alters or converts the voltage or frequency of electricity.
5. Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts.
6. Abnormal cleaning and maintenance as described in the user's manual.
7. Use of accessories or components that are not compatible with this product.



Imported & Mktd by
Harkin Global Solutions Private Limited
No.1/22b, M K N Road, Alandur, Chennai,
Tamil Nadu – 600 016