



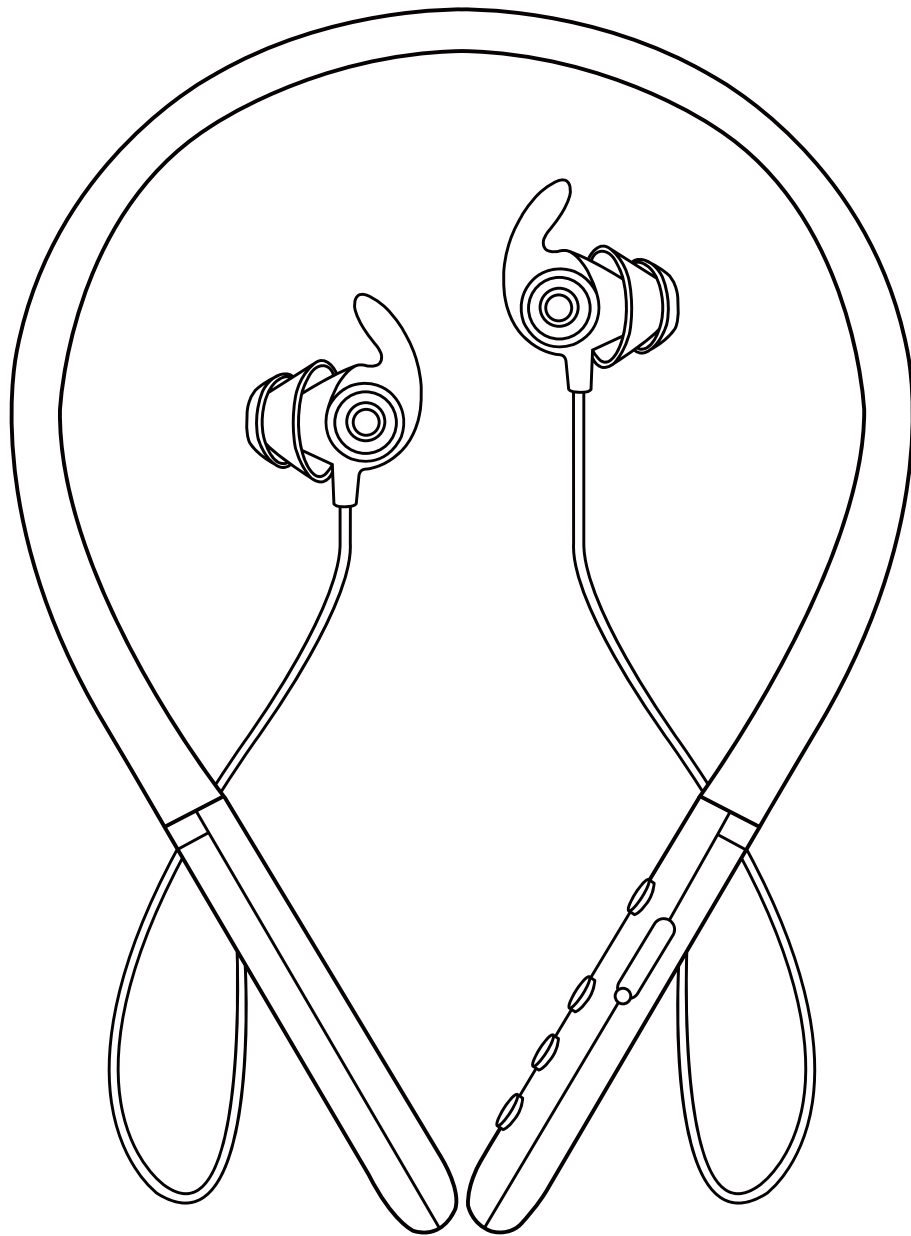

HS88

Wireless Neckband Earphones
Use Instructions

About Earphones

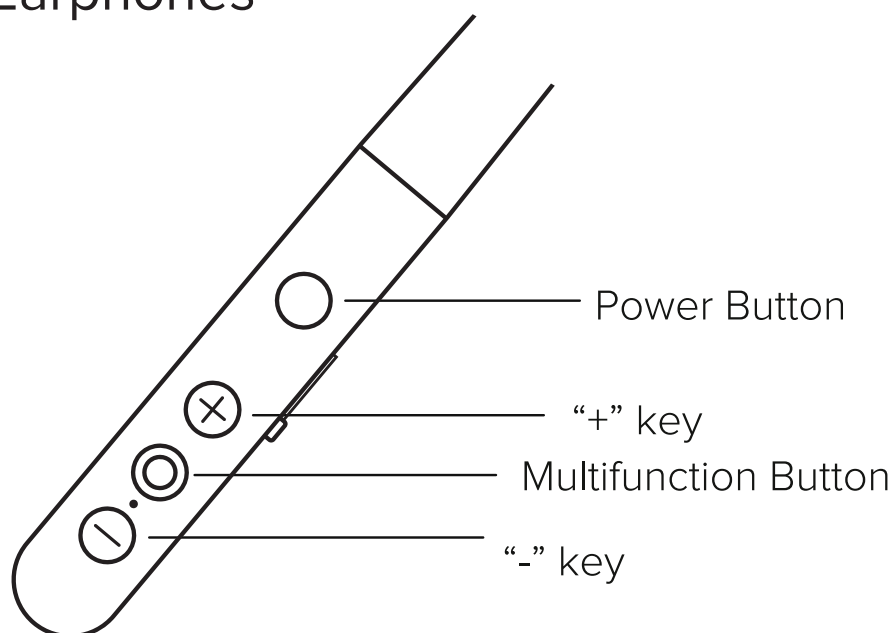

Product Specifications

Version: V5.3	Battery capacity: 130mA
working time: 10-12 hours	Charging time:~1 hour
Distance: 10-20 meters (unobstructed straight line)	
Charging input: 5V==150mA	Driver: Φ6mm
Working voltage: 3.1-4.2V	Impedance: 16Ω
Frequency: 20Hz~20KHz	Working current: 5~15mA
Weight: 35g	

Indicator Light Description

Power on: Light on blue
Pairing: Flashing red and blue alternately
Work: Indicator off
Charging: Steady red
Power off: Flashing red three times
Fully charged: Steady blue

Pairing

1. When this earphones is off, long press the power button to enter pairing mode, the indicator light will flash blue and red alternately.
2. Turn on the Bluetooth function on your device and find "HS88" on the Bluetooth settings screen and pairing. When connected, the indication light will turn off.
3. If this earphones is not connected to a device for 3 minutes, it will automatically shut down.

Pairing to Another Device

When it connects to a device, turn off the Bluetooth function of the device, you can connect HS88 to another device according to above operation process. When connected, you can turn on the Bluetooth function of the first device again.

Keys Operation

Power on - Long press the power button for 3 seconds

Power off - Long press the power button for 4 seconds

Answer a call - Click the multi-function button when there is an incoming call

Hang up - Click the multi-function button during a call

Play/Pause - Click the multi-function button while listening to a song

Reject a call - Long press the multi-function button when there is an incoming call

EQ mode - Click the power button after pairing

Calling for voice assistant - Long press the multi-function button for 2 seconds

Next Song - Long press the "+" key

Previous song - Long press the "-" key

Increase Volume – Click the "+" key

Reduce volume - Click the "-" key

Warranty Description

Warranty period: 12 months from the date of purchase of the product.

The following situations are not covered by warranty:

1. The product repair label is damaged;
2. Damage caused by self disassembly;
3. Failures caused by water ingress or falling and considered mechanical damage;
4. Failure or damage caused by force majeure.

Attention:

1. Long term use of earphones may cause hearing damage, please arrange the usage time reasonably.
2. The working hours and charging time vary due to various factors such as playback environment, volume, and sound source.

This product has been inspected by our company's quality control department and its performance parameters meet technical standards.

