 


USER MANUAL

NO. CV-D903

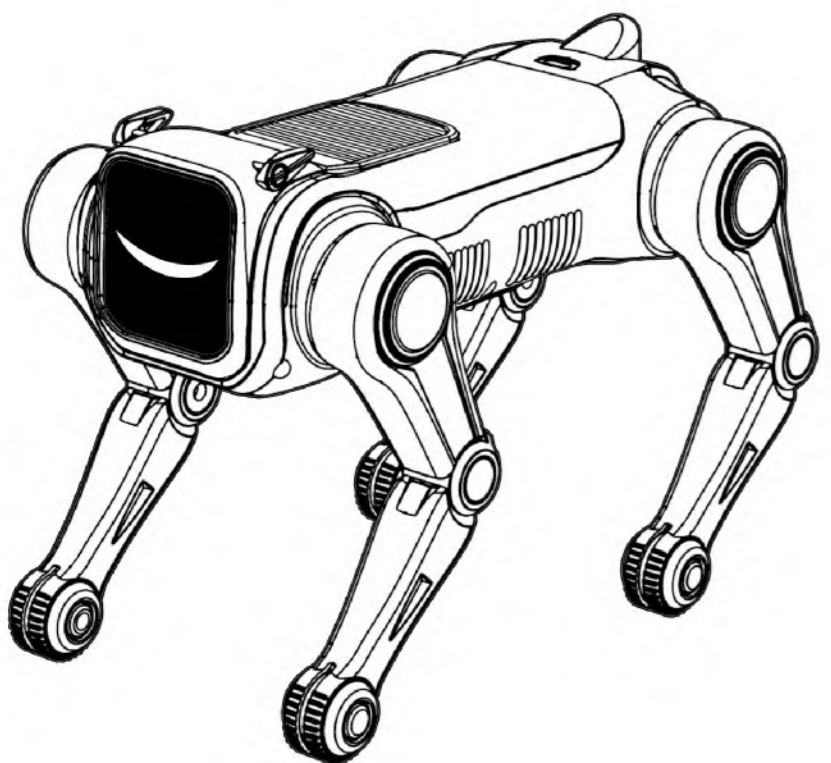

2.4GHz, Voice Commands, Colorful Eye Lights, Smart Programming, Forward and backward somersaults, Left and Right Rolls, Stunt Moves, Singing and Dancing Performance, Automatic Demonstration



(1)

Thank you for using our company's toy products. In order to give you a better understanding of this product, please use them before use. Reading the following instructions thoroughly will bring you a different operating experience.

Attention: The remote-controlled dog products shown in this instruction manual are for reference only. Please refer to the actual product for the product's appearance.

Electrical Control Products

The product should be assembled/charged by adults before being played with by children. Please use the product under adult supervision.

Warning: Do not disassemble or modify this product without authorization. Any modification may cause the product to fail to function properly.

This manual is suitable for the introduction of a series of our company's products. The configuration of each product is different. For specific configurations, please refer to the packaging box.

1. The remote-controlled dog uses 1 rechargeable battery; please refer to the battery label inside the battery compartment for the voltage rating. The remote control uses 2 non-rechargeable 1.5V AAA batteries.

2. The removal and installation of batteries should be operated correctly according to the polarity and voltage inside the toy battery room;

3. Non rechargeable batteries are not rechargeable;

4. Rechargeable batteries must be charged under adult supervision;

5. Rechargeable batteries should be removed from toys before charging;

6. Different types of batteries or old and new batteries cannot be mixed;

7. Only batteries that are the same or equivalent to the recommended battery can be used;

8. Remove the battery from the toy when it is fully discharged. If the toy will not be used for an extended period, take out the batteries from both the remote-controlled dog and the remote controller.

 
 
9. The power terminal shall not be short circuited;

10. Use a screwdriver to unscrew the screws on the battery compartment cover, install the battery according to the correct positive and negative polarity, and use screws. Unscrew the screws on the battery compartment cover with a knife and remove the battery;

11. Maintenance and upkeep: This product is composed of plastic, hardware, and electronic components, and should not be immersed in water or stored for a long time. Place or use in a humid environment, regularly check for missing wires, plugs, casings, and other components. When defects are found, use should be stopped until they are repaired completely.

(2)


Product configuration

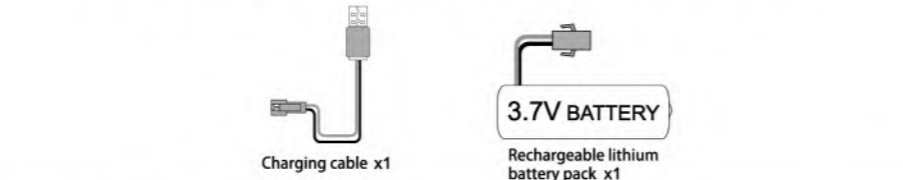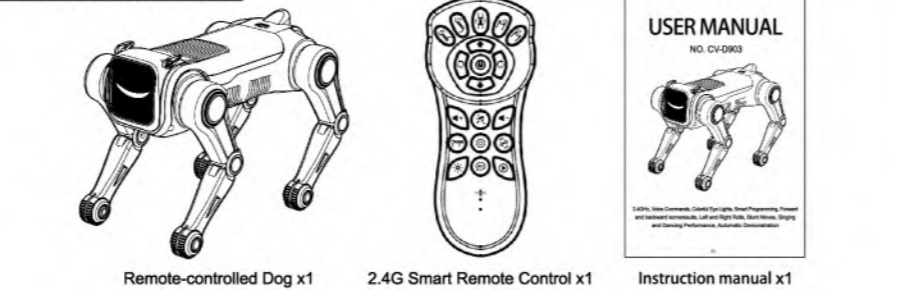

How to install batteries


1 Remote Control

 1. Open the battery cover of the remote control and install 2 1.5V "AAA" batteries according to the positive and negative instructions in the battery compartment of the remote control.
2. Cover the battery.

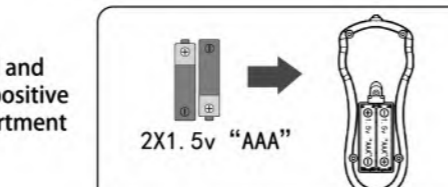

2 Remote-controlled Dog

 1. Open the battery cover at the bottom of the remote-controlled dog, connect the battery pack to the interface of the remote-controlled dog, and install it in the battery compartment at the bottom of the remote-controlled dog.
2. Close the battery cover and tighten it with a screwdriver.


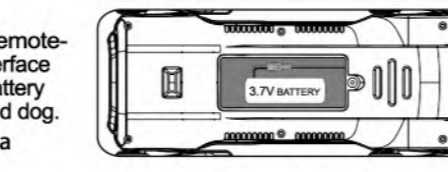


How to charge

1. This new battery pack needs to be charged before it can be used.

2. First, connect the interface on the charging cable to the plug of the battery pack, and then connect the USB plug of the charging cable to the power source to start charging.

  3. Charging time: 2.5-3 hours. The charging cable has an indicator light that glows red during charging and turns off when fully charged. Do not overcharge—prolonged charging will not increase battery capacity.

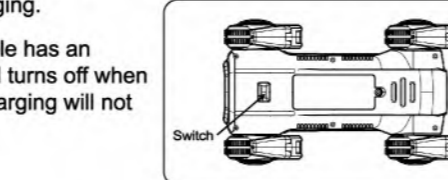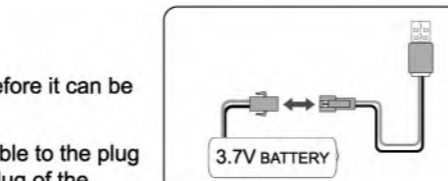

(3)

 
2.4G automatic frequency description

1. After installing the batteries in the remote controller and turning on the switch, the indicator light on the remote controller starts flashing. Install the battery in the remote-controlled dog and turn on its switch to enter the pairing state. The indicator light on the remote controller stays on solid when the pairing is successful. Note: Repeat the above steps if the pairing fails.

2. Each remote control can only connect to one remote-controlled dog. Once the connection is successful, each remote-controlled dog will not interfere with each other. Note: Multiple remote-controlled dogs cannot be connected at the same time.

3. When the remote controller is not paired with the remote-controlled dog, its indicator light keeps flashing, and the remote controller will turn off automatically after one minute. You need to restart the power switch to perform pairing again.

Introduction to the Functions of the Smart Remote Control

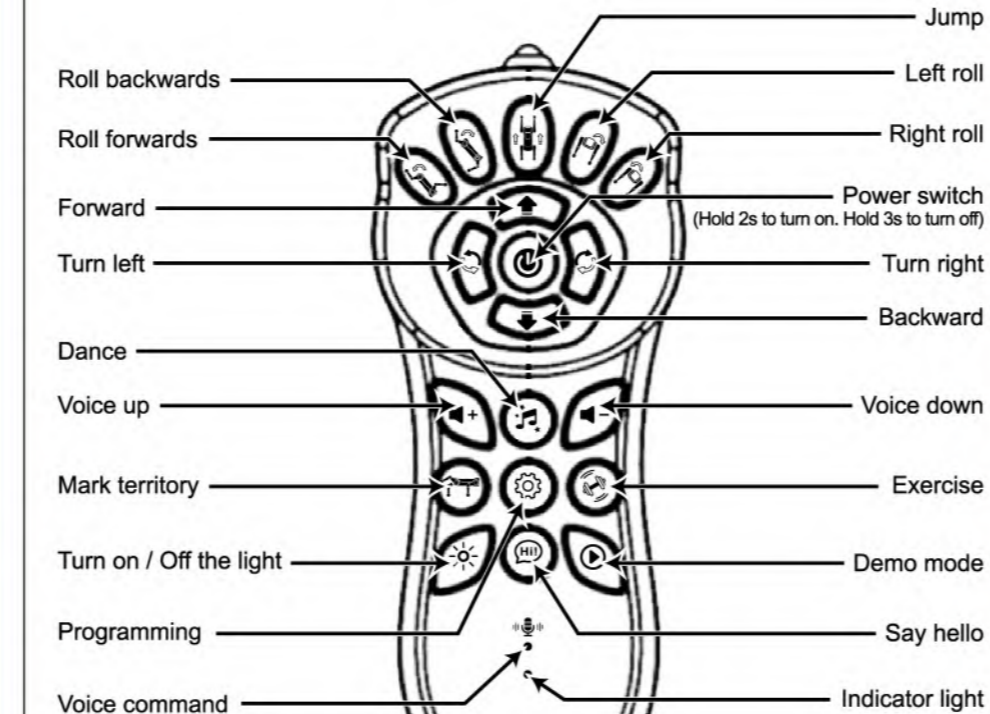

(4)

Introduction to the Play Methods of the Remote-controlled Dog

1 Forward & Backward



 
Press and hold the forward button on the remote control, and the remote-controlled dog will move forward. Press and hold the backward button on the remote control, and the remote-controlled dog will move backward.

2 Turn Left & Right




Press the Left Turn button on the remote control, and the remote-controlled dog will turn left. Press the Right Turn button on the remote control, and the remote-controlled dog will turn right.

3 Left flip

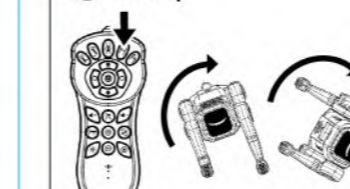


Press the Roll Left button on the remote control, and the RC dog will roll to the left.

 4 Right flip

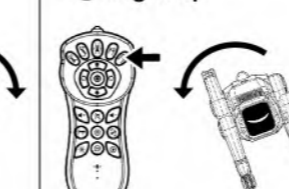


Press the Roll Right button on the remote control, and the RC dog will roll to the right.

 5 Forward flip

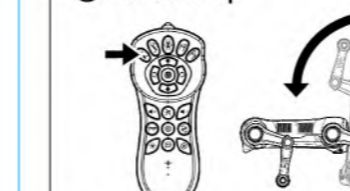

Press the forward flip button on the remote control once, and the remote-controlled dog will flip forward.

 6 Backward flip

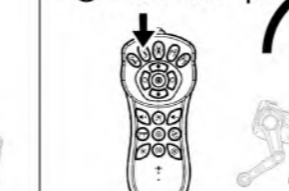

Press the backward flip button on the remote control once, and the remote-controlled dog will flip backward.

7 Voice Command



Please issue commands towards the microphone's sound pickup hole, with an effective distance of 25-35cm.

In normal operation, say "Weiwei", the remote-controlled dog will respond "I am here", to the remote control to enter the voice command mode (the remote control indicator light flashes). Then speak the following commands to the remote control: Frog jump, Advance roll, Back roll, Left roll, Right roll, Go forward, Go backward, Turn left, Turn right, Sing and dance, Whistle, Exercise, Shine bright, Wave hand, Show time, and the remote-controlled dog will execute your commands accordingly. If your voice command is not recognized, please speak the words following the standard pronunciation used in common AI dictionaries or AI translation apps.

 
(Note: After entering the voice command mode, the mode will exit immediately if no voice commands are issued within one minute, or if any button is pressed during the mode.)

(5)


There are various ways to play, waiting for you to explore.




Multiple singing and dancing performances. Press the "S" button on the remote control briefly to activate this function, and press it briefly again to switch to the next performance.

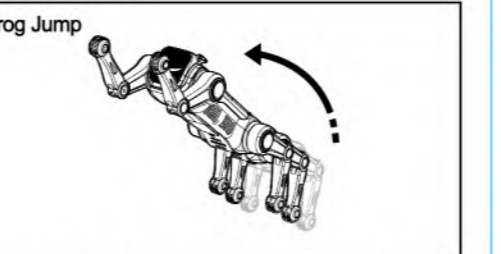

 
Press the "F" button on the remote control briefly, and the robot dog will perform this action.

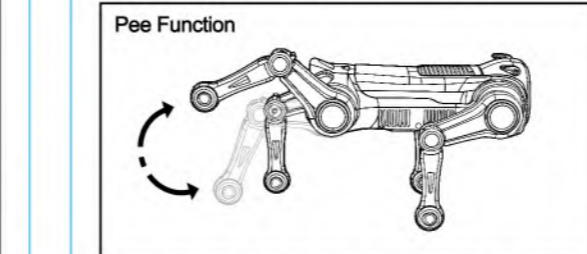

 
Press the "P" button on the remote control briefly, and the robot dog will perform this action.

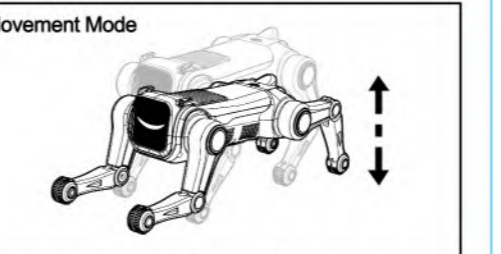

 Press the "M" button on the remote control briefly, and the robot dog will perform a movement show.

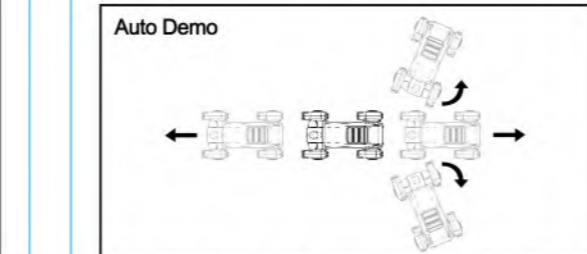


 Press the "D" button on the remote control briefly, and the robot dog will perform an automatic demonstration.

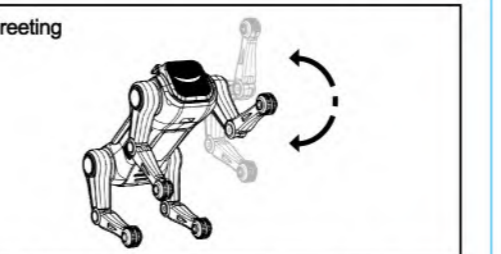

Press the "G" button on the remote control briefly, and the robot dog will make a greeting gesture.

 Smart Programming

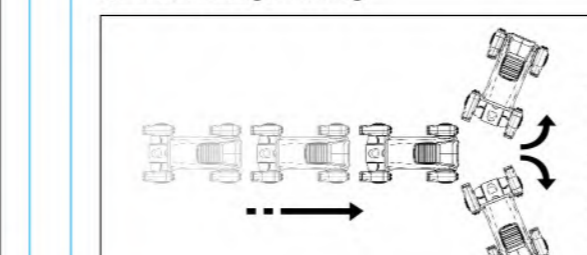

Briefly press the "P" button on the remote control to enter programming mode. Then press the Forward, Backward, Turn left, Turn right, Roll forwards, Roll backwards, Left roll, Right roll, Jump, Dance, Say hello, Mark territory, Exercise, Demo mode buttons in sequence to program the actions. Press the Program button again, and the remote-controlled dog will execute the actions in the set order.

 
Safety usage tips

Regularly check toys, batteries, the wires of charging cables and plugs. If any of these components are damaged, stop using them until they are repaired or replaced.

(6)

Operation tips

- Please press the power switch to ensure that the power switch is in the on state. When you operate it, if the power switch is in the off state, the remote-controlled dog will not be able to be powered on.
- When the battery power is consumed, the left and right steering is not sensitive, and the forward and backward will be slow; Take off the battery and charge it.
- The effective control distance of the remote-controlled dog is over 30 meters. If the distance is exceeded, the dog may stop moving or fail to respond to the remote control.
- Please perform operations on smooth and level surfaces. Note that surfaces with higher friction, such as carpets, affect the agility and operational performance of the product.

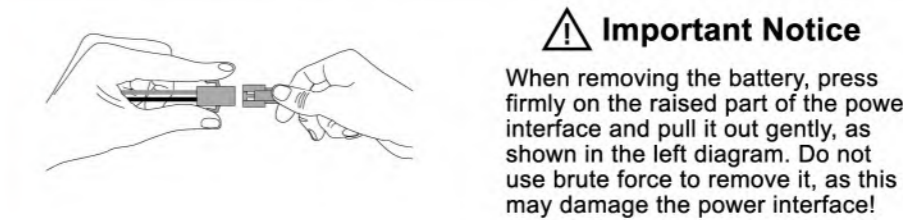

Important Notice
When removing the battery, press firmly on the raised part of the power interface and pull it out gently, as shown in the left diagram. Do not use brute force to remove it, as this may damage the power interface!

General Troubleshooting

Fault Symptoms	Causes of Faults	Troubleshooting Methods
The remote-controlled dog cannot move	1. The remote control is not connected, or the switch of the remote-controlled dog is not turned on. 2. The remote control or the remote-controlled dog is not loaded with batteries correctly. 3. The rechargeable battery pack is insufficient in power.	1. Turn on the switch of the remote-controlled dog and reconnect the remote control. 2. Load the batteries into the remote control or the remote-controlled dog correctly. 3. Charge the rechargeable battery pack.
The remote-controlled dog is out of control or has a short remote control distance	1. The battery of the remote control or the rechargeable battery pack is insufficient in power. 2. There may be interference sources near the site.	1. Replace the remote control battery with a new one, or charge the rechargeable battery pack. 2. Change the site.
Abnormal Protection	When the function of the remote-controlled dog is hindered by external forces and cannot complete all functional actions, or when the circuit battery is short-circuited.	Turn on the power switch again; the remote-controlled dog will power off for protection.

(7)

 
To consumers

- When playing with the remote-controlled dog indoors, please be careful not to damage the furniture or glass.
- Please play in a safe outdoor area. Do not play with the remote-controlled dog on the road or among crowds to avoid potential dangers.
- When you hear thunder while playing with the remote-controlled dog outdoors, you should stop playing immediately.
- Do not play with the remote-controlled dog by directing it at people or animals.
- Do not throw or collide the remote-controlled dog randomly.
- When storing the remote-controlled dog, please keep it away from fire sources and high-temperature areas.
- The remote-controlled dog is equipped with a complex electronic circuit and a large number of components. Please do not disassemble, assemble, or modify the circuit board casually.
- When the remote-controlled dog is covered with dirt and dust after playing, it should be gently wiped with a damp cloth.
- Do not put toys in water, as it can damage electronic components.
- The packaging box and instructions contain important information, please keep them properly.

Maintenance matters

- Keep away from fire sources, avoid direct sunlight, high temperature and humidity, or keep in the car for a long time to avoid short circuits in the circuit to catch fire.
- When not in use, remove the batteries from the remote-controlled dog and the remote control, and put the remote-controlled dog and the remote control back into the colorful box packaging. This can prevent damage or deformation during transportation or storage.
- The remote-controlled dog should be gently wiped with a damp cloth.
- When not playing with it, please remove the batteries from the remote-controlled dog and the remote control to avoid reducing the battery life.

Reminder

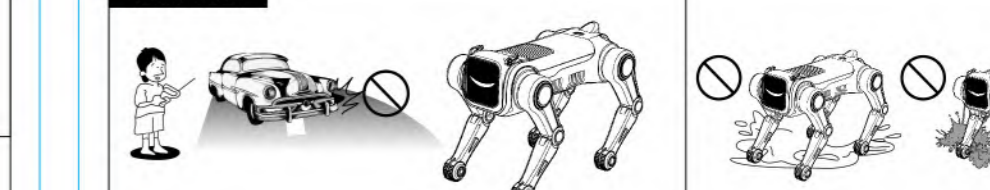

Do not play on the roadside or in dangerous places to prevent accidents.

Do not play with the remote-controlled dog in sewage pits.

(8)

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by

may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.