




Hanin



PIX22

 Product Introduction

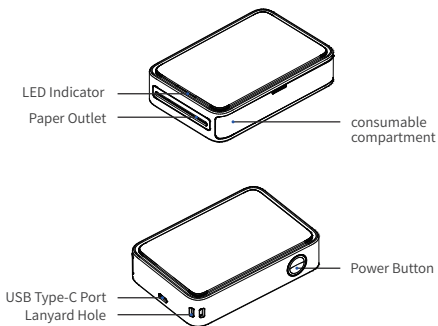

Accessories



USB Type-C Cable



Quick Start Guide



Consumable

*** Note:** The items in the package are actually based on the order .



If there is a paper jam or ribbon jam and cannot be solved, please contact the after-sales service and do not remove it violently.

LED Indicator Status

1 Printer Status

Status	Indicator Light Status
Bluetooth is connected, ready to use	Solid blue
Printing/receiving data via Bluetooth	Flashing blue (slow)
Device powering on	Flashing blue (fast)
Bluetooth pairing mode	Flashing blue (fast)

2 Error Status

Status	Indicator Light Status
No Photo Paper/Color Ribbon is depleted/No Photo Paper Cartridge inserted	Solid orange
Color Ribbon error/ Photo Paper Cartridge not recognized	Flashing orange (slow)
Photo Paper/Color Ribbon is jammed	Solid red
Low battery	Flashing red (slow)
Temperature/device abnormality	Flashing red (fast)

3 Charging status

Status	Indicator Light Status
Charging in progress	Flashing green (slow)
Fully charged (powered on)	Solid green
Fully charged (powered off)	Solid green (until the USB-C cable is unplugged)

 Flashing red (slow) indicator indicates the temperature is outside the safe range for charging. Recommended charging temperature: 0°C to 45°C.

Consumable Installation Instructions

01

 
Open the consumable compartment.



02


Insert the consumable.

Take out a consumable, put it into the compartment according to the direction shown below, place your finger in the "Push" position and press it into place until it makes a "click" sound;

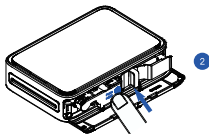

03

 
Close the consumable compartment.

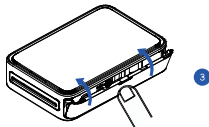

1. The photo paper is susceptible to moisture, please use it as soon as possible after opening.
2. This device only supports official photo paper that comes with the ribbon, please do not replace it by yourself.
3. Avoid excessive direct sunlight and low temperature.
4. If the consumable is damaged or deformed by external force, please do not insert it into the device by force.

Printing Instructions

 - 1 Long press the power button until the indicator light turns on, then release. The device will power on.

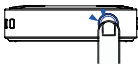

- 2 Scan the QR code to download the "HeyPhoto" APP.



HeyPhoto APP

- 3 Open APP, click "Add Device", Search for "PIX22-XXXX" and click to connect.



- 4 In the app, select the photos you want to print. You can also edit the photos as needed before printing.



-  1. After the first connection, you just need to click the print icon for subsequent use, the printer will be automatically connected and print.
2. Do not exit the APP during the printing process, this may cause printing failure.

Product Parameters

Product Name	Portable Photo Printer
Printer Model	HCP-2TS25L
Dimensions	125x85x33.5mm
Weight	Bare Printer 286g
Print Method	Thermal Dye Sublimation
Print Size	54x72mm
Print Resolution	300dpi
Battery Capacity	860mAh
Charging Interface	5V / 2A, Type-C Interface
Operating Temperature	5°C~35°C

Manufacturer:Xiamen Hanin Co.,Ltd.

Factory Address:No.96, RongYuan Road, Tong'an District,
Xiamen City, Fujian Province, P.R. China

E-mail: support@hpert.com

Web: www.hpert.com



Precautions

 
1. The best working temperature of the printer is 5°C~35°C.
If the ambient temperature is too high, the printing quality may be affected;
2. Please use official ribbon and photo paper to ensure print quality;
3. Avoid disassembling the ribbon and photo paper by yourself.
If the glossy surface of the photo paper is contaminated, the print quality will be affected;
4. Do not pull out the consumable forcibly during printing, this may damage the printer;
5. When not in use for a long time, close the consumable compartment to keep things like dust out;
6. After printing multiple photos in a row, the device may activate overtemperature protection, which is normal, and the current task will continue to be printed after cooling;
7. Do not perform any operations while the device is turning on.

Operating Environment

1. Place the printer on a desktop or other flat, stable surface;
2. Please make sure that there is more than 10cm space in the paper outlet of the printer.

Battery Charging

1. When the printer battery is low, please charge it promptly using the provided USB Type-C cable. Continuing to print may cause the printer to shut down automatically.
2. Connect one end of the USB Type-C cable to the printer's USB port and the other end to a power adapter. The printer will begin charging once connected.
3. Under ambient temperature conditions, a full charge takes approximately 90–120 minutes.

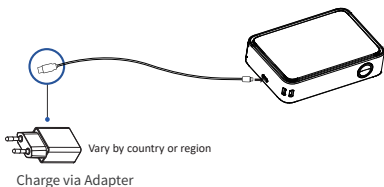

- ⚠** 1. The printer can be charged via a computer or an adapter using a USB cable. Please note that the adapter is not equipped with the printer. Users who use power adapters for charging should purchase and use power adapters that are certified for safety and meet the requirements of the standard.
2. Users are prohibited from disassembling the machine themselves. Replacing the battery with the wrong model may result in an explosion. Please be sure to dispose of the used battery according to the instructions.
3. When the printer is low on power, charge it for a while before use to prevent printing interruptions.
- WARNING:** Operating this device may cause radio interference in a residential environment.

FCC WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules.

This equipment must not be co-located or operating in conjunction with any other antenna or transmitter.

End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warning: Operation of this equipment in a residential environment could cause radio interference.

FCC ID: 2AUTE-2TS25L

PORTABLE PHOTO PRINTER

iPhone 16 Pro Max, iPhone 16 Pro, iPhone 16 Plus, iPhone 16, iPhone 15 Pro Max, iPhone 15 Pro, iPhone 15 Plus, iPhone 15, iPhone 14 Pro Max, iPhone 14 Pro, iPhone 14 Plus, iPhone 14, iPhone SE (3rd generation), iPhone 13 Pro Max, iPhone 13 Pro, iPhone 13, iPhone 13 mini, iPhone 12 Pro Max, iPhone 12 Pro, iPhone 12, iPhone 12 mini, iPhone SE (2nd generation), iPhone 11 Pro Max, iPhone 11 Pro, iPhone 11, iPhone XS Max, iPhone XS, iPhone XR, iPhone X, iPhone 8 Plus, iPhone 8

Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Apple, iPad, iPad Air, iPad Pro, iPhone are trademarks of Apple Inc., registered in the U.S. and other countries and regions.

Apple, iPad, iPad Air, iPad Pro, iPhone are trademarks of Apple Inc., registered in the U.S. and other countries and regions. The trademark "iPhone" is used in Japan with a license from Aiphone K.K.

Made for
 iPhone

