



- 1、尺寸：100X70（mm）
- 2、材质：80g书写纸
- 3、印刷：双面印刷 风琴对折

Smart Tracker English - - - - - 01-08 Deutsch - - - - - 09-17 Italiano - - - - - 18-26 Français - - - - - 27-35 Español - - - - - 36-44	English Wireless Charging Card Finder User Manual The Apple® Find My® network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone®, iPad®, Mac®, or the Find Items app on Apple Watch®. To use the Apple Find My app to locate this item, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch requires the latest version of watchOS®. Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards. 01	Product Overview  This Package Includes: • Card Finder *1pcs • User Manual *1pcs • Quick User Guide *1pcs 02	Quick Instructions 1. Check For Updates To use the Apple Find My app to locate your Card Finder, the latest version of iOS, iPad OS, or macOS is recommended. 2. Power On Press and release the power button on the card to turn it on – it should beep indicating it is powered on. 3. Connect your Card Finder • Open the Apple Find My App. • Tap “+” and then “Add Other Item”. • Make sure your Card Finder is close to your phone. Wait until you see the device name then tap “Connect”. • Choose a recognizable name and emoji for your Card Finder and tap “Continue”. • Find My will ask for confirmation to add the Card Finder for your Apple ID – tap “Continue”. • Tap “Finish” and the Card Finder will be set up and ready to be connected to whatever items you wish to locate, e.g., your wallet, luggage, etc. 03	Main Functions 1. Locate Your Item • Find the device when it is Nearby. Tap “Play Sound” to make your Card Finder beep when it is nearby. • Find your Card Finder’s last known location. Your Card Finder’s last known location will appear on the map as emoji you choose during set up, tap “Directions” to navigate to the last known location. 2. Find Item When Out of Range • Enable the “Notify When Left Behind” toggle, you will receive a notification when you left your Card Finder behind and it is no longer in range of your device. • Enable the “Notify when Found” toggle, when your Card Finder is seen by another Find My enabled device, you will receive a notification of its updated location. Note: “Notify When Found” can only be activated when your Card Finder is out of range. 3. When Your Item is Lost • When Your Item Lost Under “Lost Mode”, tap the “Enable” tab, a detailed page showing the Lost Mode will pop up, tap “Continue”. You can enter your phone number or email address and tap “Next”. You may enter a message 04	that will be shared with the person that finds your item. Tap “Activate” to enable “Lost Mode”. Note: When “Lost Mode” is enabled, “Notify When Found” is automatically enabled. Note: When “Lost Mode” is enabled, your Card Finder is locked and cannot be paired to a new device. 4. Remove your Card Finder Ensure “Lost Mode” is disabled, tap “Remove Item” tab, a summary will open, tap “Remove” to confirm. Unwanted Tracking Detection If your iPhone detects that an unknown Card Finder is traveling with you, it will send you a notification. A sound will start playing so you will be able to find it. These alerts are only activated when an Card Finder is not connected to its owner’s phone, so your partner’s Card Finder will not trigger a sound if they are with you. Button Function 1. Power ON Press the power button once to turn it on, it should beep indicating it is powered on. If the product is not paired, it will be closed automatically within 10 minutes. 05	You need to trigger the findmy function again to continue pairing. 2. Power OFF Hold the button for 3 seconds (two short beeps will sound). 3. Reset Press the power button for 4 times rapidly and then hold it for the 5th time until you hear a beep sound. A reset operation is required to enable the device to enter the pairing state again (synchronization of Findmy also requires simultaneous unbinding) and rebind the new Apple ID account. 4.Enable learn more information query Press the power button for 2 times rapidly and you will hear a confirmation sound,This operation will be displayed on the Find My app to guide the person who gets the device to obtain the device information, such as the owner's contact information (if the item is set to the lost mode on the app), and the serial number of the device. 06	Important tips : • When pairing a device with Find My app, the phone will link to the Apple server. Pairing may fail because of network problems. The following action is recommended: 1. Change the phone’s network, such as switching between WiFi and mobile. The first pairing may takes a long time, please wait patiently. 2.Reset your item. 3.Repair with Findmy APP. •When “Lost Mode” is enable, DO NOT REMOVE ITEM in the APP. Your Card Finder will be locked and cannot be paired to a new device. •The battery usage time varies depending on personal usage habits. Frequent use of the call function can accelerate battery consumption. ISED Warning This device complies with Innovation, Science, and Economic DevelopmentCanada licence-exempt RSS standard(s). Operation is subject to the following twoconditions:(1) this device may not cause interference, and(2) this device must accept any interference, including interference that may causeundesired operation of the device.Le présent appareil est conforme aux CNRd’Innovation, Sciences etDéveloppement économique Canadaapplicables aux appareils radio exempts delicence.L’exploitation est autorisée aux deux conditions suivantes : (1)l’appareil nedit pas produire de brouillage, et(2)l’utilisateur de l’appareil doit accepter tout brouillage radioélectrique subi,même si le brouillage est susceptible d’en 07	compromettre le fonctionnement.The device is compliance with RF exposure guidelines, users can obtain Canadianinformation on RF exposure and compliance.Le présent appareil est conforme Après examen de ce matériel aux conformité ouaux limites d’intensité de champ RF, les utilisateurs peuvent sur l’exposition auxradiofréquences et la conformité and compliance d’acquérir les informations correspondantes.  FCC Statement • This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: • (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. • NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. 08	• Consult the dealer or an experienced radio/TV technician for help. • NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. Safety Information – Battery and Charging 1.Battery Handling Precautions • Do not disassemble, crush, puncture, or expose the Card Finder to fire or excessive heat (above 60°C / 140°F). • Do not short-circuit the device or allow metal objects to come into contact with the battery terminals. • Do not attempt to remove or replace the built-in battery. This product contains a non-user-serviceable lithium-ion battery. • Only use wireless chargers and adapters recommended by the manufacturer. • Keep the device dry. Do not expose it to water or high humidity environments unless the product is rated for water resistance. 2.Storage and Charging Recommendationsry Handling Precautions • Store the Card Finder in a cool, dry place when not in use. Ideal storage temperature: 15°C – 25°C (59°F – 77°F). • Avoid leaving the device in direct sunlight, hot vehicles, or near heat sources. • Charge the Card Finder in an environment between 0°C and 45°C (32°F – 113°F). • Do not leave the device on the charger for extended periods after it is fully charged. 09	• Use only certified wireless chargers and check that the LED indicator functions as described. 3.Emergency Instructions in Case of Failure • If the Card Finder becomes excessively hot, emits smoke, swells, leaks, or emits an unusual odor, immediately stop using the device. • Do not attempt to charge or power on the device again. • Move the device to a safe, well-ventilated area away from flammable materials. • Contact customer service or your point of purchase for further assistance. • If the device catches fire, use a Class D fire extinguisher or sand—never use water. 10
---	---	---	--	---	---	---	--	--	---	---

说明书