

# TOWER®

over 100 YEARS of quality

NANO COATED  
**CeraGlide™**

**2-IN-1 2400W CORD/CORDLESS  
STEAM IRON**

T22008



**POWERFUL & EFFICIENT**  
Continuous 25g steam output provides a better crease removal with fast heat up technology



**ULTIMATE FLEXIBILITY**  
Combining the power of a corded iron with the freedom of a cordless



**EFFORTLESS IRONING**  
Ceramic coated soleplate effortlessly slides under buttons and into tight pleats

**3** | YEAR  
GUARANTEE



**GREAT BRITISH  
DESIGN SINCE 1912**

**SAFETY AND INSTRUCTION MANUAL  
PLEASE READ CAREFULLY**

\*Subject to registering your Extended Guarantee online at [www.towerhousewares.co.uk](http://www.towerhousewares.co.uk).



## Towerbrand

GREAT BRITISH DESIGN, INNOVATION  
AND EXCELLENCE SINCE 1912

Since the turn of the 20th century, Tower has been designing, developing and manufacturing housewares and small appliances used by millions of households throughout the UK and beyond. During the 1960s, the rise in popularity of pressure cooking saw Tower become the UK's largest producer of pressure cookers, right through into the late 1980s. In recent years the Tower brand has been reborn with an exciting and varied range of housewares and electrical appliances that have quickly reinstated the brand's richly deserved status as a household name.

# TOWER

Visit

[www.towerhousewares.co.uk](http://www.towerhousewares.co.uk)

for more fantastic products.

Thank you for purchasing this appliance from the Tower range.

Please read this manual carefully BEFORE using the appliance for your own safety.

It has been designed to provide many years of trouble-free use.

**There are many benefits to using a Tower Steam Iron:**

- Cordless technology
- Variable temperature control
- Tapered Precision tip
- Burst Steam function
- Anti-scale filter with self-clean feature

## Contents:

- 1. Specifications**  
Components and structure
- 2. Technical Data**
- 3. Important Safety Information**
- 4. Before First Use**
- 5. Using your Appliance**
- 6. Troubleshooting**
- 7. Recycling**
- 8. Cleaning & Care**
- 9. Wiring Safety**
- 10. Warranty Information**
- 11. Your Receipt**

See back page for Customer Service Information.

**Call us first, we can help.**

With advice, spares and returns.

Visit our website: [towerhousewares.co.uk](http://towerhousewares.co.uk) Call: +44 (0)333 220 6066  
(8.30am to 6.00pm Monday-Friday)

# 1 - Specifications:

**This box contains:**  
Instruction Manual  
Steam Iron  
Base



## Structure of your appliance:

- |                               |                        |
|-------------------------------|------------------------|
| 1. Spray nozzle               | 7. Indicator light     |
| 2. Fill cover                 | 8. Iron charging dock  |
| 3. Steam dial                 | 9. Iron release switch |
| 4. Spray / steam burst button | 10. Soleplate          |
| 5. Clean button               | 11. Water tank         |
| 6. Temperature dial           |                        |

## 2 - Technical Data:

Description:	Ceraglide 2 in 1 Cord/Cordless Steam Iron
Model:	T22008
Rated Voltage:	220-240v
Frequency:	50-60Hz
Power Consumption:	2000-2400W

### Documentation

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2014/35/EU	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.

RK Wholesale LTD Quality Assurance, United Kingdom.

Should you encounter problems or require a replacement part, contact the Tower Customer Support Team: **+44 (0) 333 220 6066**.

Some spare parts may be ordered from the Tower website.  
Your warranty becomes void should you decide to use non Tower spare parts.  
Spare parts can be purchased from **[www.towerhousewares.co.uk](http://www.towerhousewares.co.uk)**

### Guarantee for spare parts:

The spares and accessories are guaranteed for 1 year from date of purchase.  
The main body and housing are guaranteed for the extended free warranty subject to registration.  
If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase within 12 months from the date of purchase.  
Refund or replacement is at the discretion of the retailer.

### 3 - Important Safety Information:

Please read these notes carefully **BEFORE** using your Tower appliance

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- DO NOT carry the appliance by the power cord.
- DO NOT use any extension cord with this appliance.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.

- DO NOT use this product for anything other than its intended use.
- This appliance is for household use only.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- DO NOT use the appliance outdoors.
- The iron should always be turned to "Min" before plugging or unplugging from the mains outlet. Never pull the cord to disconnect from the mains: instead, grasp plug and pull to disconnect.
- Always remove the iron from charging base when filling with water or emptying.
- DO NOT leave the iron unattended when connected to the mains or on an ironing board.
- The use of accessory attachments is not recommended by the appliance manufacturer apart from those supplied with this product. DO NOT use extension cords with the appliance.
- Burns can occur from touching hot metal parts, hot water or steam, use caution when you turn a steam iron upside down there may be hot water in the reservoir.
- Only use normal tap water or distilled water in this product.
- DO NOT use perfumed water.
- Never direct steam towards persons, pets or electrical systems.
- Never obstruct the steam holes.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- Your iron is designed to rest on the soleplate. DO NOT place the iron on an unprotected surface.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team: **+44 (0) 333 220 6066**

## 4 - Before First Use

1. Remove your appliance from the packaging.
2. Remove any stickers, protective foil or storage cover from the soleplate.
3. Plug the base into the mains supply and charge the iron.
4. Your appliance will be ready for normal use once charged.
5. Dispose of the packaging in a responsible manner.

## 5 - Using Your Appliance

### **Corded/Cordless Ironing:**

When ironing cordlessly, place the iron onto its base in-between items.

1. When placing the iron onto the base, make sure you have a firm grip on the handle and fit it smoothly into the slots. Once placed onto the base, the iron will begin to heat up to your selected setting.
2. The indicator light on the body of the iron will illuminate to show the iron is heating. It only takes a few seconds for the iron to heat in between each use.
3. When ironing with the base attached, make sure the iron is locked to the base. To do this, slide the locking tab to the locked padlock position. To unlock simply reverse the procedure. Take extra care when locking and unlocking the iron while it is still hot.

### **Filling the tank with water:**

Caution! Before filling the tank with water make sure the appliance is unplugged

1. Remove the iron from the charging base before filling or emptying it. Set the steam control to the O position in order to prevent water leakage.
2. Fill the filling cup with water. Hold the iron in a tilted position and pour the water into the water tank to the maximum level.
3. Fill the iron with normal tap water when using it for the first time.
4. For refilling, you can also use tap water. However, if the water is very hard, it is advisable to use distilled water.
5. Do not put vinegar, starch, chemically de-scaled water or de-scaling agents in the water reservoir.

### **Setting the temperature:**

1. Stand the iron on its end.
2. Insert the mains plug into the wall socket.
3. Set the temperature control to the correct ironing temperature.
4. Once the temperature light has gone out and come on again, you may start ironing.
5. The temperature light will come on from time to time during ironing.
6. When setting the temperature control to a lower setting after ironing at a high temperature, please allow time for the iron to cool, to prevent scorching on your garment.

### **Spray Function:**

- Press the spray button at any time to spray water on clothes.

Note: Ensure that there is enough water in the tank to use the spray function.

During first use, you may have to pump the spray button several times to start the spraying function.

### **Using the steam jet:**

1. This function provides an extra amount of steam to remove stubborn creases.
2. Turn the temperature control to the "MAX" position. The indicator light will turn off when the required temperature is reached.
3. Press the steam jet button once.
4. Wait for a few seconds, then press the steam jet button again.
5. Most creases can be removed with three bursts of the steam jet.


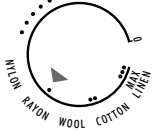 
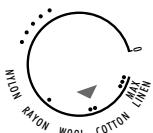 
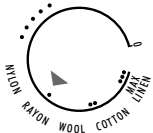 
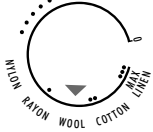 
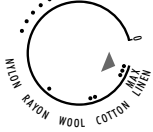 
### **Steam-ironing:**

1. Ensure that there is enough water in the water tank.
2. Set the required temperature.  
Caution! Water may leak from the soleplate if too low of a temperature has been selected.
3. Once the required temperature has been reached the power indicator light will turn off.
4. Increase the steam output by pulling the steam button backwards, or decrease it by pushing the steam button forward.

### **Ironing without steam:**

1. Press the steam control button so that it is in the down position. Set a temperature suitable for your fabric.

### Textile Chart:

Label	Type of textile	Fibre Material	Temperature dial position
	On Label means: This Article cannot be ironed (e.g. chlorofibre, elastodiene)		
●	Synthetic	Acrylic Modacryl Polypopylene Polyurethane	
●●	Synthetic	Acetate Triacetate	
●●	Synthetic  Silk	Metalized Cupro Polyamide (Nylon) Polyester Modal Viscose (Rayon) Silk	
●●	Wool	Wools	
●●●	Cotton Linen	Cotton Linen	

### Ironing tips:

- When ironing a garment that consists of multiple fibre types it is recommended to use the lowest heat setting.
- Velvet and other textures that rapidly become shiny should be ironed in one direction with light pressure applied.
- Always keep the iron moving to prevent overheating of the fabrics.
- Pure woollen fabrics (100% wool) may be ironed with the iron set to the steam position.
- To prevent staining, do not spray water straight on silk or other delicate fabrics.

## 6 - Troubleshooting

Questions	Answers
The appliance does not produce any steam.	Fill the water tank to above the MIN line. Press and hold the steam trigger until steam comes out. It may take up to 30 seconds until steam comes out. Press the steam trigger and keep it pressed when you iron.
The iron leaves a shine or an imprint on the garment.	The surface to be ironed was uneven, for instance because you were ironing over a seam or a fold in the garment.
The ironing board cover becomes wet or water droplets come out of the soleplate.	Steam has condensed on the ironing board cover after a long ironing session.
There is too much steam coming out of the iron.	The default setting of the iron represents the optimal temperature. In this setting, the iron gives off a high steam output.

## 7 - Recycling

### DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items.

Please visit [www.weeireland.ie](http://www.weeireland.ie) for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



## 8 - Cleaning & Care

### After ironing:

1. Disconnect the iron from the power supply and empty out any water left in the water tank.
2. Reconnect the iron into the power supply and disconnect it again after the indicator light goes out. This helps dry out the soleplate.
3. Let the iron completely cool down, and then wipe flakes and any other deposits on the soleplate with a damp cloth or a nonabrasive (liquid) cleaner. Clean the upper part of the iron with a damp cloth. Store the emptied iron horizontally on a stable surface with a cloth protecting the soleplate.
4. When not in use, store the appliance in a safe, dry place, out of reach of children.

### Self-cleaning:

1. Set the temperature control to the maximum position, then press the self-clean button for about 1 minute. Steam will emit from within the iron to clean the steam compartment. We recommend using the self-cleaning function approximately once every two weeks.

### Anti-calc:

 
1. The anti-calc function filters certain minerals from the water to prevent lime-scale residue from building up inside the steam compartment. However if you live in a particularly hard water area, we recommend using bottled or distilled water.

**WARNING:** never pour vinegar or other liquid cleaners for eliminating calcium into water tank.

### **WARNING:**

Do not immerse any electrical part of the appliance in water such as motor units or plugs.  
Please see cleaning section for further instructions.


## 9 - Wiring Safety for UK Use Only

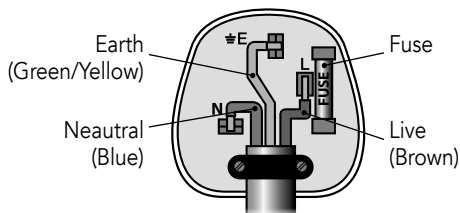

### IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

Blue neutral [N] Brown live [L]  
Green/Yellow [EARTH] 

Plug Fitting Details (Where Applicable). The wire labelled blue is the neutral and must be connected to the terminal marked [N].

The wire labelled brown is the live wire and must be connected to the terminal marked [L].

The wire labelled green/yellow must be connected to the terminal marked with the letter [E].

On no account must either the brown or the blue wire be connected to the [EARTH] terminal.

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

### Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**WARNING:**  
This appliance **MUST** be earthed!

## 10 - Warranty

**3\*** | YEAR  
GUARANTEE



**GREAT BRITISH**  
DESIGN SINCE 1912

As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind in addition to your 1 year guarantee.

To receive your extra 2 year guarantee, register your appliance online within 28 days of purchase by visiting [www.towerhousewares.co.uk](http://www.towerhousewares.co.uk)



This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

### The Following Conditions Apply:

- The product must be returned to the retailer with proof of purchase or a receipt.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit [www.towerhousewares.co.uk](http://www.towerhousewares.co.uk) and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year. Extended warranty is only valid with proof of purchase or receipt.

# 11 - Your Receipt

Affix your store receipt to this page for safe keeping.

# TOWER®

*over 100 YEARS of quality*

*thank you!*

We hope you enjoy your appliance for many years. As a thank you for purchasing one of our fantastic products, we are offering you an extra 2 years peace of mind.

\*To receive your extra 2 years guarantee, register your appliance online within 28 days of purchase by visiting:

**[www.towerhousewares.co.uk](http://www.towerhousewares.co.uk)**

Should you have a problem with your appliance, or need any spare parts, please call our Customer Support Team:

**+44 (0) 333 220 6066**

Your warranty becomes void should you decide to use non Tower spare parts. Spare parts can be purchased from **[www.towerhousewares.co.uk](http://www.towerhousewares.co.uk)**



0419.V3