 


Smart Wet Dry Vacuum and Mop Cleaner

R Redroad

H13

Product manuals

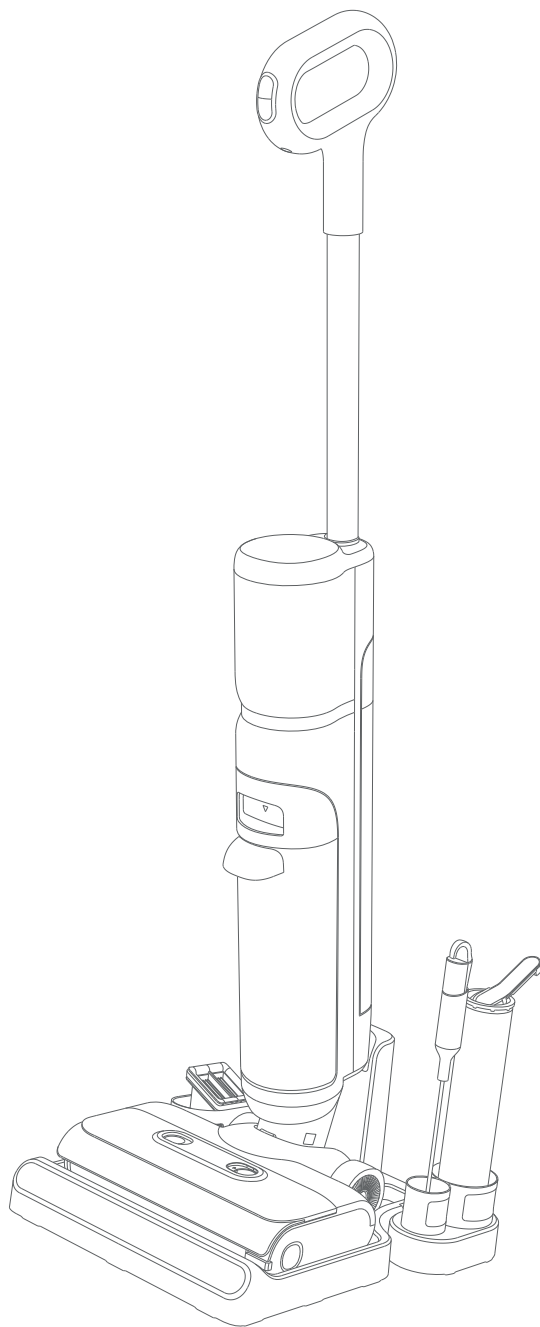

The picture is for reference only, the product in kind prevails.

English	03
Deutsch	21
Italiano	39
Français	57
Español	75
Русский	93
한국어	111

Important safety instruction

Warning

Before using this product, please read all contents of this manual carefully and install the machine according to the steps of this manual. Keep this manual properly. If you transfer the product to a third party, please attach this manual together with the machine. Any operation inconsistent with the instructions in the manual may lead to product damage or serious personal injury. This product is only suitable for use in regular family environment, not suitable for industrial or outdoor use.

1. The product is not applicable to people with serious physical, sensory or intellectual defects or people lacking experience and common sense (including children), unless it is supervised or directed by others to ensure its safe use.
2. Do not touch the plug or any live part of the product with wet hands to avoid electric shock hazard.
3. If the charger or plug is damaged, please stop using it. Please call our professional maintenance personnel for replacement to avoid hazards.
4. Please keep the air passage and moving part of this product away from long hair, loose clothes, fingers and other parts of the body. Do not point the vacuum tube, accessory suction head or tools at your eyes or ears, or put them into your mouth.
5. When using, if electric leakage or motor temperature is too high and abnormal noise is found, such as overheating, abnormal noise, odor, weak suction, etc. of the machine body, please stop using immediately and call our professional maintenance personnel.
6. Please use the special charger provided by our company for charging; Other types of chargers may cause battery failure or extreme thermal effects.
7. If the product is not used for a long time, please turn off the power and unplug the charging socket.
8. After using the machine, please clean the dirt water tank in time to keep the ventilation path unblocked, so as to avoid blocking and causing suction drop and motor heating, which will affect the service life of the floor scrubber.
9. The body and mop of the floor scrubber contain electrical components, which cannot be soaked in water or washed.
10. Please check the smoothness of the suction nozzle regularly. If there is any blockage, please remove it in time to prevent the blockage from reducing the suction and affecting the performance of the machine.
11. Please make sure to switch off the roller brush before replacing it.
12. When the machine breaks down, do not repair it by yourself. Please call our after-sales department for help.
13. All the technical and other data reflected in this product manual are obtained by our company or the designated third-party testing company, and our company reserves the right of final interpretation.

About the scope of use of the product

1. This product is applicable to hard floors in indoor environment, including waxed floors, stone floors, rubber floors, marble floors, granite floors, terrazzo floors, solid wood floors, composite floors, bamboo floors, various mirror tiles, porcelain tiles and other flat ground surfaces. If this product is used on uneven ground surface, the best use effect may not be achieved.
2. Do not use this product near or on the surface of flammable and explosive objects, there is a risk of fire and explosion.
3. Do not use this product near the working fireplace and heater to prevent the machine shell from deformation.
4. Do not pump high-temperature substances (cigarette butts, matches or hot ashes that are not extinguished), superfine substances (such as lime, cement, wood chips, gypsum powder, ashes, carbon powder, etc.), dangerous substances (such as solvents, scale removers, etc.), chemical substances (such as acidic substances, cleaning agents, etc.) and other substances with uncertain physical properties.
5. Do not use this floor scrubber to absorb detergent, kerosene, gasoline, alcohol, oil paint, perfume, etc.

6. Do not use this floor scrubber to absorb toner used inside the laser printer and copier. These objects may cause fire or explosion.
7. Do not use this floor scrubber to absorb sharp objects, such as glass fragments, small toys, pins, paper clips, stones, plaster, large pieces of paper, etc. These objects may cause blockage and damage the machine.
8. Please do not use this floor scrubber to suck up any burning or smoking objects, such as the soot with the heat source not extinguished, burning cigarette butts or matches.
9. Stains like shoe polish, oil paint, pigment and other stains with strong grease, viscosity or dyeing are not within the scope of use of this product.
10. This product is not suitable for carpet cleaning.


About cleaning solution

1. If a large amount of cleaning solution is added, more foam will be produced during use, which may penetrate into the motor and cause danger.
2. Clean according to the proportion of instructions. It is recommended to use the detergents produced by our company and the manufacturers approved by our company, which shall not contain acid, aqueous alkali or substances harmful to the environment.
3. Keep the detergent out of the reach of children. If the cleaning solution accidentally gets into the eyes, wash it thoroughly with clean water; In case of accidental ingestion, seek medical advice immediately.
4. When disposing dirt water and cleaning solution, local environmental protection regulations shall be followed.


About the Machine

1. Do not disassemble or assemble the closed machine by yourself. There are no parts in the machine that can be repaired by customers, and do not try to change the performance of the machine, otherwise it will lead to danger.
2. Using a voltage that does not correspond to the specification of this product will damage the motor and more likely cause harm to users.
3. The correct rated voltage is marked on the nameplate.
4. When cleaning stairs, extra caution should be taken to prevent falling.
5. Do not shake the machine up and down or collide violently to prevent dirt water from flowing into the motor.
6. When the motor is working, please do not lift or carry the machine up and down, and do not tilt the machine to one side or lay it flat to prevent dirt water from entering the motor. To prevent tripping, the machine should be placed against the wall after use.
7. If the clean water tank and dirt water tank are not installed correctly, please do not use them.
8. Do not place any small objects at the air outlet, and do not block the air outlet. Remove all small objects that may hinder the smooth airflow at the air outlet to prevent the machine from overheating.
9. Do not get the machine body wet, or fire and electric shock may occur due to short circuit of the machine.
10. The water tank contains water stain, which is the product test residue before leaving the factory. It is a normal phenomenon. Please be assured to use it.
11. When the temperature of the battery pack rises, the built-in battery pack cooling system will automatically start to work, which is a normal phenomenon. Please be assured to use it.


Product overview

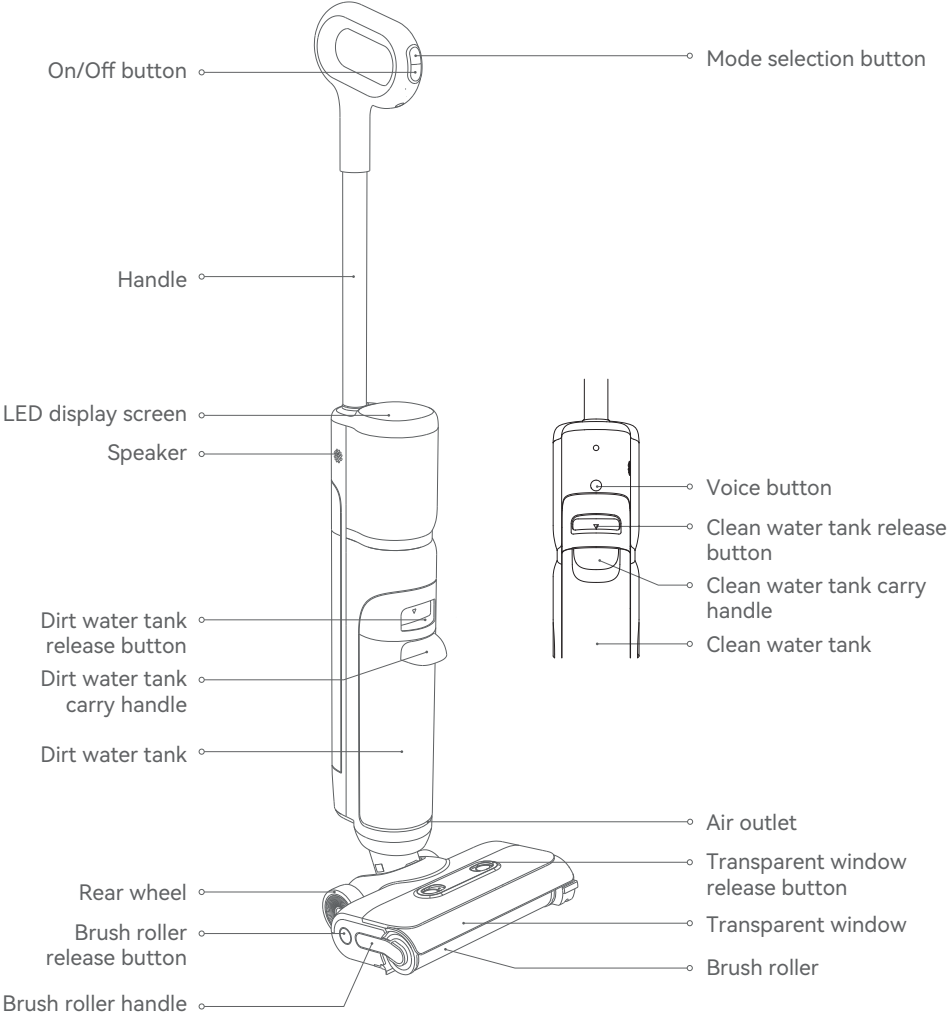


Product introduction

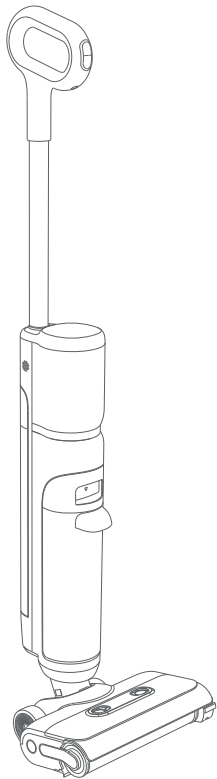

Main body

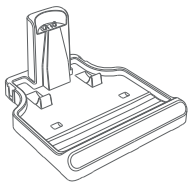


Charging base

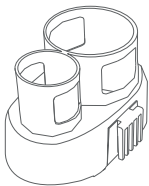

Accessory holder



Cleaning brush

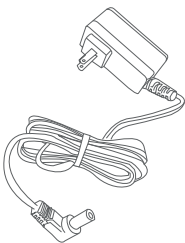


Charger



Indicator light instruction

Display Screen

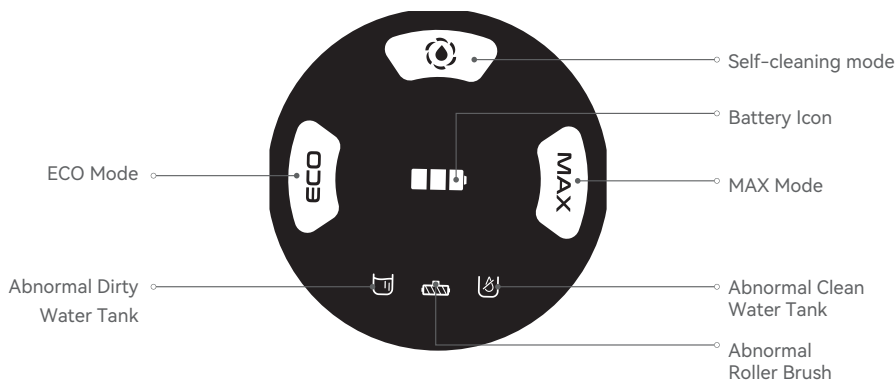


Function introduction

ECO ECO mode	Low suction,low flow, light washing	 Clean water tank status	The water tank is short of water
MAX Max mode	High suction,high flow, heavy washing	 Dirt water tank status	The sewage tank is full
 Self-cleaning mode	Self-cleaning mode can be started after the machine is put into the charging base	 Brush roller status	The brush roller abnormal.
 Silent mode	One key switch voice setting	 Battery display	When power is out: Bright red Charging: Blinking green After filling: Extinguish


Product disassembly & assembly

Handle installation instructions

Insert the end of the handle into the port of the main machine in the vertical direction. After hearing the click, ensure that the handle is tight and not loose, then the installation is in place successfully.

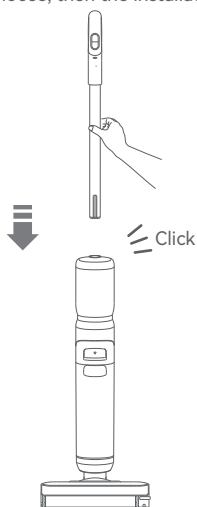


To disassemble, use a hard object to stretch into the hole on the back of the main machine and press the shrapnel, while holding the handle and pulling it up.

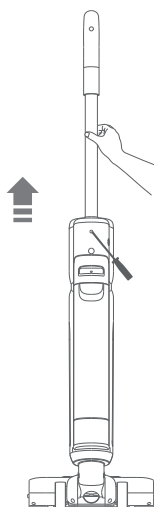


Product disassembly & assembly

Instructions for disassembly & assembly of clean water tank

1. To remove the clean water tank, hold the machine body with one hand and push the release button of the clean water tank with the other hand, then pull it outward, then the clean water tank can be taken out.

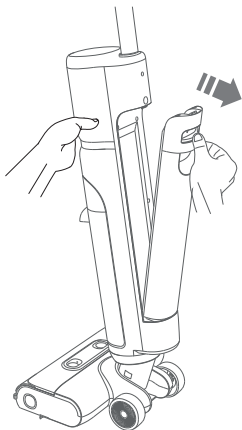


2. To install the clean water tank, first put the bottom of the clean water tank into the opening support position of the machine body, and then gently push the clean water tank, when you hear the click, the installation is in place successfully.

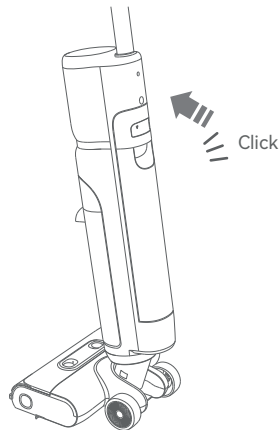


Instructions for disassembly & assembly of dirt water tank

1. To remove the dirt water tank, hold the machine body with one hand and push the release button of the dirt water tank with the other hand, then pull it outward, then the dirt water tank can be taken out.

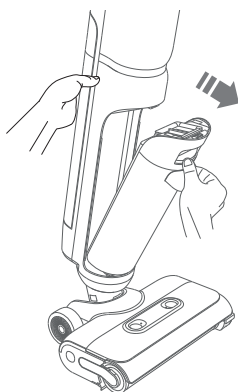


2. To install the dirt water tank, first put the bottom of the dirt water tank into the opening support position of the machine body, and then gently push the dirty water tank, when you hear the click, the installation is in place successfully

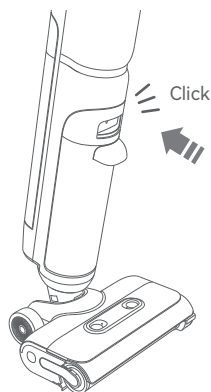


Product disassembly & assembly

Disassembly & assembly instructions for brush roller transparent window

1. To remove the brush roller transparent window, first apply your fingers to the position as shown in the figure and press the release buttons at both ends of your thumb and index finger to lift up, then take out the brush roller transparent window.

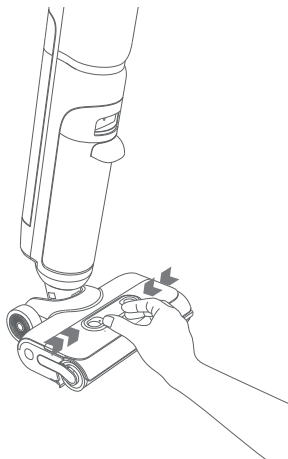


2. During installation, first apply your fingers to the position as shown in the figure, and press the release buttons at both ends of your thumb and index finger down at the same time. When you hear a click, the installation is successful.

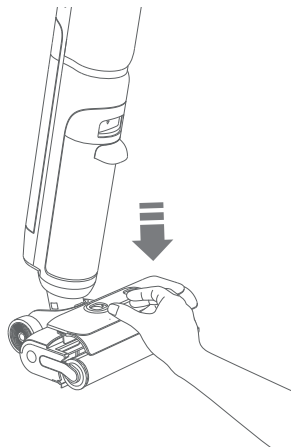


Disassembly & assembly instructions for brush roller

1. Gently press the release button of the rolling brush, the handle of the rolling brush pops out, hold the whole rolling brush and pull out to remove the rolling brush assembly.

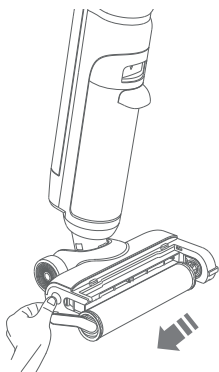

2. During installation, align the right side of the rolling brush with the driver head, align the left side of the rolling brush with the driver head, and press the handle of the rolling brush until you hear a click.

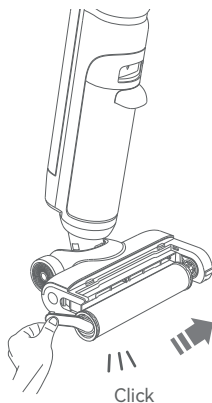

Technical parameters

Main machine			
Product model	H13	Charging time	3.0±0.5h
Working voltage	DC 21.6V	Overall dimensions	270*220*1100 mm
Rated power	170W	Net weight	3.5KG
Battery capacity	2500mAh		
Charger model	Input: 100~240V~ 50/60Hz Output: 26.0V --- 1.0A		

In accordance with the national standards: FCC 47 CFR Part 15 Subpart B

Attention

1. The above data are from the laboratory of our company, and the actual use varies according to the change of the use environment.
2. Due to the need for continuous improvement of the product, the product is subject to the real object, and our company reserves the right to update the product.
3. The rated power is 170W.




Instructions

Prepare/start to work


1. Before use, please check whether your Cleaner is powered. If not, please charge it in time (refer to "Product Charging" for details) and use it after fully charging.
2. The default power-on mode is energy saving. You can select the mode based on actual use requirements

The default power-on mode is energy saving. Press the mode button to switch between ECO mode, Max mode.

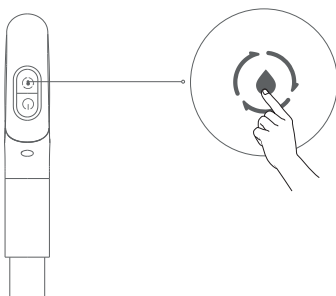


The machine is equipped with a vertical switch. Please tilt the machine after starting. Do not tilt the machine more than 145° to avoid water leakage.

After using the machine, it is recommended to put it back on the charging base vertically.

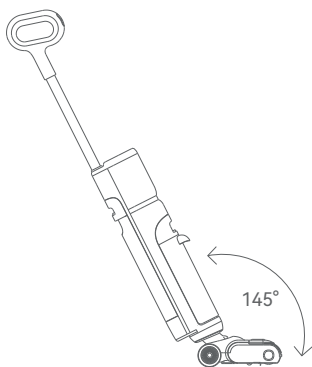

Warning

Do not inhale foam liquid.

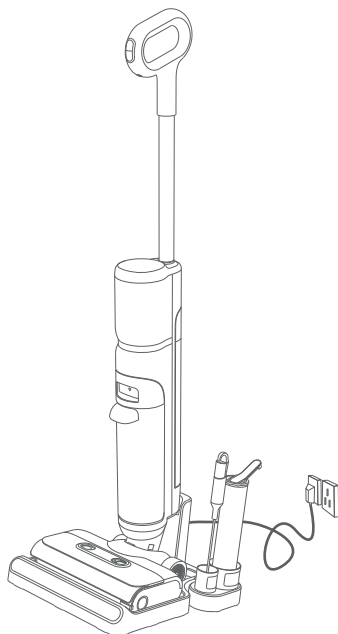

Instructions

Water injection in clean water tank

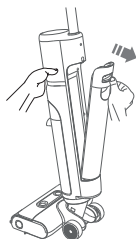


Figure 1

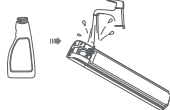


Figure 2



Figure 3



Figure 4

1. Press the release button of the clear water tank gently to remove the tank (Figure. 1)
2. Open the upper cover of the clean water tank and inject clean water (below 50 ° C) to the water level. If deep cleaning is required, pour another bottle of floor cleaning liquid of this brand (Figure. 2)
3. Close the upper cover of the clean water tank to ensure it is tight without looseness (Figure. 3)
4. Install the clean water tank back to the machine body, and the installation is successful when the click is heard (Figure 4).

Dirt water tank cleaning



Figure 5

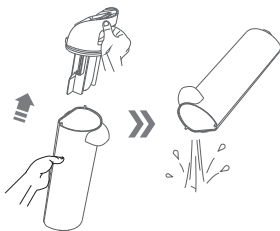


Figure 6



Figure 7

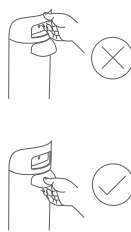


Figure 8

1. Gently press the release button of the sewage tank and remove the sewage tank (Figure 5).
2. Hold the container with one hand and pull out the sewage tank cover with the other hand upward (Figure 6).
3. After the sewage is poured out, install the sewage tank back into the fuselage, and the installation is successful when the click is heard (Figure 7).
4. When extracting the sewage box, do not extract the sewage box cover (Figure 8).


TIPS: 1.The water tank contains water stains, which is the product test residue before leaving the factory. It is a normal phenomenon,so please be assured to use it.

2. After cleaning the sewage tank and installing the sewage tank, press the open key and the machine will continue to work.

Instructions

Product charging

First put the machine on the charging base, connect one end of the charger to the charging base, and connect the other end to the home socket; The power cord can be retracted when it is not needed. When charging, please keep the machine upright and close to the corner of the wall to avoid tripping and other injuries.

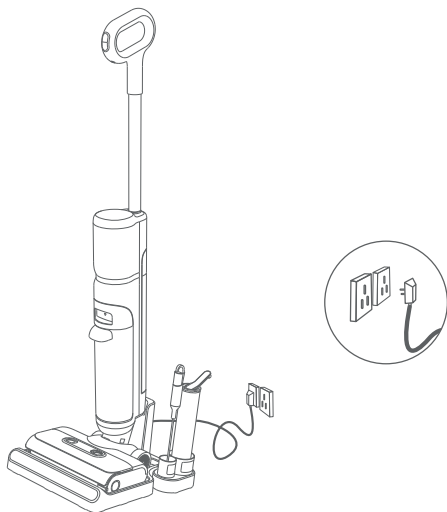

Warning



1. If the product is not used for a long time after purchase, please use the special charging base provided by our company to charge the battery for 3 hours every 3 months (no need for full charge).
2. If the product is not used for a long time, please unplug it and put it away.
3. Please use the special charger of this product to charge.

Safe disposal method of used battery

1. Before discarding the appliance, the battery must be taken out of the appliance.
2. When taking out the battery, the appliance must be powered off.
3. The battery shall be disposed of safely.
4. Please send the removed battery to the designated professional and qualified battery recycling agency.

Product maintenance


Self-cleaning

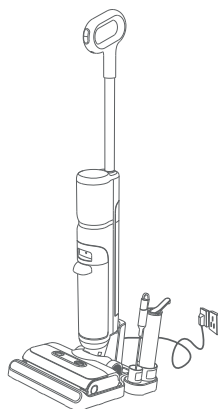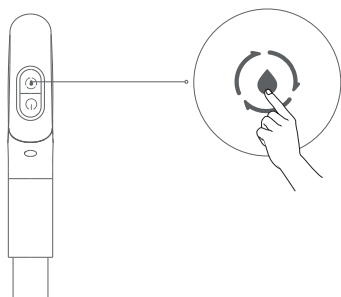

1. Please put the machine back to the charging base in time after use.
2. When the machine enters the charging state, press the mode key on the handle to switch to the self-cleaning mode and start the self-cleaning.
3. Since the end of cleaning, the machine continues to enter the charging state.
4. It is recommended to drain the remaining water from the water tank.
5. Please clean the sewage tank in time.

- TIPS:
1. The battery power is greater than 15% to start self-cleaning, and the battery power is less than 15% to start self-cleaning.
 2. In the process of self-cleaning mode, if you clean the sewage tank or water tank after adding water, you need to press the mode button again to enter the self-cleaning.
 3. Before using the self-cleaning function and after the self-cleaning, clean the sewage in the sewage tank.
 4. If there is any stain on the charging base, clean it in time.

Clean dirt water tank

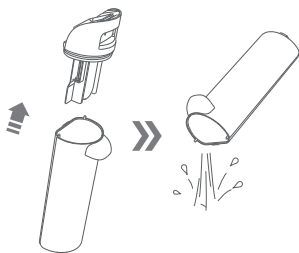

1. When the dirt water tank is full of dirt water, the machine will automatically shut down and give prompts through the display screen and voice.
2. If stubborn dirt is found on the inner wall of the dirt water tank, please clean it directly with a cleaning brush.
3. After cleaning, close the cover of the dirt water tank, install it back to the machine body, after hearing the click, that means the installation is in place.

Product maintenance

Clean the top cover of the dirt water tank

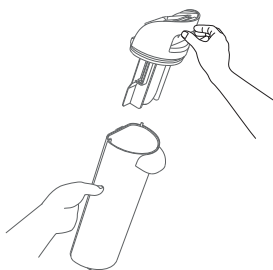


Figure 1



Figure 2

1. If the dirt water solid-liquid separator is found to be blocked, please clean it in time.
2. Remove the upper cover of the dirt water tank (Figure. 1) and wash it with clean water(Figure. 2).
3. After cleaning, install it into the dirt water tank.

Clean the filter

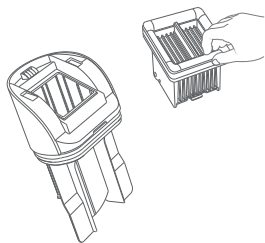


Figure 1

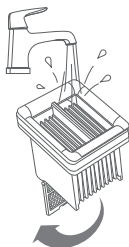


Figure 2

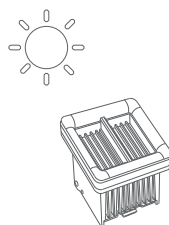


Figure 3

1. First remove the filter from the top of the sewage tank (Figure 1)
2. After removal, open the bottom filter and clean it with clean water (Figure 2).
3. Put the filter attachment rack thoroughly dry, and then put it into the sewage tank (Figure 3).

* Note:

- 1 If the filter is damaged, replace it immediately. Under normal use, it is recommended to replace it once every 3 months.
2. Before each use of the product, pay attention to check whether the filter is installed.

Product maintenance

Clean the brush roller transparent window

It is recommended to clean the brush roller transparent window regularly after each use to keep it clean and tidy.

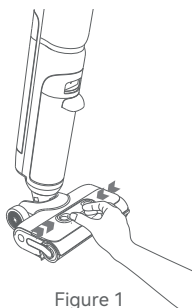


Figure 1



Figure 2

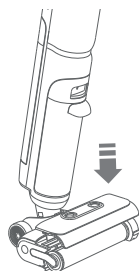


Figure 3



1. To remove the brush roller transparent window, first apply your fingers to the position as shown in the figure and press the release buttons at both ends with your thumb and index finger to take out the roller brush transparent window (Figure 1).
2. After taking it out, rinse it with clean water until it is clean (Figure. 2).
3. After cleaning, install the brush roller transparent window into the base (Figure. 3).

Clean the roller brush

It is recommended that the brush roller should be cleaned and dried after each use to keep it clean and tidy.


* Note: If the roller brush is damaged, please replace it immediately. It is recommended to replace it once every 3 months under normal use.

1. Gently press the release button of the rolling brush, the handle of the rolling brush pops out, hold the whole rolling brush and pull out to remove the rolling brush assembly.
2. After the rolling brush is removed, use a cleaning brush to remove the tangled hair or debris on the rolling brush, and then rinse the rolling brush with water and let dry.

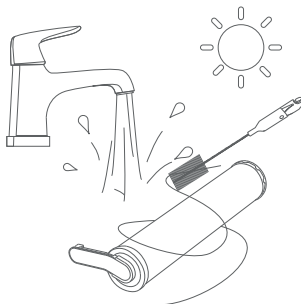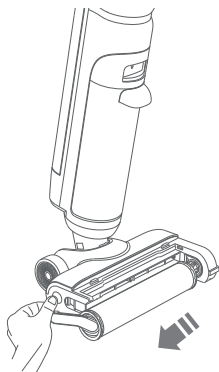


Product maintenance

3. After cleaning, align the right side of the rolling brush with the driver head, align the left side of the rolling brush with the driver head, and tap the handle of the rolling brush until you hear a click.

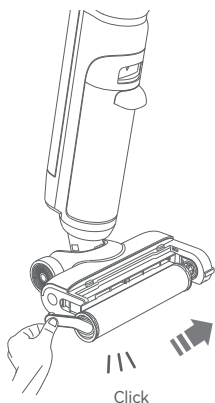


Warm reminder:

If you find residual stains in the vent and suction nozzle, clean them with a cleaning brush or wipe them with a damp rag. Do not rinse them with water.

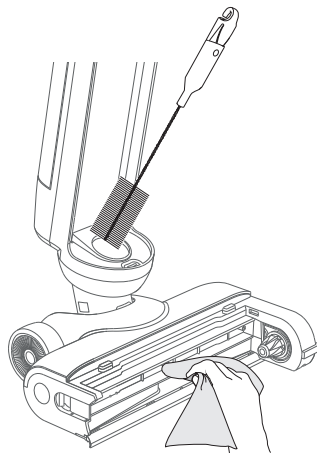

Floor brush scraper replacement instructions

1. Remove 4 screws from the bottom of the machine, and then remove the scraper.
2. Replace the old scraper with a new one and lock the four screws.

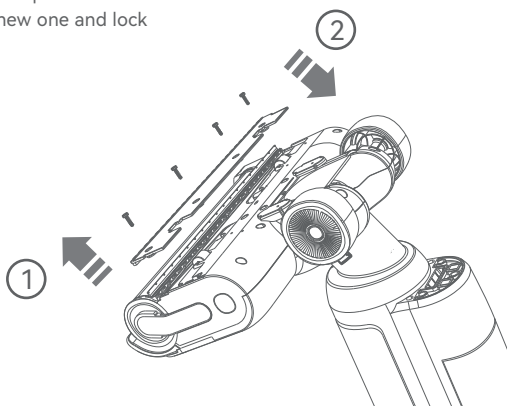


- * Note: 1. If there is damage to the scraper, please replace it immediately. It is recommended to replace it once every 6 months under normal use.
2. Keep the small wheel when removing and installing the scraper.


Product maintenance

Contact cleaning

1. Dry the water debt on the contact after use.
2. Keep the contact clean and free from dirt.
3. If the contact is not good, use sandpaper to lightly polish the contact.

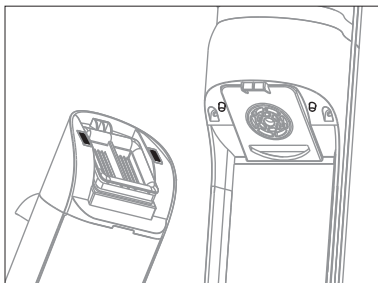

Dirt water tank
contact

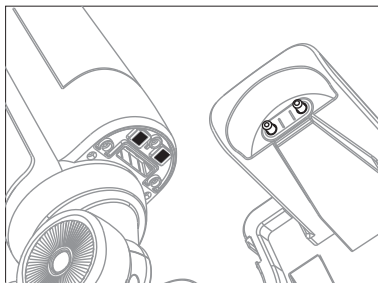


Charging base
contact

Product maintenance

Clean main body (body)

To ensure that the performance of the machine is not affected, you are advised to maintain its components regularly

1. Please stop the machine and disconnect the power supply before cleaning
2. Wipe with water or neutral detergent. Before scrubbing, be sure to wring the cleaning cloth dry, and do not infiltrate water into the electrical components of the machine.

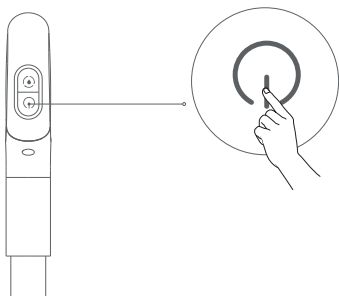

TIPS: After cleaning, it is recommended to place the whole machine vertically on the charging base, and be careful not to place it in direct sunlight or wet places.

Trouble-shooting

Analysis & handling of common problems If the product stillcannot work normally according to the steps in the right table, please contact our after- sales service department for help.	Common problems	Solutions
	The product has no power or the power is insufficient	Please fully charge the product before use
	The dirt water tank has reached the specified capacity	Take out the dirt water tank and use it after dumping the dirt water.
	Roller brush, roller brush cover & dirt water tank are not installed in	Reinstall
	Filter failure	Please replace the filter
	Clean water tank is not installed properly	Reinstall the clean water tank
	Water shortage in clean water tank	Use the clean water tank after adding water
	The filter is not dried after cleaning and use	Use after cleaning and drying
	The plug of the charging socket is not plugged properly	Please check whether the plug is connected properly
	The machine is not fully inserted into the charging base	Please check whether the machine is placed correctly
	Poor contact between charging head and charging base	Please check whether the charging head is connected to the charging base
	Motor abnormality	Restart the machine after clearing the blockage in the pipe
	The dirt water tank is full of water or the pipe is blocked	Pour out the dirt water before using or clean the blockage in the pipe and restart the machine Clear the obstacles cycles f or the product
	The suction nozzle is blocked	Clear the obstacles in the suction nozzle
	The brush roller is entangled by objects such as hair	Install after cleaning the brush roller
	The brush roller is not installed	Install the brush roller
	Severe dirt during operation	Please clean yourself several times to ensure the use effect
	Excessive wastage of brush roller	The cleaning effect of the brush roller is poor, replacement recommended
	Product does not absorb water	Check that the filter is installed

If the product still cannot work normally according to the above steps, please contact our after-sales service department for help.



Wichtiger Sicherheitshinweis

Warnung

Bitte lesen Sie vor der Verwendung dieses Produkts die gesamte Bedienungsanleitung sorgfältig durch und installieren Sie das Gerät gemäß den Anweisungen in dieser Anleitung. Bewahren Sie diese Bedienungsanleitung sorgfältig auf. Wenn Sie das Produkt an Dritte weitergeben, legen Sie diese Bedienungsanleitung bitte dem Gerät bei. Jede Bedienung, die nicht den Anweisungen in dieser Bedienungsanleitung entspricht, kann zu Produktschäden oder schweren Verletzungen führen. Dieses Produkt ist ausschließlich für den Gebrauch im privaten Haushalt bestimmt und nicht für den industriellen Einsatz oder den Einsatz im Freien geeignet.

1. Das Produkt ist nicht für Personen mit schweren körperlichen, sensorischen oder geistigen Beeinträchtigungen oder für Personen mit mangelnder Erfahrung und gesundem Menschenverstand (einschließlich Kinder) geeignet, es sei denn, die sichere Verwendung erfolgt unter Aufsicht oder Anleitung von anderen Personen.
2. Berühren Sie den Stecker oder andere stromführende Teile des Produkts nicht mit nassen Händen, um Stromschläge zu vermeiden.
3. Verwenden Sie das Gerät nicht mehr, wenn das Ladegerät oder der Stecker beschädigt ist. Bitte wenden Sie sich an unser professionelles Wartungspersonal, um Ersatz zu erhalten und Gefahren zu vermeiden.
4. Halten Sie den Luftkanal und bewegliche Teile des Produkts von langen Haaren, offener Kleidung, Fingern und anderen Körperteilen fern. Richten Sie den Saugschlauch, den Aufsatz oder die Werkzeuge nicht auf Ihre Augen oder Ohren und führen Sie sie nicht in den Mund ein.
5. Sollten während des Gebrauchs elektrische Leckagen auftreten, die Motortemperatur zu hoch sein oder ungewöhnliche Geräusche wie Überhitzung, ungewöhnliche Geräusche, Geruchsentwicklung oder verminderte Saugleistung am Gerätegehäuse auftreten, stellen Sie den Betrieb bitte sofort ein und kontaktieren Sie unseren Kundendienst.
6. Bitte verwenden Sie zum Laden ausschließlich das von uns mitgelieferte Spezialladegerät. Andere Ladegeräte können zu Batterieschäden oder Überhitzung führen.
7. Wenn das Produkt längere Zeit nicht benutzt wird, schalten Sie es bitte aus und ziehen Sie den Netzstecker.
8. Reinigen Sie nach Gebrauch den Schmutzwassertank umgehend, um die Belüftung freizuhalten. So vermeiden Sie Verstopfungen, die zu Saugkraftverlust und Motorüberhitzung führen und die Lebensdauer der Scheuersaugmaschine beeinträchtigen können.
9. Gehäuse und Wischmopp der Scheuersaugmaschine enthalten elektrische Bauteile, die nicht in Wasser eingeweicht oder gewaschen werden dürfen.
10. Bitte prüfen Sie regelmäßig die Leichtgängigkeit der Saugdüse. Sollten Verstopfungen auftreten, entfernen Sie diese bitte umgehend, um eine verminderte Saugleistung und damit eine Beeinträchtigung der Gerätefunktion zu vermeiden.
11. Bitte schalten Sie die Walzenbürste vor dem Austausch unbedingt aus.
12. Wenn das Gerät defekt ist, reparieren Sie es nicht selbst. Bitte wenden Sie sich an unseren Kundendienst, wenn Sie Hilfe benötigen.
13. Alle technischen und sonstigen Daten in dieser Produktanleitung wurden von unserem Unternehmen oder einem von uns beauftragten unabhängigen Testunternehmen ermittelt, wobei unser Unternehmen sich das Recht auf endgültige Auslegung vorbehält.

Zum Anwendungsbereich des Produkts

1. Dieses Produkt ist für Hartböden in Innenräumen geeignet, darunter gewachste Böden, Steinböden, Gummiböden, Marmorböden, Granitböden, Terrazzoböden, Massivholzböden, Verbundböden, Bambusböden, verschiedene Spiegelkacheln, Porzellanfliesen und andere ebene Bodenflächen. Wenn dieses Produkt auf unebenen Bodenflächen verwendet wird, kann die optimale Wirkung nicht erzielt werden.
2. Verwenden Sie dieses Produkt nicht in der Nähe oder auf Oberflächen von brennbaren und explosiven Materialien, da Brand- und Explosionsgefahr besteht.
3. Verwenden Sie dieses Produkt nicht in der Nähe eines betriebsbereiten Kamins oder einer Heizung, um eine Verformung des Gerätegehäuses zu verhindern.
4. Pumpen Sie keine hochtemperierten Stoffe (Zigarettenstummel, Streichhölzer oder nicht vollständig gelöschte heiße Asche), ultrafeinen Stoffe (wie Kalk, Zement, Holzspäne, Gipsstaub, Asche, Kohlenstaub usw.), gefährlichen Stoffe (wie Lösungsmittel, Entkalker usw.), chemischen Stoffe (wie säurehaltige Substanzen, Reinigungsmittel usw.) sowie andere Stoffe mit unklaren physikalischen Eigenschaften.
5. Verwenden Sie diesen Bodenscheuerer nicht, um Reinigungsmittel, Kerosin, Benzin, Alkohol, Ölfarbe, Parfüm usw. aufzusaugen.

6. Verwenden Sie diesen Bodenscheuerer nicht, um Toner aufzusaugen, der in Laserdruckern oder Kopierern verwendet wird. Diese Stoffe können Brände oder Explosionen verursachen.
7. Verwenden Sie diesen Bodenscheuerer nicht, um scharfe Gegenstände wie Glasscherben, kleine Spielzeuge, Stecknadeln, Büroklammern, Steine, Gipsstücke, große Papierstücke usw. aufzusaugen. Diese Gegenstände können eine Verstopfung verursachen und das Gerät beschädigen.
8. Bitte verwenden Sie diesen Bodenscheuerer nicht, um brennende oder rauchende Gegenstände aufzusaugen, wie z. B. Ruß mit nicht vollständig erloschener Wärmequelle, brennende Zigarettenstummel oder Streichhölzer.
9. Flecken wie Schuhcreme, Ölfarbe, Pigmente und andere stark fettige, klebrige oder stark färbende Verschmutzungen fallen nicht in den Anwendungsbereich dieses Produkts.
10. Dieses Produkt ist nicht für die Teppichreinigung geeignet.

Zum Reinigungsmittel

1. Wenn eine große Menge Reinigungsmittel hinzugefügt wird, entsteht während der Verwendung mehr Schaum, der in den Motor eindringen und Gefahr verursachen kann.
2. Reinigen Sie gemäß dem angegebenen Mischungsverhältnis. Es wird empfohlen, die von unserem Unternehmen hergestellten oder von unserem Unternehmen zugelassenen Reinigungsmittel zu verwenden, die keine Säuren, wässrigen Alkalien oder umweltschädlichen Stoffe enthalten dürfen.
3. Bewahren Sie das Reinigungsmittel außerhalb der Reichweite von Kindern auf. Gelangen Reinigungsmittel versehentlich in die Augen, spülen Sie diese gründlich mit klarem Wasser aus; bei versehentlicher Einnahme suchen Sie sofort medizinische Hilfe auf.
4. Bei der Entsorgung von Schmutzwasser und Reinigungsmitteln sind die lokalen Umweltschutzvorschriften zu beachten.

Über das Gerät

1. Zerlegen oder montieren Sie das geschlossene Gerät nicht selbst. Im Gerät befinden sich keine vom Kunden zu reparierenden Teile, und versuchen Sie nicht, die Leistung des Geräts zu verändern, da dies zu Gefahr führen kann.
2. Die Verwendung einer Spannung, die nicht der Produktspezifikation entspricht, beschädigt den Motor und kann die Benutzer gefährden.
3. Die korrekte Nennspannung ist auf dem Typenschild angegeben.
4. Beim Reinigen von Treppen ist besondere Vorsicht geboten, um Stürze zu vermeiden.
5. Schütteln Sie das Gerät nicht auf und ab und vermeiden Sie heftige Stöße, damit kein Schmutzwasser in den Motor gelangt.
6. Heben oder tragen Sie das Gerät während des Betriebs nicht an und kippen Sie es nicht zur Seite oder legen Sie es flach hin, damit kein Schmutzwasser in den Motor eindringt. Um Stolperfallen zu vermeiden, sollte das Gerät nach Gebrauch an die Wand gestellt werden.
7. Wenn der Frischwassertank und der Schmutzwassertank nicht korrekt installiert sind, verwenden Sie das Gerät nicht.
8. Platzieren Sie keine kleinen Gegenstände am Luftauslass und blockieren Sie den Luftauslass nicht. Entfernen Sie alle kleinen Gegenstände, die den Luftstrom behindern könnten, um eine Überhitzung des Geräts zu verhindern.
9. Machen Sie das Gerätegehäuse nicht nass, da aufgrund eines Kurzschlusses Feuer oder Stromschlag auftreten kann.
10. Der Wassertank kann Wasserrückstände enthalten; dies sind Rückstände aus der Produktprüfung vor der Auslieferung. Das ist ein normales Phänomen. Sie können es bedenkenlos verwenden.
11. Wenn die Temperatur des Batterie-Packs ansteigt, startet das eingebaute Kühlsystem des Batterie-Packs automatisch. Dies ist ein normales Phänomen. Sie können es bedenkenlos verwenden.