



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

3-IN-1 Cordless Mini Chopper



Model No.

404504

User Manual

Please read and keep these instructions for future use



HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Read these instructions carefully and retain for future reference.

- This appliance can be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- This appliance shall not be used by children.
- Children shall not play with the appliance.
- Keep appliance and cord out of the reach of children.
- **CAUTION:** Ensure that the chopper is switched off before approaching parts that move in use.
- Do not chop for periods longer than stated.



HEALTH AND SAFETY

- Avoid touching moving parts. Keep hands, hair and clothing, and utensils away from the blender blades during operation, to prevent personal injury and/or damage to the appliance.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- For care & cleaning instructions, refer to the care and cleaning section of the manual.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- This appliance is not intended to be to be operated on an extension cable or by means of an external timer or separate remote control system.



HEALTH AND SAFETY

LOCATION

- Do not use outdoors or in a bathroom.
- Always locate your appliance away from the edge of the worktop.
- Do not place the bowl used with the appliance on a highly polished wooden surface as damage may occur to the surface.

OTHER SAFETY CONSIDERATIONS

- Do not use the appliance for anything other than its intended purpose.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- **WARNING:** Misuse of the appliance could cause personal injury.

PRODUCT SAFETY

- **IMPORTANT:** Allow hot liquids to cool before adding to the chopper, always ensure the lid is fitted securely.
- Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to sudden steaming.
- Do not use the appliance if the plastic jug or lid is damaged or has visible cracks.

BATTERY SAFETY & DISPOSAL


- Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 130°C/265°F may cause an explosion.
- Recommended ambient charging and storage temperature: 10°C–40°C (50°F–104°F).
- Recommended operation temperature: 25°C+/- 5°C.
- Do not incinerate electrical appliances even if the appliance is severely damaged, as lithium-ion batteries may explode in fire.
- The lithium battery is not a serviceable item. Check with your Local Authority for recycling advice.



ELECTRICAL DETAILS


- Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 130°C/265°F may cause an explosion.
- Recommended ambient charging and storage temperature: 10°C–40°C (50°F–104°F).
- Recommended operation temperature: 25°C+/- 5°C.
- Do not incinerate electrical appliances even if the appliance is severely damaged, as lithium-ion batteries may explode in fire.
- The lithium battery is not a serviceable item. Check with your Local Authority for recycling advice.

PRODUCT OVERVIEW

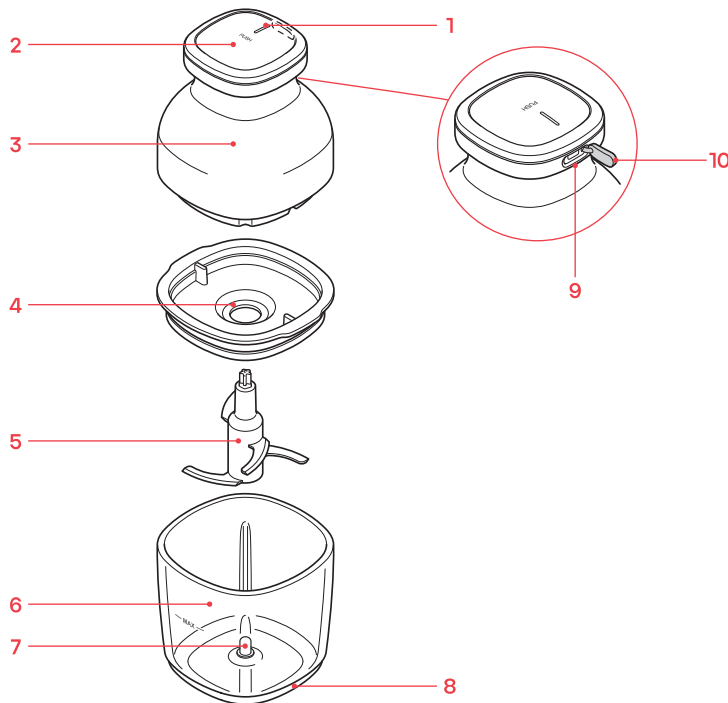



PRODUCT OVERVIEW

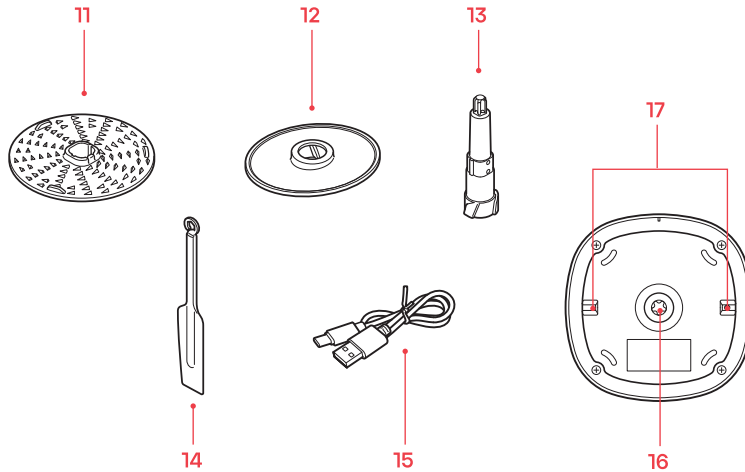 

PRODUCT OVERVIEW

- | | |
|-----------------------------|---|
| 1. Power Indicator | 10. Silicon Cover |
| 2. Power On/Off Push Button | 11. Double Sided Grater Disc |
| 3. Motor Unit | 12. Whisk Plate |
| 4. Lid with Seals | 13. Accessory Spindle |
| 5. 4 Wing Chopping Blade | 14. Spatula |
| 6. Glass Chopping Bowl | 15. USB-C Cable |
| 7. Chopping Bowl Spindle | 16. Motor Drive |
| 8. Anti-slip Ring | 17. Locator Notches with Power Activator Switch |
| 9. USB Port | |

BEFORE FIRST USE

WARNING: Carefully unpack your Chopper Set as the blades are very sharp.


- Wash all parts (except the Motor Unit) with warm soapy water before use. Dry all parts thoroughly before use.
- **DO NOT** immerse the Motor Unit in water, use a warm damp cloth to clean.



CHARGING YOUR CHOPPER

- When using the chopper for the first time (or after not using it for a while), the appliance should be charged fully (until the power indicator goes off). Charging time is approximately 3.5 hours.
- Check the specifications of the adapter before starting to charge. (DC5V/ 2.0a when charging).
- Remove the silicon cover (10) from the USB port (9) of the motor unit and connect the USB cable (Type C) (15) to the USB port on the motor unit. Insert firmly until the power indicator flashes.
- After charging, do not leave the USB cable connected; be sure to disconnect it from the motor unit.

Note: Please charge at least once every 6 months. Leaving the appliance for long periods without charging will cause battery deterioration and failure.

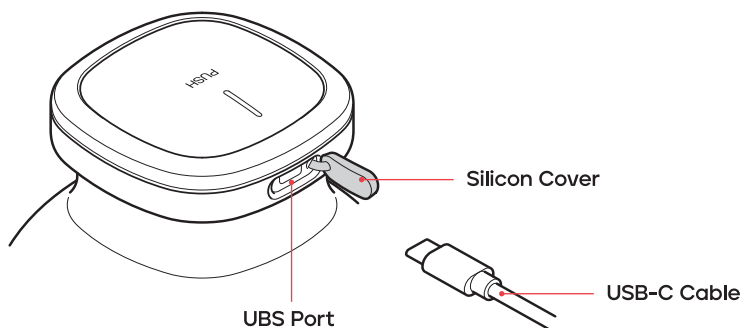



USING YOUR CHOPPER


IMPORTANT: The MAXIMUM continual use for the four-wing blade (5) is 1 minute. Let the motor unit rest for at least 10 minutes before next use. Using the appliance for longer than this time may cause damage to the appliance.

FOUR-WINGED CHOPPING BLADE


WARNING: Handle the blades with care as they are sharp.

Note: Maximum operation per cycle **MUST NOT** exceed 1 minute, and a 1 minute rest time is required after one cycle.

- Place the Glass Chopping Bowl (6) on a flat, firm, level surface.
- **CAREFULLY** Place the Blade (5) onto the chopping bowl spindle (7).

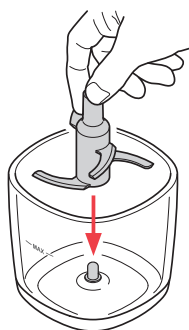


- Add your ingredients to the chopping bowl. Please refer to the Ingredients Guidelines section of the manual.
- Press the lid with seals (4) firmly onto the chopping bowl.

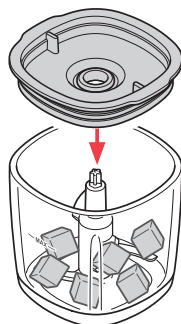



USING YOUR CHOPPER

- Locate the Motor Unit (3) onto the locator notches (17) on the lid (4).

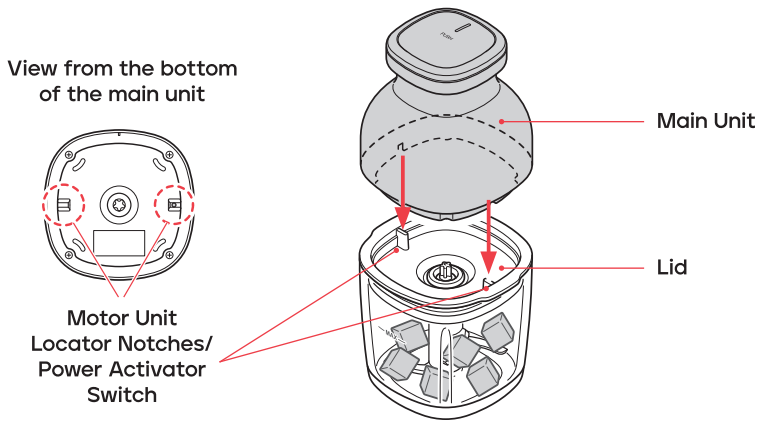

- Hold the motor unit firmly with one hand and with the other press and hold the Power On/Off push button (2) for continuous chopping until the desired consistence of the ingredients has been reached.
- Or Pulse, this is ideal for chopping harder ingredients. Press the Power On/Off push button 3 or 4 times for 1 second at a time, before continuous chopping until the ingredients have reached the desired consistency.
- To stop chopping release the Power On/Off push button.
- **Note:** If the chopping blades have difficulty turning, remove the motor unit and check the ingredients aren't caught in the blades.
- Ensure the blades (5) have stopped rotating completely before removing the Motor Unit and Lid (4) from the bowl (6).
- Remove the blades from the bowl with care before emptying the ingredients.
- **Note:** Not suitable for chopping hard and dry ingredients, eg. Coffee beans or viscous/sticky ingredients, eg. Caramel.
- **Note:** DO NOT exceed the MAX fill line.
- **Note:** If the Power On/Off push button is pressed continuously for 1 minute, the chopper will stop automatically.




USING YOUR CHOPPER

DOUBLE-SIDED GRATER DISC

IMPORTANT: The MAXIMUM continual use for the double-sided grater (11) is 2 minutes. Let the motor unit (3) rest for at least 10 minutes before next use. Using the appliance for longer than these times may cause damage to the appliance.

- Place the Glass Chopping Bowl (6) on a flat, firm, level surface.
- With either side of the Grater Disc (11) facing upwards, push it onto the Accessory Spindle (13), then slot it onto the chopping bowl spindle (7).

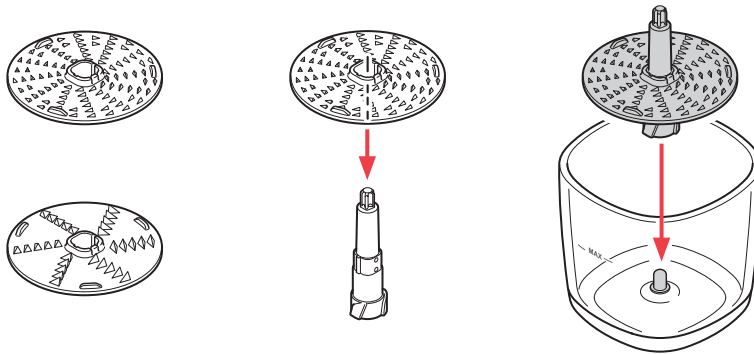

- Add your ingredients on top of the grater disc. Please refer to the Ingredients Guidelines section of the manual.
- Press the lid with seals firmly onto the chopping bowl.
- Locate the motor unit (3) onto the locator notches (17) on the lid.
- Hold the motor unit firmly with one hand and with the other press and hold the Power On/Off push button (2) until the desired consistence of the ingredients has been reached.
- To stop grating release the Power On/Off push button.
- Ensure the grater disc has stopped rotating completely before removing the motor unit and lid from the bowl.
- Remove the grater disc from the bowl with care before emptying the ingredients.



USING YOUR CHOPPER

Note: If the grater disc has difficulty turning, remove the motor unit and **check the ingredients aren't stuck to the attachment or the glass bowl.**

Note: Not suitable for hard ingredients such as ice or coffee beans. High viscosity such as bread dough or caramel. Frozen ingredients or soft ingredients such as tomatoes, onions, leafy vegetables, etc.


Note: DO NOT exceed the MAX fill line.

Note: If the Power On/Off push button is pressed continuously for 1 minute, the chopper will stop automatically.

WHISK PLATE

IMPORTANT: The MAXIMUM continual use for the whisk plate is 2 minutes. Let the motor unit (3) rest for at least 10 minutes before next use. Using the appliance for longer than these times may cause damage to the appliance.

- Place the Glass Chopping Bowl (6) on a flat, firm, level surface.
- Attach the Whisk Plate (12) (top side up) onto the Accessory Spindle (13), then slot it onto the chopping bowl spindle (7).

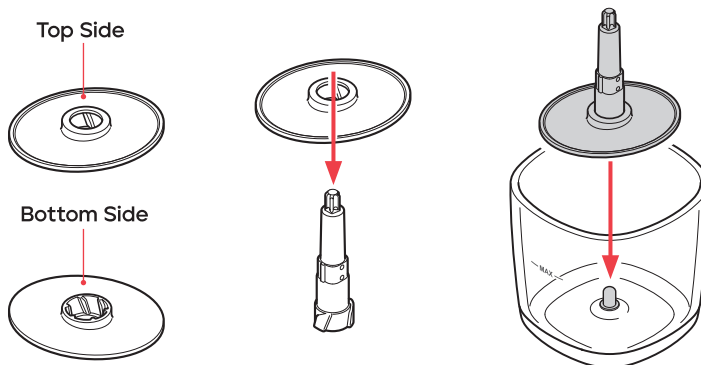

- Add your ingredients to the chopping bowl. Please refer to the Ingredients Guidelines section of the manual.
- Press the lid with seals firmly onto the chopping bowl.
- Locate the motor unit (3) onto the locator notches on the lid.



USING YOUR CHOPPER

- Hold the main unit firmly with one hand and with the other press and hold the Power On/Off push button (2) until the desired consistence of the ingredients has been reached.
- To stop whisking release the Power On/Off push button.
- Ensure the whisk plate has stopped rotating completely before removing the motor unit and lid from the bowl.
- Remove the whisk plate from the bowl with care before emptying the ingredients.

Note: Not suitable for hard ingredients such as ice or coffee beans. High viscosity such as butter, bread dough or caramel. Frozen ingredients or Soft ingredients such as tomatoes, onions, leafy vegetables, etc.

Note: DO NOT exceed the MAX fill line.

Note: If the Power On/Off push button is pressed continuously for 1 minute, the chopper will stop automatically.

INGREDIENT GUIDELINES

FOUR-WING BLADE

Operation time: 1 minute maximum

Ingredients	Qty	Preparation	Method
Crush ice	MAX 150g	Ice cubes should be no more than 3cm square	Repeat the pulse push until the desired size is reached. Do not exceed 1 minute continuous use.
Thick meat (beef, pork, chicken, etc.)	MAX 150g	Cut into pieces less than 3cm wide	1 Press the power on/off button 3 to 4 times, then push continuously for 5 to 20 seconds until desired consistency is achieved. Do not exceed 1 minute continuous use.



INGREDIENT GUIDELINES

Thin meat (beef, pork, etc.)	MAX 200g	Cut into pieces less than 3cm wide	Press the power on/off button 3 to 4 times, then push continuously for 5 to 20 seconds until desired consistency is achieved. Do not exceed 1 minute continuous use.
Fish fillet	MAX 200g	Cut into pieces less than 3cm wide	Press the power on/off button 3 to 4 times, then push continuously for 5 to 20 seconds until desired consistency is achieved. Do not exceed 1 minute continuous use.
Vegetables and fruits	MAX 200g	Cut into pieces less than 3cm wide	Press the power on/off button 3 to 4 times, then push continuously for 5 to 20 seconds until desired consistency is achieved. Do not exceed 1 minute continuous use.
Smoothies	The ingredients including liquid should not exceed the MAX line.	Cut into pieces less than 3cm wide	Press the power on/off button 3 to 4 times, then push continuously for 5 to 20 seconds until desired consistency is achieved. Do not exceed 1 minute continuous use.
Ginger, garlic	1 pc to MAX 200g	Cut into pieces less than 3cm wide	Press the power on/off button 3 to 4 times, then push continuously for 5 to 20 seconds until desired consistency is achieved. Do not exceed 1 minute continuous use.



INGREDIENT GUIDELINES

DOUBLE-SIDED GRATER DISC

Operation time: 2 minutes maximum

Ingredients	Qty	Preparation	Method
Radish and other vegetables	100g	Cut into 3 ~ 4cm cubes or less	Place 3 to 5 pieces in the bowl, press the power on/off push button and grate continuously. As the ingredients become smaller, add more and do the same. Do not exceed 2 minutes continuous use.

WHISK PLATE

Operation time: 2 minutes maximum


Ingredients	Qty	Preparation	Method
Fresh cream	MAX 200ml	Well chilled	Whisk continuously for 20 seconds to 1 minute until the cream is to your desired consistency. Do not exceed 2 minutes continuous use.
Meringue	1 to 4 egg whites	N/A	Whisk continuously for about 50 seconds to 2 minutes until the egg whites peak. Do not exceed 2 minutes continuous use.



CLEANING YOUR CHOPPER


WARNING: Handle the blades with care as they are sharp.

- Clean the Motor Unit (3) with a damp cloth and dry thoroughly.
- DO NOT immerse the motor unit in water, use a warm damp cloth to clean.

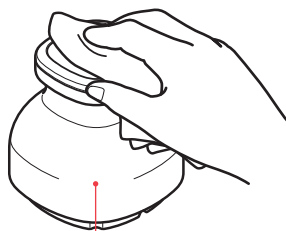

Main Unit

- The glass bowl (6), lid with seal (4), whisk plate (12) and double-sided grater disc (11) can be washed in warm water with a mild detergent.

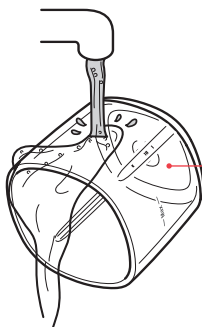

Glass Bowl

- Take care when washing the 4 winged blade (5).

IMPORTANT: NONE of the parts are dishwasher safe.



TROUBLESHOOTING

Problem	Solution
No Power.	The battery isn't sufficiently charged. Charge the battery using the charging cable supplied.
	Has the blender been used consecutively without resting? Allow the motor unit time to cool down.
Blades not running.	Make sure the food you are trying to blend is not too thick or too hard. Add some liquid if required.
	The chopper hasn't been assembled correctly. Remove the motor unit and re-assemble securely.
Power On/Off push button isn't depressing fully.	The chopping bowl isn't on a level surface. Always use the appliance on a firm, flat, level surface.
	Has the chopper been used for longer than the recommended period of time without resting? Allow the motor unit time to cool down.
	Unsuitable ingredients. Make sure you do not use ingredients that cannot be chopped, grated or whisked.
	The chopping bowl has been overfilled. Remove some of the ingredients and allow the motor unit to cool for 10 minutes.
The Power Indicator is orange and flashing fast.	It has been overloaded. Remove some ingredients from the glass bowl. Ensure not to use unsuitable ingredients.
The Power Indicator is flashing orange and green.	The chopping bowl lid and main unit aren't fitted correctly. Reassemble the lid and main unit securely.
The Power Indicator is flashing orange.	The battery is flat and should be recharged.



SPARE PARTS

Part Number	Description	Qty per Product	Key Number
05615	Glass Chopping Bowl with chopping bowl spindle and anti-slip ring	1	6, 7 & 8
05616	Lid with small and large silicon seals	1	4
05617	4 wing chopping blade	1	5
05618	Spindle	1	13
05619	Whisk plate	1	12
05620	Double sided grater disc	1	11
05621	Spatula	1	14
05622	USB-C cable	1	15



CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www: www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.



REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



FP404504MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

