

# 168-P16-REMOTE

## User Manual

### 01 Product Info

JCHR35W28 Hand-held 6-channel remote with vane adjustment



### 02 Buttons

- FrontHand-held 6-channel remote with vane adjustment
- BackBattery compartment

### 03 Parameters

Battery Type: AA battery × 2  
Working Temperature: -10°C – 50°C  
Radio Frequency: 433.92MHz ±100kHz  
Transmit Distance: ≥30m indoor

### 04 Caution!

1. The transmitter should not be exposed to moisture or impact, so as not to affect its life.
2. During use, when the remote control distance is significantly shorter or less sensitive, please check whether the battery needs to be replaced.
3. When the battery voltage is too low, orange LED flickers when you press button, indicating to replace battery.
4. Please properly dispose of used batteries according to the local garbage classification and recycling policy.

## 05 Instructions

### a. Child-lock (Prohibit dual-key operation)

Press P1 or P2 for 10s Repeat ×3 Dual-key operation activated

Note: When dual-key operation prohibited, limit setting and other programming functions are not allowed.

### b. Number of Channels Setting

When all LEDs are lit, that is channel 0 (All channels move together).

### c. Vane Adjustment

Scroll 1 notch: vanes go up or down 1 notch  
Scroll n notches: raise or lower the vanes by n steps

### d. Other operations

Please refer to the motor operation instruction

## 06 FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.