

SereneLife



SLCFN2DKGR - SLCFN2DKBK - SLCFN2DKOR

desk camping fan

user manual

visit our website



SCAN ME

serenelifehome.com

PLEASE KEEP THIS MANUAL CAREFULLY FOR FUTURE REFERENCE. FOR HOUSEHOLD USE ONLY.

Table of Contents

FEATURES AND TECHNICAL SPECS	03
PRODUCT DESCRIPTION	04
IMPORTANT SAFETY INSTRUCTIONS	04
PRODUCT OVERVIEW	05
PRODUCT OPERATION	05
KEY OPERATION METHOD	06
USING THE REMOTE CONTROL	07
BATTERY REPLACEMENT INSTRUCTIONS	07
CLEANING AND MAINTENANCE	09
BATTERY DISPOSAL	09
REGISTER PRODUCT	09

Please note:

The images of the product, accessories, and user interface in this manual are for reference only. The actual product may differ slightly.

CALIFORNIA PROP 65 WARNING

WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Unique Elements:

- Used on Desk or Hung Using Hook Type for Flexible Placement
- Long Battery Life
- Built-in LED Light with Flashing/SOS Mode
- Power Bank Function to Charge Small Devices

Features:

- 20,000 mAh Battery for Up to 48 Hours at Low Speed
- 90°/120° Adjustable Rotation for Flexible Airflow
- Four-speed Settings for Cooling Customization
- Convenient Remote Control Operation
- Quiet Operation for Minimal Noise Disruption
- USB-C Rechargeable for Fast Charging
- Built-in LED Light for Nighttime Use
- Foldable design for easy storage and portability
- Durable Design for Outdoor Conditions
- A Sturdy Base Ensures Stability on Flat Surfaces
- Portable Design with Built-in Handle for Transport

What's in the Box:

- Host Computer (Fan Unit)
- Type-C Power Cord
- Instruction Manual
- Remote Control
- 1x CR2025 Battery for the Remote Control

Technical Specs:

- Body: ABS Plastic
- Fan Blades: PP (Polypropylene)
- Base: ABS
- Battery Capacity: 20,000 mAh
- Charging Time: Approx. 12 hours via USB-C
- Operating Time: Up to 48 Hours (at Low Speed)
- Fan Speed: 4 Settings (F1–F4)
- Remote Control: Operated by 1 x CR2025 Batteries (Included)
- Output Voltage: DC 5V / 2A
- LED Light: Built-in LED with 3 Brightness Levels and SOS Flashing Mode
- Item Weight: 3.13 lbs
- Noise level: ≤40 dB at Lowest Speed
- Product Dimensions (L × W × H): 6.30 × 4.33 × 11.42 Inches

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USING OR MAINTAINING
THIS FAN KEEP THIS MANUAL FOR FUTURE REFERENCE**

PRODUCT DESCRIPTION

The outdoor camping fan is a portable device that can be hung or placed on a stand. It is equipped with a telescopic pole and features a built-in rechargeable battery that provides extended operating time.

It also includes a USB power output port, allowing you to charge electronic devices when needed.

The telescopic pole can be freely adjusted to change the height of the fan, making it suitable for various usage scenarios. The bottom hook design allows the unit to be hung, saving space and enabling flexible placement.

 


IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed:

1. When connecting to an external power source, use a 5 V / 2 A or higher-rated adapter.
2. Ensure the adapter meets local safety certification standards.
3. Use the product in an environment with temperatures ranging from 32°F to 104°F (0°C to 40°C).
4. Avoid exposure to direct sunlight or high-temperature environments.
5. Children or individuals without proper supervision should not use this product.
6. If the product requires repair, contact qualified service personnel.
7. Do not disassemble, modify, or repair the device yourself.
8. Do not use the product near flammable materials.
9. If abnormal noise, odor, or malfunction occurs, stop use immediately.
10. Avoid dropping or applying heavy pressure to the device.
11. Disconnect the power supply when not in use for extended periods.
12. Continuous use without rest may cause overheating or malfunction.

PRODUCT OVERVIEW

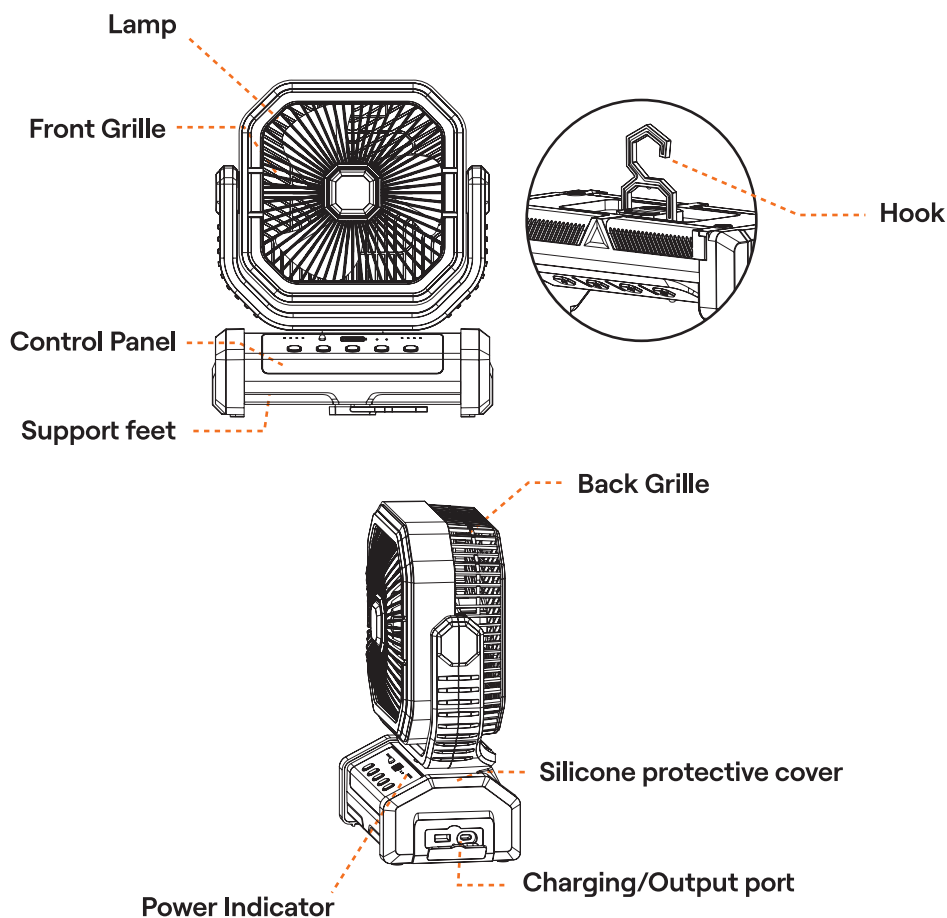


PRODUCT OPERATION

Charging the Fan

- Charge the fan or connect it to an external power supply.
- Use a 5 V / 2 A adapter and connect via the Type-C port.
- During charging, the battery level indicator will flash.
- When fully charged, the indicator light will remain steady.

 KEY OPERATION METHOD

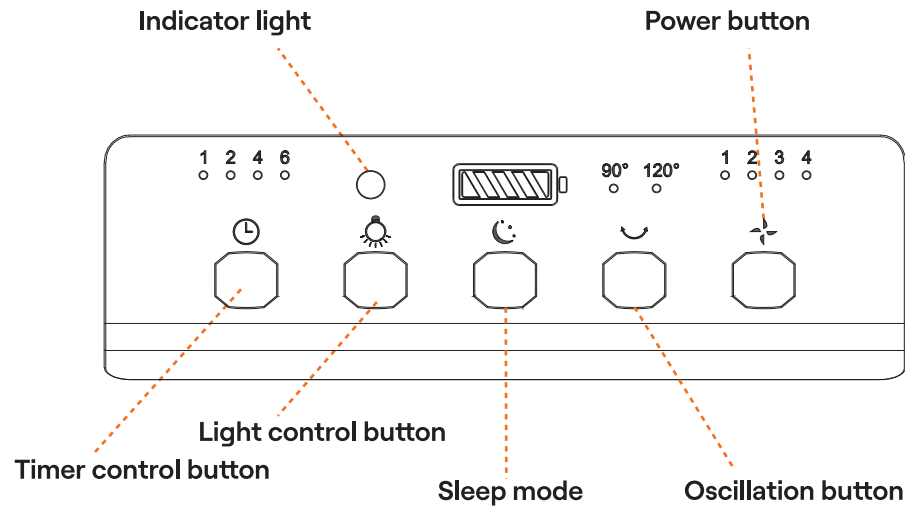

Power On and Speed Adjustment

- Press the power button to turn the fan on.
- Press the button repeatedly to switch between wind speed levels.

Mode Adjustment

When the device is powered on, press and hold the mode button to switch between sleep mode, natural wind mode, and normal mode.

Timer Adjustment

- Press the timer button to set the timer function.
- Each press cycles through the available time settings.

Light Adjustment

- Press the light control button to turn the light on or off.
- Press and hold to adjust brightness, if applicable.

 


USING THE REMOTE CONTROL

Before using the remote control, remove the insulation film from the battery compartment.


Button Functions:

- Power On/Off
- Speed Adjustment
- Sleep Setting
- Timer Setting
- Led Setting
- Swing (Oscillation Control Left/Right and Up/Down)

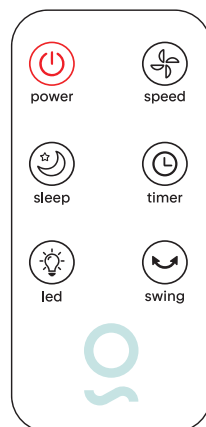

BATTERY REPLACEMENT INSTRUCTIONS

 
1. Open the battery compartment.
2. Insert the battery with the correct polarity.
3. Close the compartment securely.

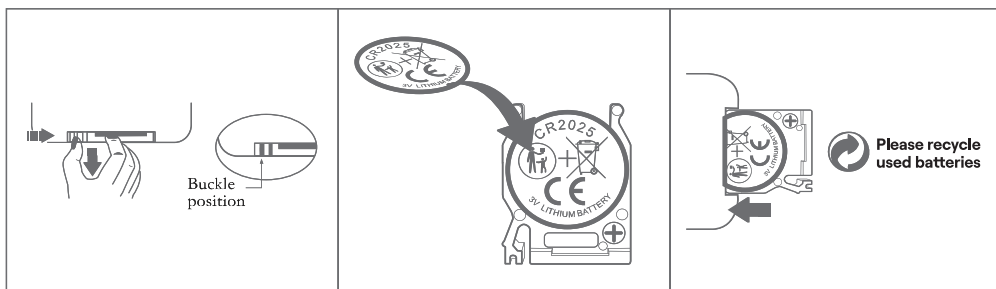

Precautions for the Remote Control:

1. Do not charge this battery.
2. Keep out of reach of children. Consult a doctor immediately if swallowed.
3. Always point the remote control at the heater's display when operating the heater using the remote control.
4. Keep the remote control away from other electrical appliances to prevent misoperation due to frequency overlap.
5. Using the button on the appliance or the remote control to turn off the product does not completely disconnect it from power. Unplug the product from the wall outlet if it will not be used for an extended period.
6. Remove the batteries from the remote control if the product will not be used for an extended period.

 Oscillation Adjustment

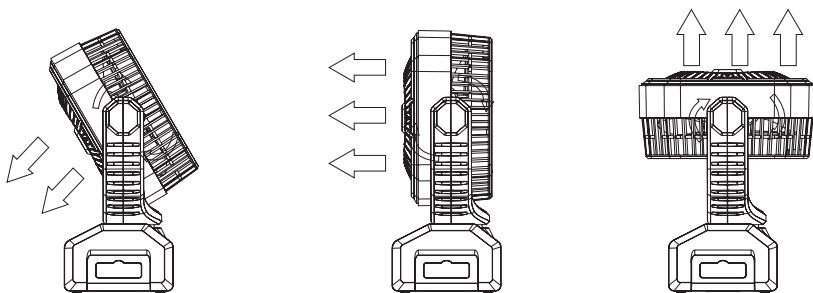


- Press the oscillation button to enable the oscillation function.
- Press again to turn off oscillation.
- The fan head can be tilted up or down.
- Adjust the left and right angles to direct airflow as desired.

Usage Scenarios


Retractable Upright Fan Mode

 - Adjust the telescopic pole to the desired height.
- Ensure the device is stable before use.
- Adjust the fan head angle to achieve the desired airflow direction.

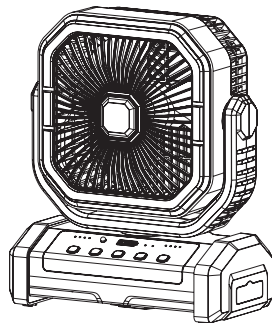

Ceiling Fan Mode

 - Unfold the product's hook and rotate it as needed.
- The unit can be hung horizontally from a hook or support structure for overhead airflow.

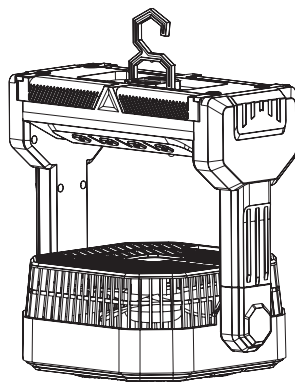

CLEANING AND MAINTENANCE

- Turn off the power and unplug the device before cleaning.
- Wipe the surface with a soft, dry cloth.
- Do not use water or harsh cleaning agents.
- Ensure the device is completely dry before reuse.

BATTERY DISPOSAL

- Remove the battery before disposing of the appliance.
- Disconnect the power supply before removing the battery.
- Use appropriate tools to remove screws if necessary.
- Dispose of the battery according to local environmental regulations.
- Do not dispose of batteries with household waste.



SLCFN2DKGR



SLCFN2DKBK



SLCFN2DKOR

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

Start Here



Serenelifehome.com/pages/register



questions? comments?

We are here to help!

Phone: 1.718.535.1800

[serenelifehome.com/contact us](https://serenelifehome.com/contact-us)