 


GREEN KEEPER

-GKDT81-

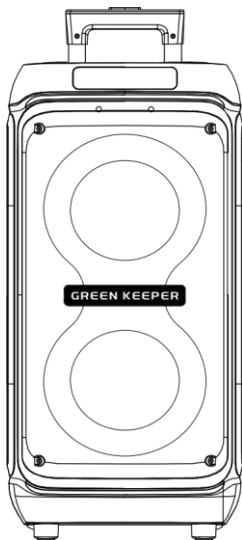

English

Deutsch

Français / Belgium

Español

Italiano

Polski

Nederlands

Svenska

Română

Русский

中文

USER MANUAL

KARAOKE MACHINE

For more information and customer support contact



SUPPORT@CHLCHL.COM

V0

IMPORTANT SAFETY INFORMATION

Please read and retain these safety instructions carefully before using your portable karaoke speaker. Failure to follow these guidelines could result in electric shock, fire, personal injury, or damage to the product or surrounding property. To ensure safe operation, observe the following precautions:

INTENDED USE ONLY

Use the speaker only as directed in the user manual and by the manufacturer. Any improper or unintended use may lead to malfunction, injury, or voiding of the warranty.

AVOID MOISTURE

Keep the speaker dry at all times. Do not use or store the device in damp or wet environments. Avoid exposing it to rain, splashes, or spills.

NO LIQUID CONTAINERS NEARBY

Do not place containers holding liquids (e.g., vases, cups, bottles) on or near the speaker. Accidental spills can lead to electric shock or short circuits.

AVOID HEAT SOURCES

Keep the speaker away from open flames, radiators, heat registers, stoves, or any other sources of excessive heat. Prolonged exposure to heat may cause overheating or damage.

USE APPROVED ACCESSORIES

Only use the power adapter, charging cables, and accessories supplied with the product or officially recommended by the manufacturer. Using unapproved accessories can pose safety risks.

MAINTAIN PROPER VENTILATION

Do not cover or block any ventilation openings. Install and operate the speaker in a well-ventilated area to prevent overheating. Maintain a minimum clearance of 10 cm (4 inches) around the unit.

POWER SAFETY

Unplug the speaker during electrical storms or if it will be unused for extended periods. This helps protect the device from power surges or lightning damage.

CABLE MANAGEMENT

Position power cords to avoid tripping hazards or damage. Do not allow the power cable to be pinched, bent excessively, or exposed to heavy foot traffic, especially at the plug or device connector.

AVOID PHYSICAL DAMAGE

Do not drop, crush, puncture, or disassemble the device. Physical damage may compromise internal safety components and create a fire or shock hazard.

NO USER-SERVICEABLE PARTS

Do not attempt to open or repair the speaker yourself. Repairs should only be performed by authorized service personnel. Unauthorized tampering may result in injury and void the warranty.

CHILDREN AND PETS

Keep the speaker and accessories out of reach of small children and pets. Small parts may pose a choking hazard, and cords can present entanglement risks.

WHAT'S IN THE BOX



Speaker x 1



Remote Control x 1



Charging Cable x 1

 


AUX Cable x 1



User Manual x 1

PRODUCT DIAGRAM

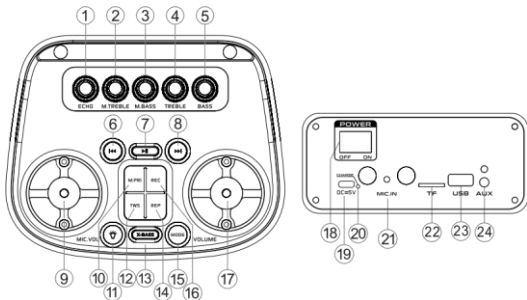

- 1 **ECHO KNOB:** Rotate clockwise to add microphone echo, counterclockwise to reduce or disable.
- 2 **MIC TREBLE KNOB:** Rotate clockwise to increase microphone treble, counterclockwise to reduce or disable.
- 3 **MIC BASS KNOB:** Rotate clockwise to increase microphone bass, counterclockwise to reduce or disable.
- 4 **TREBLE KNOB:** Rotate clockwise to increase treble; counterclockwise to reduce or disable.

 
- 5 **BASS KNOB:** Rotate clockwise to increase bass, counterclockwise to reduce or disable.
- 6 **PREV** (⏮): Press to skip to the previous track.
- 7 **PLAY/PAUSE** (⏮): Press to play or pause. In USB/TF mode, long press to enable/disable repeat. In FM mode, long press to auto-scan for stations.
- 8 **NEXT** (⏭): Press to skip to the next track.
- 9 **MIC VOLUME KNOB:** Rotate to adjust microphone volume.
- 10 **MIC PRIORITY:** Press to enable or disable microphone priority. When enabled, background music automatically lowers while speaking.
- 11 **LED** (💡): Press to cycle through 10 lighting modes. Long press to turn lights off.
- 12 **TWS** (TWS): In Bluetooth mode without external media connected, press to enable/disable True Wireless Stereo (TWS) function.
- 13 **X-BASS:** Press to enable/disable bass boost function.
- 14 **REP:** Press to repeat the current audio. Long press to turn voice canceling ON / OFF.
- 15 **MODE:** Short press to switch between Bluetooth, FM, and AUX modes. In Bluetooth mode, long press for 3 seconds to disconnect and re-enter pairing mode.
- 16 **REC:** Insert a USB drive or TF card. Short-press to start or stop recording (microphone required). Long-press to enter or exit the recording list.
- 17 **VOLUME KNOB:** Rotate to adjust master volume.
- 18 **POWER SWITCH:** Slide to turn the speaker on or off.
- 19 **DC 5V CHARGING PORT:** Connect the supplied charging cable to charge the unit.
- 20 **CHARGING INDICATOR:** The red indicator lights up during charging and turns off when the battery is fully charged.
- 21 **MIC 1 / MIC 2:** Connect wired microphones to these input jacks.
- 22 **TF CARD SLOT:** Insert a TF (microSD) card (up to 128 GB) to play audio files or store recordings.
- 23 **USB PORT:** Insert a USB flash drive (up to 128 GB) to play audio files or store recordings.
- 24 **AUX IN:** Connect an external audio device using the included 3.5 mm AUX cable to play audio through the speaker.

REMOTE CONTROL DIAGRAM

Record Mode
(requires TF card/USB storage)

Volume +
Previous Track

⏮ Loop
(repeats current track)

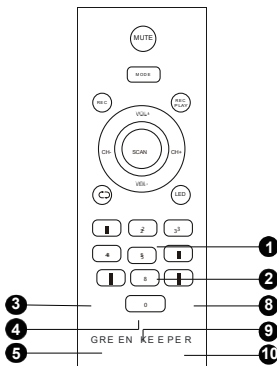

Mute

Mode Select

REC PLAY
(plays the latest recording)

Play/Pause

 
Next Track

Volume -

LED Mode
(cycles through lighting effects)

Numeric Keypad

POWER ON AND RECHARGE

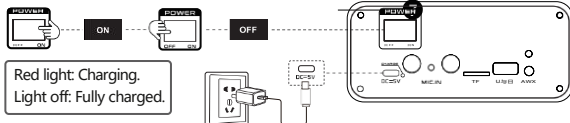

1. Connect the speaker to power using the provided charging cable. The battery level will be displayed as bars on the LED screen.

2. Slide the POWER switch to turn the speaker on or off.

IMPORTANT: Do not operate the speaker while charging, as this may damage the unit. To preserve battery performance and extend service life, avoid fully discharging the battery.

 
Note: Adapter not included.

USING YOUR KARAOKE SPEAKER

This karaoke speaker supports one audio source at a time, including USB, TF card, Bluetooth, or AUX input. By default, the speaker powers on in Bluetooth mode.

Note: If multiple audio sources are connected simultaneously, the speaker will automatically play from the source with the highest priority.

BLUETOOTH PAIRING INSTRUCTIONS

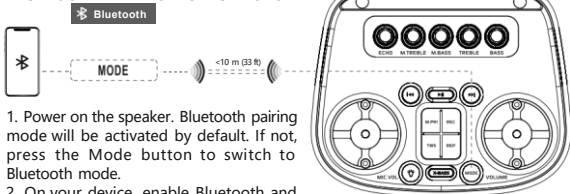


1. Power on the speaker. Bluetooth pairing mode will be activated by default. If not, press the Mode button to switch to Bluetooth mode.
2. On your device, enable Bluetooth and select "GKDT81" from the list of available devices.
3. Once connected, you can start streaming audio to the speaker.

TF CARD AND USB CONNECTION INSTRUCTIONS



1. Insert a TF card or USB drive (max. 128GB) into the appropriate slot.
 2. Once inserted, the speaker will automatically switch to the corresponding playback mode.
- Supported audio formats are MP3 and WAV.

 AUX CONNECTION INSTRUCTIONS

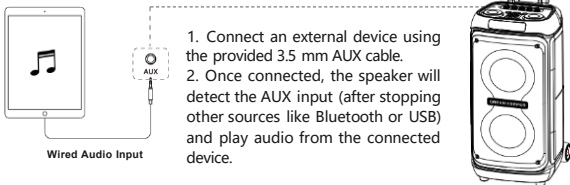


ADVANCED USAGE INSTRUCTIONS

Recording Instructions

1. Insert a USB drive and connect a microphone.
2. Short press REC to start recording. Short press again to stop and save the recording.
3. Long press REC to enter or exit the recording playback list.
4. Disconnect the microphone when recording is complete.

TWS Mode

 1. Turn on two speakers of the same model and switch both to Bluetooth mode.
2. Place the speakers within 50 cm (20 in) of each other.
3. Select one speaker as the main unit and press its TWS button to activate TWS mode. The speakers will connect automatically, and a voice prompt will confirm a successful connection.
4. On your playback device, enable Bluetooth, search for the speaker's model name, and connect. Once paired, the speaker's display will stop flashing.
5. To disconnect TWS mode, press the TWS button while connected. A voice prompt will confirm the disconnection.

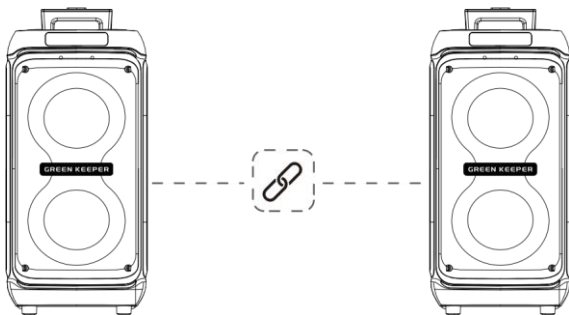

TECHNICAL SPECIFICATIONS

MODEL	GKDT81
POWER INPUT	PD25W: 15V1.6A/5V/3A,9V/2A,12V/1.5A
BATTERY CAPACITY	11.1V / 7200MAH
RATED POWER	80W
PEAK POWER	800W
SPEAKER DRIVERS	2 × 8" WOOFERS + 1 × 1" TWEETER
DISPLAY SCREEN	LED SCREEN
SPEAKER IMPEDANCE	3.6Ω
BLUETOOTH VERSION	5.1
BLUETOOTH TRANSMISSION RANGE	10 M (33 FT)
BLUETOOTH FREQUENCY RANGE	2.402G - 2.480G
FREQUENCY RESPONSE	20HZ - 18KHZ
TOTAL HARMONIC DISTORTION (THD)	<5%
SENSITIVITY	≥85DB
SIGNAL-TO-NOISE RATIO (SNR)	≥75DB
FM FREQUENCY RANGE	87.5MHZ - 108MHZ
OPERATING TEMPERATURE	-10°C TO +50°C (14°F TO 122°F)
WEIGHT	8.7 KG (19.2 LBS)
DIMENSIONS	32 × 34 × 64 CM (12.6 × 13.4 × 25.2 IN)

COMPLIANCE DECLARATION

FCC & IC COMPLIANCE

This device complies with FCC Part 15 and Industry Canada license-exempt RSS standards. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received.

CAN ICES-003(B)/NMB-003(B)

FCC DECLARATION

This product complies with FCC Part 15, Subpart B.

Note: Unauthorized changes may void FCC authorization.

WIRELESS RF NOTICE

RF exposure limits are met. Devices in the 5.15–5.35 GHz band are restricted to indoor use. Radar interference may occur in the 5.25–5.85 GHz range.

EU COMPLIANCE (CE MARK)

Complies with the Radio Equipment Directive 2014/53/EU, EMC Directive 2014/30/EU, and LVD 2014/35/EU. Indoor use only for 5150–5350 MHz band.

UK COMPLIANCE (UKCA MARK)

Conforms to UK Radio, EMC, and Electrical Safety Regulations.

ENVIRONMENTAL COMPLIANCE

Complies with EU RoHS (2011/65/EU & 2015/863) and UK RoHS. Contains lead above 0.1% (CAS No. 7439-92-1) as per REACH Article 33.

Dispose of in accordance with WEEE regulations.

WARRANTY

LIMITED 12-MONTH WARRANTY

Your Green Keeper portable karaoke speaker is covered by a 12-month limited warranty from the date of purchase, against defects in materials and workmanship under normal use.

If a defect arises within the warranty period, we'll repair or replace the product after technical assessment. Warranty claims require a valid proof of purchase.

NOTE: This warranty does not cover misuse, unauthorized modifications, accidental damage, normal wear and tear.

To request service, please contact us at: support@chlchl.com

GREEN KEEPER

MULTIFUNCTIONAL KARAOKE MACHINE

Manufacturer: Shenzhen CHL Industries Co.,Ltd

Address: Room 6F, 6/F, Nanyuan Maple Building Nanshan Avenue,
Nanshan District, Shenzhen, Guangdong, China



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.