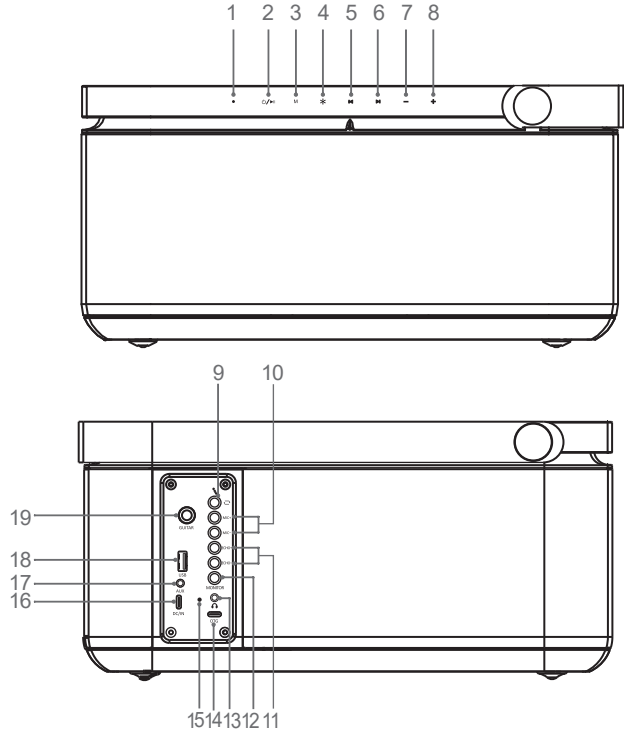
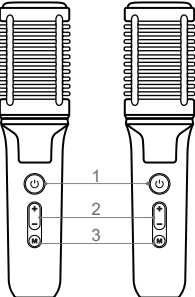


User Manual

PORTABLE KARAOKE SPEAKER A12 USER MANUAL  Please read this User Manual before using the product and retain it for future reference.	Before You Begin PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN IT FOR FUTURE USE Specification BT Version : 5.3V Output Power : 80W Input Voltage : 5V Speaker Impedance : 4Ω Battery Capacity : 10.8V 5000 mAh Play Time : Approx. 7 Hours Charging Time : Approx. 4.5Hours (based on 5V/3A 15W PD fast charging) Working Distance : 10m. Playback option : BT, AUX-IN, USB Speaker Dimensions : 350x140x174mm Speaker Weight : 4.5 kgs FC		1.Operating mode indicator 2. Button 3. Mode(M) Button 4.* LED Button 5. Button 6. Button 7. - Button 8. + Button 9. (Repeat) Button • Long press to activate or deactivate vocal cancel during karaoke 11. Echo +/- 12. Monitor Button 13. Headphone Monitor Jack 14. OTG (On-The-Go) Port 15. Battery Charging Indicator 16. USB-C charging jack(15W PD fast charging supported) 17. Aux-in Jack 18. USB Port (For playback only) 19. GUITAR Jack 1. Power On/Off Button 2. Mic Volume +/- Button 3. M Button -Press to toggle voice changer 	Operating Pannel • Pairing When you turn on the device, a sound will indicated the speaker is on. Activate the bluetooth feature on your phone, and set the phone to search for bluetooth device "A12". • OFF/ON button Long press POWER on/off button in the status of power off, the product will automatically power on, and if it is not plugged into a 3.5 audio cable, it enters Bluetooth by default. Long press the power on/off button to power off. • Charging port Connect the small end of the t ype -C charging cable (included) to the type-C port of the speaker. Connect the larger end of the cable to your computer's USB port or an AC adapt or(not included). The battery charging indicator will turn on in orange while charging. Once fully charged, the charging indicator changes to white. Note: • Charge the speaker and microphone fully before first use. • The Speaker's usage time depends on charge in the battery, mode, volume level etc.
Warnings 1. Replacemnent of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types); 2. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; 3. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; 4. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.	Warranty Card Dear user, thank you for using the product of our company. Please read and keep properly the warranty card after purchasing the product so that we can provide better services to you. User Information Users' name _____ Phone Number _____ Address _____ Email _____ Sales Information Purchase Date _____ Sales Unit _____ Phone Number _____ Address _____ Product Information Model No. _____ Product code _____ Product Serial Number _____	Non-warranty Situation This warranty does not cover the following cases: 1. Out of warranty period. 2. Damage caused by use not in accordance with the instructions. 3. Damage caused by man-made causes. 4. Failure caused by unauthorized disassembly, maintenance, or modification of the product. 5. Damage caused by force majeure factors (such as floods, earthquakes, lightning, etc.). 7. Other failures and damages that are not caused by the quality of the product itself.	Disposal And Recycling Information This symbol (with or without a solid bar) on the device, batteries (included), and/or the packaging indicates that the device and its electrical accessories (for example, a headset, adapter or cable) and batteries should not be disposed of as household garbage. Warranty Thank you for purchasing products. If any manufacturing defect problems occur within 12 months from the date of purchase, user can enjoy our company's warranty service. Matters Needing Attention 1. The warranty card and the proof of purchase should be kept by the user properly, and it will not be replaced if lost. 2. If the product fails due to non-human factors, the user can present the warranty card and proof of purchase to the customer service center for free maintenance during the warranty period.	FCC Caution: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.