 


# BOSS<sup>®</sup>

zindagi aasan bana de

## Aeromax Air Cooler

90L / 65L / 43L / 24L

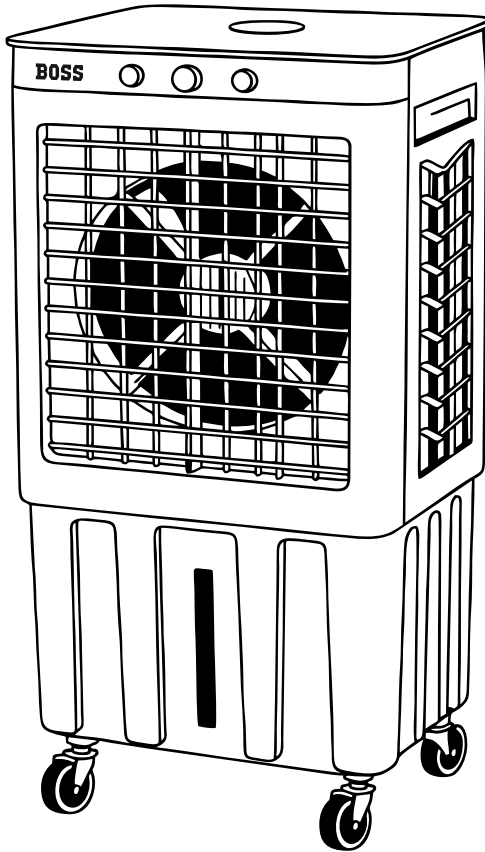

**2** YEARS  
WARRANTY

## INSTRUCTION MANUAL

Please read all instructions carefully before using • T & C Apply\*

## USER TIPS

The recommended maximum relative humidity level is 60% or less, which allows a noticeable temperature decrease. The temperature decrease will be greater in drier climates because higher evaporation occurs when humidity is low.

 
The evaporative air cooler should not be used in enclosed spaces.

It must be kept level and there must be water in the water tank. The room should have doors and windows opened to allow free air flow. The evaporative air cooler works best when placed near an open window, so that outside air is drawn into the evaporative air cooler, the air circulates in the room, then exits via the door. The maximum cooling effect is felt when a person is in the flow of air coming out of the evaporative air cooler


The evaporative air cooler can also be used to humidify dry air during cool weather. To be used for humidification the windows and doors should be closed to allow the humidified air to accumulate.

The evaporative air cooler is not an air conditioner as it does not use a compressor or refrigerant gas.

NOTE: When the product is used for the first time the Honeycomb cooling media will have an odour which will dissipate within a week of initial use.

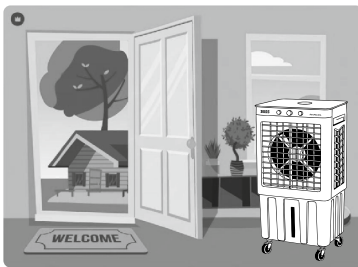

Room with open windows & door

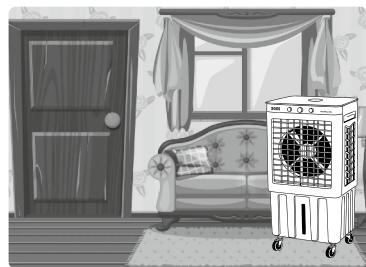 


Room with Close windows & door


## SAFETY RULES
 
### READ AND SAVE THESE INSTRUCTIONS


- When using electrical appliances, basic safety precautions should always be followed:
- Your cooler runs on 230V AC, 50 Hz current. Check the house-hold voltage to ensure it matches the appliance's rated specification.
- Before operating the product, remove it from its packaging and check it is in good condition.
- DO NOT operate any product with a damaged cord or plug. We recommend not to use an extension cord with this appliance.
- DO NOT run power cord under carpeting, or cover it with rugs or runners. Keep the cord away from areas where it may be tripped over.
- Always unplug the product before refilling the water tank.
- Always unplug the appliances from the power source before cleaning, servicing or relocating the unit.
- Remove the power cord from the electrical receptacle by grasping and pulling on the power cord plug-end only, never pull the cord.
- DO NOT use the product in areas where gasoline, paint or other flammable goods and objects are stored.
- When using the "COOL" setting, please check the water tank to ensure it is full.
- Operation of this unit on the "COOL" setting with an empty tank may result in damage to the water pump
- DO NOT attempt to repair or adjust any electrical or mechanical functions of the cooler, as this may void the warranty.
- DO NOT cover the air inlet or outlet on the appliance as this may cause motor damage.
- DO NOT insert or allow objects to enter any ventilation or exhaust opening as this may damage the product and could cause an electrical shock or fire.
- DO NOT operate with the Honeycomb media removed as this will overload and damage the motor.
- DO NOT leave the appliance operating unattended for any extended period of time.
- DO NOT let children play with this appliance, packaging or plastic bags.
- If the unit is damaged or it malfunctions, do not continue to operate it. Refer to the troubleshooting section and/or please seek professional advice.
- Place the unit on a level floor.
- This product is not intended for use in wet or damp locations.
- Never locate the product where it may fall into a bathtub or other water container.
- DO NOT use in bathrooms or outdoors.
- When the unit is not in use always store in a dry area.
- This appliance is not intended for use by persons (including children or elderly) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always grip the side handles to move the unit.

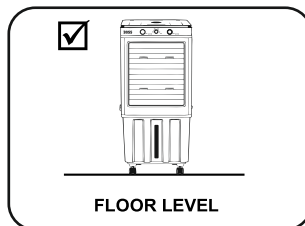

## PARTS DESCRIPTION

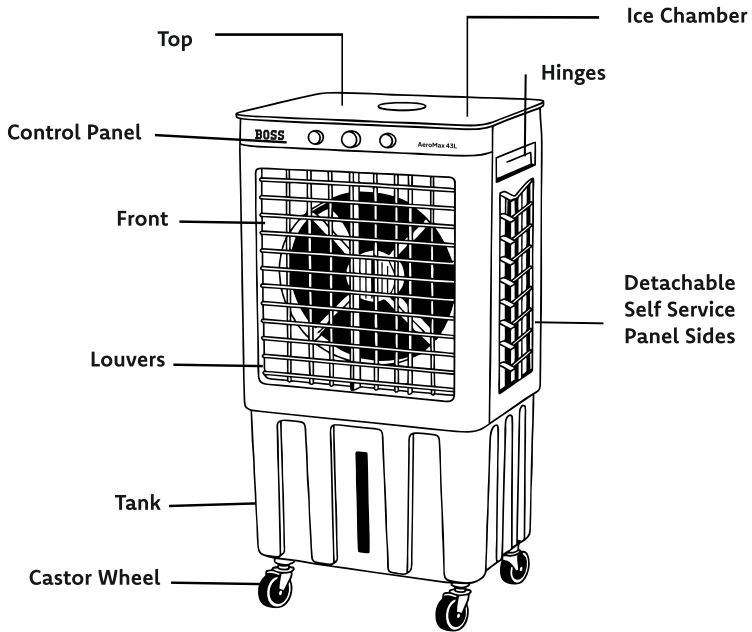 

## OPERATIONS

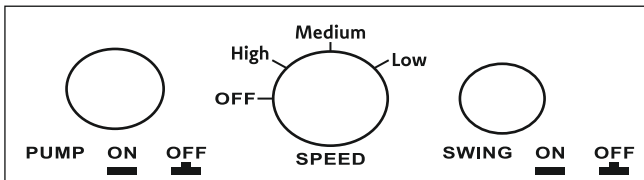 

## POWER

Connect to the power supply and turn the on Speed knob. The fan will start Change the speed as desired. To switch OFF the unit turn the Speed to "OFF".

## FUNCTION (PUMP & SWING)

Press the Function Switch Pump to ON position to start the cooling. It take a few minutes to obtain the full effect from this mode and after this press the swing knob ON for louvers swing.

## **CLEANING AND MAINTENANCE**

### **WARNING**

- Before cleaning the unit, switch it to the "off" position and remove the plug from the power socket.
- To clean the outside, use a damp cloth to remove dirt and dust.
- Never use detergents, corrosive elements or any chemicals to clean this product.
- When the product is not in use, store the unit in a dry place out of direct sunlight.

### **CLEANING AND DRAINING THE WATER TANK**

- Turn the power "off" and disconnect the unit from power supply.
- Move the unit to a location where it can be drained and remove the drainage tube/cap.
- Once the tank is empty, refill with clean and drain it again.
- This should be repeated weekly to maintain the integrity of the unit and to remove particles filtered from the air.
- Once the tank is clean, refill the water tank. The unit is now ready to be use again

### **MAINTAINING & CHANGING THE HONEYCOMB**

- The appliance is supplied with Honeycomb cooling media.
- The cleaning frequency for the Honeycomb media depends on local air and water conditions. In areas where the mineral content of water is high, mineral deposits may build up on the honeycomb cooling media and restrict air flow. Draining the water reservoir and refilling with fresh water at least once a week will help reduce mineral deposits. If mineral deposits remain on the honeycomb cooling media the media should be removed and washed under fresh water. The media should be cleaned every two months or sooner, depending on your needs.

## TROUBLESHOOTING GUIDE

 
PROBLEM	POSSIBLE CAUSE	SOLUTION
No discharge of air	Cord is not plugged in. Power is not ON.	Make sure power cord is plugged in and the supply switch is ON. Try to turn the unit ON by pressing buttons on control panel or remote control.
Not Cooling / Unit is making noise	Pump is not turned ON Low or no water in tank, when COOL is selected.	Turn on COOL function from remote or control panel. Re fill water tank.
	Damaged Pump or Calcium deposits on blower.	Contact service centre.
Odour omission	New Unit	When the unit is used for the first time, the Honeycomb cooling media will have an odour, which will dissipate within a week of initial use.
	Old Unit	There may be an algae issue, Replace the honeycomb cooling media. Contact service centre.

## TECHNICAL SPECIFICATION

Model No	B-754	B-755	B-756	B-757
Name	Aeromax 24	Aeromax 43	Aeromax 65	Aeromax 90
Mode Operation	Manual	Manual	Manual	Manual
Voltage & Frequency	230V~, 50 Hz	230V~, 50 Hz	230V~, 50 Hz	230 V~, 50 Hz
Power Consumption	110 W	110 W	110 W	200 W
Air Delivery (CMH)	2800	2800	2800	4050
Cooling Media	Honey Comb Pad	Honey Comb Pad	Honey Comb Pad	Honey Comb Pad
Water Tank Capacity (Upto Brim)	24L	43L	65L	90L
Water level Indicator	Yes	Yes	Yes	Yes
Speed Control -3	High/Med/Low	High/Med/Low	High/Med/Low	High/Med/Low
Wheels	4 Castor Wheel	4 Castor Wheel	4 Castor Wheel	4 Castor Wheel
Vertical Louver Movement	Motorised	Motorised	Motorised	Motorised
Horizontal Louver Movement	Manual	Manual	Manual	Manual
Dimensions without Packing (CM)	L	47.0	47.0	59.0
	W	38.0	38.0	44.0
	H	80.0	94.0	121.5

### Disclaimer

Performance may vary based on operating conditions. Specifications are approximate and subject to change without notice. Variations up to  $\pm 20\%$  may occur. Tank capacity is up to brim level. Product images are for representation only; actual product details may differ.

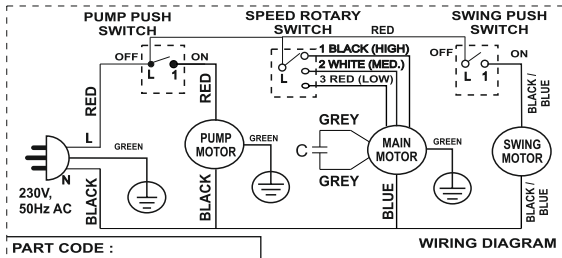

**PRODUCT SUPPORT HELP LINE**  
**9167681234**



Scan for  
Service Support

**9167681234**