

PHILIPS

NORELCO

Tripleheader shaver

S1143
X3001
X3052

©2026 Koninklijke Philips N.V. All rights reserved.
Philips and Philips shield are registered trademarks of Koninklijke Philips N.V.
Norelco and Tripleheader are registered trademarks of Philips Personal Health a division of Philips North America LLC
P.O. Box 10313, Stamford, CT 06904

This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

PHILIPS

NORELCO

Tripleheader shaver

S1143
X3001
X3052

©2026 Koninklijke Philips N.V. All rights reserved.
Philips and Philips shield are registered trademarks of Koninklijke Philips N.V.
Norelco and Tripleheader are registered trademarks of Philips Personal Health a division of Philips North America LLC
P.O. Box 10313, Stamford, CT 06904

This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

PHILIPS

NORELCO

Tripleheader shaver

S1143
X3001
X3052

©2026 Koninklijke Philips N.V. All rights reserved.
Philips and Philips shield are registered trademarks of Koninklijke Philips N.V.
Norelco and Tripleheader are registered trademarks of Philips Personal Health a division of Philips North America LLC
P.O. Box 10313, Stamford, CT 06904

This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

PHILIPS


NORELCO

Tripleheader shaver

S1143
X3001
X3052

©2026 Koninklijke Philips N.V. All rights reserved.
Philips and Philips shield are registered trademarks of Koninklijke Philips N.V.
Norelco and Tripleheader are registered trademarks of Philips Personal Health a division of Philips North America LLC
P.O. Box 10313, Stamford, CT 06904

This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

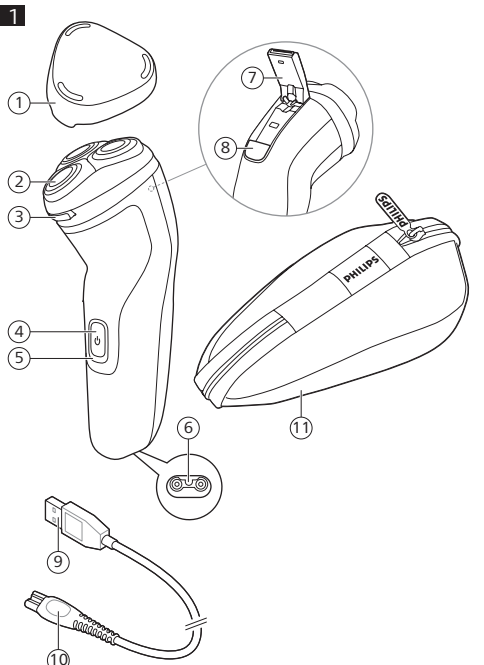

Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
Do not place products and their batteries in microwave ovens or on induction cookers.
Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances.
Do not short-circuit, overcharge or reverse charge batteries.
If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.
When you handle batteries, make sure that your hands, the product and the batteries are dry.
To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

SAVE THESE INSTRUCTIONS

Introduction
Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at www.philips.com/register.

General description (Fig. 1)


- Protective cap
- Shaving unit
- Shaving unit release button
- On/off button
- Charging light
- Socket for small plug
- Pop-up trimmer
- Trimmer release slide
- USB cable
- Small plug
- Travel pouch (X3052 only)

IMPORTANT SAFETY INSTRUCTIONS

When using an electric product, basic precautions should always be followed, including the following:
Read all instructions before using this product.

DANGER
To reduce the risk of electric shock:
To charge the product, only use a USB power source on a certified product with output rating 5 V, ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) power source. A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB power source, contact Philips support at 1-888-744-5477. Using a non-certified USB power source may cause hazards or serious injuries.
Keep the USB cable and the USB power source dry.

WARNING
To reduce the risk of burns, fire, electric shock, or injury to persons:
This product is only intended for shaving facial hair and scalp hair. Scalp hair must be shorter than 1.5 mm.
Only use this product on skin that is undamaged and not affected by skin growths, skin disease or severe skin irritation.
This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
Use this product only for its intended household use as described in this manual. Misuse can lead to hazards or serious injuries. Do not use attachments not recommended by Philips North America LLC. Accessories supplied may vary for different products.
Never operate this product if it has a damaged USB power source, if it is not working properly, after it has been dropped or damaged, or after the product or the USB power source has been dropped into water. For assistance call 1-888-744-5477.
Keep the USB cable and the USB power source away from heated surfaces.
Never drop or insert any object into any opening. Do not use the USB power source in or near a power outlet that contains an electric air freshener to prevent damage to the USB power source. Do not use product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
Always check shaving heads (guards and cutters) before using the product. Do not use the product if cutters or guards are damaged, as injury may occur.
Always attach the USB cable to the USB power source and the product first, then attach the USB power source to the power outlet. To disconnect, set all controls to 'off' position. Then remove the USB power source from the power outlet. Plug USB power source directly into power outlet. Do not use an extension cord.
Unplug USB power source before plugging in or unplugging the product.
Only use original Philips accessories or consumables.
Charge, use and store the product at a temperature between 50 °F / 10 °C and 95 °F / 35 °C.

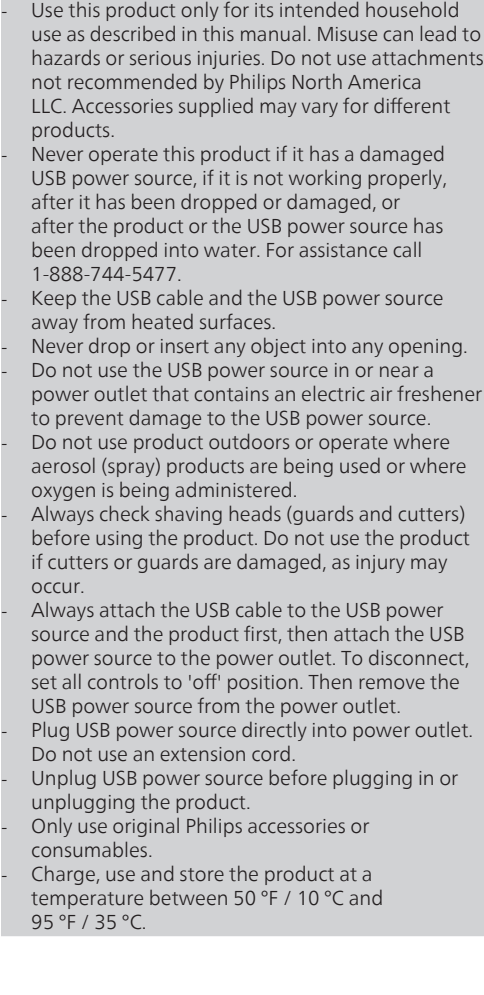

Using the product
Always check the product and all accessories before using. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
This product is only intended for household use. For hygienic reasons, the product should only be used by one person.
Note: This product is waterproof (Fig. 6). It is suitable for use in the bath or shower and for cleaning under the tap with water. For safety reasons, this product can only be used without cord.

Switching the product on and off
To switch the product on or off, press the on/off button once (Fig. 7).

Shaving
S1143 only
For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer.
1 Switch on the shaver.
2 Move the shaver in circular movements over your skin to catch hair growing in all directions (Fig. 8). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

3 Use the narrow sides of the shaving unit to shave in hard-to-reach areas such as along your jawline and under your nose (Fig. 9).
4 Switch off and clean the product after each use (see 'Cleaning and maintenance').
5 Put the protective cap on the product to protect the shaving heads during storage and travel (Fig. 10).

X3001 and X3052 only
For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer. You can use this product either wet or dry, or even in the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.
1 Switch on the shaver.
2 Move the shaver in circular movements over your skin to catch hair growing in all directions (Fig. 8). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

Note: If you are shaving with gel or foam, rinse the shaving unit regularly during your shave to ensure that it continues to glide smoothly over your skin (Fig. 11).

3 Use the narrow sides of the shaving unit to shave in hard-to-reach areas such as along your jawline and under your nose (Fig. 9).
4 Switch off and clean the product after each use (see 'Cleaning and maintenance').
5 Put the protective cap on the product to protect the shaving heads during storage and travel (Fig. 10).

Note: Make sure you rinse all foam or shaving gel off the product.

21-Day adaptation process
- 21 Day Trial and Conversion Process. It is a fact that your skin and beard need time to adjust to a new grooming system.
- Use your new shaver exclusively for 3 weeks to fully enjoy the closeness of a Philips Norelco shave.
- At first you may not get as close a shave as you expect, or your face may even become slightly irritated. This is normal since your beard and skin will need time to adjust. Invest 3 weeks and you'll soon experience the full joy of your new shaver.
- Stick with it! If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Philips Norelco shaving system.
- If you are still not convinced after 21 days, Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.

Trimming with pop-up trimmer
You can use the trimmer to groom your sideburns and moustache.
1 Push the trimmer release slide downwards to open the trimmer (Fig. 12).
2 Press the on/off button once to switch on the product (Fig. 7).
3 Hold the trimmer perpendicular to the skin and move the product downwards, exerting gentle pressure (Fig. 13).
4 Switch off the product and clean the trimmer after each use to prevent clogging and damage (see 'Cleaning and maintenance').
5 Close the trimmer ('click') (Fig. 14).

Head shaving
Warning: Pre-trim your hair if it is longer than 1.5 mm.
X3001 and X3052 only: You can use this product either wet or dry, or even in the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.
1 Switch on the shaver.
2 Move the shaver in circular movements over your head, and shave in the direction of hair growth (Fig. 15).
3 Stretch your skin with your free hand so the blades can lift and cut hair. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Shaving against the direction of hair growth may cause skin irritation.

3052 only
Note: Before first use charge the shaver for 3 hours without interruptions and until the charging light shows that the battery is full. This is needed to make maximum use of the battery capacity. All future charges will take 1 hour.

Using the product
Always check the product and all accessories before using. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
This product is only intended for household use. For hygienic reasons, the product should only be used by one person.
Note: This product is waterproof (Fig. 6). It is suitable for use in the bath or shower and for cleaning under the tap with water. For safety reasons, this product can only be used without cord.

Switching the product on and off
To switch the product on or off, press the on/off button once (Fig. 7).

Shaving
S1143 only
For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer.
1 Switch on the shaver.
2 Move the shaver in circular movements over your skin to catch hair growing in all directions (Fig. 8). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

3 Use the narrow sides of the shaving unit to shave in hard-to-reach areas such as along your jawline and under your nose (Fig. 9).
4 Switch off and clean the product after each use (see 'Cleaning and maintenance').
5 Put the protective cap on the product to protect the shaving heads during storage and travel (Fig. 10).

X3001 and X3052 only
For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer. You can use this product either wet or dry, or even in the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.
1 Switch on the shaver.
2 Move the shaver in circular movements over your skin to catch hair growing in all directions (Fig. 8). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

Note: If you are shaving with gel or foam, rinse the shaving unit regularly during your shave to ensure that it continues to glide smoothly over your skin (Fig. 11).

3 Use the narrow sides of the shaving unit to shave in hard-to-reach areas such as along your jawline and under your nose (Fig. 9).
4 Switch off and clean the product after each use (see 'Cleaning and maintenance').
5 Put the protective cap on the product to protect the shaving heads during storage and travel (Fig. 10).

Note: Make sure you rinse all foam or shaving gel off the product.

21-Day adaptation process
- 21 Day Trial and Conversion Process. It is a fact that your skin and beard need time to adjust to a new grooming system.
- Use your new shaver exclusively for 3 weeks to fully enjoy the closeness of a Philips Norelco shave.
- At first you may not get as close a shave as you expect, or your face may even become slightly irritated. This is normal since your beard and skin will need time to adjust. Invest 3 weeks and you'll soon experience the full joy of your new shaver.
- Stick with it! If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Philips Norelco shaving system.
- If you are still not convinced after 21 days, Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.

Trimming with pop-up trimmer
You can use the trimmer to groom your sideburns and moustache.
1 Push the trimmer release slide downwards to open the trimmer (Fig. 12).
2 Press the on/off button once to switch on the product (Fig. 7).
3 Hold the trimmer perpendicular to the skin and move the product downwards, exerting gentle pressure (Fig. 13).
4 Switch off the product and clean the trimmer after each use to prevent clogging and damage (see 'Cleaning and maintenance').
5 Close the trimmer ('click') (Fig. 14).

Head shaving
Warning: Pre-trim your hair if it is longer than 1.5 mm.
X3001 and X3052 only: You can use this product either wet or dry, or even in the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.
1 Switch on the shaver.
2 Move the shaver in circular movements over your head, and shave in the direction of hair growth (Fig. 15).
3 Stretch your skin with your free hand so the blades can lift and cut hair. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Shaving against the direction of hair growth may cause skin irritation.

3052 only
Note: Before first use charge the shaver for 3 hours without interruptions and until the charging light shows that the battery is full. This is needed to make maximum use of the battery capacity. All future charges will take 1 hour.

Note: Do not press too hard, as this can cause skin irritation.

Note: Regularly remove cut hair from the hair chamber.

Note: If you are shaving with gel or foam, rinse the shaving unit regularly during your shave to ensure that it continues to glide smoothly over your skin (Fig. 11). (X3001 and X3052 only)

4 Switch off and clean the product after each use (see 'Cleaning and maintenance').
5 Put the protective cap on the product to protect the shaving heads during storage and travel (Fig. 10).

Cleaning and maintenance
Regular cleaning guarantees better shaving results.
Never clean, remove or replace the shaving unit while the shaver is switched on.
Do not touch shaving heads with hard objects as this may dent or damage the precision-made slotted shaving head.
Do not use abrasives, scourers or aggressive liquids such as gasoline or acetone to clean the shaver.

Cleaning the shaver
Clean the shaver after every shave for optimal shaving performance.
Always check if the water is too hot, to prevent burning your hands.
While rinsing shaving heads, water may drip out of the base of shaver. This is a normal occurrence. Internal electric parts are in a waterproof compartment so the shaver will be protected against water damage.
1 Press the on/off button once to switch on the product (Fig. 7). Rinse the shaving unit with cold or lukewarm water (Fig. 11).
2 Press the on/off button to switch off the product. Press the shaving unit release button to open the shaving unit (Fig. 16). Rinse the shaving unit and hair chamber with lukewarm water (Fig. 16).
3 Rinse the outside of the shaving unit with lukewarm water (Fig. 17).
4 Carefully shake off excess water and let the shaver air dry.
Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads (Fig. 18).
5 Close the shaving unit.

Cleaning the pop-up trimmer
Caution: Never dry the trimmer teeth with a towel or tissue, as this may damage the trimmer teeth.
Clean the trimmer after each use to prevent clogging and damage.
1 Switch off the shaver.
2 Push the trimmer release slide downwards to open the trimmer (Fig. 12).
3 Switch on the shaver and rinse the pop-up trimmer under warm water (Fig. 19).
4 Switch off the shaver after cleaning.
5 Carefully shake off excess water and let the pop-up trimmer air dry.
6 Close the trimmer ('click') (Fig. 14).
Tip: For optimal performance, lubricate the teeth of the pop-up trimmer with a drop of mineral oil every six months (oil not included).

Replacement
Replacing the shaving heads
For maximum shaving performance, we advise you to replace the shaving heads every two years (Fig. 20). Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips Norelco shaving heads (see 'Accessories').
1 Switch off the shaver.
2 Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the shaver (Fig. 21).
3 Turn the lock counterclockwise and remove the retaining frame. Place it aside in a safe place (Fig. 22).
4 Remove the shaving heads from the shaving unit. Discard the used shaving heads immediately to avoid mixing them with the new shaving heads (Fig. 23).
5 Place new shaving heads in the shaving unit (Fig. 24).
Note: Make sure that the shaving heads with the projections fit exactly onto the hooks of the shaving head holder when placing them (Fig. 25). The shaving heads supplied with the shaver either have notches or projections. Both shaving systems are the same.
6 Put the retaining frame back into the shaving unit and turn the lock clockwise (Fig. 26).
7 Insert the hinge of the shaving unit into the slot in the top of the shaver. Then close the shaving unit (Fig. 27).
Note: If the shaving unit does not close smoothly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

This product has no other user-serviceable parts. For assistance call 1-888-744-5477.

Storage
- Make sure the product is switched off. Remove the USB power source from the power outlet and the product before storing the product in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap cord around the product when storing.
- Store cord and other accessories in a safe location where these will not be cut or damaged.
- Do not place or store the product where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.
Put the protective cap on the shaver to prevent damage (Fig. 10).

Note: Always let the shaver dry completely before storing.

Storage in travel case (X3052 only)
Store the shaver in the travel pouch supplied.
Note: Make sure the shaver is dry before you store it in the travel pouch.

Accessories
Replacement parts and accessories may be purchased at a store near you or on our website www.philips.com/store.
The following accessory is available:
- SH30 Philips Norelco replacement shaving heads

Assistance
For assistance, visit our website: www.philips.com/support or call toll free 1-888-744-5477.

Disposal
- This product contains a rechargeable NiMH battery which must be disposed of properly.
- Contact your local town or city officials for battery disposal information. You can also call 1-800-822-8837 or visit: www.call2recycle.org for battery drop-off locations (Fig. 28).
- For assistance, visit our website: www.philips.com/support or call 1-888-744-5477 toll free.
- Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. For recycling information, please contact your local waste management facilities or visit: www.recycle.philips.com.

Full Two-Year Warranty
Philips warrants its products for a specific period of time after the first date of purchase. If the product is purchased in the USA, Philips North America LLC (USA) or, if the product is purchased in Canada, Philips Electronics Ltd., warrants this new product against defects in materials or workmanship for a period of two years from the date of purchase (as evidenced by a valid proof of purchase), and agrees to replace any defective product without charge. Philips will refund the purchase price if it is unable to provide replacement.
Parts that are subject to normal wear and tear, accessories, replacement batteries and consumables such as blades and foils, are not covered by the terms of this warranty.
IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.*
NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.
For more information and in order to obtain warranty service, simply go to www.philips.com/support.
NOTE: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state, province to province or country to country. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you. This warranty is transferable.
*Read enclosed instructions carefully.

THE WARRANTY DOES NOT COVER THE FOLLOWING:
- Indirect or consequential damages, such as loss of time, loss of data, or loss of income. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.
- Compensation for activities done by yourself, such as regular maintenance, installing firmware updates, or saving data.
THE WARRANTY DOES NOT APPLY:
- If the proof of purchase, model number, serial number, or production date code on the product has been made illegible.
- If the product was purchased as faulty stock.
- If the defect is the result of abuse or excessive use outside the intended purpose.
- If the defect is caused by environmental conditions, connecting peripherals, additional equipment, or accessories (including software) that are not in accordance with the user manual.
- If the unit has been damaged, including but not limited to damage by animals, lightning, abnormal voltage, fire, natural disaster, transportation, or water (unless the user manual expressly states that the product may be rinsed).
- For non-electrical parts, normal wear and tear, accessories, replacement batteries or replacement of consumable parts such as blades and foils.
- If the product does not function properly because it was not originally designed for use in the country where the product is used, which may occur if you import the product.
- If the product does not function properly due to problems with connection with service providers, such as for the internet.

45-DAY MONEY-BACK GUARANTEE
If you are not fully satisfied with your product send the product back and we'll refund you the full purchase price.
The product must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase. We cannot be responsible for lost mail. The product must be postmarked no later than 45 days after the date of purchase. Philips reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.
To obtain the money-back guarantee service, please go to www.PhilipsMoneyBack.com and follow the simple 3-step process.
Delivery of refund check will occur 6–8 weeks after receipt of returned product.

