



Product User Manual

Product Information



Product Overview

This iPad leather case with keyboard is specially designed to enhance your iPad usage experience, cleverly integrating the protective case with keyboard functionality. It not only provides comprehensive protection for your iPad, effectively shielding it from daily scratches and collisions, but also significantly improves text input efficiency through its keyboard input function, meeting the needs of various scenarios such as work study, and creation. Whether it's busy professionals handling documents, students writing papers, or creators recording inspiration, it can handle them all with ease.

Set up and use the iPad keyboard

Conditions to Be Met

1. Compatible with iPad Pro or iPad Air keyboards.
2. iPadOS 18.0 or later

How to Connect the Magic Keyboard to iPad

1. Place the iPad keyboard on a flat surface.
2. Insert the iPad into the protective case.
3. Place the protective case with the iPad onto the keyboard to connect them.
4. You can tilt the iPad up and down to find the ideal viewing angle.

After connecting the iPad to the keyboard, there is no need to pair, turn on, or charge the Magic Keyboard.

Wake Up iPad with the Magic Keyboard

To wake up the iPad, press any key on the Magic Keyboard. Press a key again to display the lock screen. Unlock the iPad using Face ID or Touch ID, or you can enter the password using the Magic Keyboard or by tapping the screen as usual.

Adjust Trackpad Settings

To adjust the trackpad, go to "Settings" > "General" > "Trackpad". You can change the tracking speed (i.e., the movement speed of the pointer) and scrolling direction, and also turn "Tap to Click" and "Two-Finger Secondary Click" on or off.

Charge the iPad

To charge the iPad, you can connect a USB-C cable to the USB-C port on the iPad as usual or connect a USB-C cable to the USB-C port on the Magic Keyboard. There is no need to charge the Magic Keyboard.

The USB-C port on the Magic Keyboard can supply power but cannot transfer data. This means you cannot use this port to connect input devices such as a USB-C mouse. Do not connect one end of the USB-C cable to the USB-C port on the iPad and the other end to the USB-C port on the Magic Keyboard.

Switch to the On-Screen Keyboard

You may need to use the on-screen keyboard instead of the Magic Keyboard when performing operations such as entering accented characters or using the dictation function. To display the on-screen keyboard, tap the text field, then press and hold "✓" in the lower-right corner of the iPad screen until the on-screen keyboard appears. To hide the keyboard again, tap the "•" button on the iPad screen.

Instructions for Touchpad Gestures

	Click. Press with one finger until you feel a click.		Scroll up or down. Swipe two fingers up or down.
	Click and hold. Press and hold with one finger.		Scroll left or right. Swipe two fingers left or right.
	Drag. Click and hold an item then slide your finger across the trackpad to move it.		Zoom. Place two fingers near each other. Pinch open to zoom in, or pinch closed to zoom out.
	Wake iPad. Click the trackpad. Or, if you're using an external keyboard, press any key.		Go Home. Swipe up with three fingers.
	Open the Dock. Use one finger to swipe the pointer past the bottom of the screen.		Open the App Switcher. Swipe up with three fingers, pausing before you lift your fingers. Or, pinch four fingers together, pausing before you lift your fingers.
	Go Home. Use one finger to swipe the pointer past the bottom of the screen. After the Dock appears, swipe the pointer past the bottom of the screen again.		Switch between open Apps. Swipe left or right with three fingers.
	View Slide Over. Use one finger to swipe the pointer past the right edge of the screen. To hide Slide Over, swipe right again.		Open Today View. When the Home Screen or the Lock Screen is visible, use two fingers to swipe right.
	Open Control Center. Use one finger to move the pointer to select the status icons at the top right, then click. Or, select the status icons at the top right, then swipe up with one finger.		Open search from the Home Screen. Swipe down with two fingers.
	Open Notification Center. Use one finger to move the pointer to select the status icons at the top left, then click. Or, use one finger to move the pointer past the top of the screen near the middle.		Assistive tap. Use two fingers to tap items such as icons on the home screen, emails in the mail, and the camera button in "Control" Center to display their quick action menus. Or hold down the Control key and click the trackpad.

Note:

- Operating system: iOS 15.0 and above (the device must support touch).
- Tap settings (after successful wireless pairing): Settings + General → Trackpad → Tap to Click / Two-Finger Secondary Click (turn on).
- Sensitivity settings: Settings → General → Trackpad → Tracking Speed (adjust to an appropriate speed).
- Abnormal touch function: (1) Settings → Accessibility → Touch → turn AssistiveTouch on or off; (2) When there is no mouse icon on the tablet, you can pinch to zoom with two fingers to restore it.

Instructions for Shortcut Keys

	brightness-		brightness+		Mission Dispatch Center
	search		Dictation/Siri		Do Not Disturb mode
	previous piece		play/pause		next track
	mute		volume down		volume up
Esc	escape		lock screen	fn +	touchpad switch
fn +	Backlight color adjustment	fn +	Backlight brightness adjustment		

Precautions

1. Please store and use the product in a normal temperature environment.
2. Do not disassemble, repair or modify the product by yourself.
3. Do not expose this product to rain or humid environments.
4. Do not wipe this product with chemical solvents.
5. Do not throw the product, to avoid damage caused by dropping.
6. Do not stack or squeeze this product with heavy objects.
7. Do not discard it at will, or place it in high temperature or fire, so as to avoid danger.
8. Do not place the keyboard together with sharp objects to prevent scratches on the surface of the leather case and keyboard keys.
9. During use, if the device is found to have abnormal heating, smoking, peculiar smell or other abnormalities, stop using it immediately, unplug the charging cable, and contact professional personnel for maintenance.

FCC WARNING:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference;
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.